





	~	
INDEXES	GROUP NO.	PAGE
MAJOR GROUPS and ILLUSTRATIONS		VII
ALPHABETICAL		x
ENGINE	01	1
CLUTCH, PEDAL and TORQUE CONVERTER	02	17
FUEL SYSTEM	03	23
EXHAUST	04	45
COOLING	05	49
ELECTRICAL	06	55
TRANSMISSION (3 Speed and 4 Speed)	07	73
TRANSMISSION (Automatic)	08	85
PROPELLER SHAFT	09	99
REAR AXLE	10	101
BRAKES	11	107
FRONT SUSPENSION	12	121
STEERING	13	129
WHEELS	14	145
FRAME and SPRINGS	15	147
FENDERS and HOOD	16	153
SPEEDOMETER and INSTRUMENTS	17	157
SHOCK ABSORBERS and BUMPERS	18	161
BODY	21	165
NUMERICAL		225
		-

# Studebaker

1963-1964

MODEL R-Q

# CHASSIS AND BODY PARTS CATALOG

## DECEMBER, 1963

COPYRIGHT 1963 STUDEBAKER CORPORATION

## PARTS DEPOTS IN U.S.A. AND CANADA

#### STUDEBAKER AUTOMOTIVE SALES CORPORATION

Allison Park, Pa. 15101 (Pittsburgh)	3112 William Flynn Hwy.
Burlingame, Calif. 94010 (San Francisco)	1565 Adrian Road
Cincinnati, Ohio 45237	1940 Losantiville Ave.
Dallas, Texas 75235	P.O. Box 35532 — Mailing Address 5134 Harry Hines Blvd. — Ship. & Rec.
Decatur, Ga. 30031 (Atlanta)	P.O. Box 4009 — Mailing Address 2935 East Ponce De Leon Ave. — Ship. & Rec.
Denver, Colo. 80223	150 Rio Grande Blvd.
Devon, Pa. 19333 (Philadelphia)	P.O. Box 127 — Mailing Address 119 Lincoln Highway — Ship. & Rec.
Jacksonville, Fla. 32206	909 Haines St.
Kansas City, Mo. 64132	Southeast Station 8401 South Highway 71
Los Angeles, Calif. 90058	P.O. Box 58584 — Mailing Address 3060 East 44th St. — Shipping & Telegraph Address
Minneapolis, Minn. 55420	333 West 78th St Bloomington Station
New Hyde Park, L.I., N.Y. 11041 (Brooklyn)	P.O. Box 206 — Mailing Address 2040 Jericho Turnpike — Shipping & Rec.
Northbrook, Ill. 60062 (Chicago)	1400 Skokie Blvd.
Portland, Ore. 97210	P.O. Box 9525 — Mailing Address 2355 N. W. Quimby St. — Ship. & Rec.
Revere, Mass. 02151 (Boston)	590 Revere Beach Parkway
Richmond, Virginia 23230	P.O. Bor. 6445 — Mailing Address 3210 West Leigh Street — Ship. & Rec.
South Bend, Ind. 46627	635 S. Main Street

#### STUDEBAKER OF CANADA, LIMITED

Hamilton, Ontario, Canada	P.O. Box 150 — Mailing Address No. 3 Ferrie St. East — Shipping Address
Montreal, Quebec, Canada	P.O. Box 1295 Station "O" — Mailing Address 6402 Cote de Liesse Road — Shipping Address
Toronto 17, Ontario, Canada	849 Eglinton Ave. East
Vancouver 14, British Columbia, Canada	1098 Southwest Marine Drive
Winnipeg 21, Manitoba, Canada	1474 Wellington Ave.

## INTRODUCTION

This CHASSIS and BODY PARTS CATALOG covers replacement parts for the STUDEBAKER Avanti passenger cars. Model symbol identification can be ascertained by checking car serial and engine numbers chart provided on page VI.

Complete information as to the use of each part including data as to interchangeability with reference to the passenger cars covered by this catalog is shown in this publication.

#### ARRANGEMENT

For quick and easy reference the parts enumerated herein have been divided into major groups, each of which is designated by an index number as indicated on the title page.

Each major group is further divided into sub-groups such as "Engine mounting", "Cylinder block, Head and Gaskets." etc. which are numbered. (See pages VII thru IX for complete index.) These numbers have a dual purpose which is described in detail in paragraphs "Illustrations" and "Indexes."

#### **DEFINITION OF LOCATIONAL TERMS**

All parts pertaining to a given vehicle, having the same function, but which are not interchangeable on that vehicle, are designated by right, left, upper, lower, front or rear in regard to the location in or on the vehicle when it is viewed from the rear facing forward: in other words as the part is viewed when one is seated facing forward in the vehicle.

Parts used only on right hand drive or left hand drive cars are indicated by "RHC," or "LHC," all other parts not so marked are used on both right or left hand drive vehicles.

#### COMPONENTS OF KITS, SETS AND ASSEMBLIES

Components of Kits, Sets and Assemblies are listed in detail and when such components are also available separately a note is added indicating the set or kit of which the particular item is a component.

#### ATTACHING PARTS

Attaching parts such as bolts, nuts, rivets, screws, washers, etc., are indented immediately following the part or parts with which they are used. Whenever two similar parts having the same attaching parts, such as right and left brackets are listed, they are placed immediately following one another and the attaching parts for both are covered by a single listing immediately thereafter. The quantities shown are the attaching parts necessary for both.

#### ILLUSTRATIONS

Illustrations in this parts catalog are shown at the beginning of each major group or in the text immediately following the group or sub-group heading.

Assembly views, exploded views and cross sectional drawings are used throughout this publication to aid in location and identifying parts.

These illustrations show the typical construction of the various assemblies and component parts, and may not in all cases show the exact detail of each of the parts of the same general character.

The illustration plates referred to after the group or sub-group heading contain all illustrations covering that group or sub-group with a very few exceptions. In such cases where an item is not illustrated on the main plate a definite reference is made to the plate on which the particular part is illustrated.

Each illustrated part is given a specific illustration number in order to facilitate its quick location on the plate or text page and enables a quick determination of part number.

Each illustration number is a combination group number, sub-group number and specific item number.

The plate number is also a combination number indicating the group number and specific plate.

For example: Illustration No. 0102-1 on plate 01-2 indicates that the part is listed in Group 01. Sub-group 0102 and is the CYLINDER BLOCK indicated by illustration No. 0102-1.

#### INDEXES

The INDEX OF MAJOR GROUPS, SUB-GROUPS and ILLUSTRATIONS is on pages VII thru IX.

The ALPHABETICAL INDEX of all parts with the exception of indented items is on pages X thru XX.

The NUMERICAL INDEX of all parts is located in back of book.

#### HOW TO IDENTIFY PARTS LISTED IN THIS CATALOG

There are several ways to identify any parts quickly, using the various indexes.

The following instructions and examples are given as a guide.

- 1. If only the description of the parts is known:
  - A. Turn to alphabetical index and locate item by the noun name.
  - B. Turn to the group and sub-group shown opposite the noun name and determine the part number for the particular model.
- 2. If only the function of the part in the vehicle is known:
  - A. Turn to the index of major groups and sub-groups (pages VII and IX) and determine the number of the group in which the part is most likely to be listed. (Example—A cylinder head would be in the engine group 01.)
  - B. Review the illustrations which apply to the major group or allied groups. When the proper illustration is found, using the illustration number, turn to the proper group and determine the part number.
- 3. If only the part number is known and it is desired to ascertain a complete description of the part:
  - A. Refer to the numerical index and establish the group in which the part is listed.
  - B. Turn to the group shown opposite the part number and locate the part number and a complete description is available.

## **INSTRUCTIONS**

#### CABLES AND WIRE

Studebaker Corporation's registered Cable address is "STUDINT", South Bend." All Standard Codes used. Telex Number S.B. 8741

EXPORT DEALERS should always confirm cables, telegrams and radiograms by a written order prominently marked "Confirmation."

The Studebaker Corporation cannot be responsible for errors resulting from incorrectly written or transmitted cablegrams, telegrams or radiograms.

#### USE REGULAR "DEALER PARTS ORDER" FORM

When ordering parts by mail, use this form. It will expedite shipment. Never include a parts order in a letter covering other subjects.

#### SHIPPING INSTRUCTIONS

#### Domestic

Any preference as to the manner in which parts are to be shipped should be clearly stated on each order. In the absence of explicit instructions, parts will be shipped in the manner considered to be most satisfactory.

On Shipments valued at 100 dollars or over (except items quoted F.O.B. point of shipment), we will absorb the inland transportation costs to any point when shipped by a mode selected by us.

Where a consignee specifies a more expensive mode of transportation on shipments valued at 100 dollars or more, the amount of difference between freight and mode specified will be at consignee's expense.

Shipments valued at less than 100 dollars, where no specific mode of transportation is indicated, will be forwarded by the cheapest means available, at consignee's expense.

#### Export

Export shipment of the following parts requires special boxing for which an additional charge is made: Engine Assemblies V8 Short Block Assemblies Any part quoted F.O.B. South Bend.

Export shipments weighing 100 lbs. or over, except for items quoted F.O.B. point of shipment, will be prepaid to any U.S. port of exit via transportation selected by us. Special transportation (air, express, etc.) is at dealer's expense. Transportation to port, on shipments of less than 100 lbs., is at dealers' expense.

#### FINISH SYMBOLS

Letter symbols affixed to part numbers must be specified on orders as they denote finish as follows:

ANickel Plate	$\mathbf{P}$ $\mathbf{Prime}$	VP—Gold and Paint
B-Black Enamel or Japan	V—Gold Plate	W-Chrome Plate
J—Silver Plate		WP—Chrome and Paint

## TELEGRAPH CODE

#### FOR USE IN U.S.A., CANADA AND MEXICO (ALL OTHER COUNTRIES USE "TECHNICAL LANGUAGE CODE")

To be used in all telegraph communications with Studebaker factories, branch offices, dealers and vendors. Telegraph expenses will be reduced by the constant, proper use of code words and the careful preparation of messages. Before making telegraph or telephone communications, always consider whether or not regular mail or air mail could serve the purpose.

In the Preparation of a Telegram:

- 1. When requesting information indicate whether reply is desired by:
- regular mail (REINS), air mail (RHYME), wire today (WHARF), or wire immediately (WHEAT).
- Punctuations are transmitted "NO Charge". Use punctuations instead of the words "Stop", "Comma", "Quote", etc.
   Figures should be written in figures rather than spelled out in words for communications within the United States. The following telegram, as written contains 25 words.

"Wire immediately when you will ship 5 part No. 151080 cylinder head and 15 part No. 527834 screw. Our order No. 1234." By the use of the code, the number of words can be reduced from 25 to 10 and will read as follows:

"WHEEZE 5-151080 head, 15-527834 screw, order 1234."

Payment and Release InstructionsAIRENTER.Enter orderXPRESS.Ship by expressREIGHT.Ship by freightARCEL.Ship by parcel postIREX.Ship by air expressPASM.Ship by boat to BuffaloPONGE.Ship by boat to DuluthPOON.Ship by boat to DuluthPOUT.Ship what you can of orderQUIB.Trace your shipmentZREY.Hold shipment await instructionsERRY.Hold shipment satisfactory releaseReference to Previous Communicationsand Requests for ReplyELET.Referring to telegramELET.Referring to telephone callPANE.Referring to telephone call	2X.       Ship by express         2XED.       Shipped by air express         IN.       Will give definite delivery date later         MA.       Give definite delivery date         STIC.       Can you deliver         AD.       Disregard instructions regarding         SS.       Disregard letter regarding         LL.       Disregard telegram regarding         ER.       Enter order         RESS.       Ship by express         RESSED.       Shipped by express         SH.       Furnish serial and body numbers         IGHT.       Ship by Freight         IGHTED.       Shipped by freight         BY.       Letter not received mail copy         GE       Letters not received wire contents         CEL       Ship by parcel post
Payment and Release InstructionsAIRENTER.Enter orderXPRESS.Ship by expressREIGHT.Ship by freightARCEL.Ship by parcel postIREX.Ship by air expressPASM.Ship by boat to BuffaloPONGE.Ship by boat to DuluthPOON.Ship by boat to DuluthPOUT.Ship what you can of orderQUIB.Trace your shipmentZREY.Hold shipment await instructionsERRY.Hold shipment satisfactory releaseReference to Previous Communicationsand Requests for ReplyELET.Referring to telegramELET.Referring to telephone callPANE.Referring to telephone call	EXED.       Shipped by air express         IN.       Will give definite delivery date later         MA.       Give definite delivery date         STIC.       Can you deliver         AD.       Disregard instructions regarding         SS.       Disregard letter regarding         LL       Disregard telegram regarding         ER.       Enter order         RESS       Ship by express         RESSED.       Shipped by express         SH.       Furnish serial and body numbers         IGHT.       Ship by Freight         IGHTED.       Shipped by freight         BY.       Letter not received mail copy         GE       Letters not received wire contents         CEL       Ship by parcel post         CELED       Shipped by parcel post
NTEREnter orderDRAXPRESSShip by expressDRAREIGHTShip by freightDRAARCELShip by parcel postDREIREXShip by air expressDREPASMShip by boat to BuffaloDRIIPOONGEShip by boat to BuffaloDRIIPOUTShip by boat to DuluthPOUTPOUTShip what you can of orderENTUIBTrace your shipmentZXPZRRYHold shipment await instructionsFLUSTUALReceived payment satisfactory releaseFREReference to Previous Communications and Requests for ReplyLOBIETELReferring to telegramLODIELETReferring to telephone callPARI	IN.       Will give definite delivery date later         MA.       Give definite delivery date         STIC       Can you deliver         AD.       Disregard instructions regarding         SS.       Disregard letter regarding         LL       Disregard telegram regarding         ER       Enter order         RESS       Ship by express         RESSED       Shipped by express         SH       Furnish serial and body numbers         IGHT       Ship by Freight         IGHTED       Shipped by freight         BY       Letter not received mail copy         GE       Letters not received wire contents         CEL       Ship by parcel post         CELED       Shipped by parcel post
XPRESS       Ship by express       DRA         REIGHT       Ship by freight       DRA         ARCEL       Ship by parcel post       DRA         IREX       Ship by parcel post       DRA         PASM       Ship by air express       DRE         PONGE       Ship by boat to Buffalo       DRI         PONGE       Ship by boat to Duluth       DRI         POUT       Ship by boat to Duluth       ENT         POUT       Ship what you can of order       EXP         QUIB       Trace your shipment       EXP         ITUAL       Received payment satisfactory release       FRE         Reference to Previous Communications       FRE         and Requests for Reply       LOBI         ETEL       Referring to telegram       LODI         ELET       Referring to telephone call       PARI	MA       Give definite delivery date         STIC       Can you deliver         AD       Disregard instructions regarding         SS       Disregard letter regarding         LL       Disregard telegram regarding         ER       Enter order         RESS       Ship by express         RESSED       Shipped by express         SH       Furnish serial and body numbers         IGHT       Shipped by freight         IGHTED       Shipped by freight         BY       Letter not received mail copy         GE       Ship by parcel post         CEL       Ship by parcel post
REIGHT       Ship by freight       DRA         ARCEL       Ship by parcel post       DRA         IREX       Ship by air express       DRE         PASM       Ship by boat to Buffalo       DRI         PONGE       Ship by boat to Buffalo       DRI         POUT       Ship by boat to Duluth       DRI         POUT       Ship by boat to Duluth       ENT         POUT       Ship what you can of order       EXP         QUIB       Trace your shipment       EXP         ZREY       Hold shipment await instructions       FLUS         TUAL       Received payment satisfactory release       FRE         Reference to Previous Communications       FRE       FRE         ETEL       Referring to telegram       LODD         ELET       Referring to telephone call       PARI	STIC       Can you deliver         AD       Disregard instructions regarding         SS       Disregard letter regarding         LL       Disregard telegram regarding         ER       Enter order         RESS       Ship by express         RESSED       Shipped by express         SH       Furnish serial and body numbers         IGHT       Shipped by freight         IGHTED       Shipped by freight         BY       Letter not received mail copy         GE       Letters not received wire contents         CEL       Ship by parcel post         CELED       Shipped by parcel post
ARCEL       Ship by parcel post       DRE         IREX       Ship by air express       DRE         PASM       Ship duplicate order of       DRE         PONGE       Ship by boat to Buffalo       DRI         POON       Ship by boat to Duluth       DRE         POUT       Ship by boat to Duluth       ENT         POUT       Ship what you can of order       EXP         QUIB       Trace your shipment       EXP         ZREY       Hold shipment await instructions       FLUS         ITUAL       Received payment satisfactory release       FRE         Reference to Previous Communications       FRE         ETEL       Referring to telegram       LODE         ELET       Referring to telegram       LODE         EPHONE       Referring to telephone call       PARE	AD       Disregard instructions regarding         SS       Disregard letter regarding         LL       Disregard telegram regarding         ER       Enter order         RESS       Ship by express         RESSED       Shipped by express         SH       Furnish serial and body numbers         IGHT       Shipped by freight         IGHTED       Shipped by freight         BY       Letter not received mail copy         GE       Letters not received wire contents         CEL       Ship by parcel post         CELED       Shipped by parcel post
IREX	SS.       Disregard letter regarding         LL       Disregard telegram regarding         ER       Enter order         RESS       Ship by express         RESSED       Shipped by express         SH       Furnish serial and body numbers         IGHT       Shipped by freight         IGHTED       Shipped by freight         BY       Letter not received mail copy         GE       Ship by parcel post         CEL       Ship by parcel post
PASM       Ship duplicate order of       DRE         PASM       Ship duplicate order of       DRI         PONGE       Ship by boat to Buffalo       DRI         POON       Ship by boat to Duluth       ENT         POUT       Ship by boat to Duluth       ENT         POUT       Ship by boat to Duluth       ENT         POUT       Ship by boat to Duluth       EXP         POUT       Ship by boat to Duluth       EXP         QUIB       Trace your shipment       EXP         (RUP)       Wire shipping instructions       FLUS         ETRY       Hold shipment await instructions       FRE         ITUAL       Received payment satisfactory release       FRE         Reference to Previous Communications       ILOBI         ETEL       Referring to telegram       LODI         ELET       Referring to letter       PARI         EPHONE       Referring to telephone call       PARI	SS.       Disregard letter regarding         LL       Disregard telegram regarding         ER       Enter order         RESS       Ship by express         RESSED       Shipped by express         SH       Furnish serial and body numbers         IGHT       Shipped by freight         IGHTED       Shipped by freight         BY       Letter not received mail copy         GE       Letters not received wire contents         CEL       Ship by parcel post         CELED       Shipped by parcel post
ADM.       Daily displace to Buffalo       DRII         PONGE       Ship by boat to Buffalo       DRII         POON       Ship by boat to Duluth       ENT         POUT       Ship by hat you can of order       EXP         QUIB       Trace your shipment       EXP         YRUP       Wire shipping instructions       FLUS         ERRY       Hold shipment await instructions       FRE         ITUAL       Received payment satisfactory release       FRE         Reference to Previous Communications       FRE         and Requests for Reply       LOBI         ETEL       Referring to telegram       LODI         ELET       Referring to telephone call       PARI	LL       Disregard telegram regarding         ER       Enter order         RESS       Ship by express         RESSED       Shipped by express         SH       Furnish serial and body numbers         IGHT       Ship by Freight         IGHTED       Shipped by freight         BY       Letter not received mail copy         GE       Letters not received wire contents         CEL       Ship by parcel post         CELED       Shipped by parcel post
POON       Ship by boat to Duluth         POUT       Ship by anch with other cars         HIRR       Ship what you can of order         QUIB       Trace your shipment         YRUP       Wire shipping instructions         ERRY       Hold shipment await instructions         ITUAL       Received payment satisfactory release         Reference to Previous Communications       FRE         and Requests for Reply       LOBI         ETEL       Referring to telegram         ELET       Referring to telephone call	ER.       Enter order         RESS.       Ship by express         RESSED.       Shipped by express         SH.       Furnish serial and body numbers         IGHT.       Ship by Freight         IGHTED.       Shipped by freight         BY.       Letter not received mail copy         GE       Letters not received wire contents         CEL.       Ship by parcel post         CELED.       Shipped by parcel post
POUT.       Ship branch with other cars       ENT         HIRR.       Ship what you can of order       EXP         QUIB.       Trace your shipment       EXP         QUIB.       Wire shipping instructions       EXP         RUP.       Wire shipping instructions       FLUS         TUAL.       Received payment satisfactory release       FRE         Reference to Previous Communications       FRE         and Requests for Reply       LOBI         ETEL.       Referring to telegram       LODI         ELET.       Referring to telephone call       PARI	RESS       Ship by express         RESSED       Shipped by express         SH       Furnish serial and body numbers         IGHT       Ship by Freight         IGHTED       Shipped by freight         BY       Letter not received mail copy         GE       Letters not received wire contents         CEL       Ship by parcel post         CELED       Shipped by parcel post
HIRR.       Ship what you can of order       EXP         QUIB.       Trace your shipment       EXP         QUIB.       Wire shipping instructions       EXP         RUP.       Wire shipping instructions       FLUS         ERRY.       Hold shipment await instructions       FLUS         ITUAL.       Received payment satisfactory release       FRE         Reference to Previous Communications       FRE         and Requests for Reply       LOBI         ETEL       Referring to telegram       LODI         ELET       Referring to letter       PARI         EPHONE       Referring to telephone call       PARI	RESSED       Shipped by express         SH       Furnish serial and body numbers         IGHT       Ship by Freight         IGHTED       Shipped by freight         BY       Letter not received mail copy         GE       Letters not received wire contents         CEL       Ship by parcel post         CELED       Shipped by parcel post
QUIBTrace your shipment       EXP.         ZRUPWire shipping instructions       FLUS         ERRYHold shipment await instructions       FLUS         ITUALReceived payment satisfactory release       FRE         Reference to Previous Communications       FRE         and Requests for Reply       LOBI         ETELReferring to telegram       LODD         ELETReferring to telephone call       PARD	RESSED       Shipped by express         SH       Furnish serial and body numbers         IGHT       Ship by Freight         IGHTED       Shipped by freight         BY       Letter not received mail copy         GE       Letters not received wire contents         CEL       Ship by parcel post         CELED       Shipped by parcel post
TRUPWire shipping instructions       FLUS         ERRYHold shipment await instructions       FRE         ITUALReceived payment satisfactory release       FRE         Reference to Previous Communications       FRE         and Requests for Reply       LOBI         ETELReferring to telegram       LODD         ELETReferring to letter       PARO         EPHONEReferring to telephone call       PARO	IGHTShip by Freight         IGHTEDShipped by freight         BYLetter not received mail copy         GELetters not received wire contents         CELShip by parcel post         CELEDShipped by parcel post
ERRY       Hold shipment await instructions       FLUS         ITUAL       Received payment satisfactory release       FRE         Reference to Previous Communications       FRE         and Requests for Reply       LOBI         ETEL.       Referring to telegram       LODD         ELET.       Referring to letter       PARD         EPHONE       Referring to telephone call       PARD	IGHTShip by Freight         IGHTEDShipped by freight         BYLetter not received mail copy         GELetters not received wire contents         CELShip by parcel post         CELEDShipped by parcel post
ITUAL	IGHTShip by Freight         IGHTEDShipped by freight         BYLetter not received mail copy         GELetters not received wire contents         CELShip by parcel post         CELEDShipped by parcel post
Reference to Previous Communications and Requests for Reply       LOBI         ETELReferring to telegram       LODE         ELETReferring to telephone call       PARE	BY       Letter not received mail copy         GE       Letters not received wire contents         CEL       Ship by parcel post         CELED       Shipped by parcel post
and Requests for ReplyLOBIETELReferring to telegramLODOELETReferring to letterEEPHONEReferring to telephone callPARO	GE Letters not received wire contents CELShip by parcel post CELEDShipped by parcel post
ETEL	GE Letters not received wire contents CELShip by parcel post CELEDShipped by parcel post
ETEL	GE Letters not received wire contents CELShip by parcel post CELEDShipped by parcel post
EPHONE	CELEDShipped by parcel post
EPHONE	CELEDShipped by parcel post
READ. Disregard instructions regarding PAR	CELEDShipped by parcel post
RESSDisregard letter regarding	
RILLDisregard telegram regarding RAIS	SE Advise order number unable locate
DBBYLetter not received mail copy REE	VE Answering letter unfilled orders are
DDGE Letter not received wire contents REIC	VE Answering letter unfilled orders are GN Answering telegram unfilled orders are
EEVEAnswering letter unfilled orders are REIN	NS Reply by mail
EIGNAnswering telegram unfilled orders are REL	ET Referring to letter
IFLE	HONE
EINSReply by mail RET	ELReferring to telegram
HYMEReply by air mail RHY	ME Reply by air mail
HARFWire reply today RIFL	E Have not received
HEAT:Wire immediately urgent RITU	JAL Received payment satisfactory release
ALTZ	
	RF Wire shipping date
SULL SULL	PTERCan you ship
Shipping, or Delivery Information SERI	RY Hold shipment await instructions
RASTIC	CK How soon can you ship
CEPTER Can you ship SHIF	R
IACK How soon can you ship SPAS	SM Ship duplicate order of
	NGEShip by boat to Buffalo
CARF Wire shipping date SPON	NGEDShipped by boat to Buffalo
HEEZE	DN Ship by boat to Duluth
	ONED Shipped by boat to Duluth
RYNECK Wire car number and initials SPOU	JTShip branch with other cars
USH Furnish serial and body numbers SQUI	BTrace your shipment
AISE Advise order number unable locate SYRI	UP Wire shipping instructions
XPRESSEDShipped by express	<b>T</b> 7
REIGHTEDShipped by freight WAL	TZWire reply to party making inquiry
ARCELED Shipped by parcel post WHA	RFWire reply today
IREXEDShipped by air express WHE	EATWire immediately urgent
PONGED	EZEWire immediately when you will ship
POONEDShipped by boat to Duluth WRI	NGWire engine and serial numbers
RAIN	NECKWire car number and initials

CANADIAN NUMERICAL CODE—To be used in messages destined to or originating in Canadian points. The letters are substituted for figure groups.

A B G H J M R T U O X 1 2 3 4 5 6 7 8 9 0 X

Copyright 1963 Studebaker Corporation PAGE NO. V

## LOCATION OF CAR SERIAL, ENGINE AND BODY NUMBERS

CAR SERIAL NUMBER PLATE-Right frame side rail in front of No. 1 body hold down bracket. MODEL SYMBOL and BODY NUMBER PLATE-This plate will be found on top rear of right fender apron. ENGINE NUMBER-

Stamped on boss at the top side, front end of cyl. block, next to left front corner of lifter cover.

ENGINE IDENTIFICATION-

 
After July, 1963 an engine numbering date code system will be as follows:

- 1. The following symbols identify the engine type and equipment and will appear as the prefix to the building date code:
  - R-8-289 Engine with one 4-barrel carburetor.
  - RS-8-289 Engine with one 4-barrel carburetor—supercharged. R3S-8-304 Engine with one 4-barrel carburetor—supercharged.

  - R4-8-304 Engine with two 4-barrel carburetors.

4

- 2. Following the above symbols a code will apply arranged in the following sequence:
  - The letters A B C D E F G H J K M N represent the month. Letter A will be January, B February, etc.  $(\mathbf{a})$
  - (**b**) The year will be designated by a single digit. Number 4 will be 1964, 5 will be 1965, etc.
  - The day (date) will complete the code.  $(\mathbf{c})$ Example:



3. Export engines built each day will be identified by a prefix serial number to the date code.

22

12 R G

- 12th export engine built July 22, 1964.

## CAR MODEL IDENTIFICATION

			START	ING WITH			HORSE POWER
MODEL	BODY			SOUTH BEND	ASHTABULA	CU. IN.	A.M.A. OR
SYMBOL	SYMBOL	CAR SERIAL	ENGINE NO.	BODY NO.	BODY NO.	PD.	R.A.C. RATING
R	Q	R-1001	*R-1001	R-Q-5001	R-Q-101	289″	40.6
	, i	R-1001	*RS-1001	R-Q-5001	R-Q-101	289″	40.6
		R-5089	R3S-H320	R-Q-5001	R-Q-101	304″	42.5
		R-5089	R4-H320	R-Q-5001	R-Q-101	304″	42.5

\*--- Date code used after July, 1963, (See example above.)

## LIST OF ABBREVIATIONS USED IN THIS PUBLICATION

A.C.	Air Conditioning	Fur Gen.	Furnished Generator	Rev
Air Cond AD.	Automatic Drive	Gen. Gov.	Generator	RetRetainer R.HRight Hand
Adj.	Adjusting	H.D.	Heavy Duty	RHC Right Hand Drive
Adj Alt.	Alternator	Hex.	Hexagon	Recl
	Anternator	H.C.	High Compression	Reinf
Amp	Assembly	Hsg.	High Compression	Req Required
Assy.	Automatic	I.D.	Inside Diameter	R /Q
Auto.				
Aux.	Auxiliary	Ign		Rr
Bbl.	Barrel	Illust.		
Bd.	Board	1	Illustration	Sec Secondary
Brg.	Bearing	Incl.	Included	Sh'prf Shakeproof
Brkt	Bracket	T	Includes	SltdSlotted
Brz.	Bronze	Indv Inl	Individual Inlet	SpecSpecial
Canada.	Canada Built Cars			Spd
Carb	Carburetor	Inst.	Instrument	Sq
C.E	Commutator End	Install		Steer
Com	Compressor		Less	
Comp't	Compartment	Lea L.H	Left Hand	S.T
Conn.	. Connecting	LHC.	Left Hand Drive	Stl. & Brz
Cont'd.	Continuec.	M/C.	Master Cylinder	Stl. & Rbr Steel & Rubber
Cop. Asb.	Copper Asbestos Cushion	Med.	Master Cynnder	
Cush.		Met.	Mat - 1	Supt Support Tach Tachometer
Cyl	Cylinder			Thd Thread
D.A	Dual Belt Alternator	Mldg		
D.E.	Drive end Diameter	Mtg		Trans Transmission
Dia.	Differential	NSS	Not Sold Separately	
Diff.	Distributor	0.D.	Outside Diameter	Univ Universal US
Dist	Each	O.D. OD	Outside Diameter	U.S.A. U.S.A. Built Cars
Ea.	Early Cut-in	Open.	Opening	Vac.
E.C.	Early Cut-In	Oper.	. Operating	Vent Vacuum
Eng.	Equipment	OS	Oversize	Vin Vinyl
Eq	Equipment	Pass.	Passenger	W/ With
Equip	Except	P.B	Power Brakes	W.B. Wheelbase
Exc Exh	Exhaust	Pri.	Primary	W/S Windshield
Exn	Extension	Prop	Propeller	W/Seal Weatherseal
Fast.	Fastening	P.S.	Power Steering	W/Strip
	Foundation	$\mathbf{R}$ $\mathbf{A}$	Rear Axle	r · · · · · · · · · · · · · · · · · · ·
Found	Front	Rad.	Radiator	
Frt.	TIOIL			

## INDEX OF MAJOR GROUPS AND SUB GROUPS ALSO QUICK REFERENCE INDEX OF ILLUSTRATIONS

#### ILLUSTRATED ON\_PAGE

#### 01-ENGINE GROUP

0100	ENGINE ASSEMBLY. ENGINE MOUNTINGS	
0101	ENGINE MOUNTINGS1.	2.7
0102	<b>UYLINDER BLUCK, HEAD and GASKET</b>	. 1. 2
0103	VALVES and VALVE MECHANISM	3, 9
0104	CAMSHAFT and BEARINGS, GEAR	
		.2, 3
0105	CRANKSHAFT, BEARING, CAPS,	,
	GEAR and DAMPER	. 3
0106	FLYWHEEL and STARTER GEAR	3
0107	CONNECTING RODS and BEARINGS .	. 3
0108	PISTONS, PINS and RINGS	. 3
0109	INLET and EXHAUST MANIFOLDS	
		.2,4
0115	OIL PAN, GASKETS, FILLER	
		2, 14
0116	OIL PUMP, STRAINER AND	
	PRESSURE GAGE PIPES	.2, 5
0117		2
0118	OIL FILTER and PIPES	1, 16

#### 02—CLUTCH, PEDAL and TORQUE CONVERTER GROUP

0201	CLUTCH DRIVEN PLATE WITH	
	FACINGS	17
0202	COVER, PRESSURE PLATE and	
	SPRINGS	17
0203	RELEASE BEARING, SHAFT and	
	LEVERS	. 17
0204	CLUTCH PEDAL and SPRING	
0205	PEDAL SHAFT	17
0206	CLUTCH OPERATING SHAFT and RODS	
0207	PILOT BEARING.	
0209	CLUTCH and FLYWHEEL HOUSING	
0220	TORQUE CONVERTER	
0230	TORQUE CONVERTER HOUSING	. 21

#### 03—FUEL SYSTEM GROUP

0301	FUEL PUMP	
0302	CARBURETOR	1, 2, 23, 24
0303	CARBURETOR AIR CLEANER	1, 26, 27
0304	FUEL FILTER	.23
0307	GASOLINE TANK, GAGE and	
	MOUNTINGS	. 23
0308	FUEL (GASOLINE) LINES and	
	CONNECTIONS	. 23
0312	ACCELERATOR AND THROTTLE	
	CONTROLS	
0320	SUPERCHARGED ASSEMBLY	
0321	PARTS FOR SUPERCHARGER.	

#### 04-EXHAUST GROUP

0401	EXHAUST PIPES	. 45
0402	MUFFLERS and SUPPORTS	.45
0403	OUTLET PIPES and SUPPORTS	 . 45

#### 05-COOLING GROUP

0501	RADIATOR CORE, RESERVOIR TANK
	and CAP
0502	RADIATOR AIR INTAKE PANELS
	and GRILLE ASSY
0503	RADIATOR SUPPORT
0504	THERMOSTAT49
0505	WATER PUMP
0506	FAN and BELTS
0507	RADIATOR and WATER PUMP HOSES
	and CLAMPS

#### ILLUSTRATED ON PAGE

#### 06-ELECTRICAL GROUP

0601	IGNITION DISTRIBUTOR
	CONDENSER and SPARK
	ADVANCE MODIFIER
0602	IGNITION COIL, SWITCH and LOCK
0603	SPARK PLUG and DISTRIBUTOR CABLES1, 56
0606	STARTER MOTOR
0607	STARTER SWITCH
	ALTERNATOR and REGULATOR
0609	ALIERNATOR and REGULATOR
0610	STORAGE BATTERY
0615	LIGHT SWITCHES—LIGHTING
	INSTRUMENTS, HEAD LAMP
	DIMMER and STOP LAMP
0617	HEAD and PARKING LAMPS
0619	TAIL and STOP LAMP 55, 60
0620	LICENSE PLATE LAMP
0621	DIRECTIONAL LAMPS
0622	LICENSE PLATE BRACKETS
0625	HORN
0627	CHASSIS WIRING, JUNCTION BLOCK,
••	CIRCUIT BREAKERS 55
0630	BATTERY and STARTER CABLES
0000	and GROUND STRAPS
0629	
0632	BACK-UP LAMP

#### 07-TRANSMISSION-3 SPEED GROUP

0700A	TRANSMISSION ASSEMBLY
0701A	TRANSMISSION CASE
0702A	TRANSMISSION MAIN SHAFT,
	GEARS and BEARINGS
0703A	TRANSMISSION COUNTERSHAFT,
	GEARS and BEARINGS
0704A	TRANSMISSION REVERSE IDLER
	GEAR and SHAFT
0705A	TRANSMISSION MAIN DRIVE
	PINION and BEARINGS
0747A	GEARSHIFT FORKS and LEVERS
0751A	GEARSHIFT HAND LEVER and BRACKET74
0760A	GEARSHIFT RODS

#### 07-TRANSMISSION-4 SPEED GROUP

0700B	TRANSMISSION ASSEMBLY TRANSMISSION CASE	. —
0701B	TRANSMISSION CASE	.79
0702B	TRANSMISSION MAIN SHAFT,	
	GEARS and BEARINGS.	79
0703B	TRANSMISSION COUNTERSHAFT,	
	GEARS and BEARINGS	.79
0704B	TRANSMISSION REVERSE IDLER	
	GEAR and SHAFT	79
0705B	TRANSMISSION MAIN DRIVE	
	PINION and BEARINGS	79
0747B	GEARSHIFT FORKS and LEVERS.	.79
0751B	GEARSHIFT HAND LEVER,	
	SHAFT and BRACKET	80
0760B	GEARSHIFT RODS.	

#### 08-TRANSMISSION-FLIGHT-O-MATIC GROUP

0800	FLIGHT-O-MATIC TRANSMISSION
0811	TRANSMISSION CASE
0814	TRANSMISSION INPUT and
	OUTPUT SHAFT
0817	TRANSMISSION PLANETARY SHAFT
0000	GEARS, ETC
0820	TRANSMISSION CLUTCH
0823	FRONT PUMP
$0824 \\ 0825$	TRANSMISSION OIL COLLECTOR
0825	SERVO UNITS
0828	SERVO BANDS
0830	TRANSMISSION GOVERNOR

## INDEX OF MAJOR GROUPS AND SUB GROUPS ALSO QUICK REFERENCE INDEX OF ILLUSTRATIONS

#### ILLUSTRATED ON PAGE

#### 08-TRANSMISSION-FLIGHT-O-MATIC GROUP-Cont'd.

0832	CONTROL VALVE.	.88, 89
0834	TRANSMISSION OIL REGULATOR	
0837	TRANSMISSION PARKING GEAR	85, 89
0841	TRANSMISSION OIL COOLER	
0851	HAND CONTROL SELECTOR LEVERS.	
	BRACKET and INDICATOR	
	(FLOOR SHIFT).	
0853	HAND CONTROL STARTER CUT-OUT	
	SWITCH	
0854	HAND CONTROL ROD	.90

#### 09-PROPELLER SHAFT GROUP

0900 0901	PROPELLER SHAFT. UNIVERSAL JOINT.		· · · ·	

#### 10-REAR AXLE GROUP

1000	REAR AXLE ASSEMBLIES
1001	REAR AXLE HOUSING and RADIUS ROD101
1002	REAR AXLE SHAFT and BEARINGS 101
1003	DIFFERENTIAL CARRIER
1004	DIFFERENTIAL CASE and BEARINGS 101, 103
1005	REAR AXLE BEVEL DRIVE GEAR,
	PINION and BEARINGS 101
1006	REAR AXLE UNIVERSAL JOINT FLANGE101

#### 11-BRAKES GROUP

1100	BRAKE CALIPERS, BRACKETS, PADS,	
	ЕТС	. 107
1101	WHEEL BRAKE SHOES, LINING,	
	ECCENTRICS, ETC.	
1102	WHEEL BRAKE BACKING PLATES	107
1103	WHEEL BRAKE CYLINDER	107, 108
1104	BRAKE MASTER CYLINDER	108, 109
1105	NoRol UNIT	
1107	BRAKE PIPES, HOSE and FITTINGS.	
1108	BRAKE PEDAL	
1109	BRAKE RODS	
1110	BRAKE CABLES	112
1112	POWER BRAKE UNIT, CHECK VALVE	
	and PIPES.	.109.111
1116	HAND or PARKING BRAKE.	112, 118

#### 12-FRONT SUSPENSION GROUP

1202	STEERING KNUCKLE and ARM.	121
1203	STEERING KNUCKLE KING PIN and BEARINGS	121, 123
1204	STEERING KNUCKLE CONTROL ARM.	. 121, 124
1205	STEERING KNUCKLE CONTROL ARM STABILIZER	126
1207	STEERING KNUCKLE TIE ROD and ENDS.	. 122
1209	STEERING BELLCRANK and BRACKET.	
13—S	TANDARD STEERING GROUP	

1301A	STEERING GEAR ASSEMBLIES.	1 <b>2</b> 9, 130
1302A	STEERING GEAR HOUSING and	-
		129, 130
1304A	STEERING GEAR POST and CAM,	100 100
	SHAFT, BEARINGS, ETC.	129, 130
1305A	STEERING GEAR POST JACKET,	100 190
	HOUSING, BRACKET, ETC.	129, 130 129, 130
1306A	STEERING GEAR CAM LEVER SHAFT.	129, 130
1307A	STEERING GEAR PITMAN ARM STEERING WHEEL and RELATED PARTS	
1310A	STEERING WHEEL and KELATED FARTS STEERING REACH ROD and ENDS.	199
1312A	STEERING REACH ROD and ENDS.	122

#### ILLUSTRATED ON PAGE

#### **13—POWER STEERING GROUP**

1 <b>301</b> B	STEERING GEAR ASSEMBLIES
1308B	POWER CYLINDER, BRACKET,
	CONTROL VALVE, HOSES, ETC
1309B	POWER STEERING PUMP, PULLEY,
	BELT, ETC
1310B	STEERING WHEEL and RELATED PARTS134
1 <b>312</b> B	STEERING REACH ROD and ENDS

#### 14-WHEELS GROUP

1402	WHEELS, HUBS and DISCS, HUBS
	and DRUMS145
1407	FRONT WHEEL BEARINGS, NUTS, ETC145
1408	FRONT WHEEL GREASE WASHERS
	and CAPS
1409	WHEEL HUB COVERS and CAPS

#### 15-FRAME and SPRINGS GROUP

1500	FRAME ASSEMBLY147
1501	FRAME CROSSMEMBERS
1505	REAR SPRING HANGERS147, 148
1507	FRAME MISCELLANEOUS
	ATTACHMENTS147
1510	FRONT SPRINGS148
1518	REAR SPRINGS148
1519	REAR SPRING BOLT148
1520	REAR SPRING SHACKLE
1521	REAR SPRING and REAR AXLE BUMPER148
1522	REAR SPRING CLIPS and PLATES
1525	REAR STABILIZER150

#### 16-FENDERS and HOOD GROUP

1601	FRONT FENDERS 18	53
	HOOD ASSEMBLY	
1622	HOOD LOCKS	53

#### 17—SPEEDOMETERS and INSTRUMENTS GROUP

1701	INSTRUMENT PANEL
1707	OIL PRESSURE GAGE
1709	AMMETER
1713	GASOLINE GAGE 157
1714	RADIMETER or WATER TEMPERATURE
	INDICATOR157
1716	SPEEDOMETER and DRIVE
	PARTS 157, 158, 159
1718	CLOCK 157
1720	TACHOMETER
1721	VACUUM GAGE

#### **18—SHOCK ABSORBERS and BUMPERS GROUP**

SHOCK ABSORBERS.								1	62	
FRONT BUMPERS										
REAR BUMPERS.										
VERTICAL BUMPERS.										
TOOLS	 						 			

## INDEX OF MAJOR GROUPS AND SUB GROUPS ALSO QUICK REFERENCE INDEX OF ILLUSTRATIONS

## ILLUSTRATED ON PAGE

#### 21-BODY GROUP CLIMATIZER and DEFROSTER. 165 AIR CONDITIONER UNIT. 168, 169 BODY HOLD DOWN BOLTS and SHIMS. 173 ROOF DRIP MOULDINGS. 218 2101 2102 2103 ROOF DRIP MOULDINGS218SHROUD KICK PADS and DASH LINERS222AIR VENTILATOR176RADIO and ANTENNA178INSTRUMENT BOARD181ASH RECEIVER and CIGAR LIGHTER184DOORS, HINGES, WEATHERSTRIPS185DOOR LOCKS, STRIKERS, HANDLE187ARM RESTS and INSIDE TRIM180MOULDINGS180 2105 2109 2110 2112 2113 2115 $\overline{2}116$ 2117 2118 MOULDINGS . . . . . . . . 189, 222 DOOR WINDOWS, CHANNELS, RUNS, WEATHERSEAL, REGULATORS and HANDLES..... 2119 2120 2121

#### ILLUSTRATED ON PAGE

#### 21-BODY GROUP-Cont'd.

2124	REAR QUARTER WINDOW CHANNELS,
	RUNS, WEATHERSTRIPS REGULATORS
	and MOULDINGS
2125	BACK WINDOW, GARNISH
	MOULDINGS, ETC
2127	SEATS and SEAT BELTS 201
2130	TRUNK or DECK LID
2138	FRONT FLOOR BOARD and CONSOLE205, 206
2139	TOE BOARD
2141	FLOOR, LUGGAGE COMP'T. and CONSOLE
	CARPETS
2144	SUN SHIELD or VISOR
2145	REAR VIEW MIRRORS
2147	WINDSHIELD and MOULDINGS
2149	WINDSHIELD WIPER and
	WINDSHIELD WASHER
2151	DOME LAMP
2153	COAT HOOKS
2160	BODY PANELS
2180	INTERIOR TRIM 222

#### Group

ACTUATOR HOUSING ASSY., steer. post
ADAPTER, outside door handle 2117B
ADAPTER, power steer. control valve cover
to housing 1308B
ADAPTER, power steer. power cylinder
ADAPTER, S/C to carburetor air inlet
ADAPTER, water temperature gage
AIR CLEANER, carburetor
AIR CONDITIONER UNIT
AIR DEFLECTOR, front fender side
ALTERNATOR, w/pulley assy
AMMETER
ANCHOR, clutch pedal pull back spring adjusting0204
ANTENNA KIT
APRON, front fender
ARM, alternator adjusting 0609
ARM, engine valve rocker0103
ARM, fuel pump rocker
ARM, steer. gear pitman
ARM, steer. knuckle
ARM, steer. knuckle control
ARM, supercharger idler pulley
ARMATURE, starter motor
ARMATURE, w/s wiper motor
ARM and SPRING, w/s wiper
ARM REST
AXLE ASSEMBLY, rear

#### в

b
BAFFLE, master cylinder cover
BAFFLE, power steer. pump reservoir baffle
detent spring
BALL, trans, inner shift lever interlock
BALL STUD, clutch operating shaft bearing
BALLAST, transigniter primary
BAR, outer face front bumper
BAR, bumper support       1803, 1805         BAR, outer face front bumper       1803         BAR, outer face rear bumper       1803         BAR, outer face rear bumper       1805         BASE, alternator mounting bracket       0609         BASE, head lamp sealed beam mounting       0617         BASE, rear view mirror mounting       2145A         DASE       0118
BASE, rear view mirror mounting
BASE w/BUSHINGS, distributor timer
BEARING, alternator ship rin, end head
BEARING, steer. bell crank bracket. 1209 BEARING, steer. knuckle lower. 1202
BEARING, steer. knuckle thrust
BEARING, steer. post shaft upper
BEARING, trans. pinion rear       0705Å, 0705B         BEARING, trans. second speed gear thrust       0702B         BEARING, torque converter       0220
BEARING SET crankshaft
BEARING SET, engine camshaft       0104         BEARING UNIT, conn. rod       0107         BEARING and COLLAR, clutch release       0203
BEARING and RETAINER RING KIT, rear axle shaft
BELL CRANK, hand brake
BELL CRANK, steering
BELT, compressor and fan drive
BELT, power steer. pump drive
DENDIA DIVIN, Starter motor

Group

#### B-Cont'd.

BEZEL, head lamp BEZEL or OVERLAY, radio opening	0617
BEZEL or OVERLAY, radio opening	
BLADE, w/s wiper	
BLOCK, oil pan filler BLOCKING RING, trans. low and second	0115
synchronizer	0702B
BLOCKING RING, trans. second and high	
synchronizer	<b>0702A</b>
BLOCKING RING, trans. second and high synchronizer BLOCKING RING, trans. third and high	0700D
synchronizer BOARD, instrument	0702B
BODY, head lamp.	
BODY power steer, pump	1309B
BODY, tail lamp. BODY, trans. control valve lower	
BODY, trans. control valve lower	
BODY, trans. control valve upper	0823
BODY, trans. front pump BODY, trans. oil pressure regulator	
BODY COMPLETE courtesy lamp	2113C
BODY COMPLETE, dome lamp. BOLT, alternator thru	2151
BOLT, alternator thru.	
BOLT, body hold down	1519
BOLT, rear spring BOLT, starter motor frame thru	
BOOT, brake pedal to operating lever rod	1108
BOOT, clutch operating bellcrank to pedal rod	0206
BOOT, clutch operating shaft	0206
BOOT, power brake plunger operating rod BOOT, rear wheel brake cylinder	
BOOT trans control	2138
BOOT, trans. control BOOT, trans. gearshift lever	
BRACE, bumper BRACE, deck opening to floor pan	1803, 1805
BRACE, deck opening to floor pan.	2160F
BRACKET, air cond. motor mtg.	2102A
BRACKET, alternator mounting	1709
BRACKET, ballast support	
BRACKET, alternator mounting. BRACKET, ammeter & radimeter mtg BRACKET, ballast support BRACKET, brake pedal support. BRACKET, carb. idle speed-up control	
BRACKET, carb. idle speed-up control	0302
BRACKET, clim. & air vent control retainer	
BRACKET, climatizer water valve mtg.	
BRACKET, clutch operating shaft support	
BRACKET, clutch pedal pull back spring adjusting anchor	
BRACKET, compressor and alt. mounting BRACKET, condenser support	2102C
BRACKET, condenser support	<b>2102B</b>
BRACKET, dash reinf.	2160A
BRACKET, deck lid latch mounting BRACKET, distributor and ignition coil	
BRACKET, distributor and ignition coil emission shield	0601
BRACKET, drive belt adj. idler pulley	2102C
BRACKET, engine front support BRACKET, engine valve rocker arm shaft	
BRACKET, engine valve rocker arm shaft BRACKET, evaporator support	21024
BRACKET, frame body support	1507
BRACKET, frame body support BRACKET, front brake caliper mounting	
BRACKET, front brake hose	1107
BRACKET, front stabilizer shaft link	
BRACKET, hand brake bellcrank support BRACKET, hand brake rear cable	
BRACKET, hood lock control inst. board	
BRACKET, hood top support	1620
BRACKET, ignition coil	0602
BRACKET, ignition coil bracket support	0602
BRACKET, muffler support BRACKET, oil pan breather tube	0115
BRACKET, oil pressure & gas gage mtg.	1707
BRACKET, oil pressure & gas gage mtg BRACKET, outlet pipe support	0403
BRACKET, power brake mounting BRACKET, power steer. power cylinder anchor BRACKET, power steer. pump support	
BRACKET, power steer. power cylinder anchor	1308B
DDACKET norman stoor survey and and	10000
BRACKET, power steer. pump support	1309B
BRACKET, power steer. pump support BRACKET, radiator reservoir tank support BRACKET, radio support	
BRACKET, radiator reservoir tank support BRACKET, radio support BRACKET, rear license plate	
BRACKET, radiator reservoir tank support BRACKET, radio support BRACKET, rear license plate	
BRACKET, radiator reservoir tank support BRACKET, radio support BRACKET, rear license plate	
BRACKET, radiator reservoir tank support BRACKET, radio support BRACKET, rear license plate BRACKET, r/q window latch handle BRACKET, rear spring front hanger BRACKET, rear stabilizer shaft outer bushing	
BRACKET, radiator reservoir tank support BRACKET, radio support BRACKET, rear license plate. BRACKET, r/q window latch handle BRACKET, rear spring front hanger BRACKET, rear stabilizer shaft outer bushing retainer BRACKET rear vertical bumper support	
BRACKET, radiator reservoir tank support BRACKET, radio support BRACKET, rear license plate. BRACKET, r/q window latch handle BRACKET, rear spring front hanger BRACKET, rear stabilizer shaft outer bushing retainer BRACKET rear vertical bumper support	
BRACKET, radiator reservoir tank support BRACKET, radio support BRACKET, rear license plate BRACKET, r/q window latch handle BRACKET, rear spring front hanger. BRACKET, rear stabilizer shaft outer bushing retainer.	

Group

#### B-Cont'd.

BRACKET, steer. bell crank	1209
PRACKET, steer, ben tialk	13054
BRACKET, steer. post jacket support BRACKET, steer. post jacket upper	13054
BRACKET, steer. post jacket upper	1303A
BRACKET, supercharger mounting	
BRACKET, tachometer mounting	1720
BRACKET trans gearshift lever mounting	0851
BRACKET, trans. gearshift lever return spring BRACKET, trans. gearshift lever shaft0751A,	0751B
BRACKET, trans. gearshift lever shaft	0751B
BRACKET trans oil filler tube	0811
BRACKET, trans. oil filler tube. BRACKET, trans. starter cut-out and back up	
lamp switch.	0853
BRACKET, vacuum gage mtg	1721
BRACKET, window guide	21200
BRACKET, window guide.	2120C
BRACKET, window stop BRACKET, w/s washer reservoir support	2120D
BRACKET and GUSSET ASSY., radiator core support BREATHER, trans. case	0500
support	0503
BREATHER, trans. case	0811
BRUSH, steer. wheel horn BRUSH, windshield wiper motor	.1310A
BRUSH, windshield wiper motor	.2149B
BRUSH SET. alternator	0609
BRUSH SET, starter motor	0606
BULB, back-up lamp.	0632
BULB, cigar lighter.	2115
BULB, clock light.	1718
BULB, Clock light.	9112B
BULB, comp't. light.	. 41100
BULB, console control lighting	4130
BULB, courtesy lamp	.21130
BULB, courtesy lamp BULB, directional signal tell-tale	0621
BULB, instrument panel lamp	2151
BULB, instrument panel lamp	1701
BULB, license lamp	0620
BULB, license lamp BULB, parking and signal lamp BULB, radio receiver dial	0617
BULB radio receiver dial	.2112A
RUL R tail stop and signal lamp	0619
BULB, trans. gearshift indicator lamp BULB, trunk light	0851
DUD, trans. gearshift indicator famp	2130
BULD, trunk light	1791
BULB, vacuum gage light. BULB, windshield header switch lighting	
BULD, windshield header switch lighting	
BUMPER, check strap.	.2113B
BUMPER, check strap	.2113B .2113B
BUMPER, check strap	.2113B .2113B
BUMPER, check strap. BUMPER, comp't. door BUMPER, front BUMPER gearshift lever	.2113B .2113B 1803 0851
BUMPER, check strap. BUMPER, comp't. door BUMPER, front BUMPER gearshift lever	.2113B .2113B 1803 0851
BUMPER, check strap. BUMPER, comp't. door BUMPER, front BUMPER gearshift lever	.2113B .2113B 1803 0851
BUMPER, check strap. BUMPER, comp't. door BUMPER, front BUMPER gearshift lever	.2113B .2113B 1803 0851
BUMPER, check strap.         BUMPER, comp't. door.         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, hood top.         BUMPER, rear.         BUMPER, rear axle.	.2113B .2113B 1803 0851 1620 1805 1521
BUMPER, check strap.         BUMPER, comp't. door         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, hood top.         BUMPER, rear.         BUMPER, rear.         BUMPER, rear axle.         BUMPER, steer knuckle control arm	.2113B .2113B 1803 0851 1620 1805 1521 1204
BUMPER, check strap.         BUMPER, comp't. door         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, hood top.         BUMPER, rear.         BUMPER, rear.         BUMPER, rear axle.         BUMPER, steer knuckle control arm	.2113B .2113B 1803 0851 1620 1805 1521 1204
BUMPER, check strap.         BUMPER, comp't. door.         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, hood top.         BUMPER, rear.         BUMPER, rear axle.         BUMPER, steer. knuckle control arm.         BUMPER, steer as filer door.	.2113B .2113B .1803 .0851 .1620 .1805 .1521 .1204 .2120B .2160D
BUMPER, check strap.         BUMPER, comp't. door.         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, hood top.         BUMPER, rear.         BUMPER, rear.         BUMPER, rear axle.         BUMPER, steer. knuckle control arm.         BUMPER, stop bracket         BUMPER, gas filler door.         BUSHING         BUSHING	2113B 2113B .1803 .0851 .1620 .1521 .1204 .2120B 2160D .1108
BUMPER, check strap.         BUMPER, comp't. door.         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, hood top.         BUMPER, rear         BUMPER, rear axle.         BUMPER, steer. knuckle control arm.         BUMPER, stop bracket.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, brake pedal.	2113B 2113B .1803 .0851 .1620 .1805 .1521 .1204 .2120B .2160D .1108 .0209
BUMPER, check strap.         BUMPER, comp't. door.         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, hood top.         BUMPER, rear.         BUMPER, rear.         BUMPER, rear axle.         BUMPER, stop bracket.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch operating bellgraph.	2113B 2113B .2113B .1803 .0851 .1620 .1805 .1521 .1204 .2120B .2160D .1108 .0209 .0206
BUMPER, check strap.         BUMPER, comp't. door.         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, hood top.         BUMPER, rear.         BUMPER, rear.         BUMPER, rear axle.         BUMPER, stop bracket.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch operating bellgraph.	2113B 2113B .2113B .1803 .0851 .1620 .1805 .1521 .1204 .2120B .2160D .1108 .0209 .0206
BUMPER, check strap.         BUMPER, comp't. door.         BUMPER, front.         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, hood top.         BUMPER, rear.         BUMPER, rear axle.         BUMPER, steer. knuckle control arm.         BUMPER, steer. knuckle control arm.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch operating bellcrank.         BUSHING, clutch arm pivot pin.	$\begin{array}{c} 2113B\\ 2113B\\ .1803\\ .0851\\ .1620\\ .1805\\ .1521\\ .1204\\ .2120B\\ .2160D\\ .1108\\ .0209\\ .0205\\ .0205\\ .1204 \end{array}$
BUMPER, check strap.         BUMPER, comp't. door.         BUMPER, front.         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, hood top.         BUMPER, rear.         BUMPER, rear axle.         BUMPER, steer. knuckle control arm.         BUMPER, steer. knuckle control arm.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch operating bellcrank.         BUSHING, clutch arm pivot pin.	$\begin{array}{c} 2113B\\ 2113B\\ .1803\\ .0851\\ .1620\\ .1805\\ .1521\\ .1204\\ .2120B\\ .2160D\\ .1108\\ .0209\\ .0205\\ .0205\\ .1204 \end{array}$
BUMPER, check strap.         BUMPER, comp't. door.         BUMPER, front.         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, nood top.         BUMPER, rear axle.         BUMPER, rear axle.         BUMPER, steer. knuckle control arm.         BUMPER, steer. knuckle control arm.         BUMPER, steer. knuckle control arm.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch operating bellcrank.         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.	$\begin{array}{c} 21138\\ 21138\\ .21138\\ .1803\\ .0851\\ .1620\\ .1805\\ .1521\\ .1204\\ .21208\\ .2160D\\ .1108\\ .0209\\ .0206\\ .0205\\ .1204\\ .1205\end{array}$
BUMPER, check strap.         BUMPER, comp't. door         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, sear.         BUMPER, rear axle.         BUMPER, stop bracket.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch pedal shaft.         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.	$\begin{array}{c} 21138\\ 21138\\ .21138\\ .1803\\ .0851\\ .1620\\ .1805\\ .1521\\ .1204\\ .21208\\ .2160D\\ .1108\\ .0209\\ .0206\\ .0205\\ .1204\\ .1205\end{array}$
BUMPER, check strap.         BUMPER, comp't. door         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, hood top.         BUMPER, rear axle.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch pedal shaft.         BUSHING, control arm pivot pin.         BUSHING, front stabilizer shaft.         BUSHING, front stabilizer shaft link.	$\begin{array}{c} 21138\\ .21138\\ .1803\\ .0851\\ .1620\\ .1805\\ .1521\\ .1204\\ .21208\\ .2160D\\ .1108\\ .0209\\ .0206\\ .0205\\ .1204\\ .1205\\ .1205\\ .1205\end{array}$
BUMPER, check strap.         BUMPER, comp't. door         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, hood top.         BUMPER, rear axle.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch pedal shaft.         BUSHING, control arm pivot pin.         BUSHING, front stabilizer shaft.         BUSHING, front stabilizer shaft link.	$\begin{array}{c} 21138\\ .21138\\ .1803\\ .0851\\ .1620\\ .1805\\ .1521\\ .1204\\ .21208\\ .2160D\\ .1108\\ .0209\\ .0206\\ .0205\\ .1204\\ .1205\\ .1205\\ .1205\end{array}$
BUMPER, check strap.         BUMPER, comp't. door         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, hood top.         BUMPER, rear axle.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch pedal shaft.         BUSHING, control arm pivot pin.         BUSHING, front stabilizer shaft.         BUSHING, front stabilizer shaft link.	$\begin{array}{c} 21138\\ .21138\\ .1803\\ .0851\\ .1620\\ .1805\\ .1521\\ .1204\\ .21208\\ .2160D\\ .1108\\ .0209\\ .0206\\ .0205\\ .1204\\ .1205\\ .1205\\ .1205\end{array}$
BUMPER, check strap.         BUMPER, comp't. door         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch pedal shaft.         BUSHING, control arm pivot pin.         BUSHING, front stabilizer shaft.         BUSHING, power steer. control valve housing oil seal.         BUSHING, power steer. power cylinder.	2113B .2113B .1803 .0851 .1620 .1805 .1521 .1204 .2120B .1204 .2120B .0209 .0206 .0205 .1204 .1205 .1205 .1205 .1205 .1208B .1308B .1308B
BUMPER, check strap.         BUMPER, comp't. door         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, hood top.         BUMPER, rear axle.         BUMPER, rear axle.         BUMPER, step bracket.         BUMPER, stop bracket.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch operating bellcrank.         BUSHING, clutch pedal shaft.         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.         BUSHING, power steer. control valve housing oil seal.         BUSHING, power steer. power cylinder.         BUSHING, rear axle radius rod         BUSHING, rear axle stop backer.	$\begin{array}{c} 2113B\\ .2113B\\ .1803\\ .0851\\ .1620\\ .1805\\ .1521\\ .1204\\ .2120B\\ .2160D\\ .1108\\ .0209\\ .0206\\ .0205\\ .1204\\ .1205\\ .1205\\ .1205\\ .1308B\\ .1308B\\ .1001\\ .1801\\ \end{array}$
BUMPER, check strap.         BUMPER, comp't. door.         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, rear.         BUMPER, rear axle.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch pedal shaft.         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.         BUSHING, front stabilizer shaft link.         BUSHING, rear axle radius rod.         BUSHING, rear shock absorber.         BUSHING, rear shoring	$\begin{array}{c} 2113B\\ .2113B\\1803\\0851\\0851\\1620\\1805\\1521\\1204\\ .2120B\\1108\\0209\\0206\\0205\\1204\\1205\\1205\\1205\\1205\\1308B\\1308B\\1001\\1801\\1520\\ \end{array}$
BUMPER, check strap.         BUMPER, comp't. door.         BUMPER, front.         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, kood top.         BUMPER, rear axle.         BUMPER, stop bracket.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch operating bellcrank.         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.         BUSHING, front stabilizer shaft link.         BUSHING, power steer. control valve housing oil seal.         BUSHING, rear axle radius rod.         BUSHING, rear spring.	2113B 2113B 1803 0851 1620 1805 1521 1204 2160D 1108 0209 0206 0205 1204 1205 1308B 1308B 1308B 1308B 1308B 1305
BUMPER, check strap.         BUMPER, comp't. door.         BUMPER, front.         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, kood top.         BUMPER, rear axle.         BUMPER, stop bracket.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch operating bellcrank.         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.         BUSHING, front stabilizer shaft link.         BUSHING, power steer. control valve housing oil seal.         BUSHING, rear axle radius rod.         BUSHING, rear spring.	2113B 2113B 1803 0851 1620 1805 1521 1204 2160D 1108 0209 0206 0205 1204 1205 1308B 1308B 1308B 1308B 1308B 1305
BUMPER, check strap.         BUMPER, comp't. door         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, stop bracket.         BUSHING, clutch housing.         BUSHING, clutch operating bellcrank.         BUSHING, clutch pedal shaft         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.         BUSHING, power steer. control valve housing         oil seal.         BUSHING, rear axle radius rod         BUSHING, rear spring.         BUSHING, rear spring front.         BUSHING, rear stabilizer shaft.	$\begin{array}{c} 2113B\\ .2113B\\ .2113B\\ .1803\\ .0851\\ .1620\\ .1805\\ .1521\\ .1204\\ .2120B\\ .2160D\\ .1204\\ .2120B\\ .0209\\ .0206\\ .0205\\ .1204\\ .1205\\ .120$
BUMPER, check strap.         BUMPER, comp't. door.         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, rear.         BUMPER, rear axle.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch pedal shaft.         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.         BUSHING, power steer. control valve housing         oil seal.         BUSHING, power steer. power cylinder.         BUSHING, rear axle radius rod.         BUSHING, rear shock absorber.         BUSHING, rear stabilizer shaft.         BUSHING, starter bendix drive housing.         BUSHING, starter bendix drive housing.	$\begin{array}{c} 21138\\ .21138\\ .21138\\ .31803\\ .0851\\ .1620\\ .1805\\ .1521\\ .1204\\ .21208\\ .2160D\\ .1108\\ .0209\\ .0206\\ .0205\\ .1204\\ .1205\\ .1205\\ .1204\\ .1205\\ .1205\\ .1308B\\ .1001\\ .1801\\ .1520\\ .1518\\ .1525\\ .0606\\ .0205\\ .0205\\ .1204\\ .1205\\ .12$
BUMPER, check strap.         BUMPER, comp't. door.         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, rear.         BUMPER, rear axle.         BUMPER, stop bracket.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch pedal shaft.         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.         BUSHING, control arm stabilizer shaft.         BUSHING, power steer. control valve housing         oil seal.         BUSHING, rear axle radius rod.         BUSHING, rear shock absorber.         BUSHING, rear spring.         BUSHING, rear short absorber.         BUSHING, rear spring front.         BUSHING, rear stabilizer shaft.         BUSHING, rear stabilizer shaft.         BUSHING, starter bendix drive housing.         BUSHING, steer. gear housing.         BUSHING, steer. gear housing.	$\begin{array}{c} 2113B\\1803\\0851\\0851\\0851\\1620\\1805\\1521\\1204\\ .2120B\\1004\\2120B\\1004\\1205\\1205\\1205\\1205\\1205\\1308B\\1001\\1520\\1518\\1525\\0606\\ 1302A\\1204 \end{array}$
BUMPER, check strap.         BUMPER, comp't. door         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, hood top.         BUMPER, rear         BUMPER, rear axle.         BUMPER, steer. knuckle control arm.         BUMPER, gas filler door.         BUSHING, clutch housing.         BUSHING, clutch operating bellcrank.         BUSHING, clutch operating bellcrank.         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.         BUSHING, front stabilizer shaft.         BUSHING, power steer. control valve housing oil seal.         BUSHING, rear axle radius rod.         BUSHING, rear spring.         BUSHING, rear spring front.         BUSHING, rear spring front.         BUSHING, starter bendix drive housing.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle control arm pivot shaft.	2113B 2113B 1803 0851 1620 1805 1521 1204 2120B 2160D 1108 0209 0206 0205 1204 1205 1308B 1308B 1308B 1308B 1308B 1308B 1302A 1525 0606 1302A 1204
BUMPER, check strap.         BUMPER, comp't. door         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, rear         BUMPER, rear axle.         BUMPER, steer. knuckle control arm.         BUMPER, gas filler door.         BUSHING, clutch housing.         BUSHING, clutch operating bellcrank.         BUSHING, clutch pedal shaft.         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.         BUSHING, control arm stabilizer shaft.         BUSHING, power steer. control valve housing oil seal.         BUSHING, power steer. power cylinder.         BUSHING, rear axle radius rod         BUSHING, rear spring.         BUSHING, rear spring front.         BUSHING, rear spring front.         BUSHING, steer. gear housing.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle control arm pivot shaft.	$\begin{array}{c} 2113B\\ .2113B\\ .2113B\\ .1803\\ .0851\\ .1620\\ .1805\\ .1521\\ .1204\\ .2120B\\ .2160D\\ .1204\\ .2120B\\ .1204\\ .2120B\\ .0206\\ .0205\\ .1204\\ .1205\\ .1205\\ .1205\\ .1205\\ .1208\\ .1308B\\ .1001\\ .1801\\ .1525\\ .0606\\ 1302A\\ .1204\\ .1202\\ .0320\\ \end{array}$
BUMPER, check strap.         BUMPER, comp't. door         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, rear         BUMPER, rear axle.         BUMPER, steer. knuckle control arm.         BUMPER, gas filler door.         BUSHING, clutch housing.         BUSHING, clutch operating bellcrank.         BUSHING, clutch pedal shaft.         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.         BUSHING, control arm stabilizer shaft.         BUSHING, power steer. control valve housing oil seal.         BUSHING, power steer. power cylinder.         BUSHING, rear axle radius rod         BUSHING, rear spring.         BUSHING, rear spring front.         BUSHING, rear spring front.         BUSHING, steer. gear housing.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle control arm pivot shaft.	$\begin{array}{c} 2113B\\ .2113B\\ .2113B\\ .1803\\ .0851\\ .1620\\ .1805\\ .1521\\ .1204\\ .2120B\\ .2160D\\ .1204\\ .2120B\\ .1204\\ .2120B\\ .0206\\ .0205\\ .1204\\ .1205\\ .1205\\ .1205\\ .1205\\ .1208\\ .1308B\\ .1001\\ .1801\\ .1525\\ .0606\\ 1302A\\ .1204\\ .1202\\ .0320\\ \end{array}$
BUMPER, check strap.         BUMPER, comp't. door.         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, rear.         BUMPER, rear axle.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch pedal shaft.         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.         BUSHING, control arm stabilizer shaft.         BUSHING, power steer. control valve housing         oil seal.         BUSHING, rear axle radius rod.         BUSHING, rear shock absorber.         BUSHING, rear spring         BUSHING, rear spring front.         BUSHING, rear spring front.         BUSHING, starter bendix drive housing.         BUSHING, steer. gear housing.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle upper.         BUSHING, supercharger idler pulley arm.         BUSHING, s/c tension spring mtg. shaft.         BUSHING, s/c tension spring mtg. shaft.	$\begin{array}{c} 2113B\\1803\\0851\\0851\\0851\\1620\\1805\\1521\\1204\\ .2120B\\1204\\2120B\\1004\\1205\\1205\\1205\\1205\\1205\\1205\\1205\\1308B\\1001\\1520\\1518\\1525\\0606\\ 1302A\\1204\\$
BUMPER, check strap.         BUMPER, comp't. door.         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, rear.         BUMPER, rear axle.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch pedal shaft.         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.         BUSHING, control arm stabilizer shaft.         BUSHING, power steer. control valve housing         oil seal.         BUSHING, rear axle radius rod.         BUSHING, rear shock absorber.         BUSHING, rear spring         BUSHING, rear spring front.         BUSHING, rear spring front.         BUSHING, starter bendix drive housing.         BUSHING, steer. gear housing.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle upper.         BUSHING, supercharger idler pulley arm.         BUSHING, s/c tension spring mtg. shaft.         BUSHING, s/c tension spring mtg. shaft.	$\begin{array}{c} 2113B\\1803\\0851\\0851\\0851\\1620\\1805\\1521\\1204\\ .2120B\\1204\\2120B\\1004\\1205\\1205\\1205\\1205\\1205\\1205\\1205\\1308B\\1001\\1520\\1518\\1525\\0606\\ 1302A\\1204\\$
BUMPER, check strap.         BUMPER, comp't. door         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, steer. knuckle control arm.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch operating bellcrank         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.         BUSHING, front stabilizer shaft.         BUSHING, power steer. control valve housing oil seal.         BUSHING, rear axle radius rod.         BUSHING, rear spring.         BUSHING, rear spring front.         BUSHING, starter bendix drive housing.         BUSHING, steer. gear housing.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle upper.         BUSHING, steer. knuckle upper.         BUSHING, scortharger idler pulley arm.         BUSHING,	2113B 2113B 1803 0851 1620 1805 1521 1204 2120B 2160D 1108 0209 0206 0205 1204 1205 1308B 1308B 1308B 1308B 1308B 1308B 1302A 1518 1525 0606 1302A 1204 1202 0320 0320 0320 0811
BUMPER, check strap.         BUMPER, comp't. door         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, steer. knuckle control arm.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch operating bellcrank         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.         BUSHING, front stabilizer shaft.         BUSHING, power steer. control valve housing oil seal.         BUSHING, rear axle radius rod.         BUSHING, rear spring.         BUSHING, rear spring front.         BUSHING, starter bendix drive housing.         BUSHING, steer. gear housing.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle upper.         BUSHING, steer. knuckle upper.         BUSHING, scortharger idler pulley arm.         BUSHING,	2113B 2113B 1803 0851 1620 1805 1521 1204 2120B 2160D 1108 0209 0206 0205 1204 1205 1308B 1308B 1308B 1308B 1308B 1308B 1302A 1518 1525 0606 1302A 1204 1202 0320 0320 0320 0811
BUMPER, check strap.         BUMPER, comp't. door.         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, rear.         BUMPER, rear axle.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch operating bellcrank.         BUSHING, clutch pedal shaft.         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.         BUSHING, power steer. control valve housing         oil seal         oil seal         BUSHING, rear sake radius rod         BUSHING, rear spring         BUSHING, rear spring         BUSHING, rear spring front.         BUSHING, rear spring front.         BUSHING, starter bendix drive housing.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle upper.         BUSHING, supercharger idler pulley arm.         BUSHING, trans. case.         BUSHING, trans. case         BUSHING, trans. case.	2113B 2113B .1803 .0851 .1620 .1805 .1521 .1204 .2120B .1204 .2120B .0209 .0206 .0205 .1204 .1205 .1205 .1204 .1205 .1205 .1308B .1308B .1308B .1308B .1308B .1308B .1308B .1308B .1308B .1308B .1308B .1308B .1205 .1207 .120
BUMPER, check strap.         BUMPER, comp't. door.         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, rear.         BUMPER, rear axle.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, stop bracket.         BUMPER, gas filler door.         BUSHING, brake pedal.         BUSHING, clutch housing.         BUSHING, clutch operating bellcrank.         BUSHING, clutch pedal shaft.         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.         BUSHING, power steer. control valve housing         oil seal         oil seal         BUSHING, rear sake radius rod         BUSHING, rear spring         BUSHING, rear spring         BUSHING, rear spring front.         BUSHING, rear spring front.         BUSHING, starter bendix drive housing.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle upper.         BUSHING, supercharger idler pulley arm.         BUSHING, trans. case.         BUSHING, trans. case         BUSHING, trans. case.	2113B 2113B .1803 .0851 .1620 .1805 .1521 .1204 .2120B .1204 .2120B .0209 .0206 .0205 .1204 .1205 .1205 .1204 .1205 .1205 .1308B .1308B .1308B .1308B .1308B .1308B .1308B .1308B .1308B .1308B .1308B .1308B .1205 .1207 .120
BUMPER, check strap.         BUMPER, comp't. door         BUMPER, front.         BUMPER, gearshift lever.         BUMPER, gearshift lever.         BUMPER, steer. knuckle control arm.         BUMPER, gas filler door.         BUSHING, clutch housing.         BUSHING, clutch operating bellcrank         BUSHING, clutch operating bellcrank         BUSHING, control arm pivot pin.         BUSHING, control arm stabilizer shaft.         BUSHING, front stabilizer shaft.         BUSHING, power steer. control valve housing         oil seal.         BUSHING, rear shere. power cylinder.         BUSHING, rear spring.         BUSHING, rear spring front.         BUSHING, rear spring front.         BUSHING, starter bendix drive housing.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle control arm pivot shaft.         BUSHING, steer. knuckle upper.         BUSHING, score.         BUSHING, score.	2113B 2113B .1803 .0851 .1620 .1805 .1521 .1204 .2120B .1204 .2120B .0209 .0206 .0205 .1204 .1205 .1205 .1204 .1205 .1205 .1308B .1308B .1308B .1308B .1308B .1308B .1308B .1308B .1308B .1308B .1308B .1308B .1205 .1207 .120

#### $\mathbf{C}$

Group

#### C-Cont'd.

CABLE, carb. idle speed-up control	0302
CABLE, carb, idle speed-up control ground	0302
CABLE, coil to primary ballast	0602 💻
CABLE, distributor to coil high tension	0603
CABLE, distributor to coil low tension CABLE, head lamp	0603
CABLE, ignition coil to primary resistor	0602
CABLE, spark plug	
CABLE, starter switch to motor	0630
CARLE directional signal switch to chassis	
cables connector	0621
CABLE SET, ignition CABLE and CONDUIT, air intake valve	0603
control 9101	A 9110
CABLE and CONDUIT, control to defroster valve. CABLE and CONDUIT, hand brake control	2101B
CABLE and CONDUIT, hand brake control	1116
CABLE and CONDUIT, water valve control CABLE and ENDS, rear, hand brake	.2101A
CALIPER ASSY., front brake	1100
CAM, steering wheel directional signal.	
CAMSHAFT, engine	0104
CAMSHAFT and CAM, distributor timer	0601
CAP, crankshaft bearing	0105
CAP, distributor CAP, front wheel hub grease	0601
CAP, front wheel hub grease	0307
CAP, inst. board end	
CAP, inst. board end CAP, oil pan filler CAP, power steer. pump control valve	0115
CAP, power steer. pump control valve	<b>1309B</b>
CAP, radiator pressure filler CAP, trans. parking and reverse lockout shaft	0501
CAP, trans. parking and reverse lockout shalt	21490
CAP, w/s washer reservoir. CAP and DIPSTICK, flight-o-matic trans. oil	
filler tube	0811
CAP & EMBLEM ASSY., hub	1409
CARBURETOR CARBURETOR DETAILS	0302
CARPET, dash liner	2100B
CARPET, floor, luggage comp't. and console	2141A
CARTRIDGE, oil filter	0118
CASE. differential	1004
CASE, differential	1004 B, 0811
CASE, differential CASE, transmission0701A, 0701 CATALYST, (setting agent)	1004 1B, 0811 2160J
CASE, differential. CASE, transmission	1004 1B, 0811 2160J 2130
CASE, differential. CASE, transmission	
CASE, differential CASE, transmission	1004 1B, 0811 2160J 2130 2120B 2121 2147
CASE, differential CASE, transmission	1004 1B, 0811 2160J 2130 2120B 2121 2147
CASE, differential CASE, transmission	1004 1B, 0811 2160J 2130 2120B 2121 2147
CASE, differential. CASE, transmission	
CASE, differential. CASE, transmission	1004 IB, 0811 2160J 2120B 2120B 2121 2147 2113B 1112 112 0627 2149A
CASE, differential. CASE, transmission	1004 IB, 0811 2160J 2130 2120B 2121 2147 2113B 1112 2120G 0627 2149A 1116
CASE, differential. CASE, transmission	1004 IB, 0811 2160J 2130 2120B 2121 2147 2113B 1112 2120G 0627 2149A 1116
CASE, differential. CASE, transmission	$\begin{array}{c}1004\\ IB, 0811\\2160J\\2130\\2120B\\2121\\2147\\2113B\\1112\\2120G\\0627\\2149A\\1116\\1308B\\1207\\ \end{array}$
CASE, differential CASE, transmission	$\begin{array}{c}1004\\ IB, 0811\\2160J\\2130\\2120B\\2121\\ .2147\\ .2113B\\1112\\ .2120G\\0627\\2149A\\1116\\ .1308B\\1207\\ .2115\\0206\end{array}$
CASE, differential. CASE, transmission	$\begin{array}{c}1004\\ IB, 0811\\2160J\\2130\\2120B\\2121\\2147\\2113B\\1112\\ .2120G\\0627\\2149A\\1116\\1308B\\1207\\2115\\0206\\1116\end{array}$
CASE, differential. CASE, transmission	$\begin{array}{c}1004\\ \mathrm{lB},0811\\2160J\\2130\\2120B\\2121\\2147\\2147\\2113B\\1112\\2120G\\0627\\2149A\\1116\\1308B\\1207\\2115\\0206\\1116\\2125\end{array}$
CASE, differential. CASE, transmission	1004 IB, 0811 2160J 2120B 2120B 2121 2147 2113B 1112 2120G 0627 2149A 1116 308B 1207 2115 0206 1116 2125 2125 2127B
CASE, differential. CASE, transmission	$\begin{array}{c}1004\\ \mathrm{lB},0811\\2160J\\2130\\2120B\\2121\\2147\\2113B\\1112\\ .2120G\\0627\\2149A\\1116\\1308B\\1207\\2115\\0206\\1116\\2125\\2117B\\308B\\1308B\\1309B \end{array}$
CASE, differential. CASE, transmission	$\begin{array}{c}1004\\ \mathrm{lB},0811\\2160J\\2130\\2120B\\2121\\2147\\2113B\\1112\\ .2120G\\0627\\2149A\\ .1116\\1308B\\1207\\2115\\0206\\116\\2125\\2117B\\1308B\\1309B\\1101\\ \end{array}$
CASE, differential. CASE, transmission	$\begin{array}{c}1004\\ \mathrm{lB},0811\\2160J\\2130\\2120B\\2121\\2147\\2113B\\1112\\ .2120G\\0627\\2149A\\ .1116\\1308B\\1207\\2115\\0206\\116\\2125\\2117B\\1308B\\1309B\\1101\\ \end{array}$
CASE, differential. CASE, transmission	$\begin{array}{c}1004\\1004\\1004\\1004\\1004\\1004\\1004\\1004\\1004\\1104\\1104\\1004\\1004\\1004\\1004\\1004\\1004\\1004\\1004\\1004\\1004\\1014\\0001\\0001\\1004\\1004\\1014\\0001\\1014\\0001\\1014\\0001\\1014\\0001\\1014\\0001\\1014\\0001\\1014\\0001\\1014\\0001\\1014\\0001\\1014\\0001\\1014\\0001\\1014\\0001\\1014\\1014\\0001\\1014\\$
CASE, differential. CASE, transmission	$\begin{array}{c}1004\\$
CASE, differential. CASE, transmission	$\begin{array}{c}1004\\1004\\1004\\2160J\\2130\\2120B\\2120B\\2121\\2147\\2113B\\1112\\2120G\\0627\\2149A\\1116\\1308B\\1207\\2115\\0206\\1116\\2125\\2117B\\1308B\\1308B\\1308B\\101\\0841\\0901\\522\\1718\end{array}$
CASE, differential CASE, transmission	1004 IB, 0811 2160J 2130 2120B 2121 2147 2113B 1112 2120G 0627 2149A 1116 1308B 1207 2149A 1116 2125 2125 2125 117B 308B 109B 109B 1091 0841 0901 1522 1718 160J 0817
CASE, differential. CASE, transmission	$\begin{array}{c}1004\\1004\\1004\\1004\\1004\\1004\\1004\\1004\\1004\\1004\\1104\\1104\\1106\\1106\\1107\\1107\\1107\\1107\\1107\\1107\\1107\\1107\\1107\\1107\\1107\\1107\\1107\\1107\\1107\\1107\\1107\\1007\\1107\\1007\\$
CASE, differential. CASE, transmission	$\begin{array}{c}1004\\1004\\1004\\1004\\1004\\1004\\1004\\1004\\1104\\1104\\1112\\1122\\112\\112\\112\\112\\112\\112\\112\\112\\112\\112\\112\\112\\112\\1004\\111\\1004\\111\\1004\\111\\1004\\111\\1004\\1101\\0001\\1522\\1718\\1004\\ $
CASE, differential CASE, transmission	1004 IB, 0811 2160J 2130 2120B 2121 2147 2113B 1112 2120G 0627 2149A 1116 1308B 1207 2149A 1116 1308B 1207 2125 117B 1308B 1004 109B 101 0841 0901 1522 1718 1802 0501 0602 0501 0501 0501 0501 0501 0501
CASE, differential. CASE, transmission	$\begin{array}{c}1004\\1004\\1004\\2160J\\2130\\2120B\\2120B\\2121\\2147\\2113B\\1112\\2120G\\0627\\2149A\\1116\\1308B\\1207\\2115\\0206\\1116\\2125\\2117B\\1308B\\1309B\\1101\\0841\\0901\\1522\\1718\\2160J\\0501\\0501\\0501\\0501\\0501\\0602\\2139\\0601\end{array}$
CASE, differential. CASE, transmission	$\begin{array}{c}1004\\1004\\1004\\1004\\1004\\1004\\1004\\1004\\1104\\1112\\1122\\1122\\1122\\1122\\1122\\1122\\1122\\1122\\1122\\1112\\1122\\1112\\1122\\1112\\1122\\1112\\1122\\1112\\$
CASE, differential. CASE, transmission	$\begin{array}{c} .1004\\ \mathrm{lB},0811\\ .2160J\\ .2130\\ .2120B\\ .2120B\\ .2121\\ .2147\\ .2113B\\ .1112\\ .2120G\\ .0627\\ .2149A\\ .1116\\ .1308B\\ .1207\\ .2115\\ .0206\\ .1116\\ .2125\\ .2117B\\ .1308B\\ .1309B\\ .1101\\ .0841\\ .0901\\ .1522\\ .1718\\ .2160J\\ .0817\\ .0501\\ .0602\\ .2139\\ .2102C\\ .0601\\ .2102B\\ .1004\end{array}$
CASE, differential CASE, transmission	1004 IB, 0811 2160J 2130 2120B 2121 2147 2147 2113B 1112 2120G 0627 2149A 1116 1308B 1207 2149A 1116 1308B 1207 2125 2125 117B 1308B 1004 101 0841 0901 0501 0610 0501 0610 0501 0501 0602 139 0501 0501 0501 0602 139 0501 0501 0501 0501 0501 0501 0501 0501 0501 0602 139 0501 0501 0501 0602 0501 0501 0602 0501 0501 0501 0501 0501 0501 0501 0602 0501 0004 0501 004 0501 004 0501 004 
CASE, differential. CASE, transmission	$\begin{array}{c} .1004\\ .1004\\ .1005\\ .2100\\ .2130\\ .2120B\\ .2120B\\ .2121\\ .2147\\ .2113B\\ .1112\\ .2120G\\ .0627\\ .2149A\\ .1116\\ .1308B\\ .1207\\ .2115\\ .0206\\ .1116\\ .2125\\ .2117B\\ .1308B\\ .1308B\\ .1308B\\ .1308B\\ .1308B\\ .1308B\\ .101\\ .0841\\ .0901\\ .1522\\ .1718\\ .2160J\\ .0841\\ .0901\\ .1522\\ .1718\\ .2160J\\ .0602\\ .2139\\ .2102C\\ .0601\\ .2102B\\ .1004\\ .1407\\ .1005\\ .1002\\ \end{array}$
CASE, differential. CASE, transmission	$\begin{array}{c}1004\\1004\\1005\\2100\\2120B\\2120B\\2120B\\2121\\2147\\2113B\\1112\\2120G\\0627\\2149A\\1116\\1308B\\1207\\2115\\0206\\1116\\2125\\2117B\\1308B\\1001\\0841\\0901\\1522\\1718\\1008\\101\\0817\\0501\\0601\\2102B\\1004\\1005\\002\\0107\\ \end{array}$
CASE, differential. CASE, transmission	$\begin{array}{c}1004\\1004\\1005\\2100\\2120B\\2120B\\2120B\\2121\\2147\\2113B\\1112\\2120G\\0627\\2149A\\1116\\1308B\\1207\\2115\\0206\\1116\\2125\\2117B\\1308B\\1001\\0841\\0901\\1522\\1718\\1008\\101\\0817\\0501\\0601\\2102B\\1004\\1005\\002\\0107\\ \end{array}$

#### Group

#### C-Cont'd.

CONSOLE, floor pan CONTROL, air intake valve	2130
CONTROL, air intake valve 2101	A. 2110
CONTROL areh idle grood up	0202
CONTROL, carb. idle speed-up CONTROL, deck lid latch	0302
CONTROL, deck lid latch	2130
CONTROL, defroster	.2101B
CONTROL, door locking	9117D
CONTROL de la recente	01170
CONTROL, door remote	.21170
CONTROL, hand brake	11116
CONTROL, hood lock.	1622
CONTROL, water valve	2101A
CONTROL ASSV trong	0000
CONTROL ASSI., trans.	0832
CONTROL KIT, carb. idle speed-up CONTROL VALVE ASSEMBLY, power steer	0302
CONTROL VALVE ASSEMBLY, power steer	.1308B
CONVERTER COMPLETE, torque	
CORE, climatizer	2101A
COPE redictor	0501
CORE, radiator.	0501
CORE, speedometer shaft         COUNTERSHAFT, trans.         .0703A         COUPLING, oil pressure gage pipe flexible	1716
COUNTERSHAFT, trans	, 0703B
COUPLING, oil pressure gage nine flexible	0116
COUPLING, trans. oil cooler pipe	0941
COUPLING, trans. on cooler pipe	0041
COVER, accelerator pedal (accessory)	0312
COVER, camshaft timing gear	0104
COVER, comp't. door safety pad COVER, cylinder block oil filler hole COVER, engine valve lifter	2113B
COVED, culinder block oil filler hole	0100
COVER, cylinder block oli iller hole	0102
COVER, engine valve litter	0103
COVER, engine valve rocker arm	0103
COVER gas tank gage access hole	2160G
COVER, gas tank gage access hole	1116
COVER, hand brake control cable conduit clamp	
COVER, head lamp well glass	0617
COVER, inst. bd. safety pad COVER, master cylinder filler	.2113A
COVER, master cylinder filler	
COVER oil numn body	0116
COVER, oil pump body COVER, power steer. control valve housing end	12000
COVER, power steer. control valve nousing end	.1308B
COVER, power steer. pump body	.1309B
COVER, power steer, pump reservoir COVER, radio control hole opening.	.1309B
COVER radio control hole opening	2113D
OVED and the baseling	1001
COVER, rear axie nousing.	1001
COVER, rear axle housing COVER, rear axle universal joint flange dust	1006
COVER, right cylinder head rear end	0102
COVER soot adj track handle	9197
COVED at a 1 1 1 1 1	01000
COVER, seat back shelf. COVER, seat hinge. COVER, spare wheel. COVER, spark plug cables emission shield.	.2160G
COVER, seat hinge	2127
COVER, spare wheel	2130
COVER, spark plug cables emission shield	0603
COVER, spark plug cables emission shield	10003
COVER, steer. gear housing side	1302A
COVER, steer. gear housing top	.1302A
COVER, steer, post actuator	1304A
COVER trans case	0701A
COVER, steer. gear housing side. COVER, steer. gear housing top. COVER, steer. post actuator. COVER, trans. case. COVER, trans. control lower body. COVER, trans. control lower body end. COVER, trans. extension housing governor	0101A
COVER, trans. control lower body	0832
COVER, trans. control lower body end	0832
COVER, trans, extension housing governor	
inspection	0811
COVER, trans. oil pressure regulator	0834
COVER, wheel. COVER and STATOR HUB, flight-o-matic trans.	1409
COVER and STATOR HUB flight-o-matic trans	
front nump hody	0600
front pump body	
	0202
CRANKSHAFT CROSS, throttle kicker pipe to manifold	0105
CROSS throttle kicker pipe to manifold	0302
CROSS and BEARINGS UNIT, universal joint.	0901
ODOGG MEMDEDG from a	1501
CROSS MEMBERS, frame	1501
CUP, differential bearing	1004
CUP, front wheel bearing	1407
CUP master cylinder	1104
OUD master cylinder nisten	1104
COF, master cylinder piston	1005
CUP, front wheel bearing. CUP, master cylinder CUP, master cylinder piston CUP, rear axle pinion bearing CUP, rear axle shaft bearing CUP, rear axle shaft bearing	1005
CUP, rear axle shaft bearing	1002
CUP, rear wheel brake cylinder CUP, steer. post cam bearing	
CUP steer nest cam bearing	
OUCHION door contilator alars	1304 A
CUSHION, door ventilator glass	.1304A
CUSHION, front bumper	2121
CUSHION, front door window	
CLISHION r/a window diass	
CUSHION, r/q window glass.	
CUSHION, rear vertical bumper	
CUSHION, rear vertical bumper	
CUSHION, rear vertical bumper	
CUSHION, rear vertical bumper COUPLING, motor to drive. COWL SIDE PANEL CRASH PAD front roof rail	
CUSHION, rear vertical bumper COUPLING, motor to drive. COWL SIDE PANEL CRASH PAD front roof rail	
CUSHION, rear vertical bumper COUPLING, motor to drive. COWL SIDE PANEL CRASH PAD front roof rail	
CUSHION, rear vertical bumper. COUPLING, motor to drive. COWL SIDE PANEL CRASH PAD, front roof rail. CRASH PAD, roof center reinf. CRASH PAD, w/s open, header switch.	2121 1803 .2120A 2124 1807 .2120G .2160A 2180 2180 2180
CUSHION, rear vertical bumper COUPLING, motor to drive. COWL SIDE PANEL CRASH PAD front roof rail	

#### Group

#### C-Cont'd.

CYLINDER ASSY., wheel brake
CYLINDER BLOCK
CYLINDER BLOCK ASSY0102 CYLINDER REPAIR KIT, wheel brake cylinder1103

#### $\mathbf{D}$

DAMPER, engine valve spring	0103
DASH LINER	<b>2109</b> B
DASH PANEL	2160A
DEFLECTOR, engine valve stem oil	
DEFLECTOR, evaporator air	2102A
DEFLECTOR, outlet pipe exhaust.	0403
DEFLECTOR, panel reinf. and upper air	0502
DIAL, trans. gearshift housing indicator	0851
DIAPHRAGM, fuel pump	0301
DISC, differential clutch friction.	1004
DISC, trans. front clutch friction	0090
DISC, trans. front clutch inction	
DISC, trans. rear clutch friction.	
DISPENSER, electrolyte	0610
DISTRIBUTOR w/ MODIFIER, ignition	0601
DOOR, compartment.	2113B
DOOR, front	2116A
DOOR, gas filler	2160D
DOOR and LENS, courtesy lamp	2113C
DOOR and LENS, dome lamp	
DOVETAIL, hood lock	1622
DRAIN COCK, cylinder block	0102
DRIVE, door window regulator	2120G
DRIVE LINK, w/s wiper motor.	2149A
DRUM, rear wheel brake.	1402
DUCT, air distribution.	9101 A
DUST SHIFID yoon wheel brake enlinder	1109
DUST SHIELD, rear wheel brake cylinder	1103

#### Е

ECCENTRIC, fuel pump actuating	0301
ECCENTRIC, rear brake shoe take-up	1101
ELBOW, gas tank to fuel pump pipe hose	0308
ELBOW, power brake vacuum hose to manifold tee.	1112
ELBOW, trans. oil cooler pipe	0841
ELECTROLYTE	0610
ELEMENT, cigar lighter	.2115B
EMBLEM, front fender	1601
EMBLEM, rear quarter panel.	.2160D
EMBLEM, rear seat back panel	.2160G
EMBLEM, steer. wheel	.1310A
END ASSEMBLY, power steer. power cylinder	.1308B
END, throttle bellcrank to trans. rod	0312
END, throttle control bellcrank to carb. rod	0312
END, steer. knuckle tie rod	
EQUÁLIZER, hand brake rear cable	
ESCUTCHEON, console compartment lock	2138
ESCUTCHEON, deck lid control handle	2130
ESCUTCHEON, door lock	.2117A
ESCUTCHEON, front door inside handle	.2117B
ESCUTCHEON, lock striker	.2117A
ESCUTCHEON, regulator handle	.2120F
ESCUTCHEON, w/s wiper switch control knob	.2149A
EVAPORATOR, air conditioner	.2102A
EXTENSION, front fender apron	1601
EXTENSION, rear quarter lock pillar	.2160D
EYELET, alternator rectifier and stator terminal	
connector	0609
EYE BOLT and NUT, clutch pressure plate toggle	
lever adjusting	0202

#### F

FACING, clutch plate
FAN, alternator
FAN, climatizer blower
FAN, evaporator blower
FAN DRIVE ASSEMBLY
FAN BLADES
FENDER HALF, front (front & rear)
FENDER less APRON, front
FILLER, polyester resin 2160.

Group

#### F-Cont'd.

FILTER, climatizer core housing	2101A
FILTER, fuel.	0304
FITTING, distributor spark modifier suction	0601
FITTING, front brake pipes	
FITTING, wheel brake cylinder bleeder	1103
FLANGE, front, trans. case0701A,	0701B
FLANGE, rear, trans. case	0701B
FLANGE, steer. post lower shaft coupling	
FLANGE w/COVER, rear axle universal joint	1006
FLANGE and INSULATOR, steering gear	13014
FLASHER, directional signal lights	0691
FLYWHEEL, crankshaft vibration damper	0105
FLYWHEEL, engine	0106
FORK, trans. gearshift	0747B
FRAME.	
FRAME, door window glass	21204
FRAME, door ventilator	2120A
FRAME, seat back	
FDAME seat bettem	
FRAME, seat bottom FRAME w/ GLASS, r/q window	
PRAME W/ GLASS, r/q window	
FRONT and REAR SEAT BELT KIT	
FUEL FILTER	
FUEL PUMP	0301
FUSE, back-up lamp	0632
FUSE, directional signal lights	0621
FUSE, dome lamp and cigar lighter	0627
FUSE, radio	2112A
FUSE, stop lamp	0627
FUSE, transmission shift lamp	0627
FUSE BLOCK w/CIRCUIT BREAKERS.	
electrical	0627

G

GAGE, gasoline (tank unit).		.0307
GAGE, gasoline		1713
GAGE, oil level		.0115
GAGE oil pressure (dash unit)		1707
GAGE vacuum		1721
CACE water temperature (engine unit)		0102
CASKET comebaft timing gear cover		0104
GAGE, gasoline (tank unit). GAGE, gasoline. GAGE, oil level GAGE, oil pressure (dash unit). GAGE, vacuum GAGE, vacuum GAGE, water temperature (engine unit). GASKET, camshaft timing gear cover GASKET, back-up lamp lens GASKET, carburetor GASKET, carb. air cleaner. GASKET, core housing GASKET, cyl. block oil filler hole cover. GASKET, cylinder head GASKET, distributor to block	••••	0632
CASKET carburgtor	• •	0302
CASKET carb air cleaner		0303
CASKET, care bousing		21014
CASKET, cole housing		0102
CASKET, cyl. block on liner hole cover.	•	0102
GASKEI, cylinder nead		0601
GASKET, distributor to block GASKET, engine valve lifter cover GASKET, engine valve rocker arm cover		0001
GASKET, engine valve litter cover		0103
GASKET, engine valve rocker arm cover	•	0103
GASKET, evaporator to console		2102A
GASKET, evaporator to console GASKET, exhaust pipe flange.		. 0401
GASKET, fuel pump		. 0301
GASKET, gasoline gage (tank unit)		.0307
GASKET, gas tank filler neck.		.0307
GASKET, head lamp bezel		.0617
GASKET head lamp well glass cover		.0617
GASKET, enalst pipe hange GASKET, fuel pump GASKET, gasoline gage (tank unit) GASKET, gas tank filler neck. GASKET, head lamp bezel GASKET, head lamp well glass cover. GASKET, king pin GASKET, license lamp lens.		.1203
CASKET license lamp lens		0620
GASKET manifold		0109
GASKET, manifold GASKET, manifold heater valve housing		0109
CASKET, mannou heater valve housing.		.1104
GASKET, master cylinder filler cover		0118
GASKET, oil filter base to cylinder. GASKET, oil pan breather tube		
GASKET, oil pan breather tube.		.0110
GASKET, oil pump body		.0116
GASKET, parking and signal lamp lens		0617
<ul> <li>GASKET, oil pan breather tube.</li> <li>GASKET, oil pump body</li></ul>		0015
to housing		
GASKET, power steer. pump reservoir		1309B
GASKET, radiator reservoir tank		.0501
GASKET, rear axle housing cover		1001
GASKET, rear axle pinion front bearing oil.		. 1005
GASKET, rear axle shaft outer retainer.		1002
GASKET, right cyl, head rear end cover		0102
GASKET, right cyl. head rear end cover GASKET, spark plug GASKET, speedo. drive pinion lock plate GASKET, speedometer shaft to transmission		0603
GASKET, speedo, drive pinion lock plate		1716
GASKET, speedometer shaft to transmission		1716
GASKET, steer. gear housing side cover		1302A
GASKET, steer, post collar		2139

#### Group

#### G-Cont'd.

GASKET, s/c to carburetor air inlet adapter       0320         GASKET, tail lamp tob ody.       0619         GASKET, trains case eversion housing       0611         GASKET, trans. case event flange       0701A, 0701B         GASKET, trans. case rear flange       0701A, 0701B         GASKET, trans. cever plate.       2138         GASKET, trans. cever plate.       0701A         GASKET, trans. on plan       0811         GASKET, trans. rear pump.       0823         GASKET, water pump over.       0102         GASKET, water pump over.       0102         GASKET, water pump over.       0102         GASKET and OLL SEAL KIT, flight-o-matic       trans.         UTASKET SET, engine overhaul.       0100         GASKET SET, manifold       0100         GASKET SET, manifold       0100         GASKET SET, manifold       0100         GASKET SET, manifold       0106         GAR, trans. now and second synchronizer       0704B         GEAR, dipump drive.       0601	GASKET, tail lamp lens	
GASKET, tail lamp to body.       0619         GASKET, trans. case cover.       0701A         GASKET, trans. case extension housing.       0811         GASKET, trans. case extension housing.       0701A         GASKET, trans. case extension housing governor       0701A         GASKET, trans. cover plate.       2138         GASKET, trans. cover plate.       0701A         GASKET, trans. cover plate.       0701A         GASKET, trans. cover plate.       0701B         GASKET, trans. gearshift control housing.       0701B         GASKET, trans. gearshift control housing.       0701B         GASKET, trans. rear pump.       0823         GASKET, water pump manifold       0605         GASKET, water pump manifold       0605         GASKET, water pump manifold       0605         GASKET, water pump manifold       0102         GASKET, water pump manifold       0100         GASKET SET, engine overhaul       0100         GASKET SET, ol pan.       0115         GEAR, c's flywheel starter ring.       0106         GEAR, distributor and oil pump drive.       0601         GEAR, oil pump driven.       0116         GEAR, oil pump inven.       0116         GEAR, roil pump idler.       0702A	GASKET, tail lamp lens	0320
GASKET, trans. case cover       0011         GASKET, trans. case extension housing       0011         GASKET, trans. case front flange       0701A, 0701B         GASKET, trans. case rear flange       0701A, 0701B         GASKET, trans. case rear flange       0701A, 0701B         GASKET, trans. cover plate       2138         GASKET, trans. cover plate       0701A, 0701B         GASKET, trans. cover plate       0701A, 0701B         GASKET, trans. font pump       0823         GASKET, trans. is partific tontrol housing       07011B         GASKET, trans. oil pan.       0811         GASKET, vare pump cover       0505         GASKET, water pump cover       0505         GASKET, water upmp manifold       0100         GASKET SET, oil pan.       0100         GASKET SET, oil pan.       0106         GEAR, camshaft timing       0106         GEAR, ford, trans. reverse idler       0704B         GEAR, oil pump driven       0106         GEAR, trans. low and reverse silding       0702A         GEAR, trans. low and second synchronizer       0702B	GASKET, tall lamp lens	0619
GASKET, trans. case eversion housing       .0811         GASKET, trans. case front flange       .0701A, 0701B         GASKET, trans. case rear flange       .0701A, 0701B         GASKET, trans. case rear flange       .0701A, 0701B         GASKET, trans. cover plate       .033         GASKET, trans. cover plate       .033         GASKET, trans. cover plate       .033         GASKET, trans. gearshift control housing       .0701B         GASKET, trans. gearshift control housing       .0701B         GASKET, trans. gearshift control housing       .0701B         GASKET, trans. rear pump       .0823         GASKET, water pump cover       .0655         GASKET, water pump cover       .0002         GASKET, water temperature gage adapter       .0102         GASKET SET, engine overhaul       .0102         GASKET SET, engine overhaul       .0100         GASKET SET, oil pan       .0115         GEAR, c's flywheel starter ring       .0106         GEAR, cil pump driven       .0106         GEAR, oil pump driven       .0106         GEAR, oil pump driven       .0116         GEAR, oil pump driven       .0116         GEAR, rans. low and reverse sliding       .0702B         GEAR, trans. low and second synchronizer<	CACKET toll lower to hade	0610
GASKET, trans. case rear flange       0701A, 0701B         GASKET, trans. case rear flange       0701A, 0701B         GASKET, trans. case rear flange       0701A, 0701B         GASKET, trans. cover plate       2138         GASKET, trans. cover plate       0701A, 0701B         GASKET, trans. gearshift control housing       0701A, 0701B         GASKET, trans. gearshift control housing       0701A         GASKET, trans. gearshift control housing       0701A         GASKET, trans. rear pump       0823         GASKET, trans. rear pump       0824         GASKET, water pump pover       0605         GASKET, water pump parking switch       2149B         GASKET, w/s wiper motor parking switch       2149B         GASKET SET, engine overhaul       0100         GASKET SET, oil pan       0106         GEAR, c's flywheel starter ring       0106         GEAR, c's flywheel starter ring       0106         GEAR, front, trans. reverse idler       0704B         GEAR, oil pump driven       0116         GEAR, rankshaft timing       0105         GEAR, rans. low and reverse sliding       0702A         GEAR, ristriburd and di pump drive       0601         GEAR, trans. low and reverse sliding       0702A         GEAR,	GASKET, tall lamp to body	
GASKET, trans. case rear flange       0701A, 0701B         GASKET, trans. case rear flange       0701A, 0701B         GASKET, trans. case rear flange       0701A, 0701B         GASKET, trans. cover plate       2138         GASKET, trans. cover plate       0701A, 0701B         GASKET, trans. gearshift control housing       0701A, 0701B         GASKET, trans. gearshift control housing       0701A         GASKET, trans. gearshift control housing       0701A         GASKET, trans. rear pump       0823         GASKET, trans. rear pump       0824         GASKET, water pump pover       0605         GASKET, water pump parking switch       2149B         GASKET, w/s wiper motor parking switch       2149B         GASKET SET, engine overhaul       0100         GASKET SET, oil pan       0106         GEAR, c's flywheel starter ring       0106         GEAR, c's flywheel starter ring       0106         GEAR, front, trans. reverse idler       0704B         GEAR, oil pump driven       0116         GEAR, rankshaft timing       0105         GEAR, rans. low and reverse sliding       0702A         GEAR, ristriburd and di pump drive       0601         GEAR, trans. low and reverse sliding       0702A         GEAR,	GASKET, trans. case cover	.0/01A
GASKET, trans. case rear flange       0701A, 0701B         GASKET, trans. case rear flange       0701A, 0701B         GASKET, trans. case rear flange       0701A, 0701B         GASKET, trans. cover plate       2138         GASKET, trans. cover plate       0701A, 0701B         GASKET, trans. gearshift control housing       0701A, 0701B         GASKET, trans. gearshift control housing       0701A         GASKET, trans. gearshift control housing       0701A         GASKET, trans. rear pump       0823         GASKET, trans. rear pump       0824         GASKET, water pump pover       0605         GASKET, water pump parking switch       2149B         GASKET, w/s wiper motor parking switch       2149B         GASKET SET, engine overhaul       0100         GASKET SET, oil pan       0106         GEAR, c's flywheel starter ring       0106         GEAR, c's flywheel starter ring       0106         GEAR, front, trans. reverse idler       0704B         GEAR, oil pump driven       0116         GEAR, rankshaft timing       0105         GEAR, rans. low and reverse sliding       0702A         GEAR, ristriburd and di pump drive       0601         GEAR, trans. low and reverse sliding       0702A         GEAR,	GASKET, trans. case extension housing	0811
GASKET, trans. case rear flange	GASKET, trans. case front flange	0701B
GASKET, trans. cover plate       0701A, 0701B         GASKET, trans. cover plate       2138         GASKET, trans. cover plate       0811         GASKET, trans. front pump.       0823         GASKET, trans. gearshift control housing       0701B         GASKET, trans. eagrashift control housing       0701B         GASKET, trans. rear pump.       0823         GASKET, water pump cover       0505         GASKET, water pump manifold       0505         GASKET, water pump cover       0505         GASKET, water pump cover       0102         GASKET, water pump cover       0505         GASKET, water pump cover       0102         GASKET, water pump cover       0100         GASKET SET, engine overhaul       0100         GASKET SET, engine overhaul       0100         GASKET SET, oil pan.       0115         GEAR, cishaft timing       0106         GEAR, fort, trans. reverse idler       0704B         GEAR, ci oil pump driven       0116         GEAR, trans. low and second synchronizer       0702B	CASKET trans and room fange 0701A	0701 D
CASKET, trans. front pump0823GASKET, trans. oil pan0811GASKET, trans. oil pan0811GASKET, trans. rear pump0824GASKET, valve grind.0102GASKET, water pump manifold.0505GASKET, water pump cover.0505GASKET, water temperature gage adapter.0102GASKET, water temperature gage adapter.0102GASKET, water temperature gage adapter.0102GASKET, water temperature gage adapter.0102GASKET SET, engine overhaul.0109GASKET SET, oil pan0106GEAR, crankshaft timing.0106GEAR, crankshaft timing.0106GEAR, crankshaft timing.0106GEAR, distributor and oil pump drive.0601GEAR, oil pump idler0116GEAR, speedometer drive.1716GEAR, trans. low and reverse silding.0702BGEAR, trans. low and second synchronizer.0702BGEAR, trans. low and second synchronizer.0702BGEAR, trans. second and high synchronizer.0702BGEAR, trans. second and high synchronizer.0702BGEAR, trans. second speed.0702BGEAR, trans. third and high synchronizer.0702BGEAR, trans. third and high synchronizer.0702B	GASKET trans case rear flange	
CASKET, trans. front pump0823GASKET, trans. oil pan0811GASKET, trans. oil pan0811GASKET, trans. rear pump0824GASKET, valve grind.0102GASKET, water pump manifold.0505GASKET, water pump cover.0505GASKET, water temperature gage adapter.0102GASKET, water temperature gage adapter.0102GASKET, water temperature gage adapter.0102GASKET, water temperature gage adapter.0102GASKET SET, engine overhaul.0109GASKET SET, oil pan0106GEAR, crankshaft timing.0106GEAR, crankshaft timing.0106GEAR, crankshaft timing.0106GEAR, distributor and oil pump drive.0601GEAR, oil pump idler0116GEAR, speedometer drive.1716GEAR, trans. low and reverse silding.0702BGEAR, trans. low and second synchronizer.0702BGEAR, trans. low and second synchronizer.0702BGEAR, trans. second and high synchronizer.0702BGEAR, trans. second and high synchronizer.0702BGEAR, trans. second speed.0702BGEAR, trans. third and high synchronizer.0702BGEAR, trans. third and high synchronizer.0702B	adapter plate 0701A	0701B
CASKET, trans. front pump0823GASKET, trans. oil pan0811GASKET, trans. oil pan0811GASKET, trans. rear pump0824GASKET, valve grind.0102GASKET, water pump manifold.0505GASKET, water pump cover.0505GASKET, water temperature gage adapter.0102GASKET, water temperature gage adapter.0102GASKET, water temperature gage adapter.0102GASKET, water temperature gage adapter.0102GASKET SET, engine overhaul.0109GASKET SET, oil pan0106GEAR, crankshaft timing.0106GEAR, crankshaft timing.0106GEAR, crankshaft timing.0106GEAR, distributor and oil pump drive.0601GEAR, oil pump idler0116GEAR, speedometer drive.1716GEAR, trans. low and reverse silding.0702BGEAR, trans. low and second synchronizer.0702BGEAR, trans. low and second synchronizer.0702BGEAR, trans. second and high synchronizer.0702BGEAR, trans. second and high synchronizer.0702BGEAR, trans. second speed.0702BGEAR, trans. third and high synchronizer.0702BGEAR, trans. third and high synchronizer.0702B	CACKET theme serves where	01010
CASKET, trans. front pump0823GASKET, trans. oil pan0811GASKET, trans. oil pan0811GASKET, trans. rear pump0824GASKET, valve grind.0102GASKET, water pump manifold.0505GASKET, water pump cover.0505GASKET, water temperature gage adapter.0102GASKET, water temperature gage adapter.0102GASKET, water temperature gage adapter.0102GASKET, water temperature gage adapter.0102GASKET SET, engine overhaul.0109GASKET SET, oil pan0106GEAR, crankshaft timing.0106GEAR, crankshaft timing.0106GEAR, crankshaft timing.0106GEAR, distributor and oil pump drive.0601GEAR, oil pump idler0116GEAR, speedometer drive.1716GEAR, trans. low and reverse silding.0702BGEAR, trans. low and second synchronizer.0702BGEAR, trans. low and second synchronizer.0702BGEAR, trans. second and high synchronizer.0702BGEAR, trans. second and high synchronizer.0702BGEAR, trans. second speed.0702BGEAR, trans. third and high synchronizer.0702BGEAR, trans. third and high synchronizer.0702B	GASKET, trans. cover plate	. 2138
CASKET, trans. front pump0823GASKET, trans. oil pan0811GASKET, trans. oil pan0811GASKET, trans. rear pump0824GASKET, valve grind.0102GASKET, water pump manifold.0505GASKET, water pump cover.0505GASKET, water temperature gage adapter.0102GASKET, water temperature gage adapter.0102GASKET, water temperature gage adapter.0102GASKET, water temperature gage adapter.0102GASKET SET, engine overhaul.0109GASKET SET, oil pan0106GEAR, crankshaft timing.0106GEAR, crankshaft timing.0106GEAR, crankshaft timing.0106GEAR, distributor and oil pump drive.0601GEAR, oil pump idler0116GEAR, speedometer drive.1716GEAR, trans. low and reverse silding.0702BGEAR, trans. low and second synchronizer.0702BGEAR, trans. low and second synchronizer.0702BGEAR, trans. second and high synchronizer.0702BGEAR, trans. second and high synchronizer.0702BGEAR, trans. second speed.0702BGEAR, trans. third and high synchronizer.0702BGEAR, trans. third and high synchronizer.0702B	GASKET, trans. extension housing governor	
GASKET, trans. front pump.	inspection cover	0811
GASKET, valve grind	GASKET, trans. front pump	0823
GASKET, valve grind	GASKET, trans. gearshift control housing	.0701B
GASKET, valve grind	GASKET, trans. oil pan	.0811
GASKET, water pump manifold	GASKET trans rear nump	0824
GASKET, water pump manifold	GASKET valve grind	0102
GASKET, water pump manifold	CASKET water nump couer	0505
GASKET SET, engine overhaul0100GASKET SET, manifold0109GASKET SET, oil pan.0115GEAR, camshaft timing0104GEAR, c's flywheel starter ring0106GEAR, crankshaft timing0105GEAR, distributor and oil pump drive0601GEAR, front, trans. reverse idler.0704BGEAR, oil pump driven0116GEAR, oil pump driven0116GEAR, speedometer drive1716GEAR, trans. low and reverse sliding0702AGEAR, trans. low and reverse sliding0702BGEAR, trans. low and second synchronizer0702BGEAR, trans. low speed0702BGEAR, trans. low speed0702BGEAR, trans. second and high synchronizer0702AGEAR, trans. second and high synchronizer0702BGEAR, trans. shird speed0702BGEAR, trans. third speed0702A, 0702BGEAR, trans. third speed0702A, 0702BGEAR, trans. third speed0702A, 0702BGEAR, w/s wiper motor driven2129BGEAR, and DRUM, trans. planetary0817GLASS, front door ventilator2120AGLASS, front door ventilator2121CGLASS, front door ventilator2121CGRASS, front door ventilator2121CGRASS, front door vindow2120AGRASS, front door ventilator2113DGRILLE, radio2113DGRILLE, radio2113DGRILLE, radio2113DGRILLE, radio1213DGRILLE, radio1216G	CASKET, water pump cover	
GASKET SET, engine overhaul0100GASKET SET, manifold0109GASKET SET, oil pan.0115GEAR, camshaft timing0104GEAR, c's flywheel starter ring0106GEAR, crankshaft timing0105GEAR, distributor and oil pump drive0601GEAR, front, trans. reverse idler.0704BGEAR, oil pump driven0116GEAR, oil pump driven0116GEAR, speedometer drive1716GEAR, trans. low and reverse sliding0702AGEAR, trans. low and reverse sliding0702BGEAR, trans. low and second synchronizer0702BGEAR, trans. low speed0702BGEAR, trans. low speed0702BGEAR, trans. second and high synchronizer0702AGEAR, trans. second and high synchronizer0702BGEAR, trans. shird speed0702BGEAR, trans. third speed0702A, 0702BGEAR, trans. third speed0702A, 0702BGEAR, trans. third speed0702A, 0702BGEAR, w/s wiper motor driven2129BGEAR, and DRUM, trans. planetary0817GLASS, front door ventilator2120AGLASS, front door ventilator2121CGLASS, front door ventilator2121CGRASS, front door ventilator2121CGRASS, front door vindow2120AGRASS, front door ventilator2113DGRILLE, radio2113DGRILLE, radio2113DGRILLE, radio2113DGRILLE, radio1213DGRILLE, radio1216G	GASKET, water pump manifold	0505
GASKET SET, engine overhaul0100GASKET SET, manifold0109GASKET SET, oil pan.0115GEAR, camshaft timing0104GEAR, c's flywheel starter ring0106GEAR, crankshaft timing0105GEAR, distributor and oil pump drive0601GEAR, front, trans. reverse idler.0704BGEAR, oil pump driven0116GEAR, oil pump driven0116GEAR, speedometer drive1716GEAR, trans. low and reverse sliding0702AGEAR, trans. low and reverse sliding0702BGEAR, trans. low and second synchronizer0702BGEAR, trans. low speed0702BGEAR, trans. low speed0702BGEAR, trans. second and high synchronizer0702AGEAR, trans. second and high synchronizer0702BGEAR, trans. shird speed0702BGEAR, trans. third speed0702A, 0702BGEAR, trans. third speed0702A, 0702BGEAR, trans. third speed0702A, 0702BGEAR, w/s wiper motor driven2129BGEAR, and DRUM, trans. planetary0817GLASS, front door ventilator2120AGLASS, front door ventilator2121CGLASS, front door ventilator2121CGRASS, front door ventilator2121CGRASS, front door vindow2120AGRASS, front door ventilator2113DGRILLE, radio2113DGRILLE, radio2113DGRILLE, radio2113DGRILLE, radio1213DGRILLE, radio1216G	GASKET, water temperature gage adapter	0102
GASKET SET, engine overhaul0100GASKET SET, manifold0109GASKET SET, oil pan.0115GEAR, camshaft timing0104GEAR, c's flywheel starter ring0106GEAR, crankshaft timing0105GEAR, distributor and oil pump drive0601GEAR, front, trans. reverse idler.0704BGEAR, oil pump driven0116GEAR, oil pump driven0116GEAR, speedometer drive1716GEAR, trans. low and reverse sliding0702AGEAR, trans. low and reverse sliding0702BGEAR, trans. low and second synchronizer0702BGEAR, trans. low speed0702BGEAR, trans. low speed0702BGEAR, trans. second and high synchronizer0702AGEAR, trans. second and high synchronizer0702BGEAR, trans. shird speed0702BGEAR, trans. third speed0702A, 0702BGEAR, trans. third speed0702A, 0702BGEAR, trans. third speed0702A, 0702BGEAR, w/s wiper motor driven2129BGEAR, and DRUM, trans. planetary0817GLASS, front door ventilator2120AGLASS, front door ventilator2121CGLASS, front door ventilator2121CGRASS, front door ventilator2121CGRASS, front door vindow2120AGRASS, front door ventilator2113DGRILLE, radio2113DGRILLE, radio2113DGRILLE, radio2113DGRILLE, radio1213DGRILLE, radio1216G	GASKET, w/s wiper motor parking switch	21 <b>49</b> B
GASKET SET, engine overhaul0100GASKET SET, manifold0109GASKET SET, oil pan.0115GEAR, camshaft timing0104GEAR, c's flywheel starter ring0106GEAR, crankshaft timing0105GEAR, distributor and oil pump drive0601GEAR, front, trans. reverse idler.0704BGEAR, oil pump driven0116GEAR, oil pump driven0116GEAR, speedometer drive1716GEAR, trans. low and reverse sliding0702AGEAR, trans. low and reverse sliding0702BGEAR, trans. low and second synchronizer0702BGEAR, trans. low speed0702BGEAR, trans. low speed0702BGEAR, trans. second and high synchronizer0702AGEAR, trans. second and high synchronizer0702BGEAR, trans. shird speed0702BGEAR, trans. third speed0702A, 0702BGEAR, trans. third speed0702A, 0702BGEAR, trans. third speed0702A, 0702BGEAR, w/s wiper motor driven2129BGEAR, and DRUM, trans. planetary0817GLASS, front door ventilator2120AGLASS, front door ventilator2121CGLASS, front door ventilator2121CGRASS, front door ventilator2121CGRASS, front door vindow2120AGRASS, front door ventilator2113DGRILLE, radio2113DGRILLE, radio2113DGRILLE, radio2113DGRILLE, radio1213DGRILLE, radio1216G	GASKET and OIL SEAL KIT, flight-o-matic	
GASKET SET, engine overhaul.       0100         GASKET SET, manifold.       0109         GASKET SET, oil pan       0115         GEAR, camshaft timing.       0106         GEAR, c's flywheel starter ring.       0106         GEAR, front, trans. reverse idler.       0704B         GEAR, oil pump driven       0116         GEAR, rear, trans. reverse idler.       0704B         GEAR, rear, trans. reverse idler.       0704B         GEAR, rear, trans. low and second synchronizer       0702B         GEAR, trans. reverse idler.       0704B         GEAR, trans. reverse idler.       0702B         GEAR, trans. reverse idler.       0702B         GEAR, trans. reverse idler.       0702B         GEAR, trans. second speed       0702A, 0702B         GEAR, trans. third speed       0702A, 0702B         GEAR, trans. third speed       0703A, 0703B         GEAR, trans. third speed       1005         GLASS, front door ventilator       21216         GLASS, front door ventilator       21217         GEARS, front door ventilator <td< td=""><td>trans</td><td>0800</td></td<>	trans	0800
GASKET SET, manifold       0109         GASKET SET, oil pan.       0115         GEAR, c's flywheel starter ring       0106         GEAR, crankshaft timing       0105         GEAR, crankshaft timing       0105         GEAR, distributor and oil pump drive       0601         GEAR, oil pump driven       0116         GEAR, oil pump driven       0116         GEAR, speedometer drive       1716         GEAR, trans. low and reverse sliding       07024         GEAR, trans. low and second synchronizer       0702B         GEAR, trans. second and high synchronizer       0702B         GEAR, trans. second and high synchronizer       0702B         GEAR, trans. second speed       0702B         GEAR, trans. third apeed       0702B         GEAR, w/s wiper motor driven       2149B         GEAR and DRUM, trans. planetary       0817         GEAR and DRUM, trans. planetary       0817         GLASS, front door ventilator       2125         GLASS, front door ventilator       21216         GLASS, r/g windshied       2147	GASKET SET, engine overhaul	0100
GEAR, camshaft timing       0104         GEAR, c/s flywheel starter ring       0106         GEAR, distributor and oil pump drive       0601         GEAR, front, trans. reverse idler.       0704B         GEAR, oil pump driven       0116         GEAR, rear, trans. reverse idler.       0704B         GEAR, speedometer drive       1716         GEAR, trans. low and reverse sliding       0702A         GEAR, trans. low and reverse sliding       0702B         GEAR, trans. low and reverse sliding       0702B         GEAR, trans. low and reverse sliding       0702B         GEAR, trans. low speed       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. second and high synchronizer       0702A         GEAR, trans. second and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR, w/s wiper motor driven       2149B         GEAR and DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, front door ventilator       2121         GLASS, front door ventilator       2121         GLASS, r/q window       2124         GLASS, r/q window       2120A	GASKET SET manifold	0100
GEAR, camshaft timing       0104         GEAR, c/s flywheel starter ring       0106         GEAR, distributor and oil pump drive       0601         GEAR, front, trans. reverse idler.       0704B         GEAR, oil pump driven       0116         GEAR, rear, trans. reverse idler.       0704B         GEAR, speedometer drive       1716         GEAR, trans. low and reverse sliding       0702A         GEAR, trans. low and reverse sliding       0702B         GEAR, trans. low and reverse sliding       0702B         GEAR, trans. low and reverse sliding       0702B         GEAR, trans. low speed       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. second and high synchronizer       0702A         GEAR, trans. second and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR, w/s wiper motor driven       2149B         GEAR and DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, front door ventilator       2121         GLASS, front door ventilator       2121         GLASS, r/q window       2124         GLASS, r/q window       2120A	CASKET SET oil pap	0115
GEAR, crankshaft timing.       0105         GEAR, fistributor and oil pump drive.       0601         GEAR, front, trans. reverse idler.       0704B         GEAR, oil pump driven.       0116         GEAR, oil pump idler.       0116         GEAR, rear, trans. reverse idler.       0704B         GEAR, trans. low and reverse sliding.       0702B         GEAR, trans. low and reverse sliding.       0702B         GEAR, trans. low and reverse sliding.       0702B         GEAR, trans. low and second synchronizer       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. second and high synchronizer       0702B         GEAR, trans. second speed       0702B         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR, w/s wiper motor driven       2149B         GEAR and DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, front door window       21221         GLASS, front door window       21221         GLASS, windshield       2147         GOVERNOR, flight-o-matic trans.       0830 <td>CEAD complete timing</td> <td>0110</td>	CEAD complete timing	0110
GEAR, crankshaft timing.       0105         GEAR, fistributor and oil pump drive.       0601         GEAR, front, trans. reverse idler.       0704B         GEAR, oil pump driven.       0116         GEAR, oil pump idler.       0116         GEAR, rear, trans. reverse idler.       0704B         GEAR, trans. low and reverse sliding.       0702B         GEAR, trans. low and reverse sliding.       0702B         GEAR, trans. low and reverse sliding.       0702B         GEAR, trans. low and second synchronizer       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. second and high synchronizer       0702B         GEAR, trans. second speed       0702B         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR, w/s wiper motor driven       2149B         GEAR and DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, front door window       21221         GLASS, front door window       21221         GLASS, windshield       2147         GOVERNOR, flight-o-matic trans.       0830 <td>GEAR, camsnait timing</td> <td>0104</td>	GEAR, camsnait timing	0104
GEAR, crankshaft timing.       0105         GEAR, fistributor and oil pump drive.       0601         GEAR, front, trans. reverse idler.       0704B         GEAR, oil pump driven.       0116         GEAR, oil pump idler.       0116         GEAR, rear, trans. reverse idler.       0704B         GEAR, trans. low and reverse sliding.       0702B         GEAR, trans. low and reverse sliding.       0702B         GEAR, trans. low and reverse sliding.       0702B         GEAR, trans. low and second synchronizer       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. second and high synchronizer       0702B         GEAR, trans. second speed       0702B         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR, w/s wiper motor driven       2149B         GEAR and DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, front door window       21221         GLASS, front door window       21221         GLASS, windshield       2147         GOVERNOR, flight-o-matic trans.       0830 <td>GEAR, c/s flywheel starter ring</td> <td>0106</td>	GEAR, c/s flywheel starter ring	0106
GEAR, oil pump diven.       0116         GEAR, oil pump idler.       0116         GEAR, rear, trans. reverse idler.       0704B         GEAR, speedometer drive       1716         GEAR, trans. low and reverse sliding       0702A         GEAR, trans. low and second synchronizer       0702B         GEAR, trans. low speed       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. second and high synchronizer       0702A         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR, trans. third speed       0702B         GEAR, trans. third speed       0702B         GEAR And DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, front door ventilator       2121         GLASS, front door ventilator       2121         GLASS, front door vindow       2124         GLASS, windshield       2147         GVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutc	GEAR, crankshaft timing	. 0105
GEAR, oil pump diven.       0116         GEAR, oil pump idler.       0116         GEAR, rear, trans. reverse idler.       0704B         GEAR, speedometer drive       1716         GEAR, trans. low and reverse sliding       0702A         GEAR, trans. low and second synchronizer       0702B         GEAR, trans. low speed       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. second and high synchronizer       0702A         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR, trans. third speed       0702B         GEAR, trans. third speed       0702B         GEAR And DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, front door ventilator       2121         GLASS, front door ventilator       2121         GLASS, front door vindow       2124         GLASS, windshield       2147         GVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutc	GEAR, distributor and oil pump drive	0601
GEAR, oil pump diven.       0116         GEAR, oil pump idler.       0116         GEAR, rear, trans. reverse idler.       0704B         GEAR, speedometer drive       1716         GEAR, trans. low and reverse sliding       0702A         GEAR, trans. low and second synchronizer       0702B         GEAR, trans. low speed       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. second and high synchronizer       0702A         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR, trans. third speed       0702B         GEAR, trans. third speed       0702B         GEAR And DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, front door ventilator       2121         GLASS, front door ventilator       2121         GLASS, front door vindow       2124         GLASS, windshield       2147         GVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutc	GEAR front trans reverse idler	0704B
GEAR, oil pump idler.       0116         GEAR, rear, trans. reverse idler.       0704B         GEAR, speedometer drive       1716         GEAR, trans. low and reverse sliding.       0702A         GEAR, trans. low and reverse sliding.       0702B         GEAR, trans. low and second synchronizer       0702B         GEAR, trans. low and second synchronizer       0702B         GEAR, trans. low speed.       0702B         GEAR, trans. second speed.       0702B         GEAR, trans. second speed.       0702B         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third speed       0703A, 0703B         GEAR and DRUM, trans. planetary.       0817         GLASS, front door ventilator       2125         GLASS, front door ventilator       2120A         GLASS, front door ventilator       2120A         GREARS ESEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       2110         GRILLE, radio       2113D         GRILLE, radio or intake panel	GEAR oil numn driven	0116
GEAR, speedometer drive       1716         GEAR, trans. low and reverse sliding       0702A         GEAR, trans. low and second synchronizer       0702B         GEAR, trans. low speed       0702B         GEAR, trans. low speed       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. second and high synchronizer       0702A         GEAR, trans. second and high synchronizer       0702B         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR, trans. third speed       0702B         GEAR, w/s wiper motor driven       2149B         GEAR and DRUM, trans. planetary       0817         GLASS, front door ventilator       2121         GLASS, front door vindow       2122         GLASS, front door window       2124         GASS, r/q window       2124         GRILLE, could top air intake opening       2110         GRILLE, could top air intake panel       0502         GROMMET, front bumper support bar       1803         GROMMET, front bumper support bar       1803         GROMMET, front shock absorber	CEAD oil numer idler	
GEAR, speedometer drive       1716         GEAR, trans. low and reverse sliding       0702A         GEAR, trans. low and second synchronizer       0702B         GEAR, trans. low speed       0702B         GEAR, trans. low speed       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. reverse idler       0702B         GEAR, trans. second and high synchronizer       0702A         GEAR, trans. second and high synchronizer       0702B         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR, trans. third speed       0702B         GEAR, w/s wiper motor driven       2149B         GEAR and DRUM, trans. planetary       0817         GLASS, front door ventilator       2121         GLASS, front door vindow       2122         GLASS, front door window       2124         GASS, r/q window       2124         GRILLE, could top air intake opening       2110         GRILLE, could top air intake panel       0502         GROMMET, front bumper support bar       1803         GROMMET, front bumper support bar       1803         GROMMET, front shock absorber	GEAR, on pump idler	0116
GEAR, trans. reverse idler       0702B         GEAR, trans. reverse sliding       0702B         GEAR, trans. reverse sliding       0702B         GEAR, trans. second and high synchronizer       0702A         GEAR, trans. second speed       0702B         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR, trans. third speed       0702B         GEAR, w/s wiper motor driven       2149B         GEAR CLUSTER, trans. countershaft       0703A, 0703B         GEAR and DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, front door ventilator       2121         GLASS, front door ventilator       2124         GLASS, stack window       2124         GLASS, r/q window       2124         GRASS SEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       2110         GRILLE, radio       2113D         GRILLE KIT, radiator air intake panel       0502         GROMMET, front bumper support bar       1803 <tr< td=""><td>GEAR, rear, trans. reverse idler</td><td>.0704B</td></tr<>	GEAR, rear, trans. reverse idler	.0704B
GEAR, trans. reverse idler       0702B         GEAR, trans. reverse sliding       0702B         GEAR, trans. reverse sliding       0702B         GEAR, trans. second and high synchronizer       0702A         GEAR, trans. second speed       0702B         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR, trans. third speed       0702B         GEAR, w/s wiper motor driven       2149B         GEAR CLUSTER, trans. countershaft       0703A, 0703B         GEAR and DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, front door ventilator       2121         GLASS, front door ventilator       2124         GLASS, stack window       2124         GLASS, r/q window       2124         GRASS SEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       2110         GRILLE, radio       2113D         GRILLE KIT, radiator air intake panel       0502         GROMMET, front bumper support bar       1803 <tr< td=""><td>GEAR, speedometer drive</td><td> 1716</td></tr<>	GEAR, speedometer drive	1716
GEAR, trans. reverse idler       0702B         GEAR, trans. reverse sliding       0702B         GEAR, trans. reverse sliding       0702B         GEAR, trans. second and high synchronizer       0702A         GEAR, trans. second speed       0702B         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR, trans. third speed       0702B         GEAR, w/s wiper motor driven       2149B         GEAR CLUSTER, trans. countershaft       0703A, 0703B         GEAR and DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, front door ventilator       2121         GLASS, front door ventilator       2124         GLASS, stack window       2124         GLASS, r/q window       2124         GRASS SEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       2110         GRILLE, radio       2113D         GRILLE KIT, radiator air intake panel       0502         GROMMET, front bumper support bar       1803 <tr< td=""><td>GEAR, trans. low and reverse sliding</td><td>.0702A</td></tr<>	GEAR, trans. low and reverse sliding	.0702A
GEAR, trans. reverse idler       0702B         GEAR, trans. reverse sliding       0702B         GEAR, trans. reverse sliding       0702B         GEAR, trans. second and high synchronizer       0702A         GEAR, trans. second speed       0702B         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR and DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, front door ventilator       2121         GLASS, front door ventilator       2121         GLASS, front door ventilator       2124         GLASS, r/q window       2124         GLASS, windshield       2147         GOVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       2110         GRILLE, radio       2113D         GROMMET, front bumper support bar       1803         GROMMET, front shock	GEAR, trans. low and second synchronizer	.0702B
GEAR, trans. second speed       0702B, 0702B         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR, trans. third speed       0702B         GEAR, w/s wiper motor driven       2149B         GEAR CLUSTER, trans. countershaft       0703A, 0703B         GEAR and DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, back window       2125         GLASS, front door ventilator       2121         GLASS, front door window       2124         GLASS, r/q window       2124         GVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       2113D         GRILLE, and MOULDING ASSY., radiator air       intake panel         MMET, front bumper support bar       1803         GROMMET, front bumper support bar       1803         GROMMET, nol lock control dash       1622         GROMMET, power steer. pump to control       valve hose         valve hose       1309B         GROMMET, speedometer shaft dash       1716         GUIDE, engine valve       0103         GUIDE, hand brake control handle and plunger <td< td=""><td>GEAR, trans. low speed</td><td>0702B</td></td<>	GEAR, trans. low speed	0702B
GEAR, trans. second speed       0702B, 0702B         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR, trans. third speed       0702B         GEAR, w/s wiper motor driven       2149B         GEAR CLUSTER, trans. countershaft       0703A, 0703B         GEAR and DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, back window       2125         GLASS, front door ventilator       2121         GLASS, front door window       2124         GLASS, r/q window       2124         GVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       2113D         GRILLE, and MOULDING ASSY., radiator air       intake panel         MMET, front bumper support bar       1803         GROMMET, front bumper support bar       1803         GROMMET, nol lock control dash       1622         GROMMET, power steer. pump to control       valve hose         valve hose       1309B         GROMMET, speedometer shaft dash       1716         GUIDE, engine valve       0103         GUIDE, hand brake control handle and plunger <td< td=""><td>GEAR trans reverse idler</td><td>0704A</td></td<>	GEAR trans reverse idler	0704A
GEAR, trans. second speed       0702B, 0702B         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR, trans. third speed       0702B         GEAR, w/s wiper motor driven       2149B         GEAR CLUSTER, trans. countershaft       0703A, 0703B         GEAR and DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, back window       2125         GLASS, front door ventilator       2121         GLASS, front door window       2124         GLASS, r/q window       2124         GVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       2113D         GRILLE, and MOULDING ASSY., radiator air       intake panel         MMET, front bumper support bar       1803         GROMMET, front bumper support bar       1803         GROMMET, nol lock control dash       1622         GROMMET, power steer. pump to control       valve hose         valve hose       1309B         GROMMET, speedometer shaft dash       1716         GUIDE, engine valve       0103         GUIDE, hand brake control handle and plunger <td< td=""><td>GEAR trans, reverse sliding</td><td>07028</td></td<>	GEAR trans, reverse sliding	07028
GEAR, trans. second speed       0702B, 0702B         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR, trans. third speed       0702B         GEAR, w/s wiper motor driven       2149B         GEAR CLUSTER, trans. countershaft       0703A, 0703B         GEAR and DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, back window       2125         GLASS, front door ventilator       2121         GLASS, front door window       2124         GLASS, r/q window       2124         GVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       2113D         GRILLE, and MOULDING ASSY., radiator air       intake panel         MMET, front bumper support bar       1803         GROMMET, front bumper support bar       1803         GROMMET, nol lock control dash       1622         GROMMET, power steer. pump to control       valve hose         valve hose       1309B         GROMMET, speedometer shaft dash       1716         GUIDE, engine valve       0103         GUIDE, hand brake control handle and plunger <td< td=""><td>CEAD trans. reverse shung</td><td>.07020</td></td<>	CEAD trans. reverse shung	.07020
GEAR, trans. second speed       0702B, 0702B         GEAR, trans. third and high synchronizer       0702B         GEAR, trans. third speed       0702B         GEAR, trans. third speed       0702B         GEAR, w/s wiper motor driven       2149B         GEAR CLUSTER, trans. countershaft       0703A, 0703B         GEAR and DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, back window       2125         GLASS, front door ventilator       2121         GLASS, front door window       2124         GLASS, r/q window       2124         GVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       2113D         GRILLE, and MOULDING ASSY., radiator air       intake panel         MMET, front bumper support bar       1803         GROMMET, front bumper support bar       1803         GROMMET, nol lock control dash       1622         GROMMET, power steer. pump to control       valve hose         valve hose       1309B         GROMMET, speedometer shaft dash       1716         GUIDE, engine valve       0103         GUIDE, hand brake control handle and plunger <td< td=""><td>GEAR, trans. second and high synchronizer</td><td>.0702A</td></td<>	GEAR, trans. second and high synchronizer	.0702A
GEAR, trans. third speed       0702B         GEAR, w/s wiper motor driven       2149B         GEAR, CLUSTER, trans. countershaft       0703A, 0703B         GEAR and DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, back window       2125         GLASS, front door ventilator       2121         GLASS, front door ventilator       2120A         GLASS, front door ventilator       2120A         GLASS, r/q window       21244         GLASS, windshield       2147         GOVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutch release shaft retainer       0203         GRILLE, radio       2113D         GRILLE, radio       2113D         GRILLE and MOULDING ASSY., radiator air       intake panel         mintake panel       0502         GROMMET, front bumper support bar       1803         GROMMET, front shock absorber       1801         GROMMET, nod lock control dash       1622         GROMMET, nod lock control dash       1622         GROMMET, power steer. pump to control       valve hose         valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash	GEAR, trans. second speed	0702B
GEAR, trans. third speed       0702B         GEAR, w/s wiper motor driven       2149B         GEAR, CLUSTER, trans. countershaft       0703A, 0703B         GEAR and DRUM, trans. planetary       0817         GEAR AND PINION, rear axle       1005         GLASS, back window       2125         GLASS, front door ventilator       2121         GLASS, front door ventilator       2120A         GLASS, front door ventilator       2120A         GLASS, r/q window       21244         GLASS, windshield       2147         GOVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutch release shaft retainer       0203         GRILLE, radio       2113D         GRILLE, radio       2113D         GRILLE and MOULDING ASSY., radiator air       intake panel         mintake panel       0502         GROMMET, front bumper support bar       1803         GROMMET, front shock absorber       1801         GROMMET, nod lock control dash       1622         GROMMET, nod lock control dash       1622         GROMMET, power steer. pump to control       valve hose         valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash	GEAR, trans. third and high synchronizer	.0702B
GEAR CLUSTER, trans. countershaft.       0703A, 0703B         GEAR and DRUM, trans. planetary.       0817         GEAR AND PINION, rear axle.       1005         GLASS, back window.       2125         GLASS, front door ventilator.       2121         GLASS, r/q window       2124         GLASS, windshield       2147         GOVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       21110         GRILLE, andio       2113D         GRILLE and MOULDING ASSY., radiator air       intake panel         0502       GROMMET, dist. timer base       0601         GROMMET, front bumper support bar       1803         GROMMET, hood lock control dash       1622         GROMMET, nol pressure gage pipe dash       0116         GROMMET, speedometer shaft dash       1716         GUIDE, engine valve       0103         GUIDE, front door window       2120C         GUIDE, hand brake control handle and plunger       1116         GUIDE, trans. front servo piston <t< td=""><td>CEAP trong third groud</td><td></td></t<>	CEAP trong third groud	
GEAR CLUSTER, trans. countershaft.       0703A, 0703B         GEAR and DRUM, trans. planetary.       0817         GEAR AND PINION, rear axle.       1005         GLASS, back window.       2125         GLASS, front door ventilator.       2121         GLASS, r/q window       2124         GLASS, windshield       2147         GOVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       21110         GRILLE, andio       2113D         GRILLE and MOULDING ASSY., radiator air       intake panel         0502       GROMMET, dist. timer base       0601         GROMMET, front bumper support bar       1803         GROMMET, hood lock control dash       1622         GROMMET, nol pressure gage pipe dash       0116         GROMMET, speedometer shaft dash       1716         GUIDE, engine valve       0103         GUIDE, front door window       2120C         GUIDE, hand brake control handle and plunger       1116         GUIDE, trans. front servo piston <t< td=""><td>GEAR, dans. thru speed</td><td>.0702B</td></t<>	GEAR, dans. thru speed	.0702B
GLASS, back window       2120         GLASS, front door ventilator       2121         GLASS, front door window       2120A         GLASS, front door window       2120A         GLASS, front door window       2124         GLASS, windshield       2147         GOVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       2110         GRILLE, radio       2113D         GRILLE and MOULDING ASSY., radiator air       intake panel         0502       GROMMET, dist. timer base         GROMMET, front bumper support bar       1803         GROMMET, front shock absorber       1801         GROMMET, nol lock control dash       1622         GROMMET, power steer. pump to control       valve hose         valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash       0116         GUIDE, engine valve       0103         GUIDE, hand brake control handle and plunger       1116         GUIDE, hand brake rear cable       1110         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR, w/s wiper motor driven	.0702B .2149B
GLASS, back window       2120         GLASS, front door ventilator       2121         GLASS, front door window       2120A         GLASS, front door window       2120A         GLASS, front door window       2124         GLASS, windshield       2147         GOVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       2110         GRILLE, radio       2113D         GRILLE and MOULDING ASSY., radiator air       intake panel         0502       GROMMET, dist. timer base         GROMMET, front bumper support bar       1803         GROMMET, front shock absorber       1801         GROMMET, nol lock control dash       1622         GROMMET, power steer. pump to control       valve hose         valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash       0116         GUIDE, engine valve       0103         GUIDE, hand brake control handle and plunger       1116         GUIDE, hand brake rear cable       1110         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR, w/s wiper motor driven. GEAR CLUSTER trans countershaft 0703A	.0702B .2149B .0703B
GLASS, back window       2120         GLASS, front door ventilator       2121         GLASS, front door window       2120A         GLASS, front door window       2120A         GLASS, front door window       2124         GLASS, windshield       2147         GOVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       2110         GRILLE and MOULDING ASSY., radiator air       1110         GRILLE KIT, radiator air intake panel       0502         GROMMET, dist. timer base       0601         GROMMET, front bumper support bar       1803         GROMMET, front shock absorber       1801         GROMMET, nol pressure gage pipe dash       0116         GROMMET, power steer. pump to control       1309B         Valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash       0116         GUIDE, engine valve       0103         GUIDE, hand brake control handle and plunger       1116         GUIDE, hand brake rear cable       1110         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B     <	GEAR, w/s wiper motor driven. GEAR CLUSTER, trans. countershaft	.0702B .2149B .0703B .0817
GLASS, back window       2120         GLASS, front door ventilator       2121         GLASS, front door window       2120A         GLASS, front door window       2120A         GLASS, front door window       2124         GLASS, windshield       2147         GOVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       2110         GRILLE and MOULDING ASSY., radiator air       1110         GRILLE KIT, radiator air intake panel       0502         GROMMET, dist. timer base       0601         GROMMET, front bumper support bar       1803         GROMMET, front shock absorber       1801         GROMMET, nol pressure gage pipe dash       0116         GROMMET, power steer. pump to control       1309B         Valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash       0116         GUIDE, engine valve       0103         GUIDE, hand brake control handle and plunger       1116         GUIDE, hand brake rear cable       1110         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B     <	GEAR, w/s wiper motor driven GEAR CLUSTER, trans. countershaft	.0702B .2149B .0703B .0817
GLASS, r/q window       2124         GLASS, windshield       2147         GOVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       2110         GRILLE, cowl top air intake opening       2110         GRILLE, radio       2113D         GRILLE and MOULDING ASSY., radiator air       intake panel         0502       GRILLE KIT, radiator air intake panel       0502         GROMMET, dist. timer base       0601         GROMMET, front bumper support bar       1803         GROMMET, front shock absorber       1801         GROMMET, nod lock control dash       1622         GROMMET, oil pressure gage pipe dash       0116         GROMMET, power steer. pump to control       valve hose         valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash       1716         GUIDE, front door window       2120C         GUIDE, hand brake control handle and plunger       1116         GUIDE, hand brake rear cable       1110         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR CLUSTER, trans. countershaft	0703B 0817 1005
GLASS, r/q window       2124         GLASS, windshield       2147         GOVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       2110         GRILLE, cowl top air intake opening       2110         GRILLE, radio       2113D         GRILLE and MOULDING ASSY., radiator air       intake panel         0502       GRILLE KIT, radiator air intake panel       0502         GROMMET, dist. timer base       0601         GROMMET, front bumper support bar       1803         GROMMET, front shock absorber       1801         GROMMET, nod lock control dash       1622         GROMMET, oil pressure gage pipe dash       0116         GROMMET, power steer. pump to control       valve hose         valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash       1716         GUIDE, front door window       2120C         GUIDE, hand brake control handle and plunger       1116         GUIDE, hand brake rear cable       1110         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR CLUSTER, trans. countershaft	0703B 0817 1005
GLASS, r/q window       2124         GLASS, windshield       2147         GOVERNOR, flight-o-matic trans.       0830         GREASE SEAL, clutch release shaft retainer       0203         GRILLE, cowl top air intake opening       2110         GRILLE, cowl top air intake opening       2110         GRILLE, radio       2113D         GRILLE and MOULDING ASSY., radiator air       intake panel         0502       GRILLE KIT, radiator air intake panel       0502         GROMMET, dist. timer base       0601         GROMMET, front bumper support bar       1803         GROMMET, front shock absorber       1801         GROMMET, nod lock control dash       1622         GROMMET, oil pressure gage pipe dash       0116         GROMMET, power steer. pump to control       valve hose         valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash       1716         GUIDE, front door window       2120C         GUIDE, hand brake control handle and plunger       1116         GUIDE, hand brake rear cable       1110         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR CLUSTER, trans. countershaft	0703B 0817 1005 2125
GRILLE, cow top an intake opening.       2113D         GRILLE, radio.       2113D         GRILLE and MOULDING ASSY., radiator air       intake panel.       0502         GRILLE KIT, radiator air intake panel.       0502         GROMMET, dist. timer base.       0601         GROMMET, front bumper support bar.       1803         GROMMET, front shock absorber.       1801         GROMMET, nod lock control dash.       1622         GROMMET, oil pressure gage pipe dash.       0116         GROMMET, power steer. pump to control       valve hose.       1309B         GROMMET, rear stabilizer shaft link.       1525         GROMMET, speedometer shaft dash.       1716         GUIDE, engine valve.       0103         GUIDE, hand brake control handle and plunger.       1116         GUIDE, trans. front servo piston.       0827         GUIDE, trans. gearshift lever.       0751A, 0751B	GEAR CLUSTER, trans. countershaft	0703B 0817 1005 2125
GRILLE, town top an intake opening       2113D         GRILLE, radio.       2113D         GRILLE and MOULDING ASSY., radiator air       intake panel.       0502         GRILLE KIT, radiator air intake panel.       0502         GROMMET, dist. timer base       0601         GROMMET, front bumper support bar.       1803         GROMMET, front shock absorber       1803         GROMMET, nod lock control dash       1622         GROMMET, oil pressure gage pipe dash       0116         GROMMET, power steer. pump to control       valve hose         valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash       1716         GUIDE, engine valve       0103         GUIDE, hand brake control handle and plunger       1116         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary GEAR AND PINION, rear axle GLASS, back window	0703B 0817 1005 2125
GRILLE, cow top an intake opening.       2113D         GRILLE, radio.       2113D         GRILLE and MOULDING ASSY., radiator air       intake panel.       0502         GRILLE KIT, radiator air intake panel.       0502         GROMMET, dist. timer base.       0601         GROMMET, front bumper support bar.       1803         GROMMET, front shock absorber.       1801         GROMMET, nod lock control dash.       1622         GROMMET, oil pressure gage pipe dash.       0116         GROMMET, power steer. pump to control       valve hose.       1309B         GROMMET, rear stabilizer shaft link.       1525         GROMMET, speedometer shaft dash.       1716         GUIDE, engine valve.       0103         GUIDE, hand brake control handle and plunger.       1116         GUIDE, trans. front servo piston.       0827         GUIDE, trans. gearshift lever.       0751A, 0751B	GEAR CLUSTER, trans. countershaft	0703B 0817 1005 2125
GRILLE, cow top an intake opening.       2113D         GRILLE, radio.       2113D         GRILLE and MOULDING ASSY., radiator air       intake panel.       0502         GRILLE KIT, radiator air intake panel.       0502         GROMMET, dist. timer base.       0601         GROMMET, front bumper support bar.       1803         GROMMET, front shock absorber.       1801         GROMMET, nod lock control dash.       1622         GROMMET, oil pressure gage pipe dash.       0116         GROMMET, power steer. pump to control       valve hose.       1309B         GROMMET, rear stabilizer shaft link.       1525         GROMMET, speedometer shaft dash.       1716         GUIDE, engine valve.       0103         GUIDE, hand brake control handle and plunger.       1116         GUIDE, trans. front servo piston.       0827         GUIDE, trans. gearshift lever.       0751A, 0751B	GEAR CLUSTER, trans. countershaft	0703B 0817 1005 2125
GRILLE, cow top an intake opening.       2113D         GRILLE, radio.       2113D         GRILLE and MOULDING ASSY., radiator air       intake panel.       0502         GRILLE KIT, radiator air intake panel.       0502         GROMMET, dist. timer base.       0601         GROMMET, front bumper support bar.       1803         GROMMET, front shock absorber.       1801         GROMMET, nod lock control dash.       1622         GROMMET, oil pressure gage pipe dash.       0116         GROMMET, power steer. pump to control       valve hose.       1309B         GROMMET, rear stabilizer shaft link.       1525         GROMMET, speedometer shaft dash.       1716         GUIDE, engine valve.       0103         GUIDE, hand brake control handle and plunger.       1116         GUIDE, trans. front servo piston.       0827         GUIDE, trans. gearshift lever.       0751A, 0751B	GEAR CLUSTER, trans. countershaft	0703B 0817 1005 2125
intake panel.       0502         GRILLE KIT, radiator air intake panel.       0502         GROMMET, dist. timer base.       0601         GROMMET, front bumper support bar.       1803         GROMMET, front bumper support bar.       1803         GROMMET, front shock absorber.       1801         GROMMET, hood lock control dash       1622         GROMMET, oil pressure gage pipe dash       0116         GROMMET, power steer. pump to control       valve hose         valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash       1716         GUIDE, engine valve       0103         GUIDE, front door window       2120C         GUIDE, hand brake control handle and plunger       1116         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary GEAR AND PINION, rear axle GLASS, back window. GLASS, front door ventilator GLASS, front door window. GLASS, r/q window. GLASS, r/q window. GLASS, windshield GOVERNOR, flight-o-matic trans GREASE SEAL, clutch release shaft retainer.	0703B .0817 .1005 .2125 .2121 2120A 2124 .2124 .2147 .0830 0203
intake panel. 0502 GRILLE KIT, radiator air intake panel. 0502 GROMMET, dist. timer base. 0601 GROMMET, front bumper support bar. 1803 GROMMET, front shock absorber. 1801 GROMMET, hood lock control dash. 1622 GROMMET, oil pressure gage pipe dash. 0116 GROMMET, power steer. pump to control valve hose. 1309B GROMMET, rear stabilizer shaft link. 1525 GROMMET, speedometer shaft dash. 1716 GUIDE, engine valve. 0103 GUIDE, front door window. 2120C GUIDE, hand brake control handle and plunger. 1116 GUIDE, hand brake rear cable. 1100 GUIDE, trans. front servo piston. 0827 GUIDE, trans. gearshift lever. 0751A, 0751B	GEAR CLUSTER, trans. countershaft	0703B .0817 .1005 .2125 .2121 2120A 2124 .2124 .2147 .0830 0203
intake panel.       0502         GRILLE KIT, radiator air intake panel.       0502         GROMMET, dist. timer base.       0601         GROMMET, front bumper support bar.       1803         GROMMET, front bumper support bar.       1803         GROMMET, front shock absorber.       1801         GROMMET, hood lock control dash       1622         GROMMET, oil pressure gage pipe dash       0116         GROMMET, power steer. pump to control       valve hose         valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash       1716         GUIDE, engine valve       0103         GUIDE, front door window       2120C         GUIDE, hand brake control handle and plunger       1116         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary GEAR AND PINION, rear axle GLASS, back window. GLASS, front door ventilator GLASS, front door window. GLASS, r/q window. GLASS, r/q window. GLASS, windshield GOVERNOR, flight-o-matic trans GREASE SEAL, clutch release shaft retainer.	0703B .0817 .1005 .2125 .2121 2120A 2124 .2124 .2147 .0830 0203
GRILLE KIT, radiator air intake panel.       0502         GROMMET, dist. timer base       0601         GROMMET, front bumper support bar       1803         GROMMET, front shock absorber       1801         GROMMET, hood lock control dash       1622         GROMMET, nol pressure gage pipe dash       0116         GROMMET, power steer. pump to control       1309B         Valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash       1716         GUIDE, engine valve       0103         GUIDE, front door window       2120C         GUIDE, hand brake control handle and plunger       1116         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR CLUSTER, trans. countershaft	0703B 0817 1005 2125 2125 2121 2120A 2124 2147 0830 0203 2110 2113D
GROMMET, dist. timer base       0601         GROMMET, front bumper support bar       1803         GROMMET, front shock absorber       1801         GROMMET, hood lock control dash       1622         GROMMET, noil pressure gage pipe dash       0116         GROMMET, power steer. pump to control       1309B         Valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash       1716         GUIDE, engine valve       0103         GUIDE, front door window       2120C         GUIDE, hand brake control handle and plunger       1116         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary	0703B .0817 .1005 .2125 .2121 2120A .2124 .2124 .2124 .2124 .2147 .0830 .0203 .2110 2113D
GROMMET, front bumper support bar.       1803         GROMMET, front shock absorber       1801         GROMMET, hood lock control dash       1622         GROMMET, oil pressure gage pipe dash       0116         GROMMET, power steer. pump to control       1309B         Valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash       1716         GUIDE, engine valve       0103         GUIDE, front door window       2120C         GUIDE, hand brake control handle and plunger       1116         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary	0703B .0817 1005 .2125 .2121 2120A .2124 .2124 .2147 .0830 .0203 .2110 2113D .0502 .0502
GROMMET, power steer. pump to control valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash       1716         GUIDE, engine valve       0103         GUIDE, front door window       2120C         GUIDE, hand brake control handle and plunger       1116         GUIDE, hand brake rear cable       1110         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary	0703B 0817 1005 2125 2121 2120A 2124 2124 0830 0203 2110 2113D 0502 0502 0601
GROMMET, power steer. pump to control valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash       1716         GUIDE, engine valve       0103         GUIDE, front door window       2120C         GUIDE, hand brake control handle and plunger       1116         GUIDE, hand brake rear cable       1110         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary	0703B 0817 1005 2125 2121 2120A 2124 2124 0830 0203 2110 2113D 0502 0502 0601
GROMMET, power steer. pump to control       1309B         valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash       1716         GUIDE, engine valve       0103         GUIDE, front door window       2120C         GUIDE, hand brake control handle and plunger       1116         GUIDE, hand brake rear cable       1110         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary	0703B 0817 1005 2125 2121 2120A 2124 2124 0830 0203 2110 2113D 0502 0502 0601
GROMMET, power steer. pump to control       1309B         valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash       1716         GUIDE, engine valve       0103         GUIDE, front door window       2120C         GUIDE, hand brake control handle and plunger       1116         GUIDE, hand brake rear cable       1110         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary	0703B 0817 1005 2125 2121 2120A 2124 2124 0830 0203 2110 2113D 0502 0502 0601
GROMMET, power steer. pump to control       1309B         valve hose       1309B         GROMMET, rear stabilizer shaft link       1525         GROMMET, speedometer shaft dash       1716         GUIDE, engine valve       0103         GUIDE, front door window       2120C         GUIDE, hand brake control handle and plunger       1116         GUIDE, hand brake rear cable       1110         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary	0703B 0817 1005 2125 2121 2120A 2124 2124 0830 0203 2110 2113D 0502 0502 0601
GUIDE, engine valve       0103         GUIDE, front door window       2120C         GUIDE, hand brake control handle and plunger       1116         GUIDE, hand brake rear cable       1110         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary	0703B 0817 1005 2125 2121 2120A 2124 2124 0830 0203 2110 2113D 0502 0502 0601
GUIDE, engine valve       0103         GUIDE, front door window       2120C         GUIDE, hand brake control handle and plunger       1116         GUIDE, hand brake rear cable       1110         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary	0703B 0817 1005 2125 2121 2120A 2124 2124 0830 0203 2110 2113D 0502 0601 1803 1801 1622 0116
GUIDE, engine valve       0103         GUIDE, front door window       2120C         GUIDE, hand brake control handle and plunger       1116         GUIDE, hand brake rear cable       1110         GUIDE, trans. front servo piston       0827         GUIDE, trans. gearshift lever       0751A, 0751B	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary	0703B 0817 1005 2125 2121 2120A 2124 2124 0830 0203 2110 2113D 0502 0601 1803 1801 1622 0116
GUIDE, trans. front servo piston	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary	0703B .0817 1005 .2125 .2121 2120A .2124 .2147 .0830 .0203 .2110 2113D .0502 .0502 .0502 .0502 .0601 .1803 .1801 .1622 .0116
GUIDE, trans. front servo piston	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary	0703B .0817 1005 .2125 .2121 2120A .2124 .2147 .0830 .0203 .2110 2113D .0502 .0502 .0502 .0502 .0601 .1803 .1801 .1622 .0116
GUIDE, trans. front servo piston	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary	0703B .0817 1005 .2125 .2121 2120A .2124 .2147 .0830 .0203 .2110 2113D .0502 .0502 .0502 .0502 .0601 .1803 .1801 .1622 .0116
GUIDE, trans. front servo piston	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary	0703B .0817 1005 .2125 .2121 2120A .2124 .2147 .0830 .0203 .2110 2113D .0502 .0502 .0502 .0502 .0601 .1803 .1801 .1622 .0116
GUIDE, trans. front servo piston	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary	0703B .0817 1005 .2125 .2121 2120A .2124 .2147 .0830 .0203 .2110 2113D .0502 .0502 .0502 .0502 .0601 .1803 .1801 .1622 .0116
GUIDE, trans. gearshift lever	GEAR CLUSTER, trans. countershaft.       0703A,         GEAR and DRUM, trans. planetary.	0703B .0817 1005 .2125 .2121 2120A .2124 .2147 .0830 .0203 .2110 2113D .0502 .0502 .0502 .0502 .0601 .1803 .1801 .1622 .0116 .1309B .1525 .1716 .0103 .2120C .1116
GUIDE, trans. gearshift lever	GEAR CLUSTER, trans. countershaft.       0703A,         GEAR and DRUM, trans. planetary.	0703B .0817 1005 .2125 .2121 2120A .2124 .2147 .0830 .0203 .2110 2113D .0502 .0502 .0502 .0502 .0601 .1803 .1801 .1622 .0116 .1309B .1525 .1716 .0103 .2120C .1116
(111N) 1010	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary	0703B .0817 1005 .2125 .2121 2120A 2124 2124 .2147 0830 .0203 .2110 2113D .0502 .0601 .1803 .1801 .1622 .0116 .1309B .1525 .1716 .0103 .2120C .1116 .1100 .0827
GUN, grease	GEAR CLUSTER, trans. countershaft0703A, GEAR and DRUM, trans. planetary	0703B .0817 1005 .2125 .2121 2120A .2124 .2124 .2147 .0830 .0203 .2110 2113D .0502 .0502 .0601 .1803 .1801 .1622 .0116 .1309B .1525 .1716 .0103 .2120C .1116 .1110 .0827 .0751B

Н

#### Group

#### H-Cont'd.

HANDLE, air valve remote control	2110
HANDLE, console compartment lid	9190
HANDLE, console compartment nu	
HANDLE, deck lid latch control	2130
HANDLE, defroster control	.2101B
HANDLE, door inside	2117R
HANDLE, door outside	9117D
HANDLE, door outside HANDLE, door window regulator	.2117D
HANDLE, door window regulator	.2120F
HANDLE, jack HANDLE, r/q window latch	1812
HANDLE, r/g window latch	
HANDLE water valve control	2101A
HANDLE, water valve control HANDLE w/BRACKET, door ventilator HANDLE and PLUNGER, hand brake control pull	.2101A
HANDLE W/BRACKET, door ventilator	
HANDLE and PLUNGER, hand brake control pull.	1116
HARNESS, chassis wiring HARNESS, door window lift wiring HARNESS, tail lamp wiring HARNESS, windshield header switch wiring	0627
HARNESS, door window lift wiring	.2120G
HARNESS tail lamn wiring	0627
HARNESS, windshield header switch wiring	0627
HARINESS, whiteshe heater switch withing	0021
HEAD, alternator drive end	0609
HEAD, alternator slip ring end	0609
HEAD, cylinder HEAD, w/s wiper motor commutator end	0102
HEAD w/s wiper motor commutator and	2149B
HEAD, w/s wiper motor commutator end	. 2143D
HEAD LAMP	0617
HEAD LAMP HEATER VALVE, manifold HEATSINK and CABLES, transigniter HINGE, compartment door HINGE, console compartment lid HINGE, deck lid HINGE bood	0109
HEATSINK and CABLES, transigniter	0602
HINGE compartment door	2113B
HINGE console compartment lid	2138
HINGE, console compartment nd	
HINGE, deck hd.	2130
HINGE, front door	.2116B
HINGE, $r/q$ window	2124
	1690
HOOD	1020
HOOK, coat	2153
HORN	0625
HOOD, HOOK, coat HORN HORN BAR and SWITCH ASSEMBLY, steer.	
wheel	13104
HODN CONTRACT ACOV	10044
HORN CONTACT ASSY., steer. post	
HOSE, automatic choke heater tube	0302
HOSE, breather tube to air cleaner	. 0115
HOSE breather tube to carburetor	0115
HOSE, slimation motor	91014
HOSE, climatizer water	. 2101A
HOSE, compressor to condenser discharge.	.2102C
HOSE, condenser to evaporator liquid	2102B
HOSE, automatic choke heater tube         HOSE, breather tube to air cleaner         HOSE, breather tube to carburetor         HOSE, climatizer water         HOSE, compressor to condenser discharge         HOSE, condenser to evaporator liquid         HOSE, cylinder block drain cock         HOSE, defroster         HOSE, distributor spark modifier pipe         HOSE, evaporator to compressor suction	0102
HOSE defroster	2101B
HOSE distributer month modifier mine	0601
HOSE, distributor spark modilier pipe	0601
HOSE, evaporator to compressor suction	.2102A
HOSE, evaporator drain	. 2102A
HOSE, front brake flexible	. 1107
HOSE fuel filter to carburator nine	0304
HOSE, evaporator to compressor suction	0004
HOSE, fuel pump to supercharger pipe.	0301
HOSE, gasoline tank vent	0307
HOSE, gasoline tank to fuel pump pipe	0308
HOSE gas tank filler neck	0307
HOCE norman has he we summe	1110
HOSE, power brake vacuum.	. 1112
HOSE, radiator	.0507
HOSE, gas tank filler neck. HOSE, gas tank filler neck. HOSE, radiator HOSE, radiator reservoir tank overflow.	0501
HOSE, rear brake flexible	1107
HOSE supercharger to air cleaner	0320
HOSE, rear brake flexible HOSE, rear brake flexible HOSE, supercharger to air cleaner HOSE, s/c to carburetor air inlet adapter HOSE, throttle kicker to manifold HOSE, vacuum gage to inlet manifold pipe HOSE, w/s washer check valve to nozzle HOSE, w/s washer check valve to pump HOSE, w/s washer check valve to pump	0220
HOSE, s/c to carburetor air inlet adapter	. 0320
HOSE, throttle kicker to manifold	0302
HOSE, vacuum gage to inlet manifold pipe	1721
HOSE, w/s washer check valve to nozzle.	2149C
HOSE w/s washer check value to nump	2149C
HOSE and DIDE memoration number to	. 21400
HUSE and FIFE, power steer. pump to	
control valve	.13 <b>09</b> B
HOSE and PIPES, power steer. control valve to	
nower cylinder	1308B
HOUSING alimatican core	2101A
HOUGING, childler core	0000
HOUSING, clutch	
HOSE and PIPES, power steer, control valve to power cylinder	2101A
HOUSING, fuel pump valve	21014
HOUSING, parking and signal lamp	.0301
HOUSING nomeration control value	.0301
nousing, power steer. control valve.	.0301 .0617
HOUSING, steer. gear.	0301 0617 1308B
	.0301 .0617 .1308B .1302A
HOUSING stoor post jacket upper trim	1305A
HOUSING stoor post jacket upper trim	1305A
HOUSING stoor post jacket upper trim	1305A
HOUSING stoor post jacket upper trim	1305A
HOUSING stoor post jacket upper trim	1305A
HOUSING stoor post jacket upper trim	1305A
HOUSING stoor post jacket upper trim	1305A
HOUSING, steer. post jacket upper trim HOUSING, torque converter HOUSING, trans. case extension HOUSING, trans. gearshift control HOUSING, trans. gearshift lever HOUSING, trans. servo HOUSING and CARRIER ASSEMBLY, rear axle.	1305A

#### Group

#### H-Cont'd.

## HOUSING w/BUSHING, starter motor bendix

HOUSING W/BUSHING, starter motor bendix	
drive00	306
diive	000
HUB, fan	506
HUB, rear wheel	402
HUB, trans. front clutch	320
HUB and DISC, front	
HUB w/DRUM, rear.	

#### I

IDLER w/ARMS, window regulator2120EINSERT, drip moulding weatherstrip2124INSERT, rear spring leaf tip1518INSERT, steer. wheel spoke1310AINSULATOR, engine front support0101INSULATOR, gas tank to mounting strap0307INSULATOR, hood top1620INSULATOR, rear spring1518INSULATOR, spark plug cables emission shield0603INSULATOR, steer. post shaft bearing1304A	

#### J

JACK
JACKET, steer. post1305A
JUNCTIÓN BLÔCK, transigniter heatsink wire0602

#### K

KEEPER, console compartment lid	2138
KEEPER, door lock	2113B
KEY, console compartment lock	
KEY, door outside lock	2117A
KEY, ignition lock	
KEY, rear axle shaft to hub	1002
KICKER, throttle control	0302
KING PIN	1203
KIT, cam lever shaft stud and roller	1306A
KIT, comp't. door lock	2113B
KIT, control arm pivot pin and bushing	
KIT, differential case	1004
KIT, differential clutch friction plate and disc.	1004
KIT, differential side bevel gear and pinion	1004
KIT, inst. and console compartment lock	
KIT, king pin.	
KIT, power steer. control valve.	
KIT, power steer. power cylinder	
KIT, power steer, pump impeller repair	1309B
KIT, radiator air intake panel grille	0502
KIT, rear axle shaft bearing and retainer ring	1002
KNÓB, seat adj. track lever	
KNOB, temp. and air control	2102A
KNOB, tone control	2112A
KNOB, w/s wiper switch control	2149A
KNOB, volume and tuning	2112A
KNUCKLE, steering KICK PAD and CARPET	1202
KICK PAD and CARPET.	2109A
KNOB and ELEMENT, cigar lighter	2115B

#### L

LAMP, license plate
LAMP COMPLETE, courtesy
LAMP COMPLETE, dome
LATCH, deck lid inside 2130
LATCH, spare wheel cover
LATCH or PAWL, hand brake control plunger1116
LEAD, dist. breaker arm
LEAF, rear spring main
LENS, back-up lamp
LENS, comp't. light
LENS, license lamp
LENS, parking and signal lamp0617

Group

#### L-Cont'd.

I FNS toil lamp 0619
LENS, tail lamp
LENS, trunk light
LEVER, back-up lamp switch operating
LEVER, carb. idle speed-up control
LEVER, clutch pressure plate toggle
LEVER, directional signal switch operating 0621
LEVER, door locking control
LEVER bood lock latch 1622
LEVER, power brake operating
LEVED steen wheel release 1204A
LEVER, steer. wheel release
LEVER, trans. front serve brake band operating
LEVER, trans. gearshift
LEVER, trans. gearshift low and reverse
operating rod
LEVER, trans. gearshift low and reverse operating rod
operating rod
LEVER, trans. gearshift reverse operating rod
LEVER trans gearshift second and high
operating rod
IFVER trans groupshift third and high
operating red 0751P
operating rod
LEVER, trans. low and reverse outer shift
LEVER, trans. low and second shift
LEVER, trans. operating
LEVER, trans. operating
LEVER, trans. parking pawl toggle lift
LEVER, trans. parking pawl torsion
LEVER, trans. rear servo brake band operating
LEVER, trans. reverse outer shift
LEVER, trans. second and high outer shift
LEVER, trans. third and high outer shift0747B
LEVER, trans. third and ingri outer sint
LEVER, trans. throttle control
LEVER and SHAFT, trans. low and reverse inner shift
inner shift
LEVER and SHAFT, trans. low and second
inner shift
LEVER and SHAFT, trans, reverse inner shift,, 0747B
LEVER and SHAFT, trans second and high
LEVER and SHAFT, trans. reverse inner shift0747B LEVER and SHAFT, trans. second and high inner shift0747A LEVER and SHAFT, trans. third and high
LEVER and SHAFT, trans. third and high
inner shift
Inner sint
LEVER and DETENT, flight-o-matic trans. control. 0832
LEVER and GUIDE, No Rol valve
LEVER and PIN, rear brake shoe operating       1101         LID, console compartment       2138         LID, trunk       2130         LID, seat back shelf cover       2160G         LIFTER, engine valve       0103         LINER, rear spring clip strap       1518         LINING, rear brake shoe       1101         LINK, door remote control       2117C         LINK, front stabilizer shaft link       1205         LINK, near brake shoe operating       1101         LINK, rear stabilizer shaft support       2124         LINK, rear stabilizer shaft support       1525
LID, console compartment
LID, trunk
LID, seat back shelf cover
LIFTER, engine valve 0103
LINER rear spring clip strap
LINING rear broke show
LINK door remote control 91170
LINK, door remote control.
LINK, front stabilizer shaft link
LINK, nood lock control belicrank to lock
LINK, rear brake shoe operating 1101
LINK, r/q latch handle
LINK, rear stabilizer shaft support 1525
LINK, trans. parking pawl to toggle lever
LOCK, front door
LOCK KIT, ignition and doors
LINK, r/q latch handle
LOCK PLATE fuel nump eccentric 0301
LOCK PLATE anodemeter drive pinion 1716
LOCK DI ATE trans, reverse idler shaft and
countershaft
LOOK DING
LOCK RING, steer, post shaft and bearing
LOCK RING, steer, post shaft and bearing
LOCK RING, steer. post shaft and bearing retainer
LOCK RING, steer. post shaft and bearing retainer
LOCK RING, steer. post shaft and bearing retainer
LOCK RING, steer. post shaft and bearing retainer
LOCK RING, steer. post shaft and bearing retainer
LOCK RING, steer. post shaft and bearing retainer
LOCK RING, steer. post shaft and bearing retainer
LOCK RING, steer. post shaft and bearing retainer

#### Μ

MANIFOLD, exhaust		0109
MANIFOLD, inlet		
MANIFOLD, water pump		
MASTER CYLINDER, brake		
MIRROR ASSY., outside rear vie	W	$\dots$ $2145B$

#### Group

#### M-Cont'd.

MIRROR, inst. board comp't. vanity	
MIRROR, inst. board comp't. vanity	
With the and DALL OT OD, teat view inside	
MOTOR, climatizer blower	
MOTOR, evaporator blower	
MOTOR, window lift	
MOTOR and BRACKET, w/s wiper	
MOULDING, door sill	
MOULDING, back window reveal	
MOULDING, inside trim	
MOULDING, inside time	
MOULDING, kick pad trim	
MOULDING, lock pillar	
MOULDING, r/q window drip	
MOULDINC unner door open weatherstrin 2120D	
MOULDING, upper door open. weatherstrip	
MOULDING, windshield reveal	
MUFFLER	

#### Ν

NAME PLATE, console control illumination
NAME PLATE, deck lid
NAME PLATE, header switch illumination
NAME PLATE, radiator air intake panel
NECK, gas tank filler
NIPPLE, distributor high tension cable
NIPPLE, distributor spark modifier pipe
NIPPLE, trans. oil cooler pipe
NIPPLE, vac. gage to inlet manifold pipe hose
NoROL ŘEPAĬŘ KIT1105
NOZZLE, w/s washer
NUT, brake pipe

#### 0

OIL PAN, engine
OIL PUMP, engine
"O" RING, power brake check valve
"O" RING, trans. front servo piston
"O" RING, trans. rear servo piston
OIL RING, trans. front clutch cylinder
OIL RING, trans. output shaft
OIL RING, trans. planetary shaft front clutch
OIL DING, trans. planetary shaft from clutch
OIL RING, trans. planetary shaft rear clutch
OIL SEAL, cam lever shaft stud roller
OIL SEAL, crankshaft rear bearing
OIL SEAL, crankshaft rear bearing cap0105
OIL SEAL, rear axle pinion bearing
OIL SEAL, rear axle shaft inner
OIL SEAL, power steer. control valve housing 1308B
OIL SEAL, power steer. pump drive shaft
OIL SEAL, trans. case extension housing
OIL SEAL, trans. case rear flange
OIL SEAL, trans. front clutch cylinder piston
OIL SEAL, trans. front pump body
OIL SEAL, trans. inner shift lever shaft0747A, 0747B
OIL SEAL, trans. operating lever
OIL SEAL, trans. rear clutch piston
OIL SEAL, trans. throttle control lever
OIL SEAL KIT, crankshaft rear bearing
OPERATOR, outside door handle
ORNAMENT, hood top 1620
OUTLET, defroster
OVERLAY, inst. board instruments

#### $\mathbf{P}$

-
PAD, brake pedal110
PAD, clutch pedal $\ldots$ $\ldots$ $\ldots$ $\ldots$ $\ldots$ $\ldots$ $020$
PAD, console end crash
PAD, console front side trim
PAD, front brake caliper lining or 110
PAD SET, front brake caliper lining or
PAN, flight-o-matic trans. oil
PAN, rear floor
PANEL, air conditioner control.
PANEL, console front side
PANEL, cowl air intake
PANEL, cowl side (hinge pillar)
PANEL, cowl top and w/s opening

#### Group

#### P-Cont'd.

	2160A
PANEL, dash PANEL, deck opening	2160F
PANEL, deck opening. PANEL, door outer PANEL, radiator air intake. PANEL, rear seat back PANEL, roof. PANEL, sill PANEL ASSY., rear quarter. PANEL and CARPET ASSY., console frt. side PAWL trans. parking	21164
PANEL, radiator air intake	0502
PANEL rear seat back	2160G
PANEL, real seat back	21600
PANEL eill	2160E
PANEL ASSV rear quarter	2160D
PANEL and CARPET ASSV console for side	2100D
PAWL trans parking	
PAWL, trans. parking PAWL, trans. parking and reverse lockout shaft	0951
PEDAL accelerator	0312
PEDAL, accelerator PEDAL, brake PEDAL and SHAFT, clutch	1108
PEDAL and SHAFT clutch	0204
PULLAR rear quarter lock	2160D
DIN front door hingo	2100D
PIN, front door ninge	.2110D
PILLAR, rear quarter lock. PIN, front door hinge. PIN, fuel pump rocker arm PIN, hand brake control handle and plunger guide	1110
PIN, nano brake control nandle and plunger guide	0117D
PIN, outside door handle adapter	.2117B
PIN, power steer, pump cam dowel	1200D
PIN, power steer. pump carrier drive	.1309B
PIN, power steer. pump cover dowel	.1309B
PIN, shaft locking PIN, steer. knuckle control arm pivot	1004
PIN, steer. knuckle control arm pivot	1204
PIN, steer. wheel adj. actuator pivot	.1304A
PIN, steer. wheel adj. lock shoe	.1304A
PIN, trans. front servo brake band operating	
PIN, steer. wheel adj. lock shoe PIN, trans. front servo brake band operating lever. PIN, trans. parking pawl lift lever and torsion	0827
PIN, trans. parking pawl lift lever and torsion	
PIN, trans. parking pawl toggle lever and link	0837
PIN, trans. parking pawl toggle lever and link	0837
PIN, trans, rear servo brake band operating lever	
PINION, speedometer drive	1716
PINION, speedometer drive PINION, trans. main drive	, 0705B
PIPE, automatic choke to manifold	0302
PIPE exhaust	0401
PIPE, fuel pump to carburetor PIPE, fuel pump to supercharger pressure	0308
PIPE, fuel pump to supercharger pressure	0301
PIPE, gasoline tank to fuel pump PIPE, gasoline tank vent hose connector	0308
PIPE, gasoline tank vent hose connector	0307
PIPE idle speed-up control to manifold	0302
PIPE, oil pressure gage	0116
Dipli i i i i i i i i i i i i i i i i i i	
PIPE outlet	0403
PIPE, outlet extension	0403
PIPE, outlet extension.	0403
PIPE, outlet extension. PIPE, throttle kicker to manifold PIPE, throttle kicker to inlet monifold	0403 0403 0302 1721
PIPE, oil pressure gage. PIPE, outlet	0403 0403 0302 1721 0841
PIPE and NUUTO from the local bar with day	0041
PIPE and NUUTO from the local bar with day	0041
PIPE and NUUTO from the local bar with day	0041
PIPE and NUUTO from the local bar with day	0041
PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake. PIPE w NUTS, brake.	
PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake. PIPE w NUTS, brake.	
PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUT, distributor spark modifier PISTON PIN. PISTON trans. front slutsh cylinder	
PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUT, distributor spark modifier PISTON PIN. PISTON trans. front slutsh cylinder	
PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUT, distributor spark modifier PISTON PIN. PISTON trans. front slutsh cylinder	
PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUT, distributor spark modifier PISTON PIN. PISTON trans. front slutsh cylinder	
PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUT, distributor spark modifier PISTON PIN. PISTON trans. front slutsh cylinder	
PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUT, distributor spark modifier PISTON PIN PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, wheel brake cylinder PISTON and BALL, trans. rear clutch PISTON and PIN, trans. front servo PISTON w (CUP master cylinder	
PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUT, distributor spark modifier PISTON PIN PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, wheel brake cylinder PISTON and BALL, trans. rear clutch PISTON and PIN, trans. front servo PISTON w (CUP master cylinder	
PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUT, distributor spark modifier PISTON PIN PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, wheel brake cylinder PISTON and BALL, trans. rear clutch PISTON and PIN, trans. front servo PISTON w (CUP master cylinder	
PIPEs, trans on color         PIPE and NUTS, front brake caliper cylinder         jumper         PIPE w NUTS, brake.         PIPE w /NUT, distributor spark modifier.         PISTON PIN         PISTON, trans. front clutch cylinder.         PISTON, trans. rear servo.         PISTON, wheel brake cylinder.         PISTON and BALL, trans. rear clutch         PISTON w /CUP, master cylinder.         PISTON w /PIN         PIVOT, door ventilator.         PIVOT, w /s wiper drive	1100 1107 0601 0108 0820 0827 1103 0820 0827 1104 0108 2121 2149A
PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUTS, brake PISTON PIN PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, trans. rear servo PISTON, wheel brake cylinder. PISTON and BALL, trans. rear clutch PISTON and BALL, trans. front servo PISTON and PIN, trans. front servo PISTON w /CUP, master cylinder PISTON w /PIN. PISTON w /PIN. PIVOT, door ventilator PIATE, air cond. deflector retaining.	1100 1107 0601 0108 0820 0827 1103 0820 0827 1104 0827 1104 0108 2121 2149A 2124
PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUTS, brake PIPE w /NUT, distributor spark modifier PISTON, trans. front clutch cylinder PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, wheel brake cylinder PISTON and BALL, trans. rear clutch PISTON and BALL, trans. front servo PISTON and PIN, trans. front servo PISTON and PIN, trans. front servo PISTON w /CUP, master cylinder PISTON w /PIN PIVOT, door ventilator. PLATE, air cond. deflector retaining PLATE, alternator positive rectifier mounting	1100 1107 0601 0108 0820 0827 1103 0820 0827 1104 0108 2121 2149A 2102A 0609
PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUT, distributor spark modifier PISTON PIN. PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, wheel brake cylinder PISTON and BALL, trans. rear clutch PISTON and BALL, trans. rear clutch PISTON and PIN, trans. front servo PISTON w /CUP, master cylinder PISTON w /CUP, master cylinder PISTON w /PIN. PIVOT, door ventilator PIVOT, door ventilator PLATE, air cond. deflector retaining PLATE, atternator positive rectifier mounting PLATE. arm rest mounting.	1100 1107 0601 0108 0820 0827 1103 0820 0827 1103 0820 0827 1104 0108 2121 2149A 2102A 0609 2116A
PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUTS, brake PIPE w /NUT, distributor spark modifier PISTON PIN PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, wheel brake cylinder PISTON and BALL, trans. rear clutch PISTON and BALL, trans. front servo PISTON and PIN, trans. front servo PISTON w /CUP, master cylinder PISTON w /CUP, master cylinder PISTON w /PIN PIVOT, door ventilator PIVOT, door ventilator PLATE, air cond. deflector retaining PLATE, arm rest mounting PLATE console air conditioner hole cover	1100 1107 0601 0108 0820 0827 1103 0820 0827 1103 0827 1104 0108 2121 2149A 2102A 0609 2116A 2138
PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUTS, brake PIPE w /NUT, distributor spark modifier PISTON PIN PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, wheel brake cylinder PISTON and BALL, trans. rear clutch PISTON and BALL, trans. front servo PISTON and PIN, trans. front servo PISTON w /CUP, master cylinder PISTON w /CUP, master cylinder PISTON w /PIN PIVOT, door ventilator PIVOT, door ventilator PLATE, air cond. deflector retaining PLATE, arm rest mounting PLATE console air conditioner hole cover	1100 1107 0601 0108 0820 0827 1103 0820 0827 1103 0827 1104 0108 2121 2149A 2102A 0609 2116A 2138
PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUTS, brake PIPE w /NUT, distributor spark modifier PISTON PIN PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, wheel brake cylinder PISTON and BALL, trans. rear clutch PISTON and BALL, trans. front servo PISTON and PIN, trans. front servo PISTON w /CUP, master cylinder PISTON w /CUP, master cylinder PISTON w /PIN PIVOT, door ventilator PIVOT, door ventilator PLATE, air cond. deflector retaining PLATE, arm rest mounting PLATE console air conditioner hole cover	1100 1107 0601 0108 0820 0827 1103 0820 0827 1103 0827 1104 0108 2121 2149A 2102A 0609 2116A 2138
PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUTS, brake PIPE w /NUT, distributor spark modifier PISTON PIN PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, wheel brake cylinder PISTON and BALL, trans. rear clutch PISTON and BALL, trans. front servo PISTON and PIN, trans. front servo PISTON w /CUP, master cylinder PISTON w /CUP, master cylinder PISTON w /PIN PIVOT, door ventilator PIVOT, door ventilator PLATE, air cond. deflector retaining PLATE, arm rest mounting PLATE console air conditioner hole cover	1100 1107 0601 0108 0820 0827 1103 0820 0827 1103 0827 1104 0108 2121 2149A 2102A 0609 2116A 2138
PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUTS, brake PIPE w /NUT, distributor spark modifier PISTON PIN PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, wheel brake cylinder PISTON and BALL, trans. rear clutch PISTON and BALL, trans. front servo PISTON and PIN, trans. front servo PISTON w /CUP, master cylinder PISTON w /CUP, master cylinder PISTON w /PIN PIVOT, door ventilator PIVOT, door ventilator PLATE, air cond. deflector retaining PLATE, arm rest mounting PLATE console air conditioner hole cover	1100 1107 0601 0108 0820 0827 1103 0820 0827 1103 0827 1104 0108 2121 2149A 2102A 0609 2116A 2138
PIPEs, trans on color PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUT, distributor spark modifier. PISTON PIN PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, trans. rear servo PISTON and BALL, trans. rear clutch PISTON and BALL, trans. rear clutch PISTON and PIN, trans. front servo PISTON and PIN, trans. front servo PISTON w /CUP, master cylinder PISTON w /CUP, master cylinder PISTON w /PIN PIVOT, door ventilator PLATE, air cond. deflector retaining PLATE, air cond. deflector retaining PLATE, air rest mounting PLATE, console air conditioner hole cover PLATE, console compartment trim. PLATE, console control panel PLATE, clutch housing front cover PLATE, clutch housing front cover PLATE, clutch housing front cover	1100 1107 0601 0108 0820 0827 1103 0820 0827 1104 0108 2121 1104 0108 2121 1104 0609 2138 2138 2138 2138 2138 2138 2138 2138
PIPEs, trans on color PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUT, distributor spark modifier. PISTON PIN PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, trans. rear servo PISTON and BALL, trans. rear clutch PISTON and BALL, trans. rear clutch PISTON and PIN, trans. front servo PISTON and PIN, trans. front servo PISTON w /CUP, master cylinder PISTON w /CUP, master cylinder PISTON w /PIN PIVOT, door ventilator PLATE, air cond. deflector retaining PLATE, air cond. deflector retaining PLATE, air rest mounting PLATE, console air conditioner hole cover PLATE, console compartment trim. PLATE, console control panel PLATE, clutch housing front cover PLATE, clutch housing front cover PLATE, clutch housing front cover	1100 1107 0601 0108 0820 0827 1103 0820 0827 1104 0108 2121 1104 0108 2121 1104 0609 2138 2138 2138 2138 2138 2138 2138 2138
PIPEs, trans on color PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w /NUT, distributor spark modifier PISTON PIN PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, trans. rear servo PISTON and BALL, trans. rear clutch PISTON and BALL, trans. front servo PISTON and PIN, trans. front servo PISTON w/CUP, master cylinder PISTON w/CUP, master cylinder PISTON w/PIN PIVOT, door ventilator PLATE, air cond. deflector retaining PLATE, air cond. deflector retaining PLATE, air cond. deflector retaining PLATE, console air conditioner hole cover PLATE, console compartment trim PLATE, console control panel PLATE, clutch housing front cover PLATE, clutch release bearing collar PLATE, cranshaft to converter drive	100 1107 0601 0108 0820 0827 1103 0820 0827 1104 0820 0827 1104 0108 2121 2149A 0609 2138 213
PIPEs, trans on color PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUT, distributor spark modifier PISTON PIN. PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, wheel brake cylinder PISTON and BALL, trans. rear clutch PISTON and BALL, trans. front servo PISTON and PIN, trans. front servo PISTON w /CUP, master cylinder PISTON w /PIN. PIVOT, door ventilator PIVOT, door ventilator PIVOT, w /s wiper drive PLATE, air cond. deflector retaining PLATE, air cond. deflector retaining PLATE, arm rest mounting PLATE, console air conditioner hole cover PLATE, console control panel PLATE, console trans. mounting PLATE, clutch housing front cover PLATE, clutch housing front cover PLATE, clutch release bearing collar PLATE, crankshaft to converter drive PLATE distributor timer hase	1100 1107 0601 0108 0820 0827 1103 0820 0827 1103 0820 0827 1104 0108 2121 2149A 0609 2138 2138 2138 2138 2138 2138 2138 2138 0209 0202 0203 0105 0203 0105
PIPEs, trans on color PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUT, distributor spark modifier PISTON PIN. PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, wheel brake cylinder PISTON and BALL, trans. rear clutch PISTON and BALL, trans. front servo PISTON and PIN, trans. front servo PISTON w /CUP, master cylinder PISTON w /PIN. PIVOT, door ventilator PIVOT, door ventilator PIVOT, w /s wiper drive PLATE, air cond. deflector retaining PLATE, air cond. deflector retaining PLATE, arm rest mounting PLATE, console air conditioner hole cover PLATE, console control panel PLATE, console trans. mounting PLATE, clutch housing front cover PLATE, clutch housing front cover PLATE, clutch release bearing collar PLATE, crankshaft to converter drive PLATE distributor timer hase	1100 1107 0601 0108 0820 0827 1103 0820 0827 1103 0820 0827 1104 0108 2121 2149A 0609 2138 2138 2138 2138 2138 2138 2138 2138 0209 0202 0203 0105 0203 0105
PIPEs, trans on color PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUT, distributor spark modifier PISTON PIN. PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, wheel brake cylinder PISTON and BALL, trans. rear clutch PISTON and BALL, trans. front servo PISTON and PIN, trans. front servo PISTON w /CUP, master cylinder PISTON w /PIN. PIVOT, door ventilator PIVOT, door ventilator PIVOT, w /s wiper drive PLATE, air cond. deflector retaining PLATE, air cond. deflector retaining PLATE, arm rest mounting PLATE, console air conditioner hole cover PLATE, console control panel PLATE, console trans. mounting PLATE, clutch housing front cover PLATE, clutch housing front cover PLATE, clutch release bearing collar PLATE, crankshaft to converter drive PLATE distributor timer hase	1100 1107 0601 0108 0820 0827 1103 0820 0827 1103 0820 0827 1104 0108 2121 2149A 0609 2138 2138 2138 2138 2138 2138 2138 2138 0209 0202 0203 0105 0203 0105
PIPEs, trans on color PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w /NUT, distributor spark modifier. PISTON PIN PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, trans. rear servo PISTON and BALL, trans. rear clutch PISTON and BALL, trans. front servo PISTON and PIN, trans. front servo PISTON w/CUP, master cylinder PISTON w/CUP, master cylinder PISTON w/PIN PIVOT, door ventilator PLATE, air cond. deflector retaining PLATE, air cond. deflector retaining PLATE, air console air conditioner hole cover. PLATE, console air conditioner trim PLATE, console compartment trim. PLATE, console compartment trim. PLATE, clutch housing front cover PLATE, clutch release bearing collar PLATE, distributor timer base PLATE, distributor timer base PLATE, electric window lift switch PLATE, front brake caliper pad stop	100 1107 0601 0108 0820 0827 1103 0820 0827 1104 0820 0827 1104 0820 0827 1104 0108 2121 2149A 0609 2138 2139
PIPEs, trans on cooler PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUT, distributor spark modifier PISTON PIN PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, trans. rear servo PISTON and BALL, trans. rear clutch PISTON and BALL, trans. rear clutch PISTON and PIN, trans. front servo PISTON w/CUP, master cylinder PISTON w/CUP, master cylinder PIVOT, door ventilator PIVOT, door ventilator PLATE, air cond. deflector retaining PLATE, air cond. deflector retaining PLATE, air cond. deflector retaining PLATE, console air conditioner hole cover PLATE, console compartment trim. PLATE, console compartment trim. PLATE, console trans. mounting PLATE, clutch housing front cover PLATE, clutch release bearing collar PLATE, distributor timer base PLATE, door sill. PLATE, electric window lift switch PLATE, born har and switch contact	100 107 0601 0108 0820 0827 103 0820 0827 1103 0820 0827 103 0820 0827 103 0820 0827 103 0820 0827 104 104 104 108 102A 0609 116A 138 2138 2138 2138 2138 0209 0203 0005 0601 1100 100 0601 1105 0601 1105 0601 1100 1100 1105 0209 0203 0105 0601 1100 1100 1105 0209 0203 0105 0601 1100
PIPEs, trans on color PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUT, distributor spark modifier PISTON PIN PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, wheel brake cylinder PISTON and BALL, trans. rear clutch PISTON and BALL, trans. rear clutch PISTON and PIN, trans. front servo PISTON w /CUP, master cylinder PISTON w /CUP, master cylinder PISTON w /PIN PIVOT, door ventilator PIVOT, door ventilator PLATE, alternator positive rectifier mounting PLATE, arm rest mounting PLATE, console air conditioner hole cover PLATE, console compartment trim. PLATE, console control panel PLATE, clutch housing front cover PLATE, clutch release bearing collar PLATE, clutch release bearing collar PLATE, door sill PLATE, door sill PLATE, door sill PLATE, horn bar and switch contact PLATE, horn bar and switch contact PLATE, horn bar and switch contact PLATE, non bar and switch contact PLATE, horn bar and switch contact PLATE horn bar and switch c	100 107 0601 0108 0820 0827 1103 0820 0827 1103 0820 0827 1104 0820 0827 1104 0108 2121 2149A 2138 2139
PIPEs, trans on cooler PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUTS, brake PISTON PIN PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, trans. rear servo PISTON and BALL, trans. rear clutch PISTON and PIN, trans. front servo PISTON and PIN, trans. front servo PISTON w/CUP, master cylinder PISTON w/PIN PIVOT, door ventilator PLATE, air cond. deflector retaining PLATE, alternator positive rectifier mounting PLATE, alternator positive rectifier mounting PLATE, console air conditioner hole cover PLATE, console compartment trim PLATE, console control panel PLATE, clutch housing front cover PLATE, clutch pressure PLATE, clutch release bearing collar PLATE, clutch release bearing collar PLATE, distributor timer base PLATE, distributor timer base PLATE, door sill. PLATE, front brake caliper pad stop. PLATE, horn bar and switch contact PLATE, power steer. pump reservoir reinf PLATE, power steer. pump reservoir reinf PLATE, power steer. pump reservoir reinf PLATE, brack backing	100 107 0601 0108 0820 0827 1103 0820 0827 104 0820 0827 104 0108 2121 104 0108 2121 104 0108 2121 104 0108 2121 104 0108 1102 0105 010
PIPEs, trans on cooler PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUT, distributor spark modifier. PISTON PIN PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, trans. rear servo PISTON and BALL, trans. rear clutch PISTON and BALL, trans. rear clutch PISTON and PIN, trans. front servo PISTON w/CUP, master cylinder PISTON w /CUP, master cylinder PISTON w /PIN PIVOT, door ventilator PLATE, air cond. deflector retaining PLATE, aiternator positive rectifier mounting PLATE, aiternator positive rectifier mounting PLATE, console air conditioner hole cover PLATE, console compartment trim PLATE, console control panel PLATE, clutch housing front cover PLATE, clutch nelease bearing collar PLATE, clutch release bearing collar PLATE, distributor timer base PLATE, distributor timer base PLATE, foont brake caliper pad stop PLATE, horn bar and switch contact PLATE, power steer. pump reservoir reinf PLATE, power steer. pump reservoir reinf PLATE, rear brake backing	100 1107 0601 0108 0820 0827 1103 0820 0827 104 0820 0827 104 0108 2121 104 0108 2121 104 0108 2121 104 0108 2121 104 0108 2121 104 0108 2121 104 0108 2121 104 0108 2121 104 0108 2121 104 0108 2121 104 0108 104 108 104 104 104 104 108 104 108 104 104 108 104 104 108 104 104 108 104 104 108 104 108 104 104 108 104 104 104 108 104 104 108 104 104 108 104 108 104 108 104 108 104 108 104 108 1104 108 1104 108 1104 108 1104 108 1104 108 1104 108 1104 108 1104 1104 1104 1104 1104 1106 1106 1106 1106 1106 1106 1106 1106 1106 1106 1106 1106 1107 1107 1107
PIPEs, trans on color PIPE and NUTS, front brake caliper cylinder jumper PIPE w NUTS, brake PIPE w NUT, distributor spark modifier PISTON PIN PISTON, trans. front clutch cylinder PISTON, trans. rear servo PISTON, wheel brake cylinder PISTON and BALL, trans. rear clutch PISTON and BALL, trans. rear clutch PISTON and PIN, trans. front servo PISTON w /CUP, master cylinder PISTON w /CUP, master cylinder PISTON w /PIN PIVOT, door ventilator PIVOT, door ventilator PLATE, alternator positive rectifier mounting PLATE, arm rest mounting PLATE, console air conditioner hole cover PLATE, console compartment trim. PLATE, console control panel PLATE, clutch housing front cover PLATE, clutch release bearing collar PLATE, clutch release bearing collar PLATE, door sill PLATE, door sill PLATE, door sill PLATE, horn bar and switch contact PLATE, horn bar and switch contact PLATE, horn bar and switch contact PLATE, non bar and switch contact PLATE, horn bar and switch contact PLATE horn bar and switch c	100 1107 0601 0108 0820 0827 1103 0820 0827 104 0820 0827 104 0108 2121 104 0108 2121 104 0108 2121 104 0108 2121 104 0108 2121 104 0108 2121 104 0108 2121 104 0108 2121 104 0108 2121 104 0108 2121 104 0108 104 108 104 104 104 104 108 104 108 104 104 108 104 104 108 104 104 108 104 104 108 104 108 104 104 108 104 104 104 108 104 104 108 104 104 108 104 108 104 108 104 108 104 108 104 108 1104 108 1104 108 1104 108 1104 108 1104 108 1104 108 1104 108 1104 1104 1104 1104 1104 1106 1106 1106 1106 1106 1106 1106 1106 1106 1106 1106 1106 1107 1107 1107

Group

#### P-Cont'd.

PLATE, starter motor commutator end	0606
PLATE, starter motor brush	0606
PL/ TE, steer, post adj. support lock PLATE, torque converter housing front cover	1304A
PLATE, torque converter housing front cover	0230
PLATE, trans. case rear flange adapter	0701B
PLATE trans control cover	2138
PLATE, trans. control lower body cover end	0832
PLATE trans control lower body end	0832
PLATE, trans. control lower body side	0832
PLATE, trans. control lower body side PLATE, trans. control lower body separator	0832
PLATE, trans. control upper body PLATE, trans. control upper body separator	0832
PLATE, trans. control upper body separator	0832
PLATE, trans. front clutch	. 0820
PLATE, trans. front clutch pressure	0820
PLATE trans gearshift operating rod lever	
PLATE, trans. low and second synchronizer	0751B
PLATE trans low and second synchronizer	
PLATE, trans. low and second synchronizer shifter	0702B
PLATE trans oil pressure regulator cover	.0102D
PLATE, trans. oil pressure regulator cover to body	0934
PLATE, trans. rear clutch.	0004
PLATE, trans. rear clutch	
PLATE, trans. rear clutch pressure PLATE, trans. second and high synchronizer	0820
FLATE, trans. second and high synchronizer	07094
PLATE, trans. third and high synchronizer	.0702A
shifter.	0700D
	.0702B
PLATE ASSY., hood lock	. 1622
PLATE and BÚSHING, starter motor center	
PLATE w/FACINGS, clutch	0201
PLUG, oil pressure relief valve	0117
PLUG, oil pressure relief valve. PLUG, pitman arm ball stud housing inner sleeve	1308B
PLUG, steer, gear housing vent	1308B 1302A
PLUG, steer. gear housing vent	.1302A
PLUG, steer. gear housing vent PLUNGER, trans. inner shift lever interlock	.1302A 0747B
PLUG, steer. gear housing vent PLUNGER, trans. inner shift lever interlock	.1302A 0747B 0104
PLUG, steer. gear housing vent PLUNGER, trans. inner shift lever interlock	.1302A 0747B 0104 0601
PLUG, steer. gear housing vent PLUNGER, trans. inner shift lever interlock	.1302A 0747B 0104 0601
PLUG, steer. gear housing vent PLUNGER, trans. inner shift lever interlock	.1302A 0747B 0104 0601
PLUG, steer. gear housing vent PLUNGER, trans. inner shift lever interlock	. 1302A 0747B 0104 0601 . 1304A 1112
PLUG, steer. gear housing vent PLUNGER, trans. inner shift lever interlock	.1302A 0747B 0104 0601 .1304A 1112 .1304A
PLUG, steer. gear housing vent.         PLUNGER, trans. inner shift lever         interlock.         OINTER, engine timing.         POINT SET, distributor contact.         POST and CAM, steer. gear.         POWER BRAKE UNIT         PRELOAD CAPSULE and RETAINER         RING KIT, steer. post shaft bearing.         PULLEY, alternator drive.	.1302A 0747B 0104 0601 .1304A 1112 .1304A 0609
PLUG, steer. gear housing vent.         PLUNGER, trans. inner shift lever         interlock.         OINTER, engine timing.         POINT SET, distributor contact.         POST and CAM, steer. gear.         POWER BRAKE UNIT.         PRELOAD CAPSULE and RETAINER         RING KIT, steer. post shaft bearing.         PULLEY, alternator drive.         PULLEY, crankshaft fan drive.	.1302A 0747B 0104 0601 .1304A 1112 .1304A 0609 0105
PLUG, steer. gear housing vent	.1302A 0747B 0104 0601 .1304A 1112 .1304A 0609 0105 0105
PLUG, steer. gear housing vent	.1302A 0747B 0104 0601 .1304A 1112 .1304A 0609 0105 0105
PLUG, steer. gear housing vent	.1302A 0747B 0104 0601 .1304A 1112 .1304A 0609 0105 0105 0105
PLUG, steer. gear housing vent PLUNGER, trans. inner shift lever interlock	.1302A 0747B 0104 0601 .1304A 1112 .1304A 0609 0105 0105 0105 0320
PLUG, steer. gear housing vent PLUNGER, trans. inner shift lever interlock	.1302A 0747B 0104 0601 .1304A 1112 .1304A 0609 0105 0105 1309B 0320 0320
PLUG, steer. gear housing vent.         PLUNGER, trans. inner shift lever         interlock.       .0747A,         POINTER, engine timing.         POINT SET, distributor contact.         POST and CAM, steer. gear.         POWER BRAKE UNIT         PRELOAD CAPSULE and RETAINER         RING KIT, steer. post shaft bearing.         PULLEY, crankshaft fan drive.         PULLEY, c/s power steering drive.         PULLEY, supercharger idler.         PULLEY, supercharger drive.         PULLEY, supercharger drive.         PULLEY and BEARING.	.1302A 0747B 0104 0601 .1304A 1112 .1304A 0609 0105 0105 0105 0320 0320 2102C
PLUG, steer. gear housing vent	.1302A 0747B 0104 0601 .1304A 1112 .1304A 0105 0105 0105 0320 0320 0320 .2102C
PLUG, steer. gear housing vent	.1302A 0747B 0104 0601 .1304A 1112 .1304A 0105 0105 0105 0320 0320 0320 .2102C .2102C 0116
PLUG, steer. gear housing vent	.1302A 0747B 0104 0601 .1304A 1112 .1304A 0105 0105 0105 0320 0320 0320 .2102C .2102C 0116
PLUG, steer. gear housing vent PLUNGER, trans. inner shift lever interlock	1302A 0747B 0104 0601 .1304A 1112 .1304A 0609 0105 0105 0105 0105 0105 0320 0320 0320 0320 0320 0320 0320 0301 0301
PLUG, steer. gear housing vent. PLUNGER, trans. inner shift lever interlock	1302A 0747B 0104 0601 .1304A 1112 .1304A 0609 0105 0105 0105 0320 0320 0320 2102C 2102C 0116 0301 1309B 1812
PLUG, steer. gear housing vent	.1302A 0747B 0104 0601 .1304A 1112 .1304A 0105 0105 0105 0105 0320 0320 0320 0320 0116 0301 309B 1812 0823
PLUG, steer. gear housing vent	.1302A 0747B 0104 0601 .1304A 1112 .1304A 0105 0105 0105 0105 0320 0320 0320 0320 0116 0301 309B 1812 0823
PLUG, steer. gear housing vent. PLUNGER, trans. inner shift lever interlock	1302A 0747B 0104 0601 1304A 1112 1304A 0609 0105 0105 0105 0105 2.0020 2102C 2102C 2102C 2102C 2102C 0310 1309B 0301 1309B 0823 0824
PLUG, steer. gear housing vent. PLUNGER, trans. inner shift lever interlock	1302A 0747B 0104 0601 .1304A 1112 .1304A 0609 0105 0105 0105 0105 0105 0320 2102C 2102C 2102C 2102C 2102C 0301 309B 1812 0823 0824 2149C 2.0312
<ul> <li>PLUG, steer. gear housing vent</li></ul>	1302A 0747B 0104 0601 .1304A 1112 .1304A 0609 0105 .1309B 0320 2102C 2002C 200
PLUG, steer. gear housing vent. PLUNGER, trans. inner shift lever interlock	1302A 0747B 0104 0601 .1304A 1112 .1304A 0609 0105 .1309B 0320 2102C 2002C 200
<ul> <li>PLUG, steer. gear housing vent</li></ul>	1302A 0747B 0104 0601 .1304A 1112 .1304A 0609 0105 .1309B 0320 2102C 2002C 200

#### R

RACE, flight-o-matic trans. planetary one way

clutch	0817
RACE, steer. post shaft bearing inner	1304A
RADIATOR CORE	0501
RADIMETER	1714
RADIO SUPPRESSION KIT	2112A
RADIO and ANTENNA	<b>2112A</b>
RADIUS ROD, rear axle	1001
REAR QUARTER PANEL	2160D
RECTIFIER, alternator negative	0609
RECTIFIER, alternator positive	0609
REGULATOR, alternator voltage	0609
REGULATOR, door window	2120E
REGULATOR ASSY., trans. oil pressure	0834
REINFORCEMENT, c/s to converter drive	
plate	0105
<b>REINFORCEMENT</b> , rear quarter window	
opening	2160D
1 0	

Group

#### R-Cont'd.

R-cont a.	
REINFORCEMENT, rear window opening	.2160C
REINFORCEMENT, roof panel center REINFORCEMENT, sill underbody.	.2160C
REINFORCEMENT, sill underbody.	.2160E
RESISTOR, heat indicator cable	0302
RELAY, electric window lift	.2120G
RELAY, horn. RESONATOR and PIPE ASSY REPAIR KIT, fuel pump. REPAIR KIT, master cylinder RESERVOIR, power steer. pump. RESERVOIR TANK, radiator. RESERVOIR W/CAP, w/s washer RESERVOIR w/CAP, w/s washer	0403
REPAIR KIT, fuel pump.	0301
REPAIR KIT, master cylinder	1104
RESERVOIR, power steer. pump	.1309B
RESERVOIR TANK, radiator	2140C
RESISTOR, ignition coil primary	0602
RESISTOR, ignition coil primary RESISTOR, instrument lamp	0615
RETAINER, ash receiver	. 2115A
RETAINER, back-up lamp lens RETAINER, cam lever shaft stud roller	13064
RETAINER, clutch release shaft RETAINER, door lock	0203
RETAINER, door lock	.2117A
RETAINER, engine valve spring	0103
RETAINER, front brake caliper pad.	1100
RETAINER, front shock absorber grommet	1801
RETAINER, front stabilizer shaft bushing	2100 4
RETAINER, kick pad RETAINER, power steer. power cylinder bushing	1308B
RETAINER, rear axle bumper	. 1521
RETAINER, rear axle bumper RETAINER, r /q window w /strip RETAINER, rear stabilizer shaft link grommet	2124
RETAINER, rear stabilizer shaft link grommet	1525
RETAINER, spare wheel cover	.2160H
RETAINER, steer. knuckle control arm pivot shaft bushing	1204
RETAINER, steer. post shaft bearing preload	
capsule wasner.	. 1304A
RETAINER, steer. wheel emblem	.1310A
RETAINER, trans. gearshift ever boot	0851
RETAINER, trans. gearshift operating rod lever	0751B
RETAINER, trans. rear clutch piston spring	
RETAINER, trans. rear servo piston	0827
RETAINER, trans. rear servo piston	
RETAINER, trans. rear servo piston accumulator spring.	0827
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal	0827 2120D
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft	0827 2120D
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft	0827 2120D
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft	0827 2120D
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade	0827 2120D .1304A .1310A .2149B
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade	0827 2120D .1304A .1310A .2149B
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp RIM head lamp.well glass cover	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing. RETAINER and PLATE ASSY., steer. wheel horn brush. REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp. RIM, head lamp well glass cover. RIMG. camsbaft timing gear cover oil collector.	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear RING, post retainer RING, speedo. drive gear retainer RING, speedo. drive gear retainer RING, trans. front clutch cylinder piston bearing.	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear RING, post retainer RING, speedo. drive gear retainer RING, speedo. drive gear retainer RING, trans. front clutch cylinder piston bearing.	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear RING, post retainer RING, speedo. drive gear retainer RING, speedo. drive gear retainer RING, trans. front clutch cylinder piston bearing.	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp. RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear RING, head lamp sealed beam retaining. RING, post retainer. RING, speedo. drive gear retainer RING, speedo. drive ginion lock. RING, trans. front clutch cylinder piston bearing. RING SET, piston. ROD, back-up lamp switch operating.	0827 2120D .1304A .1310A .2149B .0610 .0617 0104 .1004 .0617 .0621 .1716 .0820 0108 .0632 .1109
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp. RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear RING, head lamp sealed beam retaining. RING, post retainer. RING, speedo. drive gear retainer RING, speedo. drive ginion lock. RING, trans. front clutch cylinder piston bearing. RING SET, piston. ROD, back-up lamp switch operating.	0827 2120D .1304A .1310A .2149B .0610 .0617 0104 .1004 .0617 .0621 .1716 .0820 0108 .0632 .1109
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp. RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear RING, head lamp sealed beam retaining. RING, post retainer. RING, speedo. drive gear retainer RING, speedo. drive ginion lock. RING, trans. front clutch cylinder piston bearing. RING SET, piston. ROD, back-up lamp switch operating.	0827 2120D .1304A .1310A .2149B .0610 .0617 0104 .1004 .0617 .0621 .1716 .0820 0108 .0632 .1109
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp RIM, head lamp well glass cover RIMG, camshaft timing gear cover oil collector RING, differential side gear. RING, bead lamp sealed beam retaining RING, post retainer. RING, speedo. drive gear retainer. RING, speedo. drive gear retainer. RING, trans. front clutch cylinder piston bearing. RING SET, piston ROD, back-up lamp switch operating lever ROD, clutch operating bellcrank to pedal. ROD, clutch operating shaft to bellcrank. ROD, hand brake rear cable adjusting	
RETAINER, trans. rear servo piston accumulator spring	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp RIM, head lamp RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear. RING, bead lamp sealed beam retaining RING, speedo. drive gear retainer. RING, speedo. drive gear retainer. RING, speedo. drive gear retainer. RING, speedo. drive ginion lock RING, speedo. drive ginion lock RING, trans. front clutch cylinder piston bearing. RING SET, piston ROD, back-up lamp switch operating lever ROD, clutch operating bellcrank to pedal ROD, clutch operating shaft to bellcrank. ROD, hand brake rear cable adjusting ROD, No Rol valve operating ROD, throttle bellcrank to transmission. ROD, throttle bellcrank to carb	0827 2120D .1304A .1310A .2149B .0610 .0617 .0617 .0014 .1004 .1004 .1004 .1004 .1016 .1716 0820 0108 .0632 .1109 .0206 .1105 .0312 .0312
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade RIM, battery hold down RIM, bead lamp RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear RING, head lamp sealed beam retaining RING, bead lamp sealed beam retaining RING, speedo. drive gear retainer RING, speedo. drive gear retainer RING, speedo. drive gear retainer RING, speedo. drive pinion lock RING, trans. front clutch cylinder piston bearing. RING SET, piston ROD, back-up lamp switch operating ROD, brake pedal to power brake operating lever. ROD, clutch operating shaft to bellcrank. ROD, hand brake rear cable adjusting ROD, hor Rol valve operating ROD, throttle bellcrank to carb ROD, throttle control bellcrank to carb ROD, trans. low and reverse shift.	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade RIM, battery hold down RIM, bead lamp RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear RING, head lamp sealed beam retaining RING, speedo. drive gear retainer RING, trans. front clutch cylinder piston bearing. ROD, back-up lamp switch operating ROD, back-up lamp switch operating ROD, brake pedal to power brake operating lever ROD, clutch operating bellcrank to pedal. ROD, clutch operating shaft to bellcrank. ROD, hand brake rear cable adjusting ROD, hand brake rear cable adjusting ROD, throttle bellcrank to transmission ROD, throttle control bellcrank to carb ROD, trans. low and reverse shift ROD, trans. low and second shift ROD, trans. parking pawl operating	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, bead lamp. RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear RING, bead lamp sealed beam retaining RING, bead lamp sealed beam retaining. RING, speedo. drive gear retainer RING, speedo. drive gear retainer ROD, back-up lamp switch operating ROD, back-up lamp switch operating lever. ROD, clutch operating shaft to bellcrank. ROD, clutch operating shaft to bellcrank. ROD, hand brake rear cable adjusting ROD, hrottle bellcrank to carb ROD, throttle control bellcrank to carb ROD, throttle control bellcrank to carb ROD, trans. low and second shift ROD, trans. low and second shift ROD, trans. parking pawl operating ROD, trans. reverse shift	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear RING, bead lamp sealed beam retaining RING, speedo. drive gear retainer. RING, speedo. drive gear retainer. ROD, back-up lamp switch operating. ROD, brake pedal to power brake operating lever ROD, clutch operating bellcrank to pedal. ROD, clutch operating shaft to bellcrank. ROD, clutch operating shaft to bellcrank. ROD, hand brake rear cable adjusting ROD, throttle bellcrank to transmission. ROD, throttle control bellcrank to carb ROD, trans. low and reverse shift ROD, trans. low and second shift ROD, trans. parking pawl operating ROD, trans. second and high shift	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear. RING, differential side gear. RING, speedo. drive gear retainer. RING, speedo. drive gear retainer. RING, speedo. drive gear retainer. RING, speedo. drive ginion lock. RING, trans. front clutch cylinder piston bearing. RING SET, piston. ROD, back-up lamp switch operating ROD, back-up lamp switch operating. ROD, clutch operating bellcrank to pedal. ROD, clutch operating shaft to bellcrank. ROD, clutch operating shaft to bellcrank. ROD, throttle bellcrank to transmission. ROD, throttle control bellcrank to carb. ROD, trans. low and reverse shift. ROD, trans. low and reverse shift. ROD, trans. second and high shift ROD, trans. second and high shift ROD, trans. shift lever to trans	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp RIM, head lamp RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear. RING, bead lamp sealed beam retaining RING, speedo. drive gear retainer. RING, speedo. drive ginion lock RING, trans. front clutch cylinder piston bearing. RING SET, piston ROD, back-up lamp switch operating ROD, clutch operating bellcrank to pedal. ROD, clutch operating shaft to bellcrank. ROD, clutch operating shaft to bellcrank. ROD, hand brake rear cable adjusting ROD, throttle bellcrank to carb ROD, throttle bellcrank to carb ROD, trans. low and reverse shift. ROD, trans. low and second shift ROD, trans. low and second shift ROD, trans. second and high shift ROD, trans. shift lever to trans ROD, trans. starter cut-out switch	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear RING, bead lamp sealed beam retaining RING, bead lamp sealed beam retaining RING, speedo. drive gear retainer. RING, speedo. drive gear retainer. ROD, back-up lamp switch operating. ROD, back-up lamp switch operating. ROD, brake pedal to power brake operating lever ROD, clutch operating bellcrank to pedal. ROD, clutch operating shaft to bellcrank. ROD, clutch operating shaft to bellcrank. ROD, throttle bellcrank to transmission. ROD, throttle control bellcrank to carb ROD, trans. low and reverse shift ROD, trans. low and reverse shift ROD, trans. low and second shift ROD, trans. second and high shift ROD, trans. starter cut-out switch ROD, trans. third and high shift ROD, trans. third and high shift.	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear RING, bead lamp sealed beam retaining RING, bead lamp sealed beam retaining RING, speedo. drive gear retainer. RING, speedo. drive gear retainer. ROD, back-up lamp switch operating. ROD, back-up lamp switch operating. ROD, brake pedal to power brake operating lever ROD, clutch operating bellcrank to pedal. ROD, clutch operating shaft to bellcrank. ROD, clutch operating shaft to bellcrank. ROD, throttle bellcrank to transmission. ROD, throttle control bellcrank to carb ROD, trans. low and reverse shift ROD, trans. low and reverse shift ROD, trans. low and second shift ROD, trans. second and high shift ROD, trans. starter cut-out switch ROD, trans. third and high shift ROD, trans. third and high shift.	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear RING, bead lamp sealed beam retaining RING, bead lamp sealed beam retaining RING, speedo. drive gear retainer. RING, speedo. drive gear retainer. ROD, back-up lamp switch operating. ROD, back-up lamp switch operating. ROD, brake pedal to power brake operating lever ROD, clutch operating bellcrank to pedal. ROD, clutch operating shaft to bellcrank. ROD, clutch operating shaft to bellcrank. ROD, throttle bellcrank to transmission. ROD, throttle control bellcrank to carb ROD, trans. low and reverse shift ROD, trans. low and reverse shift ROD, trans. low and second shift ROD, trans. second and high shift ROD, trans. starter cut-out switch ROD, trans. third and high shift ROD, trans. third and high shift.	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, head lamp RIM, head lamp well glass cover RING, camshaft timing gear cover oil collector RING, differential side gear RING, bead lamp sealed beam retaining RING, bead lamp sealed beam retaining RING, speedo. drive gear retainer. RING, speedo. drive gear retainer. ROD, back-up lamp switch operating. ROD, back-up lamp switch operating. ROD, brake pedal to power brake operating lever ROD, clutch operating bellcrank to pedal. ROD, clutch operating shaft to bellcrank. ROD, clutch operating shaft to bellcrank. ROD, throttle bellcrank to transmission. ROD, throttle control bellcrank to carb ROD, trans. low and reverse shift ROD, trans. low and reverse shift ROD, trans. low and second shift ROD, trans. second and high shift ROD, trans. starter cut-out switch ROD, trans. third and high shift ROD, trans. third and high shift.	
RETAINER, trans. rear servo piston accumulator spring RETAINER, weatherseal. RETAINER and HORN BRUSH, steer. post shaft bearing RETAINER and PLATE ASSY., steer. wheel horn brush REFILL, w/s wiper blade. RIM, battery hold down RIM, bead lamp RIM, head lamp RIMG, camshaft timing gear cover oil collector RING, differential side gear RING, head lamp sealed beam retaining RING, bead lamp sealed beam retaining RING, speedo. drive gear retainer. RING, speedo. drive gear retainer. ROD, back-up lamp switch operating. ROD, back-up lamp switch operating. ROD, back-up lamp switch operating. ROD, brake pedal to power brake operating lever ROD, clutch operating shaft to bellcrank. ROD, hand brake rear cable adjusting ROD, hand brake rear cable adjusting ROD, throttle control bellcrank to carb ROD, throttle control bellcrank to carb ROD, trans. low and reverse shift ROD, trans. low and second shift ROD, trans. parking pawl operating ROD, trans. second and high shift ROD, trans. shift lever to trans ROD, trans. shift lever to trans ROD, trans. shift lever to trans ROD, trans. third and high shift ROD, trans. third and high shift	

#### Group

#### R-Cont'd.

ROLLER, trans. countershaft gear
cluster bearing
ROLLER, trans. main shaft front bearing 0702A, 0702B
ROLLER, trans. rear servo brake band
operating lever
ROLLER ASSY., clutch cover and pressure plate0202
ROLL BAR
ROOF RAIL
ROTOR, distributor
ROTOR and SLIP RING, alternator
RUN, door window

 $\mathbf{s}$ 

CODEEN air autlat	
SCREEN, air outlet	2110
SCREW, head lamp focusing	0617
SCDEW wontilaton nivet	0101
SCREW, ventilator pivot. SEAL, engine valve spring.	
SEAL, engine valve spring	0103
SEAL, front wheel brake cylinder SEAL, hood top to cowl SEAL, pitman arm ball stud dust	1103
SEAL bood top to cowl	1620
OFAL situate hall stud dust	19000
SEAL, pitman arm ball stud dust.	.1308D
SEAL, power steer. power cylinder end grease	.1308B
SEAL, power steer. pump body	1309B
SFAL nower steer nump control valve can	1300B
SEAL, power steer, pump control valve cap	1009D
SEAL, steer. bellcrank bracket	1209
SEAL, steer. gear housing top cover	.1302A
SEAL steer knuckle control arm hushing	1204
SEAL, steer. post collar.	9190
ODAL, steel, post conar	10044
SEAL, steer. post lower shaft	.1304A
SEAL, steer, reach rod end grease	, 1312B
SEAL, trans. front servo piston	0827
SEAL, universal joint cross bearing.	0001
SEAL, universal joint cross bearing	
SEAL, window regulator to inner panel.	.2120E
SEAL KIT, compressor drive shaft	2102C
SEALED BEAM UNIT, head lamp	0617
SEALED DEAM UNIT, near lamp	
SEAT.	2127
SEAT, pitman arm ball stud SEAT, pitman arm ball stud spring	.1308B
SEAT nitman arm hall stud enring	1308B
SEAT, power steer. control valve housing	. 13000
SEA1, power steer. control valve housing	
center spring	.1308B
SEAT, power steer, control valve housing	
nort tubo	1308B
port tube	1000D
SEAT, power steer. power cylinder tube	1308B
SEAT, power steer. pump cover orifice	.1309B
SEAT, steer. post shaft bearing preload capsule	1304A
SENDING UNIT, tachometer SHACKLE, rear spring	1720
OILAOULE many size	1500
SHAUKLE rear spring	1520
Ginorian, icar spring	
SHAFT, brake pedal.	
SHAFT, brake pedal.	
SHAFT, brake pedal. SHAFT, clutch pedal.	
SHAFT, brake pedal SHAFT, clutch pedal SHAFT, control arm stabilizer	
SHAFT, brake pedal. SHAFT, clutch pedal SHAFT, control arm stabilizer. SHAFT, control retainer bracket	
SHAFT, brake pedal. SHAFT, clutch pedal SHAFT, control arm stabilizer. SHAFT, control retainer bracket	
SHAFT, brake pedal. SHAFT, clutch pedal. SHAFT, control arm stabilizer. SHAFT, control retainer bracket. SHAFT, differential pinion.	
SHAFT, brake pedal. SHAFT, clutch pedal. SHAFT, control arm stabilizer. SHAFT, control retainer bracket. SHAFT, differential pinion.	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.	1108 0205 1205 2101A 0104 0103 0116
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump diler gear.	1108 0205 1205 1205 2101A 014 0103 0116 0115
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump idler gear.         SHAFT, prover steer nump. drive.	1108 0205 1205 .2101A 0104 0103 0116 0115 1309B
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump idler gear.         SHAFT, prover steer nump. drive.	1108 0205 1205 .2101A 0104 0103 0116 0115 1309B
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump idler gear.         SHAFT, prover steer nump. drive.	1108 0205 1205 .2101A 0104 0103 0116 0115 1309B
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump idler gear.         SHAFT, prover steer nump. drive.	1108 0205 1205 .2101A 0104 0103 0116 0115 1309B
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump idler gear.         SHAFT, prover steer nump. drive.	1108 0205 1205 .2101A 0104 0103 0116 0115 1309B
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump idler gear.         SHAFT, prover steer nump. drive.	1108 0205 1205 .2101A 0104 0103 0116 0115 1309B
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump idler gear.         SHAFT, power steer. pump drive.         SHAFT, rear axle.         SHAFT, steer. gear cam lever.         SHAFT, steer. knuckle control arm pivot.	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump idler gear.         SHAFT, power steer. pump drive.         SHAFT, rear axle.         SHAFT, steer. gear cam lever.         SHAFT, steer. knuckle control arm pivot.	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump idler gear.         SHAFT, power steer. pump drive.         SHAFT, rear axle.         SHAFT, steer. gear cam lever.         SHAFT, steer. knuckle control arm pivot.	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump idler gear.         SHAFT, power steer. pump drive.         SHAFT, rear axle.         SHAFT, steer. gear cam lever.         SHAFT, steer. knuckle control arm pivot.	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump drive.         SHAFT, power steer. pump drive.         SHAFT, rear axle.         SHAFT, steer. gear cam lever.         SHAFT, steer. post.         SHAFT, supercharger idler pulley arm.         SHAFT, supercharger idler pulley arm spring.	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, differential pinion.         SHAFT, oil pump drive         SHAFT, oil pump drive         SHAFT, oil pump drive         SHAFT, rear axle.         SHAFT, rear axle.         SHAFT, rear axle.         SHAFT, steer. gear cam lever.         SHAFT, steer. post.         SHAFT, supercharger idler pulley arm spring.         SHAFT, trans. input.	1108 0205 1205 2101A 1004 0103 0116 0115 1309B 1002 1525 1306A 1204 1304A 0320 0320 0814
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump idler gear.         SHAFT, power steer. pump drive.         SHAFT, rear axle.         SHAFT, steer. gear cam lever.         SHAFT, steer. nuckle control arm pivot.         SHAFT, supercharger idler pulley arm.         SHAFT, supercharger idler pulley arm spring.         SHAFT, trans. input.         O702A	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump drive gear.         SHAFT, rear axle.         SHAFT, rear stabilizer.         SHAFT, rear stabilizer.         SHAFT, steer. gear cam lever.         SHAFT, steer. knuckle control arm pivot.         SHAFT, steer. nost.         SHAFT, supercharger idler pulley arm.         SHAFT, trans. input.         SHAFT, trans. main	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump drive gear.         SHAFT, rear axle.         SHAFT, rear stabilizer.         SHAFT, rear stabilizer.         SHAFT, steer. gear cam lever.         SHAFT, steer. knuckle control arm pivot.         SHAFT, steer. nost.         SHAFT, supercharger idler pulley arm.         SHAFT, trans. input.         SHAFT, trans. main	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump drive gear.         SHAFT, rear axle.         SHAFT, rear stabilizer.         SHAFT, rear stabilizer.         SHAFT, steer. gear cam lever.         SHAFT, steer. knuckle control arm pivot.         SHAFT, steer. nost.         SHAFT, supercharger idler pulley arm.         SHAFT, trans. input.         SHAFT, trans. main	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, oli pump drive         SHAFT, oil pump drive         SHAFT, oil pump idler gear.         SHAFT, rear axle.         SHAFT, rear stabilizer         SHAFT, rear stabilizer         SHAFT, steer. gear cam lever.         SHAFT, steer. nuckle control arm pivot.         SHAFT, steer. post.         SHAFT, supercharger idler pulley arm.         SHAFT, trans. input.         SHAFT, trans. main         .0702A         SHAFT, trans. main         .0702A         SHAFT, w/s wiper motor output.         SHAFT, w/s kiper motor output.	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, oli pump drive         SHAFT, oil pump drive         SHAFT, oil pump idler gear.         SHAFT, rear axle.         SHAFT, rear stabilizer.         SHAFT, rear stabilizer.         SHAFT, steer. gear cam lever.         SHAFT, steer. nuckle control arm pivot.         SHAFT, steer. post.         SHAFT, supercharger idler pulley arm.         SHAFT, trans. input.         SHAFT, trans. main         O702A         SHAFT, w/s wiver motor output.         SHAFT, and BEARING ASSY., rear axle.         SHAFT and BUSHING, trans. parking and	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, oil pump drive         SHAFT, oil pump drive         SHAFT, oil pump idler gear.         SHAFT, rear axle         SHAFT, rear stabilizer.         SHAFT, rear stabilizer.         SHAFT, steer. gear cam lever.         SHAFT, steer. knuckle control arm pivot.         SHAFT, supercharger idler pulley arm.         SHAFT, trans. input.         SHAFT, trans. main         O702A         SHAFT, w/s wiper motor output.         SHAFT, and BEARING ASSY., rear axle.         SHAFT and BUSHING, trans. parking and reverse lockout.	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, oil pump drive.         SHAFT, oil pump drive.         SHAFT, oil pump drive.         SHAFT, rear stabilizer.         SHAFT, rear stabilizer.         SHAFT, rear stabilizer.         SHAFT, steer. gear cam lever.         SHAFT, steer. knuckle control arm pivot.         SHAFT, steer. post.         SHAFT, supercharger idler pulley arm.         SHAFT, trans. input.         SHAFT, trans. main       .0702A         SHAFT, w/s wiper motor output.         SHAFT, and BEARING ASSY., rear axle.         SHAFT and BUSHING, trans. parking and reverse lockout.         SHAFT and CORE. speedometer drive.	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, oil pump drive.         SHAFT, oil pump drive.         SHAFT, oil pump drive.         SHAFT, rear stabilizer.         SHAFT, rear stabilizer.         SHAFT, rear stabilizer.         SHAFT, steer. gear cam lever.         SHAFT, steer. knuckle control arm pivot.         SHAFT, steer. post.         SHAFT, supercharger idler pulley arm.         SHAFT, trans. input.         SHAFT, trans. main       .0702A         SHAFT, w/s wiper motor output.         SHAFT, and BEARING ASSY., rear axle.         SHAFT and BUSHING, trans. parking and reverse lockout.         SHAFT and CORE. speedometer drive.	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, oil pump drive         SHAFT, oil pump drive         SHAFT, rear axle.         SHAFT, steer. gear cam lever.         SHAFT, steer. knuckle control arm pivot.         SHAFT, supercharger idler pulley arm.         SHAFT, trans. input.         SHAFT, trans. main         O702A         SHAFT, w/s wiper motor output.         SHAFT, and BEARING ASSY., rear axle.         SHAFT and GEARS, trans. main .	1108 0205 1205 2101A 1004 0103 0116 0115 1309B 1002 1525 1306A 1204 1304A 0320 0814 0702B 0851 1716 0702A
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, oil pump drive         SHAFT, oil pump drive         SHAFT, oil pump drive         SHAFT, rear axle.         SHAFT, rear stabilizer         SHAFT, rear stabilizer         SHAFT, steer. gear cam lever         SHAFT, steer. nuckle control arm pivot.         SHAFT, steer. post.         SHAFT, supercharger idler pulley arm.         SHAFT, trans. input.         SHAFT, trans. main         O702A         SHAFT, trans. reverse idler gear         SHAFT, w/s wiber motor output.         SHAFT, and BEARING ASSY., rear axle.         SHAFT and CORE, speedometer drive.         SHAFT and GEARS, trans. main         SHAFT and GEAR, trans. output	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump drive         SHAFT, rear axle.         SHAFT, rear axle.         SHAFT, steer. gear cam lever.         SHAFT, steer. knuckle control arm pivot.         SHAFT, steer. nuckle control arm pivot.         SHAFT, supercharger idler pulley arm.         SHAFT, trans. min         O702A         SHAFT, trans. main         SHAFT, trans. main         O702A         SHAFT, and BEARING ASSY., rear axle.         SHAFT and BUSHING, trans. parking and         reverse lockout.         SHAFT and GEARS, trans. main         SHAFT and GEAR trans. output.	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump drive         SHAFT, rear axle.         SHAFT, rear axle.         SHAFT, steer. gear cam lever.         SHAFT, steer. knuckle control arm pivot.         SHAFT, steer. nuckle control arm pivot.         SHAFT, supercharger idler pulley arm.         SHAFT, trans. min         O702A         SHAFT, trans. main         SHAFT, trans. main         O702A         SHAFT, and BEARING ASSY., rear axle.         SHAFT and BUSHING, trans. parking and         reverse lockout.         SHAFT and GEARS, trans. main         SHAFT and GEAR trans. output.	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump drive         SHAFT, rear axle.         SHAFT, rear axle.         SHAFT, steer. gear cam lever.         SHAFT, steer. knuckle control arm pivot.         SHAFT, steer. nuckle control arm pivot.         SHAFT, supercharger idler pulley arm.         SHAFT, trans. min         O702A         SHAFT, trans. main         SHAFT, trans. main         O702A         SHAFT, and BEARING ASSY., rear axle.         SHAFT and BUSHING, trans. parking and         reverse lockout.         SHAFT and GEARS, trans. main         SHAFT and GEAR trans. output.	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump drive         SHAFT, rear axle.         SHAFT, rear axle.         SHAFT, steer. gear cam lever.         SHAFT, steer. knuckle control arm pivot.         SHAFT, steer. nuckle control arm pivot.         SHAFT, supercharger idler pulley arm.         SHAFT, trans. min         O702A         SHAFT, trans. main         SHAFT, trans. main         O702A         SHAFT, and BEARING ASSY., rear axle.         SHAFT and BUSHING, trans. parking and         reverse lockout.         SHAFT and GEARS, trans. main         SHAFT and GEAR trans. output.	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump drive         SHAFT, rear axle.         SHAFT, rear axle.         SHAFT, steer. gear cam lever.         SHAFT, steer. knuckle control arm pivot.         SHAFT, steer. nuckle control arm pivot.         SHAFT, supercharger idler pulley arm.         SHAFT, trans. min         O702A         SHAFT, trans. main         SHAFT, trans. main         O702A         SHAFT, and BEARING ASSY., rear axle.         SHAFT and BUSHING, trans. parking and         reverse lockout.         SHAFT and GEARS, trans. main         SHAFT and GEAR trans. output.	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, oil pump drive.         SHAFT, oil pump drive         SHAFT, oil pump idler gear.         SHAFT, rear axle.         SHAFT, rear stabilizer.         SHAFT, rear stabilizer.         SHAFT, steer. gear cam lever.         SHAFT, steer. knuckle control arm pivot.         SHAFT, steer. nuckle control arm pivot.         SHAFT, supercharger idler pulley arm.         SHAFT, trans. input.         SHAFT, trans. input.         SHAFT, trans. main         O702A         SHAFT, and BEARING ASSY., rear axle.         SHAFT and BUSHING, trans. parking and reverse lockout.         SHAFT and GEAR, trans. output.         SHAFT and GEAR, trans. output.         SHAFT and GEAR, trans. output.         SHAFT and GEAR, trans. planetary.         SHAFT and LEVER, clutch operating.         SHAFT and PIN trans. gearshift lever	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, oil pump drive         SHAFT, oil pump drive         SHAFT, oil pump drive         SHAFT, rear sule.         SHAFT, rear axle.         SHAFT, steer. gear cam lever.         SHAFT, steer. post.         SHAFT, supercharger idler pulley arm         SHAFT, trans. input.         SHAFT, trans. input.         SHAFT, trans. main         O702A         SHAFT, trans. reverse idler gear.         SHAFT, trans. reverse idler gear.         SHAFT, and BEARING ASSY., rear axle.         SHAFT and BUSHING, trans. parking and reverse lockout         SHAFT and GEAR, trans. output.         SHAFT and GEAR, trans. output.         SHAFT and GEAR, trans. planetary.         SHAFT and LEVER, clutch operating.         SHAFT and PIN, trans. gearshift lever.         SHAFT and PIN, trans. gearshift lever.	
SHAFT, brake pedal.         SHAFT, clutch pedal.         SHAFT, control arm stabilizer.         SHAFT, control retainer bracket.         SHAFT, differential pinion.         SHAFT, engine valve rocker arm.         SHAFT, oil pump drive.         SHAFT, oil pump drive         SHAFT, rear axle.         SHAFT, rear axle.         SHAFT, steer. gear cam lever.         SHAFT, steer. knuckle control arm pivot.         SHAFT, steer. nuckle control arm pivot.         SHAFT, supercharger idler pulley arm.         SHAFT, trans. min         O702A         SHAFT, trans. main         SHAFT, trans. main         O702A         SHAFT, and BEARING ASSY., rear axle.         SHAFT and BUSHING, trans. parking and         reverse lockout.         SHAFT and GEARS, trans. main         SHAFT and GEAR trans. output.	

### Group

#### S-Cont'd.

SHAFT, STUD and ROLLERS, cam lever. SHAFT w COUPLING, distributor drive.	. 1306A
SHAFT w COUPLING, distributor drive	
SHELF, rear seat back	
SHIELD, cigar lighter light	$\dots \dots 2115B$
SHIELD, clutch housing side	0230
SHELF, rear seat back SHIELD, cigar lighter light SHIELD, clutch housing side SHIELD, clutch housing side SHIELD, directional lights SHIELD, distributor and ignition coil emission.	
SHIELD, distributor and ignition coil emission	0601
SHIELD, front wheel brake disc dust	1402
SHIELD, lower, clutch housing	0230
SHIELD, master cylinder filler cover vent	1104
SHIELD, pitman arm ball stud dust	1308B
SHIELD, spark plug cables emission	. 0603
SHIELD, spark plug emission.	
SHIELD, trans. gearshift indicator lamp bulb.	0851
SHIM, bumper to fender	1803 1805
SHIM, differential bearing adjusting	1003, 1003
SHIM, crankshaft thrust washer	0105
SHIM, front brake caliper adjusting	1100
SHIM, rear axle pinion adjusting	1005
SHIM, rear axle pinion bearing adjusting	1005
SHIM, rear axle shaft bearing adjusting.	1002
SHIM, rear spring clip plate to rear axie	1900
SHIM, steer gear housing ton cover	1302A
SHIM, steer, knuckle	1202
SHOCK ABSORBER	. 1801
SHOE, steer. wheel adj. lock	1304A
SHIELD, directional lights         SHIELD, distributor and ignition coil emission         SHIELD, distributor and ignition coil emission         SHIELD, front wheel brake disc dust         SHIELD, lower, clutch housing         SHIELD, master cylinder filler cover vent         SHIELD, pitman arm ball stud dust         SHIELD, spark plug cables emission         SHIELD, spark plug emission         SHIELD, trans. gearshift indicator lamp bulb         SHIM, body hold down         SHIM, bumper to fender         SHIM, differential bearing adjusting         SHIM, crankshaft thrust washer	. 0747A
SHOE and LINING, rear brake SHOE and LINING SET, rear brake SHORT BLOCK, engine	1101
SHOE and LINING SET, rear brake	
SHORT BLOCK, engine	
SIDE PANEL front fender hood opening	1601
SILL PANEL	2160E
SLAVE LINK, w s wiper motor	. 2149A
SLEEVE, accelerator push rod	0312
SLEEVE, clutch operating shaft.	. 0206
SLEEVE, clutch pedal pull back spring	
SHOE and LINING SET, rear brake SHORT BLOCK, engine SHROUD, fan SIDE PANEL, front fender hood opening SILL PANEL SLAVE LINK, w s wiper motor SLEEVE, accelerator push rod SLEEVE, accelerator push rod SLEEVE, clutch operating shaft SLEEVE, clutch operating shaft SLEEVE, clutch opedal pull back spring SLEEVE, clutch pedal pull back spring SLEEVE, power steer, hose to steer, gear SLEEVE, power steer, hose to steer, gear SLEEVE, rear shock absorber bushing SLEEVE, trans. inner shift lever interlock. 07 SLEEVE, trans. low and second synchronizer	1205
SLEEVE, pitman arm ball stud housing	1308B
SLEEVE, power steer, hose to steer, gear	1309B
SLEEVE, rear shock absorber bushing	47A 0747B
SLEEVE, trans low and second synchronizer	1111, 01411
shifter.	0702B
SLEEVE, trans. low and second synchronizer shifter. SLEEVE, trans. oil collector SLEEVE, trans. second and high synchronizer SLEEVE, trans. third and high synchronizer	.0825
SLEEVE, trans. second and high synchronizer	0702A
SLEEVE, trans. third and high synchronizer shifter. SLINGER, crankshaft oil. SLINGER, rear axle pinion front bearing oil SLINGER, trans. pinion rear bearing oil. SNAP RING, power steer. pump drive shaft. SNAP RING.	07000
Shifter,	.0702B
SLINGER, cranksnalt oll	1005
SLINGER, trans pinion rear bearing oil	0705A
SNAP RING, power steer, pump drive shaft	1309B
SNAP RING, universal joint cross bearing.	0901
SNAP RING, universal joint cross bearing. SOCKET, comp't. light. SOCKET ASSY., cigar light.	.2113B
SOCKET ASSY., cigar light.	
SOCKET ASSY., cigar light SOCKETS and CABLES, back-up lamp SOCKET and CABLE, parking and signal lamp.	0632
SOCKET and CABLE, parking and signal lamp	
SOCKET and CABLE, trans. gearshift indicator	0851
lamp. SOCKET and CABLES, trunk light	. 0851 . 2130
SOCKETS and CABLES, windshield header	
switch lighting.	0627
SOCKET and LOOM, license lamp	.0620
SPACER, alternator drive end head	.0609
SOCKETS and CABLES, windshield header switch lighting. SOCKET and LOOM, license lamp. SPACER, alternator drive end head SPACER, camshaft timing gear SPACER, distributor timer camshaft. SPACER, front stabilizer shaft link bracket	.0104
SPACER, distributor timer canshart.	1205
SPACER born bar and switch contact	1310A
SPACER, horn bar and switch contact SPACER, power steer. control valve housing	101013
bushing	1308B
centering spring	1308B
SPACER, rear axle radius rod bracket	1001
SPACER, power steer, control valve housing centering spring	0320
SPACER trans. countershalt gear cluster bearing	E Contraction of the second se
rollers	0703B
SPACER, trans. gearshift lever shaft	0751A

### Group

#### S-Cont'd.

SPACER and WASHER KIT, trans. countershaft	
gear cluster bearing rollers	0703A
SPARK MODIFIER, distributor	0601
SPARK PLUG	0603
SPEAKER, radio	
SPEAKER, rear comp't.	
SPEAKER, rear comp t. SPEAKER KIT, rear comp't. SPEAKER KIT, rear comp't. SPEAKER KIT, rear comp't. SPEAKER KIT, rear comp't. SPHERE, steer. post shaft adj. SPLASHGUARD, front fender SPRING, alternator brush. SPRING, ash receiver lid tension SPRING dutch pressure plate	1716
SPHERE, steer, post shaft adj.	.1304A
SPLASHGUARD, front fender	1601
SPRING, alternator brush	0609
SPRING, ash receiver lid tension	2115A
SPRING, clutch pressure plate	0202
SPRING, clutch release bearing collar	0203
SPRING, door handle tension	2117B
SPRING, door lock control lever. SPRING, deck lid hinge. SPRING, deck lid latch pawl.	2117A
SPRING, deck lid hinge	2130
SPRING, deck lid latch pawl	0103
SPRING, engine valve. SPRING, engine valve rocker arm	
SPRING, front. SPRING, fuel pump rocker arm SPRING, gas filler door hinge. SPRING, hand brake bellcrank pull back.	1510
SPRING, fuel pump rocker arm	0301
SPRING, gas filler door hinge	.2160D
SPRING, hand brake belicrank pull back	1699
SPRING hood top lift	1622
SPRING, hood top lift SPRING, hood top support anti-rattle	1620
SPRING born bar and switch contact	1310A
SPRING, master cylinder piston SPRING, No Rol valve operating rod	1104
SPRING, No Rol valve operating rod	1105
SPRING, oil pressure relief valve. SPRING, pitman arm ball stud. SPRING, power steer. control valve housing	1209P
SPRING, power steer control valve housing	1900D
centering	1308B
SPRING, power steer. flow control valve	1309B
SPRING, power steer, hose to steer, gear.	1309B
SPRING, rear SPRING, rear brake shoe anchor	1101
SPRING, rear brake shoe return	1101
SPRING rear wheel brake cylinder	1103
SPRING, regulator balance. SPRING, seat adj. track lock. SPRING, seat pullback. SPRING, starter motor brush. SPRING, steer. post shaft adj. preload SPRING steer. used adj. lock share	2120E
SPRING, seat adj. track lock	2127
SPRING, seat pullback	2127
SPRING, starter motor brush	1204 4
SPRING, steer. wheel adj. lock shoe	1304A
SPRING, steer, wheel emblem retainer	
SPRING, steer. wheel horn brush	. 1310A
SPRING, steer. wheel tilt return	1304A
SPRING, switch detent SPRING, switch release coil SPRING, throttle control bellcrank return	0621
SPRING throttle control bellcrank return	0312
SPRING, throttle return	0312
SPRING, trans. control lever and detent.	0832
SPRING, trans. control throttle valve return	0832
SPRING, trans. front clutch cylinder piston	0820
SPRING, trans. front servo piston	0751B
SPRING, trans. gearshift lever shaft anti-rattle	0751B
SPRING, trans. inner shift lever interlock0747A	., 0747B
SPRING, trans. oil pressure regulator	0834
SPRING, trans. parking and reverse lockout shaft.	0851
SPRING, trans. parking pawl lift. SPRING, trans. parking pawl toggle lever release	0837
SPRING, trans. rear servo piston	.0820
SPRING, trans. rear servo piston	0827
SPRING, trans. rear servo piston accumulator	0827
SPRING, w/s wiper motor brush	.2149B
SPRING SET, distributor timer weight	
SPRING and BEARING, door ventilator pivot.	2121
SPRING ASSY., supercharger idler pulley arm. SPRING SET, distributor timer weight SPRING and BEARING, door ventilator pivot SPRING and HOUSING, trans. gearshift lever	
shaft	0751B
STARTER MOTOR ASSV	0606
STATOR, alternator	
STEERING GEAR ASSEMBLY	1301A
STEM, rear view mirror	2145A
STATOR, alternator STEERING GEAR ASSEMBLY STEM, rear view mirror STOP, door window STOP SCREW, power steer. control valve.	1308P
SIOP SURE W, power steer. control valve	. 19090

Group

#### S-Cont'd.

STRAINER, flight-o-matic trans. oil.	0811
STRAINER, oil.         STRAINER, oil.         STRAINER, oil.         STRAINER, gasoline tank mounting.         STRAP, gasoline tank mounting.         STRAP, muffler support.         STRAP, outlet pipe support.         STRAP, outlet pipe support.         STRAP, rear spring clip         STRIKER, deck lid latch.         STRIKER, front door.         STRIT, clutch pressure plate toggle lever.         STRUT, clutch pressure plate toggle lever.         STRUT, trans. front brake band operating.         STRUT, trans. rear brake band operating.         STUD, carburetor air cleaner.         STUD, power steer. pump reservoir to body         STUD, wheel hub.         SUN GEAR and DRUM, trans. planetary         secondary.         SUN SHIELDS.         SUN VISOR.	0116
STRAINER, w/s washer	.2149C
STRAP, gasoline tank mounting	0307
STRAP, muffler support.	0402
STRAP, outlet pipe support	0403
STRAP, rear spring clip	1518
STRIKÉR, deck lid latch	2130
STRIKER, front door	.2117A
STRIP, bonding	.2160J
STRUT, clutch pressure plate toggle lever	0202
STRUT, trans. front brake band operating	.0828
STRUT, trans. rear brake band anchor.	0828
STRUT, trans. rear brake band operating	.0828
STUD, carburetor air cleaner	0302
STUD, power steer. pump reservoir to body	.1309B
STUD, wheel hub	1402
SUN GEAR and DRUM, trans. planetary	
secondary	0817
SUN SHIELDS	2144
SUN VISOR.	2144
SUPERCHARGER	.0320
SUPERCHARGER DETAILS	0321
SUPPORT, carb. air cleaner to manifold	0302
SUPPORT, carb. idle speed-up control bracket.	0302
SUPPORT, clutch operating shaft support bracket	0206
SUN SHIELDS SUN VISOR. SUPERCHARGER SUPERCHARGER DETAILS SUPPORT, carb. air cleaner to manifold SUPPORT, carb. idle speed-up control bracket. SUPPORT, clutch operating shaft support bracket. SUPPORT, lower control arm to king pin SUPPORT, lower control arm to king pin	1620
SUPPORT, lower control arm to king pin	1204
SUPPORT, outlet pipe	.0403
SUPPORT, outlet pipe extension	.0403
SUPPORT, radiator core.	.0503
SUPPORT, rear vertical bumper	1807
SUPPORT, spark plug cables emission shield	.0603
SUPPORT, lower control and to king pinter set SUPPORT, outlet pipe extension. SUPPORT, radiator core	.0603
SUPPORT supercharger mtg bracket	
	0320
SUPPORT, trans. gearshift lever shaft	0320
SUPPORT, trans. gearshift lever shaft bracket	0320 , 0751B
SUPPORT, trans. gearshift lever shaft bracket	0320 ,0751B
SUPPORT, trans. gearshift lever shaft bracket	0320 , 0751B 0811 .0811
SUPPORT, trans. gearshift lever shaft bracket	0320 , 0751B 0811 .0811 .1304A
SUPPORT, trans. gearshift lever shaft bracket	0320 , 0751B 0811 .0811 .1304A 2151
SUPPORT, trans. gearshift lever shaft bracket	0320 , 0751B 0811 .0811 .1304A 2151 0632
SUPPORT, trans. gearshift lever shaft bracket	0320 , 0751B 0811 .0811 .1304A 2151 0632 .2101A
SUPPORT, trans. gearshift lever shaft bracket	0320 , 0751B 0811 0811 0631 0632 .2101A 2113B
SUPPORT, trans. gearshift lever shaft	0320 , 0751B 0811 0811 .1304A 2151 0632 .2101A .2113B .2120G
SUPPORT, trans. oil filler tube	, 0751B 0811 .1304A 2151 0632 .2101A .2113B .2120G .2102A
SUPPORT, trans. oil filler tube	, 0751B 0811 .1304A 2151 0632 .2101A .2113B .2120G .2102A
SUPPORT, trans. oil filler tube	, 0751B 0811 .0811 .1304A 2151 0632 .2101A .2113B .2120G .2102A .2102A
SUPPORT, trans. oil filler tube	, 0751B 0811 .0811 .1304A 2151 0632 .2101A .2113B .2120G .2102A .2102A
SUPPORT, trans. oil filler tube	, 0751B 0811 .0811 .1304A 2151 0632 .2101A .2113B .2120G .2102A .2102A
SUPPORT, trans. oil filler tube	, 0751B 0811 .0811 .1304A 2151 0632 .2101A .2113B .2120G .2102A .2102A
SUPPORT, trans. oil filler tube	, 0751B 0811 .0811 .1304A 2151 0632 .2101A .2113B .2120G .2102A .2102A
SUPPORT, trans. oil filler tube	, 0751B 0811 .0811 .1304A 2151 0632 .2101A .2113B .2120G .2102A .2102A
SUPPORT, trans. oil filler tube	, 0751B 0811 .0811 .1304A 2151 0632 .2101A .2113B .2120G .2102A .2102A
SUPPORT, trans. oil filler tube	, 0751B 0811 .0811 .1304A 2151 0632 .2101A .2113B .2120G .2102A .2102A
SUPPORT, trans. oil filler tube	, 0751B 0811 .0811 .1304A 2151 0632 .2101A .2113B .2120G .2102A .2102A
SUPPORT, trans. gelamite to versitate       .0751A         SUPPORT and BUSHING, trans. center.	, 0751B 0811 0811 0632 .2101A .2151 0632 .2101A .2113B .2120G .2102A .2102A .2120G .0615 .0615 .0615 .2112B 0606 0615 0853 .2130
SUPPORT, trans. gelamite to versitate       .0751A         SUPPORT and BUSHING, trans. center.	, 0751B 0811 0811 0632 .2101A .2151 0632 .2101A .2113B .2120G .2102A .2102A .2120G .0615 .0615 .0615 .2112B 0606 0615 0853 .2130
SUPPORT, trans. gelamite to versitate       .0751A         SUPPORT and BUSHING, trans. center.	, 0751B 0811 0811 0632 .2101A .2151 0632 .2101A .2113B .2120G .2102A .2102A .2120G .0615 .0615 .0615 .2112B 0606 0615 0853 .2130
bracket       .0751A         SUPPORT, trans. oil filler tube	, 0751B 0811 .0811 .1304A .2151 .0632 .2101A .210G .2102A .2102A .2102A .2102A .2102A .2102A .0615 .0602 .0615 .0615 .0853 .2112B .0606 0615 .0853 .2130 .2149A .2149B 0621
bracket       .0751A         SUPPORT, trans. oil filler tube	, 0751B 0811 .0811 .1304A .2151 .0632 .2101A .210G .2102A .2102A .2102A .2102A .2102A .2102A .0615 .0602 .0615 .0615 .0853 .2112B .0606 0615 .0853 .2130 .2149A .2149B 0621
bracket       .0751A         SUPPORT, trans. oil filler tube	, 0751B 0811 .0811 .1304A .2151 .0632 .2101A .210G .2102A .2102A .2102A .2102A .2102A .2102A .0615 .0602 .0615 .0615 .0853 .2112B .0606 0615 .0853 .2130 .2149A .2149B 0621
bracket       .0751A         SUPPORT, trans. oil filler tube       .0751A         SUPPORT and BUSHING, trans. center.	, 0751B 0811 .0811 .1304A .2151 0632 .2101A .2101A .2102A .2102A .2102A .2102A .2102A .2102A .0615 .0602 .0615 .0615 .0853 .2112B .0606 0615 .0853 .2130 .2149A .2149A .2149B 0621 0206 .0760B
bracket       .0751A         SUPPORT, trans. oil filler tube       .0751A         SUPPORT and BUSHING, trans. center.	, 0751B 0811 .0811 .1304A .2151 0632 .2101A .2101A .2102A .2102A .2102A .2102A .2102A .2102A .0615 .0602 .0615 .0615 .0853 .2112B .0606 0615 .0853 .2130 .2149A .2149A .2149B 0621 0206 .0760B
bracket       .0751A         SUPPORT, trans. oil filler tube       .0751A         SUPPORT and BUSHING, trans. center.	, 0751B 0811 .0811 .1304A .2151 0632 .2101A .2101A .2102A .2102A .2102A .2102A .2102A .2102A .0615 .0602 .0615 .0615 .0853 .2112B .0606 0615 .0853 .2130 .2149A .2149A .2149B 0621 0206 .0760B
bracket       .0751A         SUPPORT, trans. oil filler tube       .0751A         SUPPORT and BUSHING, trans. center.	, 0751B 0811 .0811 .1304A .2151 0632 .2101A .2101A .2102A .2102A .2102A .2102A .2102A .2102A .0615 .0602 .0615 .0615 .0853 .2112B .0606 0615 .0853 .2130 .2149A .2149A .2149B 0621 0206 .0760B
bracket       .0751A         SUPPORT, trans. oil filler tube	, 0751B 0811 .0811 .1304A .2151 0632 .2101A .2101A .2102A .2102A .2102A .2102A .2102A .2102A .0615 .0602 .0615 .0615 .0853 .2112B .0606 0615 .0853 .2130 .2149A .2149A .2149B 0621 0206 .0760B

TACHOMETER	
TANK, dehydrator and receiver	
TANK, gasoline	
TAPPÉŤ, engine valve	
TEE, brake pipe and hose 1107	
TEE, power brake vacuum hose to manifold1112	
THERMOSTAT, engine water	
THERMOSTAT, manifold heater valve	
THRUST BLOCK, rear axle shaft 1002	
THRUST PLATE, camshaft timing gear	
THRUST WASHER, crankshaft	

#### Group

#### T-Cont'd.

THRUST WASHER, differential pinion
THRUST WASHER, distributor shaft
THRUST WASHER, front, trans. reverse idler0704B
THRUST WASHER, rear, trans. reverse idler
THRUST WASHER, rear, trans. reverse tuler gear0704B THRUST WASHER, side bevel gear
THRUST WASHER, side bevel gear
THRUST WASHER, starter motor armature
commutator end
THRUST WASHER steer bellcrank 1209
THRUST WASHER trans countershaft
THRUST WASHER, trans. countershaft gear cluster
THDUCT WACHED trans front slutch culinder 0000
THRUST WASHER, trans. front clutch cylinder 0820
THRUST WASHER, trans. front clutch hub
THRUST WASHER, trans. input shaft
THRUST WASHER, trans. low speed gear
THRUST WASHER, trans. output shaft
THRUST WASHER, trans. planetary gear
THRUST WASHER, trans. output shaft
THRUST WASHER, trans. planetary shaft
and gear
THRUS'E WASHER w/s winor motor goar
TOP, hood
TOP, hood
TRACK, regulator idler arm 2120E
TRANSMISSION ASSY (3-speed) 0700A
TRANSMISSION ASSY. (3-speed)       0700A         TRANSMISSION ASSY. (4-speed)       0700B         TRANSMISSION ASSY. (4-speed)       0700B         TRANSMISSION ASSY. (Flight-o-matic)       0800         TRAY, ash receiver       2115A         TUBE, automatic choke heater       0302         TUBE, ait lowed encode       0115
TRANSMISSION ASST. (4-speed)
TPAV ash receiver $2115A$
TUDE automatic shale baston
TUDE, automatic choke neater
TUBE, oll level gage
TUBE, oil pan breather
TUBE, trans. compensator line
TUBE, trans. front brake band lubricating
TUBE, oil level gage       .0115         TUBE, oil pan breather       .0115         TUBE, trans. compensator line       .0834         TUBE, trans. front brake band lubricating       .0828         TUBE, trans. front servo oil jumper       .0827         TUBE, trans. leberging between the serve oil jumper       .0021
IUDE, trans. Iuprication line
TUBE, trans. main line
TUBE, trans. oil collector
TUBE, trans. oil filler       .0811         TUBE, trans. rear pump       .0824
TUBE, trans. rear pump
,

#### U

UNION, brake pipes.					1107
UNION, trans. oil cooler pipe			 	 	. 0841

#### v

VANITY, inst. board comp't 2113B
VALVE, air outlet
VALVE, climatizer—thermostatic
VALVE, compressor discharge
VALVE, compressor suction
VALVE, engine exhaust
VALVE, engine inlet 0103
VALVE, evaporator core expansion
VALVE, oil pressure relief
VALVE, power steer. control valve housing relief1308B
VALVE, steer. gear pump flow control
VALVE, s /c to carb. air inlet adapter vent
VALVE w /LEVER, No Rol
VALVE, w/s washer check
VALVE ASSY., manifold heater
VALVE PLATE KIT, compressor
VENTILATOR, door window
VENTURI, power steer. pump flow control
VERTICAL BUMPER, rear bumper 1807

#### W

WASHER, camshaft timing gear cover oil
WASHER, clutch operating shaft sleeve
anti-rattle
WASHER, distributor spark modifier calibrating
WASHER, front wheel bearing lock
WASHER, rear axle shaft bearing grease
WASHER, steer. post shaft bearing preload capsule 1304A
WASHER, trans. gear cluster bearing
rollers spacer 0703A, 0703B

#### Group

#### W-Cont'd.

WASHER, trans. main drive pinion bearing.0705BWASHER KIT, windshield2149CWASHER and RETAINER, rear axle shaft bearing.1002WATER PUMP w /FAN HUB0505WEATHERSEAL, front door window.2120DWEATHERSTRIP, back window.2125WEATHERSTRIP, deck lid opening.2130WEATHERSTRIP, door ventilator.2121WEATHERSTRIP, front door opening.2116CWEATHERSTRIP, r /q window.2124WEATHERSTRIP, r /q window drip moulding.2124
WEATHERSTRIP, r/q window drip moulding

#### W-Cont'd.


# WEIGHT, wheel balance1402WHEEL1402WHEEL, steering1310AWINDOW w /FRAME, door2120AWIRE, tube and clamp assy.0621WRENCH, wheel socket1812


#### Y

YOKE, universal joint slip	
YOKE ASSY., directional signal	

Group


## Plate 01-1

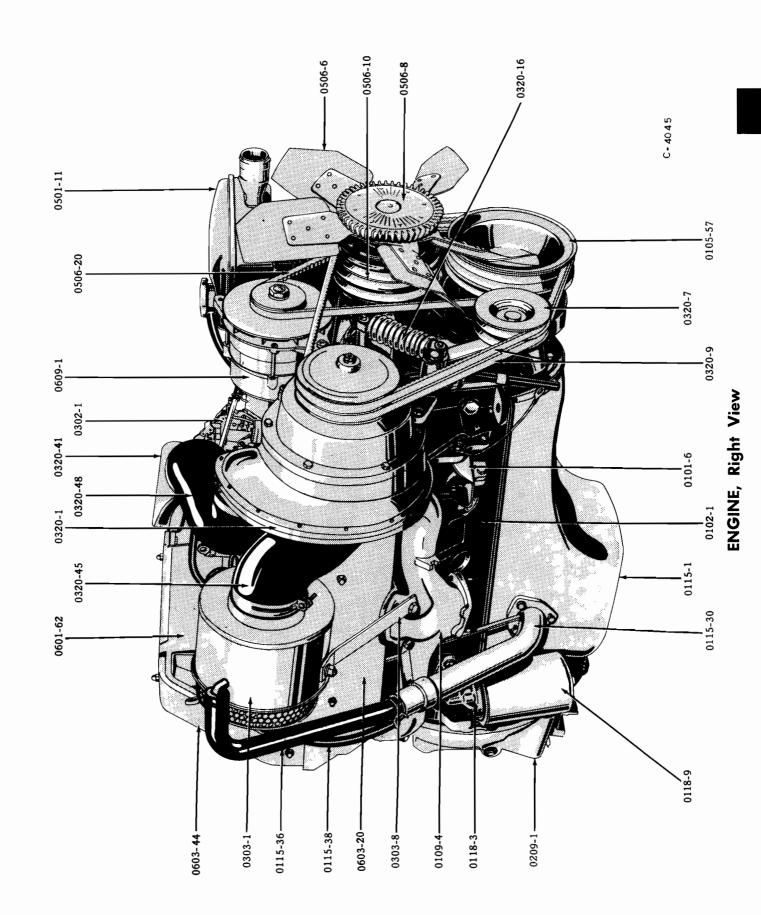

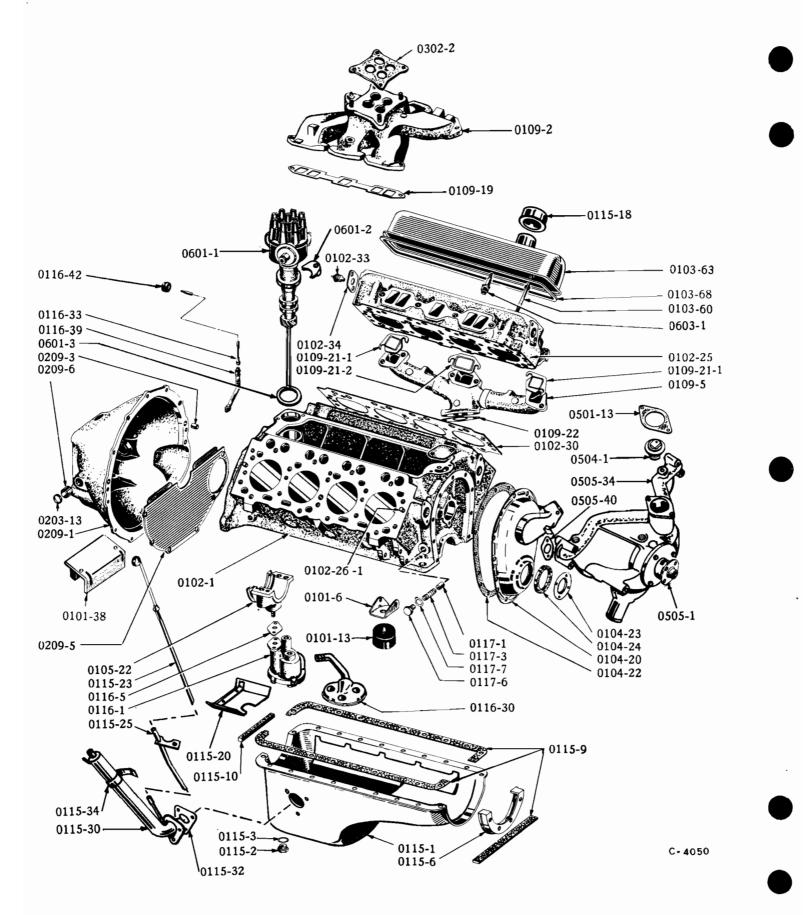


**ENGINE**, External Parts

## Plate 01-3

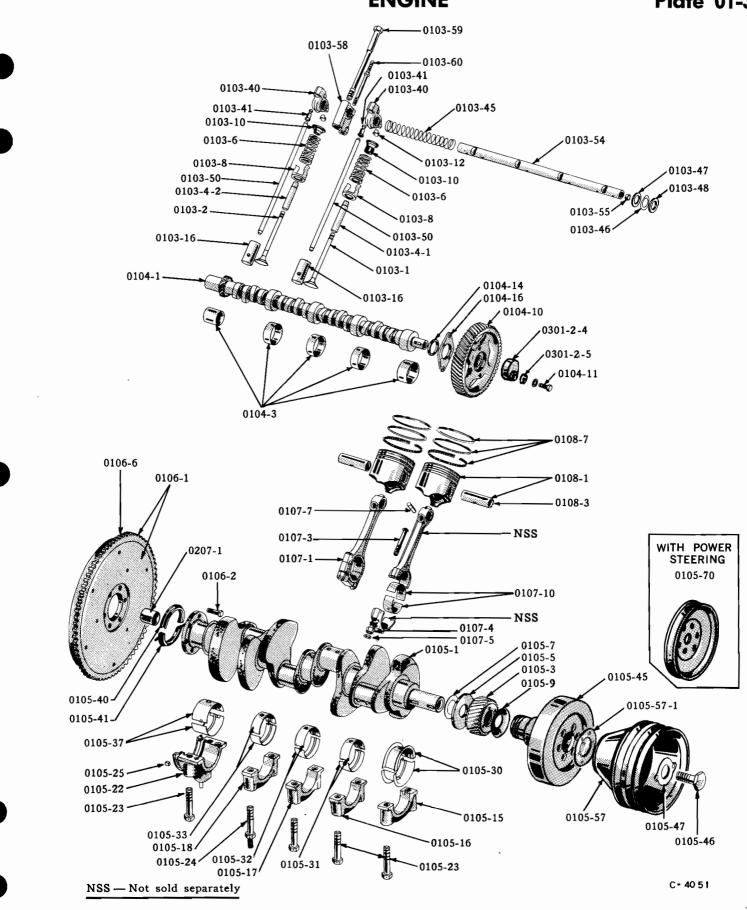


**ENGINE**, Internal Parts

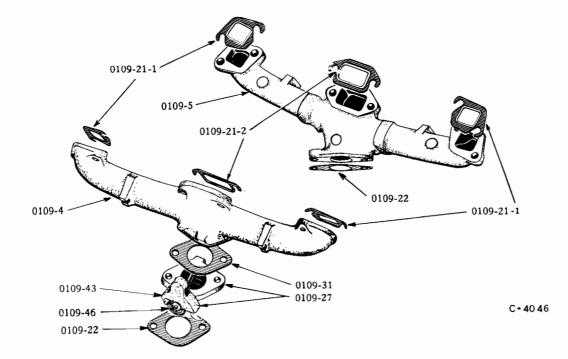

## **EXHAUST MANIFOLDS and HEATER VALVE**

PAGE NO. 4


Printed in U.S.A.

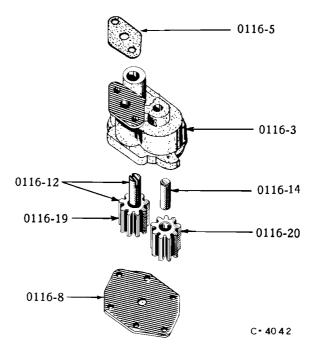

0100					
ILLUST. NUMBER	PART CHANGE	DESCRIPTION	MODELS	PER CAR	

ENICINE

#### 0100-ENGINE ASSEMBLY

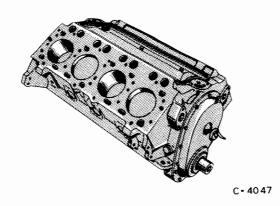


#### SHORT BLOCK: Consists of cylinder block, pistons, rings, connecting rods, crankshaft, camshaft, all bearings, timing gear and cover, oil pressure valve, oil pan filler block, valve lifter cover, fuel pump eccentric and flywheel or converter bolts. 1557834 1563288 1 1563289 1 GASKET SET, engine overhaul ...... R1 ..... 1558035 . 1 1558036 1 1563290 1 GASKET SET, engine overhaul R4 .... 1563291 1 0101-ENGINE MOUNTINGS (Plates 01-1, 2) **Front Mountings** BRACKET, front support (mtd. on block) ...... All 532404 2 BOLT, to cyl. block 3/8" - 24 x 1-1/8" All NUT, hex. 3/8" - 24 All G181365 6 G120369 6 G120382 6 BRACKET, right, front support...} mtd. on frame All All All All 1547206 1 1547207 1 BOLT, to frame 3/8" - 24 x 7/8" All NUT, lock 3/8" - 24 All G181361 4 4 G117212 WASHER, plain 13/32" ..... All ..... 41X562 4 INSULATOR, front support ...... All 2 0101-13 533296 NUT. to bracket 3/8" - 24 ...... All ..... 4 G120369 G120394 WASHER, plain 13/32" ..... All ..... 2 G120382 WASHER. lock 3/8" 4

0101-6

0101-9

		ENGINE	0102
ILLUST. NUMBER	PART CHANGE	DESCRIPTION	MODELS PER CAR

#### 0101—ENGINE MOUNTINGS—Cont'd. (Plates 01-1, 2)

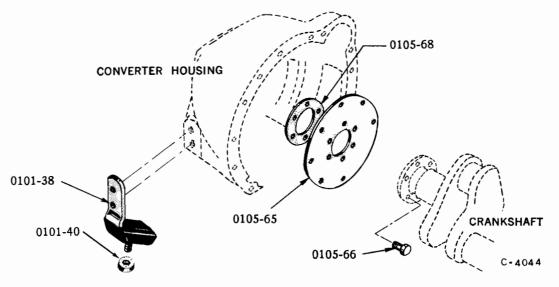

#### WITH AUTOMATIC DRIVE

#### **Rear Mountings**

0101-38	1553609 G179884 G103323 1548406 G120369 G115549	INSULATOR, rear support (w/3 and 4 speed trans.) SCREW, to clutch housing 1/2" - 13 x 1-3/8" WASHER, lock 1/2" WASHER, spacing NUT, to crossmember 3/8" - 24 WASHER, shakeproof 3/8"	All All All All		2 2 2 2
0101-38	1544970 1544971 G179859 G120383 G271506 41X377 G120383	INSULATOR, right, rear support} INSULATOR, left, rear support} SCREW, to converter housing 7/16" - 14 x 1-1/8" WASHER, lock 7/16" NUT, to frame 7/16 - 20 WASHER, plain 7/16" WASHER, lock 7/16"	All All All All All All		4 4 2 2 2
0101-40 <b>0102—CY</b>	527974 LINDER BLC	SPACER, round 3/8" thick (left side) OCK, HEAD and GASKET (Plates 01-1, 2)	All		1
		Cylinder Block			
	1557835	CYLINDER BLOCK ASSY. (fitted with pistons, pins & rings)	R1.	R2	1
	$\frac{1560486}{1563320}$	CYLINDER BLOCK ASSY. (fitted with pistons, pins, rings & rods).	R3		1
0102-1		CYLINDER BLOCK ASSY. (fitted with pistons, pins, rings & rods).	R3 R4 All All All All All All All All All		$     1 \\     1 \\     6 \\     2 \\     4 \\     1 \\     1 \\     1 \\     1 $

0102	
------	--

NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE CA
102—CY	LINDER BL	OCK, HEAD and GASKET—Cont'd. (Plates 01-1, 2)		
		Cylinder Block—Cont'd.		
	3132X100	HOSE, drain cock (service only)	. All	:
	1557707 G179816 G120214	COVER, oil filler hole	. All	
	535697	GASKET, oil filler hole cover	. All	
		Cylinder Head		
02-25 102-25 102-25 102-25 102-25 102-26-1	$\begin{array}{c} 1557571\\ 1557580\\ 1557580\\ 1557580\\ 1558771\\ G444728\\ 1554667\\ 527834\\ 527834\\ 527834\\ 527835\\ 527718\\ 532446\\ 1539067 \end{array}$	<ul> <li>HEAD, cylinder (10.25 to 1)</li> <li>HEAD, cylinder (9 to 1) (spec. orders)</li> <li>HEAD, cylinder (9 to 1)</li> <li>HEAD, cylinder (9.75 to 1)</li> <li>PLUG, oil line 1/8"</li> <li>DOWEL, pin .434 x 9/16"</li> <li>SCREW, to cyl. block 7/16" - 14 x 3-9/16"</li> <li>SCREW, to cyl. block 7/16" - 14 x 4-1/4"</li> <li>SCREW, to cyl. block 7/16" - 14 x 4-1/4"</li> <li>SCREW, to cyl. block 7/16" - 14 x 4-1/4"</li> <li>SCREW, thru rocker arm bracket 7/16" - 14 x 6-9/16"</li> <li>STUD, to cyl. block 7/16" - 14-20 x 4-15/16"</li> <li>WASHER, plain 7/16" (for 527718)</li> </ul>	.       R1         .       R2         .       R3, R4         .       All         .       All         .       R1         .       R1         .       R2, R3, R4         .       All         .       R2, R3, R4         .       All         .       R2, R3, R4         .       All         .       R2, R3, R4	. 1 . 1 . 1
02-30 02-30	$\frac{1545072}{1560454}$	GASKET, cyl. head		
	1558033 1558034 1562383	GASKET SET, valve grind (10.25 to 1)GASKET SET, valve grind (9 to 1)GASKET SET, valve grind (9.75 to 1)GASKET SET, valve grind (9.75 to 1)Consists of the following gaskets:2—Cylinder Head2—Rocker arm cover2—Inlet manifold4—Exh. manifold—end2—Exh. manifold—center2—Exh. pipe flange	. R1, R2	
	527304 G179816 G120214	COVER, right cyl. head rear end SCREW, to head 5/16" - 18 x 3/4"	. All	
	527240	GASKET, right cyl. head rear end cover	. All	
14-1		RADIMETOR or HEAT INDICATOR (dash unit) see group 1714		
	1545220	GAGE, water temperature (engine unit)	. All	
	1543523 G180079 G120393 G120214	ADAPTER, water temperature gage SCREW, to cyl. head 5/16" - 18 x 1" WASHER, plain 11/32" WASHER, lock 5/16"	. All All All	
	527240	GASKET, water temperature gage adapter	. All	

ILLUST. NUMBER	DESCRIPTION	MODELS

#### 0103-VALVES AND VALVE MECHANISM (Plates 01-2, 3)



#### Valves, Springs, Guides, Tappets and Cover 8 0103-1 683876 VALVE, exhaust R1, R2 ..... 0103-2 683875 8 VALVE, inlet R3, R4 .... 8 0103-1 1558488 0103-2 1558489 8 0103-4-1 527088 GUIDE, inlet valve ..... All 8 5302228 0103-4-2 SPRING, valve R1, R2 16 0103-6 188645SPRING, valve 1560822 R3, R4 16 0103-6 DAMPER, valve spring 16168535All0103-8 RETAINER, valve spring ..... 0103-10 1544591 All160103-12 527180 SEAT, valve spring (order by pairs) ..... All 32DEFLECTOR, valve stem oil ..... 160103-14 536264 A 11 TAPPET or LIFTER—Std. 16 0103-16 536026 All TAPPET or LIFTER—.001 OS. All 16 0103-16 536224TAPPET or LIFTER-.005 OS. 0103-16 536636All16 COVER, valve lifter R1. R2 1 0103-26 1557675 COVER, valve lifter ..... 1 0103-26 1561820 G186270 SCREW, to cyl. block 5/16" - 18 x 3-1/2" All 3 156768GASKET, screw All3 GASKET, valve lifter cover ..... A 11 1 0103-26-3 1561169Rocker Arms, Shafts and Push Rods ARM w/SCREW, valve rocker All 160103-40 1554013 SCREW, adjusting 3/8" - 24 x 3/4" ..... 1550360 All 160103-41 SPRING, valve rocker arm 6 0103-45 527199 All WASHER, spring All 4 0103-46 527198 WASHER, inner, plain 53/64" I.D. 4 0103 - 47527197 All 0103-48 WASHER, outer, special ..... All 4 531068 COTTER 3/32" x 1-1/4" .. .. .. . . . . . . ......... All 4 - - - -1550303 PUSH ROD, valve rocker arm 16 0103-50 A11 $\mathbf{2}$ SHAFT w/PLUGS, valve rocker arm ..... 0103-54 1557612All PLUG, cup 1/2" ..... 4 . .. . ... All 0103-55527184BRACKET, valve rocker arm shaft ..... 8 0103-58 527696 All SCREW, thru cyl. head 7/16" - 14 x 6-9/16" ..... 8 0103-59 527718All STUD, bracket and rocker arm cover 5/16" 24 x 4-1/2" ..... 4 All 0103-60 1544157G193211 SCREW, to cyl. head 5/16" - 18 x 2-7/8" ..... All4 8 G120214 WASHER, lock 5/16" ..... All . . . . . . . . . . . . . . . . R1, R2 . ... ..... $\mathbf{2}$ COVER, valve rocker arm ..... 0103-63 1557304 $\mathbf{2}$ R3. R4 0103-63 1560464 COVER, valve rocker arm ..... 4 0103-60 . . . . STUD, thru rocker arm shaft brkt. (see brkt. stud) ..... All. . . . . . . . . . . . . . . 4 NUT, crown 5/16" - 24 ..... All 1558330 4 WASHER, plain 11/32" All . . . . . . . . . . 41X2044 530858 GROMMET, cover (rubber) Áll

0103-68

1561165

GASKET, rocker arm cover .....

A11

2

0103

CAR

0104	
------	--

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PEI
104—CA	MSHAFT A	ND BEARINGS, GEAR AND COVER (Plates 01-2, 3)		
		Camshaft and Bearings		
104-1 104-1 104-1	$\begin{array}{c} 1557663 \\ 1558819 \\ 1560816 \end{array}$	CAMSHAFT CAMSHAFT—276° duration (standard) CAMSHAFT—288° duration (spec. orders)	R3, R4	1
104-3	529459	BEARING SET, camshaft—consists of:         1529460 Bearing, front       1529462 No. 3         1529461 Bearing, No. 2       1529463 No. 4         1530022 Bearing, rear       1529463 No. 4	All	
		Timing Gear and Cover		
104.10	1685777	GEÅR, camshaft timing		
104-11	G124549 G181639 G120382	KEY, woodruff 3/16" x 3/4" SCREW, to camshaft 3/8" - 24 x 1-1/4" WASHER, lock 3/8"	All	
)104-14	195385	SPACER, camshaft timing gear	All	
)104-16	527085 527857 40X125	THRUST PLATE, timing gear SCREW, to cyl. block 5/16" - 18 x 11/16" WASHER, lock 5/16"	All	.  :
)104-20	1554244 G192414 G179826 G120214	COVER, timing gear SCREW, to cyl. block 5/16" - 18 x 7/8" SCREW, to cyl. block 5/16" - 18 x 2" WASHER, lock 5/16"	All All All	. 1
0104-22	1561166	GASKET, timing gear cover	All	
)104-23	534542 2047X1	RING, Timing gear cover oil collector SCREW, to cover No. 10 x 5/16"		
0104-24	167156	WASHER, timing gear cover oil	All	
	1557145 2047X2	POINTER, timing gear cover	All	
0105—CR	ANKSHAFT	, BEARINGS, CAPS, GEAR AND DAMPER (Plate 01-3)		
		Crankshaft		
)105-1 )105-1	$\frac{1556929}{1558926}$	CRANKSHAFT (incls. pilot bearing)		
)105-3	527084 G124553	GEAR, crankshaft timing		
0105-5	527086	THRUST WASHER, crankshaft	All	
)105-7 )105-7 )105-7	$186693 \\ 186694 \\ 186695$	SHIM, crankshaft thrust washer—.003 SHIM, crankshaft thrust washer—.005 SHIM, crankshaft thrust washer—.009	All	
0105-9	189316	SLINGER, crankshaft oil		1
		BEARING, clutch pilot (see group 0207)		
		Bearing Caps and Bearings		
)105-15	527066	CAP, front, crankshaft bearing-No. 1	All	
)105-16, 17, 18 )105-22 )105-23	527067 1546977 537897 1557273 167772	<ul> <li>CAP, center, crankshaft bearing—No. 2, 3, 4</li> <li>CAP, rear, crankshaft bearing—No. 5 (incls. studs)</li> <li>SCREW, to cyl. block 1/2" - 13 x 2·3/4" (No. 1, 2, 3 &amp; 5 caps)</li> <li>STUD, No. 4 cap to cyl. block 5/16" - 18 x 1/2"-13 x 3·13/16"</li> <li>WASHER, plain 33/64"</li> </ul>	All All All	
± TT	required			

0107-1        CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R3, R4         0107-1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R3, R4         0107-3       527089       BOLT, rod cap 3/8" - 24 x 2-13/32"       R1, R2         0107-4       197402       NUT, hex. 3/8" - 24       x 2-13/32"         0107-5       G107828       NUT, pal 3/8"       All         0107-7       529348       SCREW, tapered, piston pin lock 3/8" - 24 x 1-27/32"       All	ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE C/
Bearing Caps and BearingsCon'd.         All $105023$ OIL SEAL, right, rear bearing cap—cork}         incl. in oil seal kits         All $1550338$ OIL SEAL, right, rear bearing cap—cork}         incl. in oil seal kits         All $155030$ BEARING SET, crankshaft—001 US.         All         All $11232$ BEARING SET, crankshaft—010 US.         All $11232$ BEARING SET, crankshaft—020 US.         All $11559306$ OIL SEAL, upper, o's rear bearing}         All $10540$ BEARING SET, crankshaft—020 US.         All $10540$ BEARING SET, crankshaft—020 US.         All $10547$ OIL SEAL, upper, o's rear bearing}         Incl. in kit $10541$ 156074         OIL SEAL, upper, o's rear bearing}         Incl. in kit $105457$ 156482         FLVHEEL, whithin damper         All $10547$ 1566482         PULLEY, multiple groove $7.1/8^{or}$ dia—standard         All $105458$ 1565424         PULLEY, multiple groove $8^{or}$ dia—standard         All $105458$ 1565424         PULLEY, multiple groove $8^{or}$ dia—standard         All $1$					
2010-25       1559338       OIL SEAL, left, rear bearing cap—cork}       incl. in oil seal kits       All         1559339       OIL SEAL, left, rear bearing cap—cork}       incl. in oil seal kits       All         1555405       BEARING SET, crankshaft—001 US.       All       All         113237       1555406       BEARING SET, crankshaft—010 US.       All         11555406       BEARING SET, crankshaft—020 US.       All         11555407       BEARING SET, crankshaft—020 US.       All         11555408       BEARING SET, crankshaft—020 US.       All         11650366       OIL SEAL, upper, c/s rear bearing	0105—CF	ANKSHAFT			
(1555404 1555405 1556405 1556407 1556407 1556407 1556408 11 10 10 10 10 10 10 10 10 10 10 10 10	0105-25		OIL SEAL, right, rear bearing cap—cork)	All	
11.02.37       [1555408       BEARING SET, crankshaft—020 US.       All         11.055966       OIL SEAL KIT, crankshaft-mear bearing       All         0105.40       550311       OIL SEAL KIT, crankshaft rear bearing       All         0105.41       1550724       OIL SEAL, lower, c/s rear bearing       All         0105.42       OIL SEAL, lower, c/s rear bearing       All         0105.43       1550724       OIL SEAL, voorne, c/s rear bearing       All         0105.44       1550724       OIL SEAL, woorne, c/s rear bearing       All         0105.45       1554247       FLWHEEL, vibration damper       All         0105.46       1546401       SCEW, to staft 11/10" - 16 x 2.7/16"       All         0105.57       1556482       PULLEY, multiple groove 7.1/8" dia.—istandard       All         0105.57       1556482       PULLEY, multiple groove 7.1/8" dia.—istandard       All         0105.56       1555896       SPACER (Not used power steer.)       All       All         0105.66       1556981       PLATE, crankshaft to converter drive       All       All         0105.66       1539081       PLATE, crankshaft 3/8" - 24 x 15/16"       All         0105.66       527801       REINFORCEMENT, c/s to converter drive plate       All      <	0105-30,	$1555404 \\ 1555405$	BEARING SET, crankshaft—Std. BEARING SET, crankshaft—.001 US.	All	
0105-40       530311       OIL SEAL, upper, c/s rear bearing	81,32,37	1555408	BEARING SET, crankshaft020 US.	All	
Vibration Damper and Fan Pulley         All           0105-45         1554247         FLYWHEEL, vibration damper         All           0105-46         1546401         SCREW, to shaft 11/16" - 16 x 2.7/16"         All           0105-57         1556482         PULLEY, multiple groove 7.1/8" dia.—standard         All           0105-57         1556482         PULLEY, multiple groove 7.1/8" dia.—standard         All           0105-57         15560808         PULLEY, multiple groove 7.1/8" dia.—standard         All           0105-58         1555896         SPACER (Not used power steer.)         All           0105-56         1508081         PLATE, crankshaft to converter drive         All           0105-66         526851         BOLT, to erankshaft 3/8" - 24 x 15/16"         All           0105-68         527801         REINFORCEMENT, c/s to converter drive plate         All           0106-61         1539746         FLYWHEEL AND STARTER GEAR (Plate 01-3)         All           0106-11         1539746         FLYWHEEL w/GEAR (not used AD.)         All           0106-1         1539745         GEAR, starter ring (not used AD.)         All           0106-61         1539745         GEAR, starter ring (not used AD.)         All           0106-61         1539745         GEAR,		1559366			1
0105-45       1554247       FLYWHEEL, vibration damper       All         G124549       KEY, woodruff 3/16" x 3/4"       All         0105-57       1550482       PULLEY, multiple groove 7.1/8" dia.—standard       All         0105-57       1550482       PULLEY, multiple groove 8" dia.—ipic output (spec. orders)       R3, R4         0105-57       1550482       PULLEY, multiple groove 8" dia.—ipic output (spec. orders)       R3, R4         0105-58       1555896       SPACER (Not used power steer.)       All         G179821       SCREW, to damper 5/16" - 18 x 1-3/8"       All         G120214       WASHER, lock 5/16"       All         0105-65       1539081       PLATE, crankshaft to converter drive       All         0105-64       528551       BOLT, to crankshaft 3/8" - 24 x 15/16"       All         0105-65       527801       REINFORCEMENT, c/s to converter drive plate       All         0105-68       527801       REINFORCEMENT, c/s to converter drive plate       All         0105-71       1557898       PULLEY, drive       All         0106-6       1589746       FLYWHEEL w/GEAR (not used AD.)       All         0106-1       1589745       GEAR, starter ring (not used AD.)       All         0106-6       1589745       GEAR,			OIL SEAL, upper, c/s rear bearing} incl. in kit	All	
G124549       KEY, woodruff 3/16" x 3/4"       All         0105-46       1546041       SCREW, to shaft 11/16" · 16 x 2.7/16"       All         0105-57       1550482       PULLEY, multiple groove 7.1/8" dia.—standard       All         0105-57       1556482       PULLEY, multiple groove 7.1/8" dia.—standard       All         0105-57       1556886       SPACER (Not used power steer.)       All         0105-58       1558866       SPACER (Not used power steer.)       All         G120214       WASHER, lock 5/16"       All         Matomatic Transmission Drive Plate (Illust. Page 7)       All         0105-65       1539081       PLATE, crankshaft so converter drive       All         0105-66       528851       BOLT, to crankshaft 3/8" · 24 x 15/16"       All         0105-68       527801       REINFORCEMENT, c/s to converter drive plate       All         0105-69       PULLEY, drive       All       All         0105-70       1557898       PULLEY, drive       All         0106-61       1539746       FLYWHEEL MO STARTER GEAR (Plote 01-3)       All         0106-1       BOLT, to crankshaft 3/8" · 24 x 1.13/64"       All       All         0106-61       1539745       GEAR, starter ring (not used AD.)       All       All			Vibration Damper and Fan Pulley		
0105-47       515202       LOCK PLATE       All         0105-57       1556482       PULLEY, multiple groove 7.1/8" dia.—standard       All         0105-57       15560808       PULLEY, multiple groove 8" dia.—high output (spec. orders)       R3, R4         0105-58       1555896       SPACER (Not used power steer.)       All         G179821       SCREW, to damper 5/16" · 18 x 1.3/8"       All         G120214       WASHER, lock 5/16"       All         Automatic Transmission Drive Plate (Illust Page 7)       All         0105-65       1539081       PLATE, crankshaft to converter drive       All         G117212       NUT, lock 3/8" · 24       All       All         0105-66       526851       BOLT, to erankshaft 3/8" · 24 x 15/16"       All         0105-67       1557898       PULLEY, drive       All         0105-70       1557898       PULLEY, drive       All         0106-1       1539746       FLYWHEEL w(GEAR (not used AD.)       All         G120389       WASHER, lock 3/8" · 24 x 1.13/64"       All         G120389       WASHER, lock 3/8" · 24 x 1.45/4"       All         0106-6       1539745       GEAR, starter ring (not used AD.)       All         0107-CONNECTING RODS AND BEARINGS (Plate 01-3)       Al		G124549	KEY, woodruff 3/16" x 3/4"	All	
10105-57       1560808       PULLEY, multiple groove 8" dia—high output (spec. orders)       R3, R4         0105-58       1555896       SPACER (Not used power steer.)       All         G179821       SCREW, to damper 5/16" -18 × 1.3/8"       All         G179821       SCREW, to damper 5/16" -18 × 1.3/8"       All         G120214       WASHER, lock 5/16"       All         Automatic Transmission Drive Plate (Illust. Page 7)       All         0105-65       1539081       PLATE, crankshaft 3/8" -24 × 15/16"       All         0105-65       526851       BOLT, to crankshaft 3/8" -24 × 15/16"       All         0105-68       527801       REINFORCEMENT, c/s to converter drive plate       All         0106-70       1557898       PULLEY, drive       All         0106-71       1539746       FLYWHEEL AND STARTER GEAR (Plate 01-3)       All         0106-1       1539746       FLYWHEEL w/GEAR (not used AD.)       All         0106-2       194542       BOLT, to crankshaft 3/8" - 24 × 1.13/64"       All         0106-6       1539745       GEAR, starter ring (not used AD.)       All         0106-6       1539745       GEAR, starter ring (not used AD.)       All         0107-CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R1, R2 <t< td=""><td></td><td></td><td>LOCK PLATE</td><td> All</td><td></td></t<>			LOCK PLATE	All	
G120214       WASHER, lock 5/16"       All         Automatic Transmission Drive Plate (Illust. Page 7)       All         0105-65       1539081       PLATE, crankshaft to converter drive       All         0105-66       526851       BOLT, to crankshaft 3/8" - 24 x 15/16"       All         0105-68       527801       REINFORCEMENT, c/s to converter drive plate       All         0105-68       527801       REINFORCEMENT, c/s to converter drive plate       All         0105-70       1557898       PULLEY, drive       All         0106-6-FLYWHEEL AND STARTER GEAR (Plate 01-3)       All       All         0106-1       1539746       FLYWHEEL w/GEAR (not used AD.)       All         0106-2       194542       BOLT, to crankshaft 3/8" - 24 x 1-13/64"       All         0106-6       1539745       GEAR, starter ring (not used AD.)       All         0106-6       1539745       GEAR, starter ring (not used AD.)       All         0107-1       527114       CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R1, R2         0107-1       527114       CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R3, R4         0107-1       527114       CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R3, R4         0107-3       527089       BOLT, rod cap	0105-57	$\frac{1560808}{1555896}$	PULLEY, multiple groove 8" dia.—high output (spec. orders) . SPACER (Not used power steer.)	R3, R4	:
$0105-65$ 1539081       PLATE, crankshaft to converter drive       All $0105-66$ 526851       BOLT, to crankshaft $3/8'' - 24 \times 15/16''$ All $0105-66$ 526851       BOLT, to crankshaft $3/8'' - 24 \times 15/16''$ All $0105-68$ 527801       REINFORCEMENT, c/s to converter drive plate       All $0105-68$ 527801       REINFORCEMENT, c/s to converter drive plate       All $0105-70$ 1557898       PULLEY, drive       All $0106-FlYWHEEL AND STARTER GEAR (Plate 01-3)$ All       All $0106-1$ 1539746       FLYWHEEL w/GEAR (not used AD.)       All $0106-2$ 194542       BOLT, to crankshaft $3/8'' - 24 \times 1.13/64''$ All $0106-3$ FLYWHEEL w/GEAR, lock $3/8''$ All       All $0106-6$ 1539745       GEAR, starter ring (not used AD.)       All $0107-CONNECTING RODS AND BEARINGS (Plate 01-3)$ All       All $0107-1$ 52714       CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R1, R2 $0107-1$ 527114       CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R1, R2 $0107-1$ 527115       CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R3, R4					
0105-66       526851 G117212       BOLT, to crankshaft 3/8" - 24 x 15/16"       All         0105-68       527801       REINFORCEMENT, c/s to converter drive plate       All         0105-68       527801       REINFORCEMENT, c/s to converter drive plate       All         0105-68       527801       REINFORCEMENT, c/s to converter drive plate       All         0105-69       90000       1557898       PULLEY, drive       All         0105-70       1557898       PULLEY, drive       All         0106-FLYWHEEL AND STARTER GEAR (Plote 01-3)       All       All         0106-1       1539746       FLYWHEEL w/GEAR (not used AD.)       All         G120380       NUT, hex. 3/8" - 24       All       All         G120382       WASHER, lock 3/8"       All       All         0106-6       1539745       GEAR, starter ring (not used AD.)       All          HOUSING, clutch and flywheel (see group 0209)       All           HOUSING, clutch and flywheel (see group 0209)       R1, R2          CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R1, R2          HOUSING, clutch and flywheel (see group 0209)       R3, R4          CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R1,			Automatic Transmission Drive Plate (Illust. Page 7)		
Power Steering Drive Pulley         All           D105-70         1557898         PULLEY, drive         All           D106-FLYWHEEL AND STARTER GEAR (Plate 01-3)         All         All           D106-1         1539746         FLYWHEEL w/GEAR (not used AD.)         All           D106-2         194542         BOLT, to crankshaft 3/8" - 24 x 1.13/64"         All           G120369         NUT, hex. 3/8" - 24         All         All           G120382         WASHER, lock 3/8"         All         All           O106-6         1539745         GEAR, starter ring (not used AD.)         All            HOUSING, clutch and flywheel (see group 0209)         All            HOUSING, clutch and flywheel (see group 0209)         R1, R2           0107-1         527114         CONNECTING ROD, less bearing (No. 1, 3, 5, 7)         R3, R4           0107-1         527115         CONNECTING ROD, less bearing (No. 1, 3, 5, 7)         R3, R4           0107-1          CONNECTING ROD, less bearing (No. 1, 3, 5, 7)         R3, R4           0107-1          CONNECTING ROD, less bearing (No. 1, 3, 5, 7)         R3, R4           0107-3         527089         BOLT, rod cap 3/8" · 24 x 2.13/32"         R1, R2           0107-4		526851	BOLT, to crankshaft 3/8" - 24 x 15/16"	All	
D105-70       1557898       PULLEY, drive       All         D106-FLYWHEEL AND STARTER GEAR (Plate 01-3)       All       All         D106-1       1539746       FLYWHEEL w/GEAR (not used AD.)       All         D106-2       194542       BOLT, to crankshaft 3/8" - 24 x 1.13/64"       All         G120389       NUT, hex. 3/8" - 24       All       All         G120382       WASHER, lock 3/8"       All       All         D106-6       1539745       GEAR, starter ring (not used AD.)       All          HOUSING, clutch and flywheel (see group 0209)       All          HOUSING, clutch and flywheel (see group 0209)       R1, R2         D107-1       527114       CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R1, R2         D107.1       527115       CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R3, R4         D107.1        CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R3, R4         D107.1        CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R3, R4         D107.1        CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R3, R4         D107.1        CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R3, R4         D107.3       527089       BOLT,	0105-68	527801	REINFORCEMENT, c/s to converter drive plate	All	
D106-FLYWHEEL AND STARTER GEAR (Plate 01-3)       All         D106-1       1539746       FLYWHEEL w/GEAR (not used AD.)       All         D106-2       194542       BOLT, to crankshaft 3/8" - 24 x 1.13/64"       All         G120369       NUT, hex. 3/8" - 24       All       All         G120382       WASHER, lock 3/8"       All       All         O106-6       1539745       GEAR, starter ring (not used AD.)       All          HOUSING, clutch and flywheel (see group 0209)       All          HOUSING, clutch and flywheel (see group 0209)       R1, R2         D107-1       527114       CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R1, R2         D107-1       527114       CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R1, R2         D107-1        CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R3, R4         D107-1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R3, R4         D107-1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R3, R4         D107-1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R3, R4         D107-1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R3, R4         D107-3       527089			Power Steering Drive Pulley		
D106-1       1539746       FLYWHEEL w/GEAR (not used AD.)       All         D106-2       194542       BOLT, to crankshaft 3/8" - 24 x 1.13/64"       All         G120369       NUT, hex. 3/8" - 24       All         G120382       WASHER, lock 3/8"       All         D106-6       1539745       GEAR, starter ring (not used AD.)       All          HOUSING, clutch and flywheel (see group 0209)       All          HOUSING, clutch and flywheel (see group 0209)       All         0107-       527114       CONNECTING RODS AND BEARINGS (Plate 01-3)         D107.1       527115       CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R1, R2         D107.1       527115       CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R3, R4         D107.1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R3, R4         D107.1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R3, R4         D107.1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R3, R4         D107.1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R3, R4         D107.1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R3, R4         D107.3       1560955       BOLT, rod ca	0105-70	1557898	PULLEY, drive	All	
D106.2       194542       BOLT, to crankshaft 3/8" - 24 x 1-13/64"       All         G120369       NUT, hex. 3/8" - 24       All         G120382       WASHER, lock 3/8"       All         D106-6       1539745       GEAR, starter ring (not used AD.)       All          HOUSING, clutch and flywheel (see group 0209)       All          HOUSING, clutch and flywheel (see group 0209)       R1, R2         D107-CONNECTING RODS AND BEARINGS (Plate 01-3)       R1, R2         D107.1       527114       CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R1, R2         D107.1       527115       CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R3, R4         D107.1        CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R3, R4         D107.1        CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R3, R4         D107.1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R3, R4         D107.1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R3, R4         D107.3       1560955       BOLT, rod cap 3/8" - 24 x 2-13/32"       R1, R2         D107.4       197402       NUT, hex. 3/8" - 24 x 2-13/32"       All         D107.5       G107828       NUT, pal 3/8"       All </td <td>0106—FL</td> <td>YWHEEL AI</td> <td>ID STARTER GEAR (Plate 01-3)</td> <td></td> <td></td>	0106—FL	YWHEEL AI	ID STARTER GEAR (Plate 01-3)		
G120382       WASHER, lock 3/8"       All         0106-6       1539745       GEAR, starter ring (not used AD.)       All          HOUSING, clutch and flywheel (see group 0209)       All         0107-CONNECTING RODS AND BEARINGS (Plate 01-3)       R1, R2         0107.1       527114       CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R1, R2         0107.1       527115       CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R1, R2         0107.1        CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R3, R4         0107.1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R1, R2         0107.1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R1, R2         0107.1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R1, R2         0107.1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R3, R4         0107.3       1560955       BOLT, rod cap 3/8" - 24 x 2-13/32"       R3, R4         0107.4       197402       NUT, hex. 3/8" - 24       All         0107.5       G107828       NUT, pal 3/8"       All         0107.7       529348       SCREW, tapered, piston pin lock 3/8" - 24 x 1-27/32"       All         0107.7       529348		194542	BOLT, to crankshaft 3/8" - 24 x 1-13/64"	All	
HOUSING, clutch and flywheel (see group 0209)DI07-CONNECTING RODS AND BEARINGS (Plate 01-3)0107-1 $527114$ CONNECTING ROD, less bearing (No. 1, 3, 5, 7)R1, R20107-1 $527115$ CONNECTING ROD, less bearing (No. 2, 4, 6, 8)R1, R20107-1CONNECTING ROD, less bearing (No. 1, 3, 5, 7)R3, R40107-1CONNECTING ROD, less bearing (No. 2, 4, 6, 8)R3, R40107-1CONNECTING ROD, less bearing (No. 2, 4, 6, 8)R3, R40107-3527089BOLT, rod cap $3/8" - 24 \times 2\cdot13/32"$ R1, R20107-31560955BOLT, rod cap $3/8" - 24 \times 2\cdot13/32"$ R3, R40107-4197402NUT, hex. $3/8" - 24$ All0107-5G107828NUT, pal $3/8"$ All0107-7529348SCREW, tapered, piston pin lock $3/8" - 24 \times 1\cdot27/32"$ All			WASHER, lock 3/8"	All	·
D107-CONNECTING RODS AND BEARINGS (Plate 01-3)         D107-1       527114         CONNECTING ROD, less bearing (No. 1, 3, 5, 7)         D107-1       527115         CONNECTING ROD, less bearing (No. 2, 4, 6, 8)         D107-1       CONNECTING ROD, less bearing (No. 1, 3, 5, 7)         D107-1       CONNECTING ROD, less bearing (No. 1, 3, 5, 7)         D107-1       CONNECTING ROD, less bearing (No. 1, 3, 5, 7)         D107-1       CONNECTING ROD, less bearing (No. 2, 4, 6, 8)         D107-1       CONNECTING ROD, less bearing (No. 2, 4, 6, 8)         D107-3       527089         BOLT, rod cap 3/8" - 24 x 2-13/32"         D107-3       1560955         BOLT, rod cap 3/8" - 24 x 2-13/32"         NUT, hex. 3/8" - 24         D107-5       G107828         NUT, pal 3/8"         D107-7       529348         SCREW, tapered, piston pin lock 3/8" - 24 x 1-27/32"         All	0106-6	1539745			·
0107-1       527114       CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R1, R2         0107-1       527115       CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R1, R2         0107-1        CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R3, R4         0107-1        CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R3, R4         0107-1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R3, R4         0107-3       527089       BOLT, rod cap 3/8" - 24 x 2-13/32"       R1, R2         0107-3       1560955       BOLT, rod cap 3/8" - 24 x 2-13/32"       R3, R4         0107-4       197402       NUT, hex. 3/8" - 24       All         0107-5       G107828       NUT, pal 3/8"       All         0107-7       529348       SCREW, tapered, piston pin lock 3/8" - 24 x 1-27/32"       All         G120369       NUT, hex. 3/8" - 24       All       All			HOUSING, clutch and flywheel (see group 0209)		
0107-1       527115       CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R1, R2         0107-1        CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R3, R4         0107-1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R3, R4         0107-1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R3, R4         0107-3       527089       BOLT, rod cap 3/8" - 24 x 2-13/32"       R1, R2         0107-3       1560955       BOLT, rod cap 3/8" - 24 x 2-13/32"       R3, R4         0107-4       197402       NUT, hex. 3/8" - 24       All         0107-5       G107828       NUT, pal 3/8"       All         0107-7       529348       SCREW, tapered, piston pin lock 3/8" - 24 x 1-27/32"       All         0107.7       529348       NUT, hex. 3/8" - 24       All					
107-1        CONNECTING ROD, less bearing (No. 1, 3, 5, 7)       R3, R4         107-1        CONNECTING ROD, less bearing (No. 2, 4, 6, 8)       R3, R4         107-3       527089       BOLT, rod cap 3/8" - 24 x 2-13/32"       R1, R2         107-3       1560955       BOLT, rod cap 3/8" - 24 x 2-13/32"       R3, R4         107-4       197402       NUT, hex. 3/8" - 24       All         107-5       G107828       NUT, pal 3/8"       All         0107-7       529348       SCREW, tapered, piston pin lock 3/8" - 24 x 1-27/32"       All         G120369       NUT, hex. 3/8" - 24       All       All					
0107-3       527089       BOLT, rod cap 3/8" - 24 x 2-13/32"       R1, R2         0107-3       1560955       BOLT, rod cap 3/8" - 24 x 2-13/32"       R3, R4         0107-4       197402       NUT, hex. 3/8" - 24       All         0107-5       G107828       NUT, pal 3/8"       All         0107-7       529348       SCREW, tapered, piston pin lock 3/8" - 24 x 1-27/32"       All         G120369       NUT, hex. 3/8" - 24       All			CONNECTING ROD, less bearing (No. 1, 3, 5, 7)	R3, R4	
107.3       1560955       BOLT, rod cap 3/8" - 24 x 2-13/32"       R3, R4         107.4       197402       NUT, hex. 3/8" - 24       All         107.5       G107828       NUT, pal 3/8"       All         107.7       529348       SCREW, tapered, piston pin lock 3/8" - 24 x 1-27/32"       All         G120369       NUT, hex. 3/8" - 24       All					
107.4         197402         NUT, hex. 3/8" - 24         All           0107.5         G107828         NUT, pal 3/8"         All           0107.7         529348         SCREW, tapered, piston pin lock 3/8" - 24 x 1-27/32"         All           G120369         NUT, hex. 3/8" - 24         All					
0107-5         G107828         NUT, pal 3/8"         All           0107-7         529348         SCREW, tapered, piston pin lock 3/8" - 24 x 1-27/32"         All           G120369         NUT, hex. 3/8" - 24         All					
0107-7         529348         SCREW, tapered, piston pin lock 3/8" - 24 x 1-27/32"         All           G120369         NUT, hex. 3/8" - 24         All					
G120369 NUT, hex. 3/8" - 24 All					
	)107-7				
G138489 WASHER. shakeproof 3/8"					
		G138489	WASHER, shakeproof 3/8"	All	·

	<b>-</b>		
ILLUST. NUMBER	PART NUMBER		PER CAR
	NNECTIN	G RODS AND BEARINGS—Cont'd. (Plate 01-3)	
0107-10 0107-10 0107-10 0107-10 0107-10	1555395 1555396 1555397 1555398 1555399	BEARING UNIT, conn. rod—Std.       All         BEARING UNIT, conn. rod—.001 US.       All         BEARING UNIT, conn. rod—.002 US.       All         BEARING UNIT, conn. rod—.010 US.       All         BEARING UNIT, conn. rod—.020 US.       All         All       All	8 8 8 8
0108—PIS	STONS, PI	NS AND RINGS (Plate 01-3)	
		Pistons and Pins	
0108-1 0108-1 0108-1 0108-1 0108-1 0108-1	1557854 1557855 1557856 1557857 1557858 1557859	PISTON w/PIN—.001 OS.       R1, R2         PISTON w/PIN—.002 OS.       R1, R2         PISTON w/PIN—.010 OS.       R1, R2         PISTON w/PIN—.020 OS.       R1, R2         PISTON w/PIN—.030 OS.       R1, R2         PISTON w/PIN—.040 OS.       R1, R2	8 8
0107-1 0108-1,3	$\begin{array}{c} 1560469\\ 1560468\\ 1563325\\ 1563326\\ 1563015\\ 1563014\\ 1563327\\ 1563328\end{array}$	PISTON, PIN & CONN. ROD ASSY.—No. 1, 3, 5, 7)       Std.       R3         PISTON, PIN & CONN. ROD ASSY.—No. 2, 4, 6, 8)       Std.       R3         PISTON, PIN & CONN. ROD ASSY.—No. 1, 3, 5, 7)       No. 1, 3, 5, 7)       R3         PISTON, PIN & CONN. ROD ASSY.—No. 2, 4, 6, 8)       .010 OS.       R3         PISTON, PIN & CONN. ROD ASSY.—No. 1, 3, 5, 7)       .010 OS.       R4         PISTON, PIN & CONN. ROD ASSY.—No. 2, 4, 6, 8)       Std.       R4         PISTON, PIN & CONN. ROD ASSY.—No. 1, 3, 5, 7)       Std.       R4         PISTON, PIN & CONN. ROD ASSY.—No. 1, 3, 5, 7)       Std.       R4         PISTON, PIN & CONN. ROD ASSY.—No. 2, 4, 6, 8)       .010 OS.       R4         PISTON, PIN & CONN. ROD ASSY.—No. 2, 4, 6, 8)       .010 OS.       R4         PISTON, PIN & CONN. ROD ASSY.—No. 2, 4, 6, 8)       .010 OS.       R4	4 4 4 4
0108-3 0108-3 0108-3 0108-3	521689 521690 521691	PISTON PIN—Std.       R1, R2         PISTON PIN—.0025 OS.       R1, R2         PISTON PIN—.005 OS.       R1, R2         PISTON PIN       R1, R2         PISTON PIN       R1, R2         R1, R2       R1, R2         R2, R4       R1, R2         R3, R4       R1, R2	8
		Piston Rings	
0108-7 0108-7 0108-7 0108-7	AC-3373 AC-3374 AC-3375 AC-3376	Piston rings should always be ordered in sets. The separate rings which comprise these sets may still be obtained at the factory but should be ordered only when a ring in a set has been damaged or broken during installation. See listing below of ring sets.       All         RING SET, piston—Std.       All         RING SET, piston—020 OS.       All         RING SET, piston—030 OS.       R1, R2         RING SET, piston—040 OS.       R1, R2	1
0109—INI	LET AND	EXHAUST MANIFOLDS AND HEAT CONTROL (Plates 01-2, 4)	
		Manifolds	
0109-2 0109-2 0109-2 0109-2 0109-11	1557472 1557843 1559216 1563068 G444734 G179845 G180124 41X243 535617	MANIFOLD w/PLUG, inlet       R1         MANIFOLD w/PLUG, inlet       R2         MANIFOLD w/PLUG, inlet       R3         MANIFOLD w/PLUG, inlet       R4         PLUG, pipe 1/4"       All         SCREW, thru clamp to head 3/8" - 16 x 1-3/4"       All         SCREW, to cyl. head 3/8" - 16 x 1-1/4"       All         WASHER, plain 13/32"       All         CLAMP, to cyl. head       All	1 1 1 1 4 4 4 4
0109-4 0109-5 0109-4 0109-5	$\begin{array}{c} 1558255\\ 536195\\ 1563228\\ 1559213\end{array}$	MANIFOLD, right, exhaust MANIFOLD, left, exhaust MANIFOLD, right, exhaust MANIFOLD, left, exhaust MANIFOLD, left, exhaust MANIFOLD, left, exhaust manust header—spec. ordersR1, R2 R1, R2 <td>1 1 1 1</td>	1 1 1 1


ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE CA
0109—INL	et and e	XHAUST MANIFOLDS AND HEAT CONTROL—Cont'd. Plates 01-2, 4	))	
0109-4,5	1559213 G179843 G179845  37X212 37X162 37X162 G114547	Manifolds-Cont'd.         MANIFOLD, exhaust         SCREW, to cyl. head 3/8" - 16 x 1-1/2" (1 not used P.S.)         SCREW, to cyl. head 3/8" - 16 x 1-3/4" (w/P.S.)         WASHER, shakeproof 3/8"         STUD, right, exhaust pipe 3/8" - 16-24 x 2-1/16"         STUD, left, exhaust pipe 3/8" - 16-24 x 1-1/2"         STUD, exhaust pipe 3/8" - 16-24 x 1-1/2"         NUT, hex 3/8" - 24	All         All         All         All         R1, R2         R1, R2         R1, R2         R3, R4	. 12 . 1 . 12 . 2 . 2 . 2
	41X243 536304 1558128 1560531	WASHER, plain 13/32" GASKET SET, manifold GASKET SET, manifold GASKET SET, manifold	R1 R2	. 1
0109-19 0109-19 0109-19 0109-19 0109-19	530266 1558123 1558122 1555713	GASKET, inlet manifold GASKET, right, inlet manifold GASKET, left, inlet manifold GASKET, inlet manifold	R2 R2	·  :
0109-21-1 0109-21-2	$536003 \\ 536004$	GASKET, end, exhaust manifold		
0109-22 0109-22	536183 1556102	GASKET, exhaust pipe flange—std. GASKET, exhaust pipe flange (spec. orders R1, R2)		
		Manifold Heater		
0109- <b>2</b> 7	536171	VALVE ASSY. COMPLETE, heater	R1, R2	
0109-31	536183	GASKET, heater valve housing	R1, R2	
0109-43	533122 G139324	BALANCE, heater valve		
0109-46	530009 G141140	THERMOSTAT, heater valve           PIN, stop 5/32" x 1-1/4"		
0115—Oll	PAN, G	ASKETS, FILLER AND LEVEL GAGE (Plate 01-2)		
		Oil Pan and Gaskets		
0115-1 0115-1	1557678 1560452 3080X2 1552264 530312 G180078 G120214	OIL PAN w/PLUG         OIL PAN w/PLUG         PLUG, drain 3/8" - 18 (incls. gasket)         GASKET, plug         SCREW, to cyl. block 5/16" - 18 x 5/8" (1 not used AD.)         SCREW, to cyl. block 5/16" - 18 x 7/8"—w/AD.         WASHER, lock 5/16"	R3, R4            All            All            All            All            All            All	
0115-6	527123	BLOCK, oil pan filler	All	
0115-9,10	1561465	GASKET SET, oil pan	All	
0115-10	1559336	GASKET, rear, oil pan	All	
0115-18 0115-18 0115-18	1558194 1558195 1558196	CAP, oil pan filler (on rocker arm cover) CAP, oil pan filler (not used crankcase vent.) CAP, oil pan filler (used with crankcase vent.)	R3, R4	

ILLUST. NUMBER		DESCRIPTION	MODELS	PER
0115-01	L PAN, GAS	KETS, FILLER AND LEVEL GAGE—Cont'd. (Plate 01-2) Oil Pan and Gaskets—Cont'd.		
)115-20 )115-20	1557271 1558892 G271184	BAFFLE and BRACKET, oil pan crankcase BAFFLE and BRACKET, oil pan crankcase NUT, to No. 4 brg. cap stud 5/16" - 18		. 1
C		0115-25	0115-30 0115-32	2
	Daa			•Q•
		0115-23 0115-34		J
NSS	-Not sold se	parately	C+4	4014
		Oil Level Gage and Tube		
115- <b>23</b> 115-23	1558331 1560489	GAGE, oil level		
115-25	1557692	TUBE, upper, level gage          TUBE, lower, level gage (welded to breather tube)		
		Breather Tube and Attachments		
115-30 115-30 115-30	1557752 1560612 1562824 G181336 1566768	TUBE, oil pan breather		] 1 ] 1
115-32	1557705	GASKET, oil pan breather tube	All	:
115-34	1557691	BRACKET, oil pan breather tube	All	. :
115-36	3132X185 1557852 G272852 526600X2	HOSE, breather tube to air cleaner (20" long) HOSE, breather tube to air cleaner (formed) CLAMP, hose 1-1/16" CLIP, lacer		
	1562841 1557852 G272852 1556859 1312347	HOSE, breather tube to air cleaner       used with         HOSE, breather tube to air cleaner       crankcase vent         CLAMP, hose 1-1/16"       GROMMET         CLIP, to fender apron       CLIP	R4 R3, R4 R3	
115-38	3132X183 1936X12 1562731 186090	HOSE, breather tube to carburetor (24" long) CLAMP, hose 17/32" FITTING, check valve (carb. end) CLIP, to rocker arm cover		
0116-0	IL PUMP, ST	RAINER AND PRESSURE GAGE PIPES (Plates 01-2, 5)		
		Oil Pump		
0116-1 0116-1	1539412 1558817 37X268 G120368 G120214	OIL PUMP ASSY.         OIL PUMP ASSY.         STUD, to bearing cap 5/16" - 18-24 x 1-3/16"         NUT, hex. 5/16" - 24         WASHER, lock 5/16"	R3, R4 All All	1 1


		EINGINE	•	)11
ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PEI CA
0116—OIL	PUMP,	STRAINER AND PRESSURE GAGE PIPES—Cont'd. (Plates 01-2, 5)		
		Oil Pump–Cont'd.		
0116-3		BODY, oil pump (not sold separately)	All	:
0116-5	527224	GASKET, oil pump body	All	:
0116-8	1539479 G179793 G120380	COVER, oil pump body SCREW, to body 1/4" - 20 x 5/8" WASHER, lock 1/4"	All	(
)116-12 )116-12	$\frac{1539410}{1558812}$	SHAFT, oil pump drive (incls. driven gear)	R1, R2 R3, R4	
0116-14	527158	SHAFT, oil pump idler gear	All	1
0601-44		GEAR, oil pump and distributor drive (see group 0601)	All	t
0116-19 0116-19	$1539381 \\ 1558707$	GEAR, oil pump driven (pressed on shaft) GEAR, oil pump driven (pressed on shaft)		
0116-20 0116-20	1539381 1558707	GEAR, oil pump idler GEAR, oil pump idler		
		Oil Strainer		
0116-30 0116-30	1557198 1560474	STRAINER, oil (incls. suction pipe) STRAINER, oil (incls. suction pipe)		
		Oil Pressure Gage Pipes		
0116-33	526348 182099 511382 G271169 G120385	PIPE w/NUTS, oil pressure gage NUT, pipe 1/8" (gage end) NUT, pipe 1/8" (coupling end) CLIP, to windshield wiper NUT and WASHER, to w/s wiper No. 10 - 32 WASHER, plain 1/4"	All All All All All	
0116-39	530096 199218	COUPLING, gage pipe flexible ELBOW, to cyl. block		
0116-42	532857	GROMMET, gage pipe dash	All	
0117_01	PRESSU	RE RELIEF VALVE (Plate 01-2)		
)117-1	192136	VALVE, oil pressure relief	All	
)117-3	536670	SPRING, relief valve		
0117-6	527225	PLUG, relief valve		1
0117-7	192125	GASKET, to cyl. block		

0118			ENGINE	
ILLUST. NUMBER	PART NUMBER	CHANGE	DESCRIPTION	MODELS

#### 0118-OIL FILTER ASSY. (Plate 01-1)

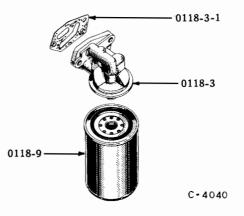

0118-3	1555771 G180123 G120382	BASE, ASSY., oil filter cartridge mtg, SCREW, to cyl. block 3/8" - 16 x 1-1/8" WASHER, lock 3/8"	All	 2
0118-3-1	1555103	GASKET, oil filter base to cylinder	All	 1
0118-9 0118-9	AC-3311 AC-2559	CARTRIDGE, oil filter—U.S.A. CARTRIDGE, oil filter—Canada	All All	 1 1

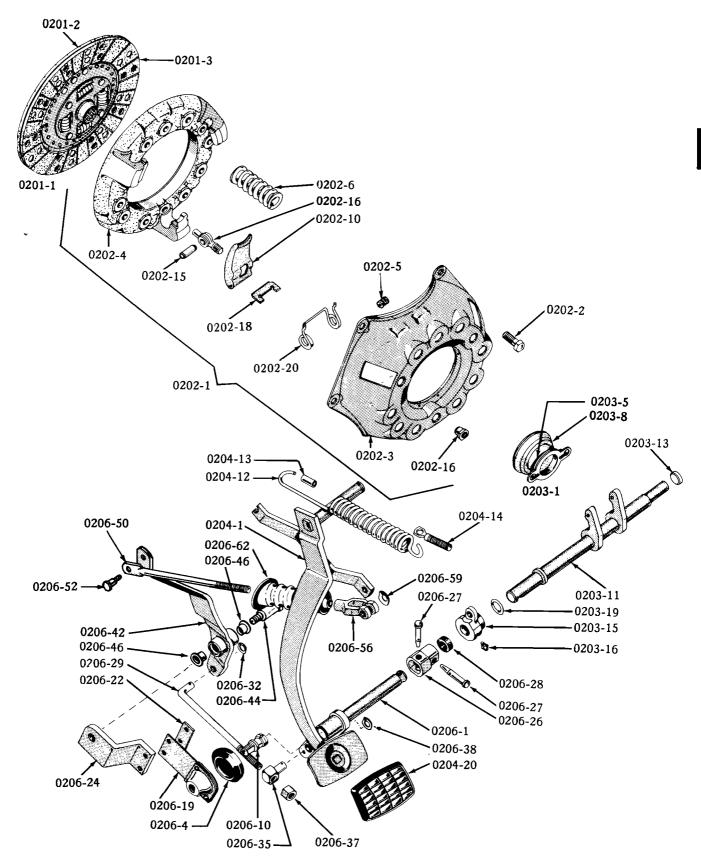

C+ 38 49 A

#### CLUTCH, PEDAL AND RELEASE MECHANISM

ILLUST. NUMBER	PART NUMBER			_			_	D E S	CR	P T							PEI CA
				1563108	1677	1562226	(3)1553132	(12) 197467		1560839	182700	1560643	1542720	182698	1563109		
				1561966	1670	1562226	(3)1553132	(12) 521129		1650839	182700	1560643	1542720	182698	1557169		
				1560949	1658	1557491	(6)1553132	(3)1695538	(9) 531577	1560839	182700	1560643	1542720	182698	1557169	part number.	
		CHART		1557781	1614	1557786	(6)1553132	(6)1695538	(3) 521129	1552562	182700	1542722	1542720	182698	1557783	arenthesis with	
		CLUTCH PRESSURE PLATE CH	10	1557170	1610	1557491	(6)1553132	(3)1695538	(9) 531577	1552562	182700	1542722	1542720	182698	1557169	Qty. shown in parenthesis with part number.	
		TCH PRES	QTY.	1		1	*	*	*	e	3	e	e.	3	H	×	
		CLU	DESCRIPTION	COVER w/PLATE	(MODEL No. STAMPED ON COVER)	PLATE, pressure	ROLLER	SPRING	SPRING	•LEVER, toggle	PIN	EYE BOLT and NUT	STRUT	SPRING	PLATE w/FACINGS	• Replace in sets.	
			ILLUST. NO.	0202-1		0202-4	0202-5	0202-6	0202-6	0202-10	0202-15	0202-16	0202-18	0202-20	0201-1		

Copyright 1963 Studebaker Corporation


	PART NUMBER	CHANGE DESCRIPTION	MODELS	₽ C
0201CL		VEN PLATE AND FACINGS (Plate 02-1)		
)201-1	1557783	PLATE w/FACINGS, clutch—with 3 spd. trans.	R1	
)201-1 )201-1 )201-1	1557169 1563109	PLATE w/FACINGS, clutch—with 4 spd. trans PLATE w/FACINGS, clutch—with 4 spd. trans PLATE w/FACINGS, clutch—4 spd. trans. (competition clutch R1, R2)	All	
)201-1	1557787	FACING, clutch plate—with 3 spd. trans.	R1	
0201-2, 3	$\frac{1557492}{662296}$	FACING, clutch plate—with 4 spd. trans		
0202—CL	итсн со	VER AND PRESSURE PLATE (Plate 02-1)		
0202-1	1557781	COVER w/PLATE, clutch-with 3 spd. trans	R1	
)202-1	1557170	COVER w/PLATE, clutch—with 4 spd. trans. (before eng. R-10-17-63, RS-10-17-63)	R1, R2	
0202-1	1560949	•COVER w/PLATE, clutch-4 spd. trans) after eng. R-10-17-63,	R1, R2	
0202-1	1561966	•COVER w/PLATE, clutch—4 spd. trans) RS-10-17-63	R1, R2	
0202-1	1563108 105227	COVER w/PLATE, clutch—4 spd. trans. (Competition clutch R1, R2)		
)202-2	195227 G120382	SCREW, to flywheel 3/8" - 16 x 7/8" WASHER, lock 3/8"	All	••
000 0				
202-3	<b>A</b>	COVER, clutch—order COVER w/PLATE		
202-4		PLATE, clutch pressure (See Chart)	<b>\</b>	
202-5		ROLLER ASSY., clutch cover and pressure plate	All	
202-6	• • • •	♦SPRING, pressure plate (See Chart)	All	
202-10 202-15		◆LEVER, toggle (See Chart) PIN, to eye bolt 5/16" x 1-5/32" (See Chart)		
				- I
202-16		EYE BOLT and NUT, toggle lever adj. (See Chart)		- I
)202-18		STRUT, toggle lever (See Chart)		
202-20		SPRING, toggle lever (See Chart)	All	
0203_CI	UTCH REU	FASE REARING SHAFT AND LEVERS (Plate 02-1)		
		EASE BEARING, SHAFT AND LEVERS (Plate 02-1), 550534	D1 D9	
0203-1	5 <del>1314</del> 3	BEARING and COLLAR, release (before eng. R-1023, RS-1040)		
0203-1 0203-1	5 <del>1314</del> 3 1560028	BEARING and COLLAR, release (before eng. R-1023, RS-1040) BEARING and COLLAR, release (after eng. R-1023, RS-1040)	All	
)203-1 )203-1 )203-5	5 <del>1914</del> 3 1560028 510171	BEARING and COLLAR, release (before eng. R-1023, RS-1040) BEARING and COLLAR, release (after eng. R-1023, RS-1040) SPRING, release bearing collar	All	  
0203–CL 0203-1 0203-1 0203-5 0203-8 0203-8	5 <del>1314</del> 3 1560028	BEARING and COLLAR, release (before eng. R-1023, RS-1040) BEARING and COLLAR, release (after eng. R-1023, RS-1040)	All	· ·
0203-1 0203-1 0203-5 0203-8	5 <del>1314</del> 8 1560028 510171 199150	BEARING and COLLAR, release (before eng. R-1023, RS-1040)         BEARING and COLLAR, release (after eng. R-1023, RS-1040)         SPRING, release bearing collar         PLATE, release bearing collar (before eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)	All	•••
)203-1 )203-1 )203-5 )203-8 )203-8 )203-11	5 <del>1314</del> 3 1560028 510171 199150 1548810	BEARING and COLLAR, release (before eng. R-1023, RS-1040)         BEARING and COLLAR, release (after eng. R-1023, RS-1040)         SPRING, release bearing collar         PLATE, release bearing collar (before eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)         SHAFT and LEVERS, release (after eng. R-1023, RS-1040)	All         All         R1, R2         All         R1, R2         All         All	•••
0203-1 0203-1 0203-5 0203-8 0203-8 0203-8 0203-11 0203-11	5 <del>1914</del> 8 1560028 510171 199150 1548810 536298	BEARING and COLLAR, release (before eng. R-1023, RS-1040)         BEARING and COLLAR, release (after eng. R-1023, RS-1040)         SPRING, release bearing collar         PLATE, release bearing collar (before eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)	All         All         R1, R2         All         R1, R2         All         All	• • •
)203-1 )203-1 )203-5 )203-8 )203-8 )203-8 )203-11 )203-11 )203-13	5 <del>1314</del> 8 1560028 510171 199150 1548810 536298 1550523	BEARING and COLLAR, release (before eng. R-1023, RS-1040)BEARING and COLLAR, release (after eng. R-1023, RS-1040)SPRING, release bearing collarPLATE, release bearing collar (before eng. R-1023, RS-1040)PLATE, release bearing collar (after eng. R-1023, RS-1040)PLATE, release bearing collar (after eng. R-1023, RS-1040)SHAFT and LEVERS, release (before eng. R-1023, RS-1040)SHAFT and LEVERS, release (after eng. R-1023, RS-1040)PLUG, cupped 53/64 O.D. (pressed in clutch housing)RETAINER, release shaft (incl. grease fitting)	All         All         R1, R2         All         R1, R2         All         All         All         All         All         All	· · ·
2203-1 2203-5 2203-5 2203-8 2203-8 2203-11 2203-11 2203-13 2203-15	519148 1560028 510171 199150 1548810 536298 1550523 524849 529333 3176X1	BEARING and COLLAR, release (before eng. R-1023, RS-1040)         BEARING and COLLAR, release (after eng. R-1023, RS-1040)         SPRING, release bearing collar         PLATE, release bearing collar (before eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)         SHAFT and LEVERS, release (after eng. R-1023, RS-1040)         PLUG, cupped 53/64 O.D. (pressed in clutch housing)         RETAINER, release shaft (incl. grease fitting)         GREASE FITTING, retainer (alemite straight)	All         All         R1, R2         All         R1, R2         All         All         All         All         All         All	· · ·
)203-1 )203-1 )203-5 )203-8 )203-8 )203-8 )203-11 )203-11 )203-13 )203-15	519148 1560028 510171 199150 1548810 536298 1550523 524849 529333 3176X1 G180078	BEARING and COLLAR, release (before eng. R-1023, RS-1040)         BEARING and COLLAR, release (after eng. R-1023, RS-1040)         SPRING, release bearing collar         PLATE, release bearing collar (before eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)         SHAFT and LEVERS, release (after eng. R-1023, RS-1040)         PLUG, cupped 53/64 O.D. (pressed in clutch housing)         RETAINER, release shaft (incl. grease fitting)         GREASE FITTING, retainer (alemite straight)         SCREW, to clutch housing 5/16" - 18 x 7/8"	All         All         R1, R2         All         R1, R2         All         All         All         All         All         All	· · ·
)203-1 )203-1 )203-5 )203-8 )203-8 )203-11 )203-11 )203-13 )203-15 )203-16	519143 1560028 510171 199150 1548810 536298 1550523 524849 529333 3176X1 G180078 G120214	BEARING and COLLAR, release (before eng. R-1023, RS-1040)         BEARING and COLLAR, release (after eng. R-1023, RS-1040)         SPRING, release bearing collar         PLATE, release bearing collar (before eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)         SHAFT and LEVERS, release (after eng. R-1023, RS-1040)         PLUG, cupped 53/64 O.D. (pressed in clutch housing)         RETAINER, release shaft (incl. grease fitting)         GREASE FITTING, retainer (alemite straight)         SCREW, to clutch housing 5/16"         WASHER, lock 5/16"	All         All         R1, R2         All         R1, R2         All	· · · · · · · · · · · · · · ·
)203-1 )203-1 )203-5 )203-8 )203-8 )203-11 )203-11 )203-13 )203-15 )203-16	519143 1560028 510171 199150 1548810 536298 1550523 524849 529333 3176X1 G180078 G120214 527280	BEARING and COLLAR, release (before eng. R-1023, RS-1040)BEARING and COLLAR, release (after eng. R-1023, RS-1040)SPRING, release bearing collarPLATE, release bearing collar (before eng. R-1023, RS-1040)PLATE, release bearing collar (after eng. R-1023, RS-1040)PLATE, release bearing collar (after eng. R-1023, RS-1040)SHAFT and LEVERS, release (before eng. R-1023, RS-1040)SHAFT and LEVERS, release (after eng. R-1023, RS-1040)PLUG, cupped 53/64 O.D. (pressed in clutch housing)RETAINER, release shaft (incl. grease fitting)GREASE FITTING, retainer (alemite straight)SCREW, to clutch housing 5/16" - 18 x 7/8"WASHER, lock 5/16"GREASE SEAL, release shaft retainer	All         All         R1, R2         All         R1, R2         All	· · · · · · · · · · · · · · ·
)203-1 )203-1 )203-5 )203-8 )203-8 )203-11 )203-11 )203-13 )203-15 )203-16 )203-19	519148 1560028 510171 199150 1548810 536298 1550523 524849 529333 3176X1 G180078 G120214 527280	BEARING and COLLAR, release (before eng. R-1023, RS-1040)         BEARING and COLLAR, release (after eng. R-1023, RS-1040)         SPRING, release bearing collar         PLATE, release bearing collar (before eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)         SHAFT and LEVERS, release (after eng. R-1023, RS-1040)         PLUG, cupped 53/64 O.D. (pressed in clutch housing)         PLUG, cupped 53/64 O.D. (pressed in clutch housing)         RETAINER, release shaft (incl. grease fitting)         GREASE FITTING, retainer (alemite straight)         SCREW, to clutch housing 5/16" - 18 x 7/8"         WASHER, lock 5/16"         OREASE SEAL, release shaft retainer	All         All         R1, R2         All	· · · · · · · · · · · · · · ·
)203-1 )203-1 )203-5 )203-8 )203-8 )203-11 )203-11 )203-13 )203-15 )203-16 )203-19 )203-19 )203-19	519148 1560028 510171 199150 1548810 536298 1550523 524849 529333 3176X1 G180078 G120214 527280 UTCH PED 1554070	BEARING and COLLAR, release (before eng. R-1023, RS-1040)         BEARING and COLLAR, release (after eng. R-1023, RS-1040)         SPRING, release bearing collar         PLATE, release bearing collar (before eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)         SHAFT and LEVERS, release (after eng. R-1023, RS-1040)         PLUG, cupped 53/64 O.D. (pressed in clutch housing)         PLUG, cupped 53/64 O.D. (pressed in clutch housing)         RETAINER, release shaft (incl. grease fitting)         GREASE FITTING, retainer (alemite straight)         SCREW, to clutch housing 5/16" - 18 x 7/8"         WASHER, lock 5/16"         GREASE SEAL, release shaft retainer         DAL AND SPRING (Plate 02-1)         PEDAL and SHAFT, clutch	All         All         R1, R2         All         R1, R2         All	· · · · · · · · · · · · · · · · · · ·
)203-1 )203-1 )203-5 )203-8 )203-8 )203-11 )203-11 )203-13 )203-15 )203-16 )203-19 )203-19 )203-19	519148 1560028 510171 199150 1548810 536298 1550523 524849 529333 3176X1 G180078 G120214 527280 UTCH PED 1554070 1552381	BEARING and COLLAR, release (before eng. R-1023, RS-1040)         BEARING and COLLAR, release (after eng. R-1023, RS-1040)         SPRING, release bearing collar         PLATE, release bearing collar (before eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)         SHAFT and LEVERS, release (after eng. R-1023, RS-1040)         PLUG, cupped 53/64 O.D. (pressed in clutch housing)         PLUG, cupped 53/64 O.D. (pressed in clutch housing)         RETAINER, release shaft (incl. grease fitting)         GREASE FITTING, retainer (alemite straight)         SCREW, to clutch housing 5/16" - 18 x 7/8"         WASHER, lock 5/16"         GREASE SEAL, release shaft retainer         PAL AND SPRING (Plote 02-1)         PEDAL and SHAFT, clutch         WASHER, spring.	All         All         R1, R2         All         R1, R2         All	· · · · · · · · · · · · · · · · · · ·
)203-1 )203-1 )203-5 )203-8 )203-8 )203-11 )203-11 )203-13 )203-15 )203-16 )203-19 )203-19 )203-19	519148 1560028 510171 199150 1548810 536298 1550523 524849 529333 3176X1 G180078 G120214 527280 UTCH PED 1554070 1552381 1552275	BEARING and COLLAR, release (before eng. R-1023, RS-1040)         BEARING and COLLAR, release (after eng. R-1023, RS-1040)         SPRING, release bearing collar         PLATE, release bearing collar (before eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)         SHAFT and LEVERS, release (after eng. R-1023, RS-1040)         PLUG, cupped 53/64 O.D. (pressed in clutch housing)         PLUG, cupped 53/64 O.D. (pressed in clutch housing)         RETAINER, release shaft (incl. grease fitting)         GREASE FITTING, retainer (alemite straight)         SCREW, to clutch housing 5/16" - 18 x 7/8"         WASHER, lock 5/16"         GREASE SEAL, release shaft retainer         PAL AND SPRING (Plate 02-1)         PEDAL and SHAFT, clutch         WASHER, spring.         PIN, retainer	All         All         R1, R2         All         R1, R2         All	
)203-1 )203-1 )203-5 )203-8 )203-8 )203-8 )203-11 )203-11 )203-13 )203-15 )203-16 )203-19 )203-19 )203-19 )204-6 )204-6 )204-8	519148 1560028 510171 199150 1548810 536298 1550523 524849 529333 3176X1 G180078 G120214 527280 UTCH PED 1554070 1552381	BEARING and COLLAR, release (before eng. R-1023, RS-1040)         BEARING and COLLAR, release (after eng. R-1023, RS-1040)         SPRING, release bearing collar         PLATE, release bearing collar (before eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)         SHAFT and LEVERS, release (after eng. R-1023, RS-1040)         PLUG, cupped 53/64 O.D. (pressed in clutch housing)         PLUG, cupped 53/64 O.D. (pressed in clutch housing)         RETAINER, release shaft (incl. grease fitting)         GREASE FITTING, retainer (alemite straight)         SCREW, to clutch housing 5/16" - 18 x 7/8"         WASHER, lock 5/16"         GREASE SEAL, release shaft retainer         DAL AND SPRING (Plate 02-1)         PEDAL and SHAFT, clutch         WASHER, spring.         PIN, retainer         BOLT, pedal stop 5/16" - 24 x 1"         illust. plate 11-4	All         All         R1, R2         All         R1, R2         All	· · · · · · · · · · · · · · · · · · ·
)203-1 )203-1 )203-5 )203-8 )203-8 )203-8 )203-11 )203-11 )203-13 )203-15 )203-16 )203-19 )203-19 )203-19 )204-6 )204-6 )204-8	519148 1560028 510171 199150 1548810 536298 1550523 524849 529333 3176X1 G180078 G120214 527280 UTCH PED 1554070 1552381 1552275 G181608	BEARING and COLLAR, release (before eng. R-1023, RS-1040)         BEARING and COLLAR, release (after eng. R-1023, RS-1040)         SPRING, release bearing collar         PLATE, release bearing collar (before eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)         SHAFT and LEVERS, release (after eng. R-1023, RS-1040)         SHAFT and LEVERS, release (after eng. R-1023, RS-1040)         PLUG, cupped 53/64 O.D. (pressed in clutch housing)         PLUG, cupped 53/64 O.D. (pressed in clutch housing)         RETAINER, release shaft (incl. grease fitting)         GREASE FITTING, retainer (alemite straight)         SCREW, to clutch housing 5/16" - 18 x 7/8"         WASHER, lock 5/16"         GREASE SEAL, release shaft retainer         DAL AND SPRING (Plote 02-1)         PEDAL and SHAFT, clutch         WASHER, spring.         PIN, retainer         BOLT, pedal stop 5/16" - 24 x 1"         KOVER, stop bolt.	All         All         R1, R2         All         R1, R2         All	
0203-1 0203-1 0203-5 0203-8 0203-8 0203-11 0203-11 0203-13 0203-15 0203-16 0203-19 0204-1 0204-1 0204-8 0204-10	519148 1560028 510171 199150 1548810 536298 1550523 524849 529333 3176X1 G120214 527280 UTCH PED 1554070 1552381 1552275 G181608 1552311	BEARING and COLLAR, release (before eng. R-1023, RS-1040)         BEARING and COLLAR, release (after eng. R-1023, RS-1040)         SPRING, release bearing collar         PLATE, release bearing collar (before eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         PLATE, release bearing collar (after eng. R-1023, RS-1040)         SHAFT and LEVERS, release (before eng. R-1023, RS-1040)         SHAFT and LEVERS, release (after eng. R-1023, RS-1040)         SHAFT and LEVERS, release (after eng. R-1023, RS-1040)         PLUG, cupped 53/64 O.D. (pressed in clutch housing)         PLUG, cupped 53/64 O.D. (pressed in clutch housing)         RETAINER, release shaft (incl. grease fitting)         GREASE FITTING, retainer (alemite straight)         SCREW, to clutch housing 5/16" - 18 x 7/8"         WASHER, lock 5/16"         GREASE SEAL, release shaft retainer         DAL AND SPRING (Plote 02-1)         PEDAL and SHAFT, clutch         WASHER, spring.         PIN, retainer         BOLT, pedal stop 5/16" - 24 x 1"         KOVER, stop bolt.	All         All         R1, R2         All         All <t< td=""><td></td></t<>	
0203-1 0203-1 0203-5 0203-8 0203-8 0203-11 0203-11 0203-13 0203-15 0203-16	519148 1560028 510171 199150 1548810 536298 1550523 524849 529333 3176X1 G180078 G120214 527280 UTCH PED 1554070 1552381 1552275 G181608 ,1552311	BEARING and COLLAR, release (before eng. R-1023, RS-1040)BEARING and COLLAR, release (after eng. R-1023, RS-1040)SPRING, release bearing collarPLATE, release bearing collar (before eng. R-1023, RS-1040)PLATE, release bearing collar (after eng. R-1023, RS-1040)SHAFT and LEVERS, release (before eng. R-1023, RS-1040)SHAFT and LEVERS, release (after eng. R-1023, RS-1040)PLUG, cupped 53/64 O.D. (pressed in clutch housing)PLUG, cupped 53/64 O.D. (pressed in clutch housing)RETAINER, release shaft (incl. grease fitting)GREASE FITTING, retainer (alemite straight)SCREW, to clutch housing $5/16'' - 18 \times 7/8''$ WASHER, lock $5/16''$ WASHER, lock $5/16''$ PIN, retainerPIN, retainerBOLT, pedal stop $5/16'' - 24 \times 1''$ NUT, hex $5/16'' - 24$	All         All         R1, R2         All         All <t< td=""><td></td></t<>	

ILLUST. NUMBER	PART NUMBER	DESCRIPTION	MODELS	PER CAR
	I		<u> </u>	<u> </u> 
0204—CL	UTCH PED	AL AND SPRING—Cont'd. (Plate 02-1)		
0204-14	1552042 G120394	ANCHOR, adjusting, pedal pull back spring NUT, anchor hex. 3/8" - 24 WASHER, plain 3/8"	All	1
0204-18	1556088 G181360 G120369 G120382	BRACKET, pedal pull back spring adj. anchor (illust. plate 11-4) BOLT, fastening 3/8" - 24 x 3/4" NUT, hex. 3/8" - 24 WASHER, lock 3/8"	All	1
0204-20	1552334	PAD, pedal	All	1
0205-CL	UTCH PED	AL SHAFT (Plate 02-1)		
	532035	SHAFT, pedal (integral w/pedal) WASHER, shaft spacer		
0205-7	1543914	BUSHING, pedal shaft (illust. plate 11-4)	A11	2
0206—CL		RATING SHAFT AND RODS (Plate 02-1)		
0206-1	1552521	SHAFT and LEVER, operating	All	1
0206-4	534872	BOOT, operating shaft	All	1
0206-10	534833 G124934	BALL STUD, operating shaft bearing NUT, stud to bracket hex. 1/2" - 20 WASHER, sh'prf. 1/2"	All	1
0206-19 0206-22	1552540 535560 G181315 G120367 G120380	•BRACKET, oper. shaft supt. REINFORCEMENT, bracket BOLT, to bracket 1/4" - 28 x 1" NUT, hex. 1/4" - 28 WASHER, lock 1/4"	All All	$\begin{vmatrix} 1\\2\\2 \end{vmatrix}$
0206-24	1552516	SUPPORT, oper. shaft supt. bracket (welded to frame)	All	1
0206-26 0206-27 0206-27	683833 42X116 1563268	SLEEVE, operating shaft PIN, inner, to oper. shaft PIN, outer, to oper. shaft COTTER 3/32" x 3/4"	All	1   1
0206-28	533933	WASHER, sleeve anti-rattle—rubber	All	1
0206-29 0206-32	$1560969 \\ 192057$	ROD, oper. shaft to bellcrank WASHER, spring COTTER 3/32" x 3/4"	All All All	1 1 1
0206-35 0206-37 0206-38	1541533 G120369 197402 192057 41X243	SWIVEL, oper. shaft rod NUT, inner, hex. 3/8" - 24 NUT, outer (special) WASHER, spring WASHER, plain 7/16" WASHER, plain 3/8" COTTER 3/32" x 3/4"		1 1 1 1 1 1
0206-42 0206-44	1552287 1552299 G103323	BELLCRANK, clutch oper. PIVOT PIN, bellcrank NUT, pivot pin hex. 1/2" - 20 WASHER, lock 1/2"	All	1 1 1 1
0206-46	1543914	BUSHING, clutch oper. bellcrank	All	.2
		•—incl. ball stud		

Copyright 1963 Studebaker Corporation

NUMBER	PART NUMBER		DESCRIPTION		MODELS	CAI
0206—Cl	UTCH OPI	ERATING SHAF	T AND RODS—Cont'd. (Plate 02-1)			
0206-50 0206-52	1556092 1556093 G120368	PIN, rod	rank to pedal pivot bolt /or ex. 5/16" - 24	All		1
0206-53	192057 G120214		ER, spring			
0206-56	1544246 G120369 42X115	NUT, hex	llcrank to pedal rod	All		. 1
0206-59	184291 G120393	WASHI WASHI	ER, spring ER, plain 5/16" R 3/32" x 3/4"	All All		] 1 ] 1
0206-62	1552589	BOOT, belle	rank to pedal rod	All	•••••••••••••••••••••••••••••••••••••••	t j
0207—Cl	UTCH PILO	OT BEARING				
0207.1	510168		pilot—composition (located in crankshaft)	l I		
0401-1	510108	BEARING,	phot—composition (located in crankshart)	All		. :
			IOUSING (Plate 01-3)	All		
		D FLYWHEEL H HOUSING PLUG, sh DOWEL I DOWEL I SCREW, f	·	All All All All All		
<b>0209–CL</b> 0209-1 0203-13 0209-3	UTCH AN 1539373 524849 531085 531086 G179839	D FLYWHEEL H HOUSING PLUG, sh DOWEL D SCREW, 6 WASHI PLATE, hou BOLT, to NUT, h	IOUSING (Plate 01-3) w/BUSHING, clutch	A11 A11 A11 A11 A11 A11 A11 A11 A11	· · · · · · · · · · · · · · · · · · ·	


#### 0220-TORQUE CONVERTER

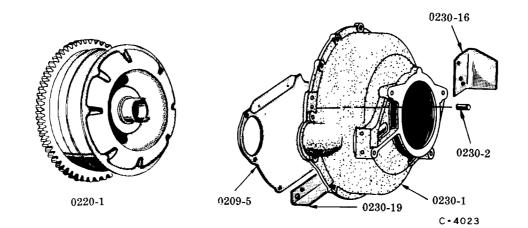


0220-1 1557250 G9409125 G120394 G444614	CONVERTER COMPLETE, torque SCREW, to drive plate 3/8" - 24 x 1/2" WASHER, plain 3/8" PLUG, drain	All		6
510168	BEARING, torque converter-composition (located in crankshaft)	All	••••	1

ILLUST. NUMBER	PART NUMBER	CHANGE	DESCRIPTION	1	MODELS	PER
0230—TO	RQUE CO	NVERTER HOUSIN	łG			
0230-1	537559	HOUSING, tor	que converter	.   All		1
0230-2	531085	DOWEL PIN	N, to cyl. block 11/32" x 1-1/8"	.   All		. 2
0230-2	531086	DOWEL PIN	I, to cyl. block 3/8" x 1-1/8"	. All		. 2
	G180123	SCREW, to	eyl. block 3/8" - 16 x 1-1/8"	. All		7
	G120382	WASHER,	lock 3/8"	.   All		7
0209-5	531319	PLATE, housin	g front cover	All		1
	G180078		housing 5/16" - 18 x 1"			
	G181004		using 5/16" - 24 x 1-1/8"			
	G120368	NUT, hex.	5/16″ - 24	.   All		3
	G120214		lock 5/16"			
0230-16	1549244	SHIELD, housi	ng side	. All		. 1
0230-19	1549243	SHIELD, lower	, housing	. All		. 1


Plate 03-1

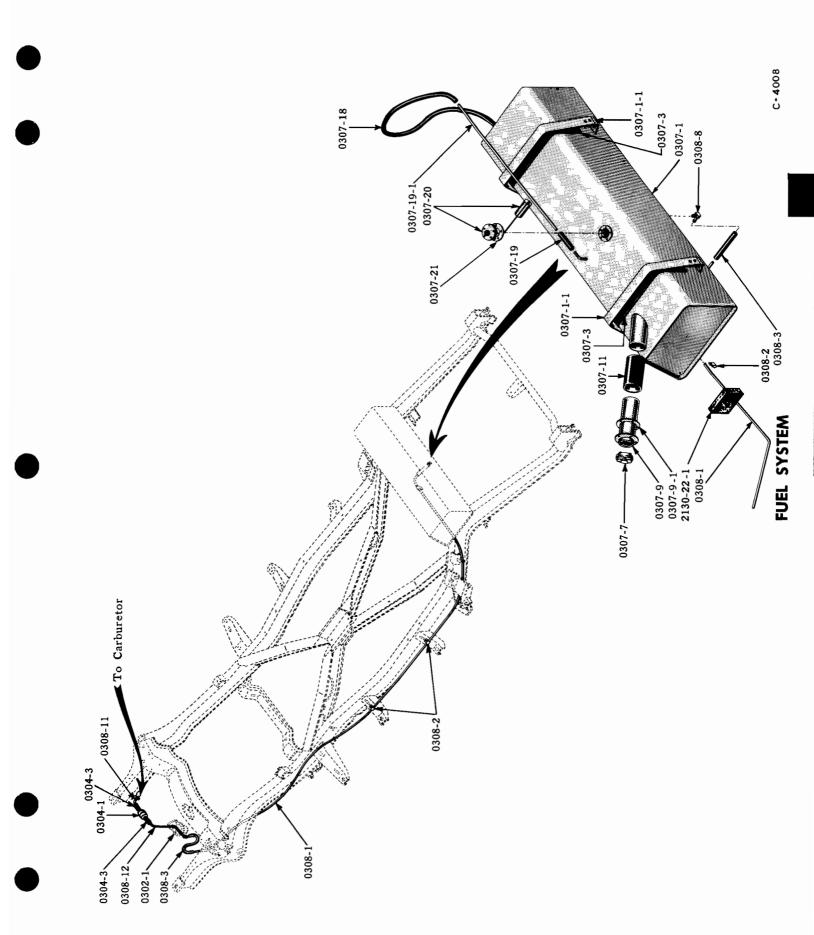

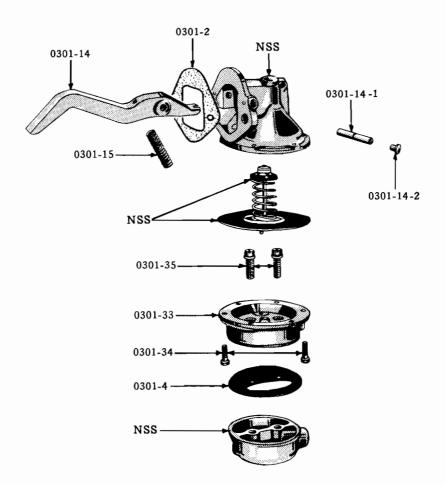


C•4024

NSS - Not sold separately

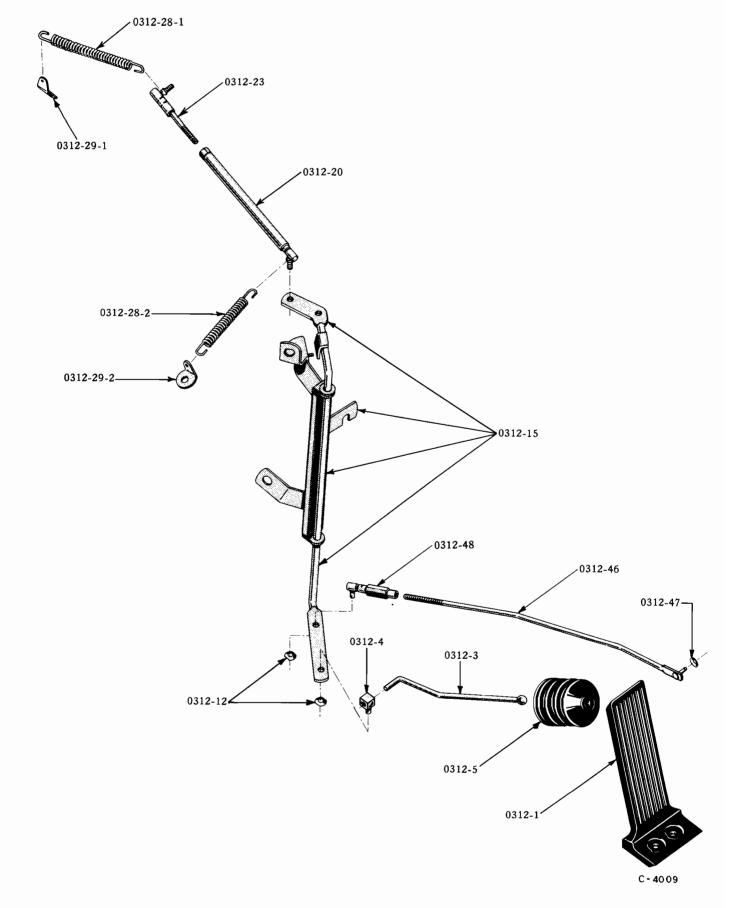


#### ACCELERATOR CONTROLS

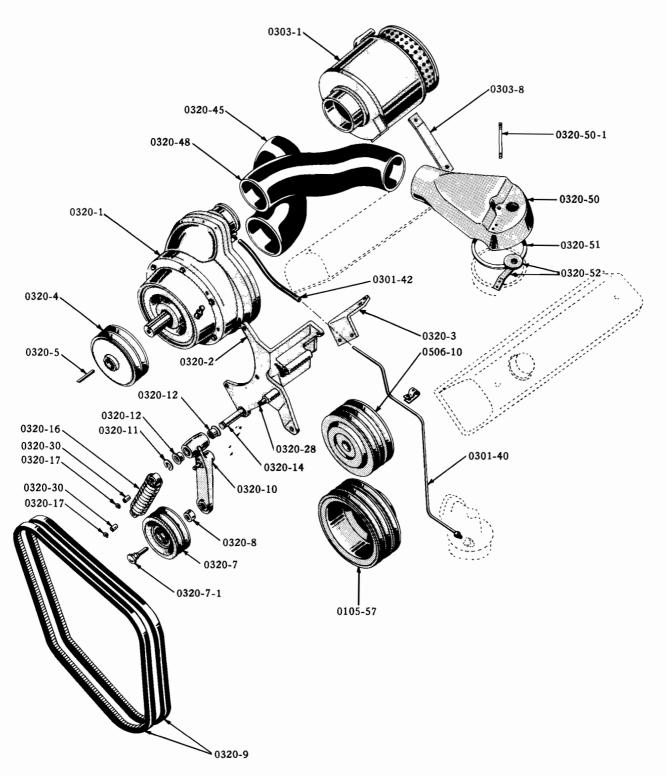


C- 40 56

#### SUPERCHARGER AND RELATED PARTS-Model R2

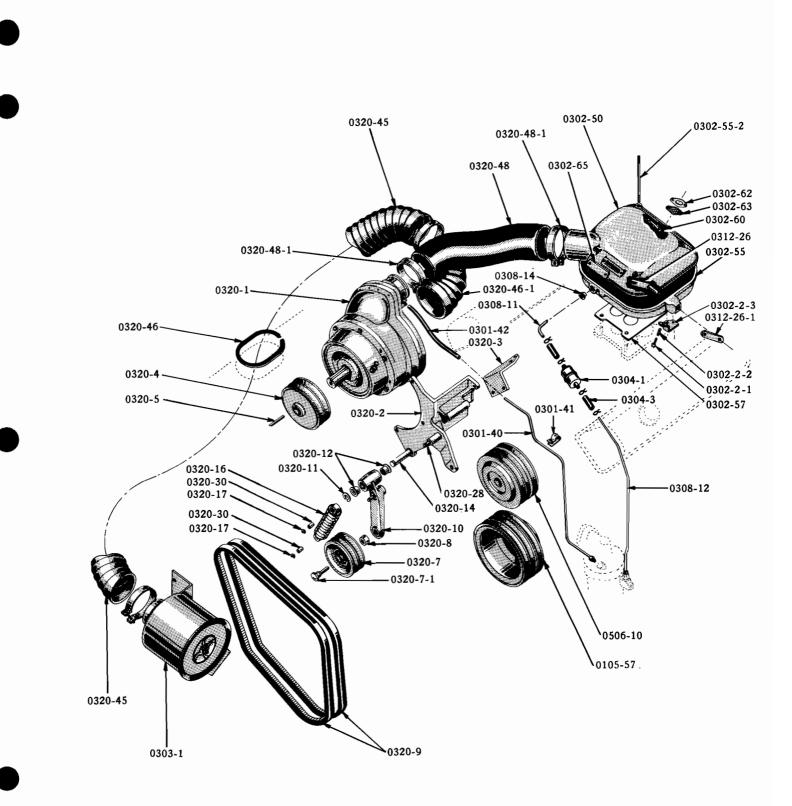

C-4220

#### SUPERCHARGER AND RELATED PARTS-Model R3

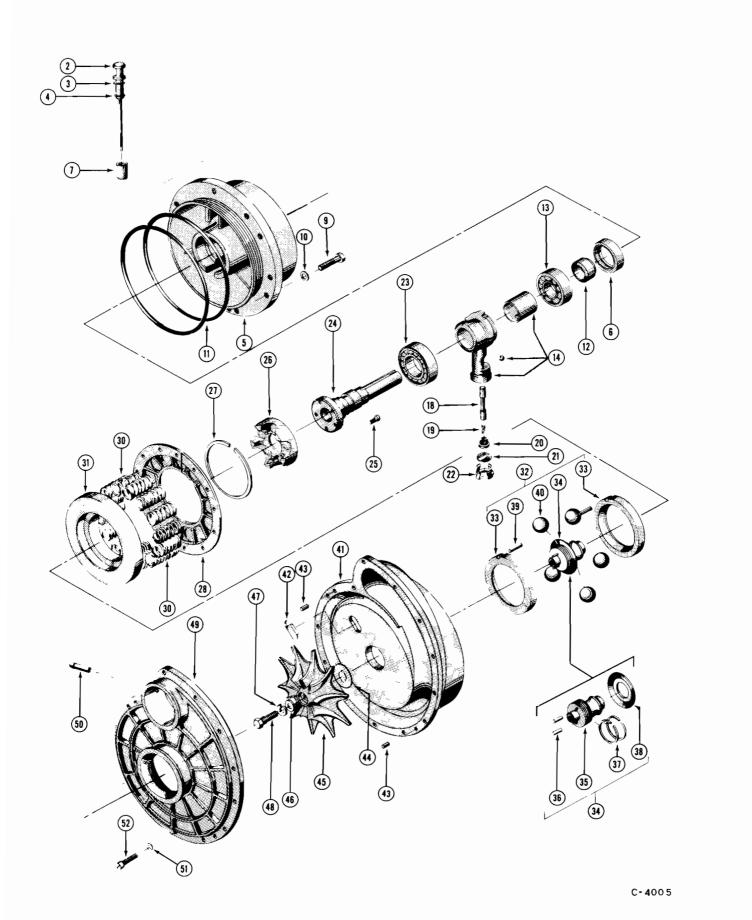


PARTS FOR SUPERCHARGER ASSEMBLY


				03
ILLUST. NUMBER	PART NUMBER	DESCRIPTION	MODELS	PI C
1301-EUR		(Plate 03-2)		
)301-1	1557213	FUEL PUMP, assy.		
)301-1	1557215 1557015	FUEL PUMP, assy.		
001-1	G180081	SCREW, to gear cover $5/16'' - 18 \times 1 - 1/4''$		
	G120214	WASHER, lock 5/16"		
301-2	537354	GASKET, fuel pump		
)301-2-4 )301-2-5	$\frac{1558821}{533068}$	ECCENTRIC, fuel pump actuating}       illust.         LOCK PLATE.       Plate 01-3		
	1558925	FUEL PUMP REPAIR KIT	. All	
		DIAPHRAGM & LINK, fuel pump (use repair kit)	. All	
0301-4	436994	DIAPHRAGM, fuel pump outlet	. All	
		SPRING, fuel pump diaphragm (not sold separately)	. All	
		VALVE, fuel pump (use 1558586)		
0301-14	1558588	ARM, fuel pump rocker		1
)301-14 )301-14-1	1558588 1549102	PIN, rocker arm		
301-14-2	1545102 1558584	PLUG, pin hole		
)301-15	1558585	SPRING, fuel pump rocker arm		
0301-33	1558586	HOUSING and VALVES, fuel pump valve		
)301-34 )301-35	$536947 \\ 536946$	SCREW and WASHER, to rocker and body		
		COVER, fuel pump valve housing (not sold separately)		
			. An	
		Fuel Pump to Supercharger Pressure Pipe		
301-40	1557421	PIPE w/NUT, fuel pump to supercharger pressure		
	G137397	NUT, pipe 1/4"		
	G137421	ELBOW, pipe 1/4" (pump end)		
0301-41	529401	CLIP		
)301-42	3132X87	HOSE, fuel pump to supercharger pipe (10" long)	. R2, R3	
0302—CA	RBURETO	R AND AUTOMATIC CHOKE (Plates 01-1, 2)		
)302-1	1557238	CARBURETOR-Carter AFB-3506S	. R1	
302-1	1559932	CARBURETOR—Carter AFB—3589S	. R1	
302-1	1557239	CARBURETOR—Carter AFB—3507S		
302-1	1558603	CARBURETOR-Carter AFB-35888	. <b>R2</b>	
302 - 1	1561641	CARBURETOR—Carter AFB—3725S		
302.1	1558637	CARBURETOR-Carter AFB-3808S		
302-1	1563051	CARBURETOR—Carter AFB—3810S (front)		
302 - 1	1563052	CARBURETOR—Carter AFB—3811S (rear)		
	37X205	STUD, to manifold $5/16'' - 24 \times 1 - 1/2''$		
	37X264 G120368	STUD, to manifold 5/16" - 24 x 1-15/16" NUT, hex. 5/16" - 24		
302-2	1557002	GASKET, carb. to manifold		
302-2	1557180	GASKET, carb. to manifold		
302-2	1563157	GASKET, carb. to manifold		
)302-2-1 )302-2-2	G450526 1543001	SCREW, carb. slow idle bracket adj. No. 10 - 32 x 7/8"		
0302-2-3	$1558594 \\ G448423$	BRACKET, carb. slow idle screw		
	1558635	PIN, throttle lever 1/4" - 28 x 7/8"		
	G120613	NUT, hex. $1/4'' - 28$		
	G140010			
	G120013 G121753	WASHER, lock 1/4"		

0302		FUEL SYSTEM		
ILLUST. NUMBER	PART CHANGE	DESCRIPTION	MODELS	PER CAR

0302-CARBURETOR AND AUTOMATIC CHOKE-Cont'd. (Plates 01-1, 2)

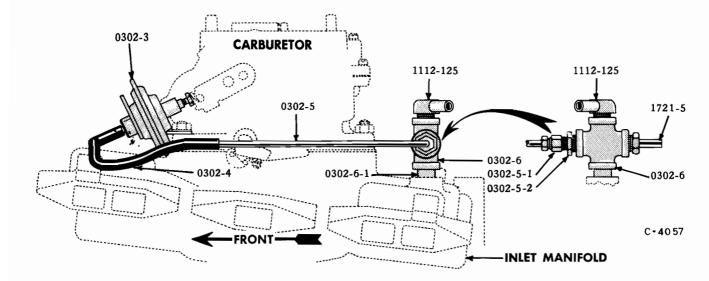


0302-3	1558169	KICKER and BRACKET, throttle	R1, R2	1
0302-4	3132X159	HOSE, throttle kicker to manifold	R1, R2	1
0302-5 0302-5-1 0302-5-2	1558170 G137396 G137404 G144035	PIPE w/NUT, throttle kicker to manifold NUT, pipe 3/16" NIPPLE, pipe 3/16" BUSHING, reducer	R1, R2 R1, R2	1
0302-6 0302-6-1	G144151 G192050	CROSS, pipe, to kicker, booster hose & vacuum gage NIPPLE, pipe, to inlet manifold	R1, R2 R1, R2	1 1

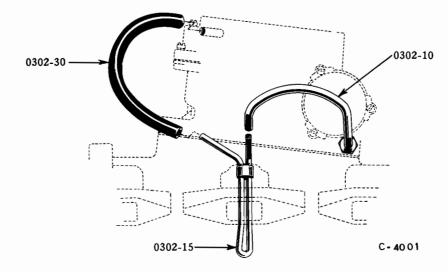

0302-10 0302-10 0302-10	$\begin{array}{c} 1557361\\ 1558638\\ 1563138\\ 1561699\\ \mathbf{G114627}\end{array}$	PIPE w/NUT, automatic choke to manifold       R1, R2       1         PIPE w/NUT, automatic choke to manifold       R3       1         PIPE w/NUT, automatic choke to manifold       R4       1         LOOM, insulating       R1, R2, R3       1         NUT, pipe 1/4"       All       1	

ILLUST. NUMBER		D E S C R I P T I O N	MODELS	PE C/
		AND AUTOMATIC CHOKE—Cont'd. (Plates 01-1, 2)		
302-15 302-15	$1557420 \\ 1559326$	TUBE, automatic choke heater         TUBE, automatic choke heater		
302-15 302-15	1559520 1563148	TUBE, automatic choke heater	R4	-
008-10	1559382	GASKET, tube		
302-30	3132X85	HOSE, automatic choke heater tube		
302-30 302-30	3132X85	HOSE, automatic choke heater tube		
		Carburetor Idle Speed-Up Diaphragm Control (W/Air Conditioning)		
	1563113	CONTROL KIT, carburetor idle speed-up	R1	
	1563164	CONTROL KIT, carburetor idle speed-up		
	1563033	CONTROL ASSY., carb. idle speed-up diaphragm	R1. R4	
	G137420	ELBOW, pipe		
	1563042	BRACKET, idle speed-up control		
	1563156	BRACKET, idle speed-up control	R4	]
		Fastened with cyl. head screws		
	1563152	SUPPORT, idle speed-up control bracket	R4	]
		Fastened with cyl. head screws	R4	1
	G180016	BOLT, to brkt. 1/4" - 20 x 1/2"		
	G271172	NUT and WASHER 1/4" - 20	R4	
	1563041	LEVER, idle speed-up	R1	
	G180016	BOLT, to brkt. $1/4'' - 20 \ge 1/2''$	R1	
	G271172	NUT and WASHER, 1/4" - 20	R1	
	1563147	PUSH-ROD, idle speed-up control	R4	1
	G271172	NUT and WASHER, 1/4" - 20		
	G9409943	TEE, idle speed-up control inlet manifold pipe		- I
	G137404	NIPPLE, pipe 3/16"		
	G144151	CROSS, idle speed-up control inlet manifold		- 1
	G144151 G192050	NIPPLE, pipe $1/4''$ - 18 x $7/8''$		
	G144035	BUSHING, reducer $1/4'' \ge 1/8''$		
	G137420	ELBOW, pipe 3/16"		
	1563107	PIPE, idle speed-up control to inlet manifold		
	G137396	NUT, pipe 2/16"	R1, R4	
		HOSE, idle speed-up control to inlet manifold		
	3132X235			- I
	1563105	CABLE, idle speed-up control	K1, K4	·
	1563106	CABLE, idle speed-up control ground	R1, R4	
	1563115	RESISTOR, heat indicator cable	R1, R4	
		Carburetor Air Chamber (w/Supercharger) (illust. Plate 03-5)		
302-50	1559330	COVER, carburetor air chamber		
	G120375	NUT, to base 1/4" - 20		
	G446179	WASHER, plain 1/4"	R3	• •
302-55	1559214	BASE, air chamber		
302.55.2	1547743	STUD, to cover 1/4" - 20 x 5-1/2"		
	G109084	LOCK NUT 1/4" - 20		
302-57	1557180	GASKET, air chamber base to manifold	R3	
302-60	1542765	VALVE ASSY., air chamber vent.	R3	
·	1501X20W	SCREW, to cover No. 10 - 24 x 1/4"		
302-62	1558884	SCREEN, air chamber cover vent valve		
302-63	1558885	RETAINER		
	2047X2W	SCREW, to cover No. 10 - 24 x 3/8"	R3	
302-65	1559215	COVER, air chamber adj. hole	R3	
	G120628	SCREW, to chamber $1/4''$ - 20 x $1/2''$		
	G446179	WASHER, plain 1/4"		

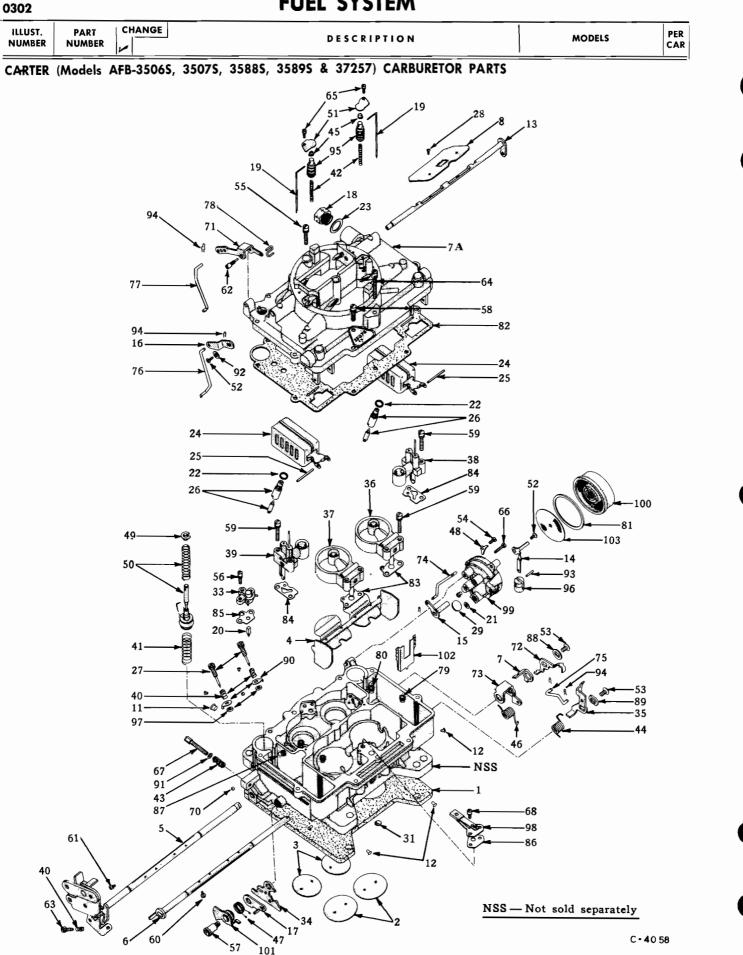


		ART CHA MBER		MODELS	P C
AR	TER (Moo PARTS		506S, 3507S, 3588S, 3589S & 3725S) CARBURETOR		
	Carter No.	Studebake No.	r.		
	5067X	1558464	REPAIR KIT, carburetor (for 3506S & 3589S)	. All	
	5068X	1558465	REPAIR KIT, carburetor (for 3507S & 3588S)	. All	
	902-195 902-194	$\frac{1562634}{1562635}$	ZIP KIT, carburetor (for 3506S & 3589S) ZIP KIT, carburetor (for 3507S, 3588S & 3725S)		
	503	1562633	GASKET SET, carburetor	. All	
1	1A-196	1557002	GASKET, to manifold	. All	
2	2.196	1558381	VALVE, secondary throttle		
3	2-223	1558382	VALVE, primary throttle		•
$6\\4$	3-1074S 3-1228S	$\frac{1558383}{1561253}$	SHAFT and LEVER, secondary throttle (for 3506S & 3589S) SHAFT and WEIGHT, auxiliary throttle—service (for 3507, 3588 & 3725)		
4	3-1337S	1558387	SHAFT and WEIGHT, auxiliary throttle (for 3507S & 3588S)		
5	3.1402S	1558385	SHAFT and LEVER, primary throttle	. All	
3	3-1415S	1558384	SHAFT and LEVER, secondary throttle (for 3507S, 3588 & 3725)	All	
1	3-1418S	1558386	SHAFT and WEIGHT, auxiliary throttle (for 3506 & 3589)		
7	4A-175	1558388	DOG, primary throttle shaft		
3	7-235	1558389	VALVE, choke		
)	$11B-35 \\ 11B-79$	$518771 \\ 673031$	PLUG, rivet		
L	11B-79 11B-389	1558390	PLUG, idle port and fuel passage		
	11B-391	1558391 1558391	PLUG, passage		
	14-568S	1558392	LEVER and SHAFT, choke (exc. 3725)		
1	14-609S	1558393	LEVER, LINK and PIN, choke piston		
5	14-612S	1558394	SHAFT and LEVER, choke		
	14-619	1558395	LEVER, choke shaft		
	14.620	1558396	LEVER, cam trip	. All	
	14-779S	1562623	LEVER and SHAFT, choke (for 3725)		
	15-52S	1558602	FITTING, fuel inlet (for 3588, 3589 & 3725)		
	15-58S 16-99	$1558397 \\ 1558398$	ROD, step-up	All	•
9	16-233	1558358 1559457	ROD, step-up—1st size lean	All	
	16-234U	1559451	ROD KIT, step-up—2nd size lean)	All	
)	16-263	1560338	ROD, step-up	All	
	16-237	1559460	ROD, step-up-1st size lean for 3507 & 3588	. All	
	16-238U	1559461	ROD KIT, step-up—2nd size lean)		
)	16-287	1562539	ROD, step-up	. All	
	16-289	1562540	ROD, step-up—1st size lean for 3725		
•	16-290U	1562541	ROD, step up—2nd size lean)	. All	
) [	$17-51 \\ 20-43$	$1558400 \\ 518853$	GASKET, piston housing		
3	20-127	1541698	GASKET, fuel inlet fitting		
-	20-206	1560828	WASHER, idle adj. screw (for 3725)	All	
1	21-179S	1558401	WASHER, idle adj. screw (for 3725)	. All	
1	21.219S	1558402	FLOAT and LEVER (for 3507, 3588 & 3725)	. All	
5	24-29	1558403	PIN, float lever	. All	
3	25-699S	1559345	NEEDLE and SEAT		
7	30-58 30A-80	$1558405 \\ 1558406$	STRAINER, fuel inlet (for 3506 & 3589)	All	
1 8	30A-80 39-11	1558406 637410	SCREW, the adjusting SCREW, the value		
9	47-30	1543193			
0	47-33	6484165	PLUG, piston housing          PLUG, primary venturi	All	
1	47-34	1558407	PLUG, welsh	. All	
2	47-36	1558408	PLUG, secondary venturi		
3	48-270S	1558409	JET and HOUSING, pump	.   All	••
4	53A-412	1558410	DOG, lockout LEVER, secondary throttle operating		
5	53A-430	1558411		. An	• •

ILLUST. IUMBER				MODELS	PEI CA
	(Models) PARTS—C		506S, 3507S, 3588S, 3589S & 3725S) CARBURETOR		
		tudebaker			
	10.	No.			
				A 11	. 1
		$562778 \\ 562779$	PRIMARY VENTURI ASSY.—choke side PRIMARY VENTURI ASSY.—pump side		
		562780	SECONDARY VENTURI ASSY.—choke isde	A11	
		562781	SECONDARY VENTURI ASSY.—pump side	All	]
58-7		44929	SPRING, idle cam adjusting screw	All	
61-	148 64	44157	SPRING, vacuum piston (for 3506 & 3589)	All	
61-		97347	SPRING, pump lower	All	·
2 61-		558412	SPRING, vacuum piston (for 3507, 3588 & 3725)		
61- 61-		37150 37154	SPRING, idle adjusting screw		
		57154 558414	SPRING, secondary throttle return		
		558415	SPRING, throttle flex		
		558416	SPRING, fast idle cam		
		562627	SPRING, choke shaft (for 3725)		-
63-		19690	RETAINER, coil housing		
		558417	RETAINER, pump plunger seal (for 3507 & 3588)		· .
		$558418 \\ 558419$	PLUNGER, ROD and SPRING (for 3506 & 3589)		
) 64-   65-		558419 558420	PLUNGER, ROD and SPRING (for 3507, 3588 & 3725) PLATE, step-up piston cover		
		98937	SCREW, choke shaft lever		
		18875	SCREW, throttle shaft lever		
		19699	SCREW, coil housing		
5 101	1-152S 5	37161	SCREW, air horn	All	.
		37162	SCREW, pump jet housing	All	
		558421	SCREW, fast idle cam		
		050X1	SCREW, air horn		
		37172	SCREW, piston housing—short (exc. 3725)		
		$558422 \\ 558423$	SCREW, secondary venturi		
		558424 558424	SCREW, primary throttle valve		· ·
		558426	SCREW, pump arm		
		558427	SCREW, fast idle adj.		
4 101	1-431S 1	558428	SCREW, air horn		
5 101	1-435S 1	558429	SCREW, step-up cover plate	All	
		558430	SCREW, piston housing		
		558431	SCREW, primary venturi (for 3506 & 3589)		
		558432	SCREW, idle adjusting		
		558433 562628	SCREW, thermostatic valve		
		544357	PLUG, lead ball		
		558434	PLUG, lead ball		
	1-76 1	558435	ARM, pump		
		558436	ARM, outer, primary throttle shaft	All	
		558437	ARM, inner, primary throttle shaft		
		558438	ROD, choke connector		
		$558439 \\ 558440$	ROD, throttle operating		
		558440 558441	ROD, fast idle connector		
		562629	LINK, pump connector rod (for 3725)		
		558442	LINK, pump connector rod (exc. 3725)		
		37185	JET, primary metering (for 3506 & 3589)	All	
9 12	0-159 5	37185	JET, secondary metering (for 3507 & 3588)	All	
		549222	JET, primary metering (for 3507 & 3588)		
		36680	JET, secondary metering (for 3725)		
		558444	JET, secondary metering (for 3506 & 3589) JET, primary metering (for 3725)		
		.550299 537187	GASKET, coil housing		
1 14	1-10 f	01101	district i con nonsing		•

PARTS-Cont'd.       Carter       Studebaker         No.       No.       No.         2       121-292       1558445       GASKET, air horn (for 3506 & 3589)       All         3       121-292       1558446       GASKET, secondary venturi cluster (exc. 3725)       All         4       121-302       1558447       GASKET, primary venturi cluster       All         5       121-303       1558448       GASKET, primary venturi cluster       All         6       121-314       1558449       GASKET, thermostatic valve       All         121-499S       1560181       GASKET, air horn (for 3507, 3588 & 3725)       All         3       121-511       1562631       GASKET, secondary venturi cluster (for 3725)       All         7       122-1085       1558450       BALL CHECK, pump inlet       All         8       136-159       537193       WASHER, primary throttle shaft       All         136-166       1558451       WASHER, carb. idle adj. screw       All         136-161       158452       WASHER, choke shaft       All         136-164       158453       WASHER, choke shaft       All         136-164       1584545       PISTON, choke (for 3506 & 3589)       All         1560-19	PARTS-Cont'd.       Carter Studebaker No. No.         2       121:292       1558445       GASKET, air horn (for 3506 & 3589)       All         3       121:293       1558446       GASKET, secondary venturi cluster (exc. 3725)       All         4       121:302       1558446       GASKET, primary venturi cluster (exc. 3725)       All         5       121:303       1558448       GASKET, pump jet housing       All         6       121:409S       1560443       GASKET, thermostatic valve       All         121:499S       1560181       GASKET, intermostatic valve       All         3       121:511       1562631       GASKET, secondary venturi cluster (for 3725)       All         3       121:511       1562631       GASKET, secondary throttle shaft       All         122:108S       1558450       BALL CHECK, pump inlet       All       All         136:160       1558451       WASHER, primary throttle shaft       All       All         136:174       458918       WASHER, canbe shaft       All       All         136:174       458918       WASHER, canbe shaft       All       All         136:174       458918       SPRING, pin       All       All         14:1504.10       631580 <th>Carter No.       Studebaker No.       All         82       121-292       1558445       GASKET, air horn (for 3506 &amp; 3589)       All         83       121-293       1558446       GASKET, secondary venturi cluster (exc. 3725)       All         84       121-302       1558447       GASKET, primary venturi cluster (exc. 3725)       All         84       121-303       1558446       GASKET, primary venturi cluster (exc. 3725)       All         85       121-303       1558449       GASKET, thermostatic valve       All         86       121-304       1558454       GASKET, thermostatic valve       All         81       121-511       1556451       GASKET, secondary venturi cluster (for 3725)       All         83       121-511       1556451       GASKET, primary throttle shaft       All         81       136-160       1558451       WASHER, primary throttle shaft       All         81       136-161       1558452       WASHER, carb. idle adj. screw       All         91       136-160       1558452       WASHER, carb. idle adj. screw       All         92       136-219       158458       WASHER, pin       All         93       150-190       1543192       PIN, choke piston       All</th> <th></th> <th></th> <th>ART CHA MBER</th> <th>D E S C R I P T I O N</th> <th>MODELS</th> <th>PE CA</th>	Carter No.       Studebaker No.       All         82       121-292       1558445       GASKET, air horn (for 3506 & 3589)       All         83       121-293       1558446       GASKET, secondary venturi cluster (exc. 3725)       All         84       121-302       1558447       GASKET, primary venturi cluster (exc. 3725)       All         84       121-303       1558446       GASKET, primary venturi cluster (exc. 3725)       All         85       121-303       1558449       GASKET, thermostatic valve       All         86       121-304       1558454       GASKET, thermostatic valve       All         81       121-511       1556451       GASKET, secondary venturi cluster (for 3725)       All         83       121-511       1556451       GASKET, primary throttle shaft       All         81       136-160       1558451       WASHER, primary throttle shaft       All         81       136-161       1558452       WASHER, carb. idle adj. screw       All         91       136-160       1558452       WASHER, carb. idle adj. screw       All         92       136-219       158458       WASHER, pin       All         93       150-190       1543192       PIN, choke piston       All			ART CHA MBER	D E S C R I P T I O N	MODELS	PE CA
4       121-302       1558447       GASKET, primary venturi cluster       All         5       121-303       1558448       GASKET, pump jet housing       All         6       121-314       1558449       GASKET, thermostatic valve       All         121-4995       1560181       GASKET, thermostatic valve       All         121-4995       1560181       GASKET, secondary venturi cluster (for 3725)       All         3       121-511       1562631       GASKET, pump inlet       All         7       122-1085       1558450       BALL CHECK, pump inlet       All         8       136-159       537193       WASHER, primary throttle shaft       All         9       136-160       1558451       WASHER, secondary throttle shaft       All         136-161       1558452       WASHER, carb. idle adj. screw       All         136-174       458918       WASHER, choke shaft       All         13       150-190       1543192       PIN, choke piston       All         13       150-100       1543192       PIN, choke (for 3506 & 3589)       All         16       160-234       1558455       PISTON, choke (for 3507, 3588 & 3725)       All         16       160-250       1558456	4       121.302       1558447       GASKET, primary venturi cluster       All         5       121.303       1558448       GASKET, pump jet housing       All         6       121.314       1558449       GASKET, pump jet housing       All         6       121.314       1558449       GASKET, pump jet housing       All         121.499S       1560181       GASKET, air horn (for 3507, 3588 & 3725)       All         3       121.511       1562631       GASKET, secondary venturi cluster (for 3725)       All         7       122.108S       1558450       BALL CHECK, pump inlet       All         8       136.159       537193       WASHER, primary throttle shaft       All         136.160       1558451       WASHER, secondary throttle shaft       All         136.161       1558452       WASHER, carb. idle adj. screw       All         136.174       458918       WASHER, choke shaft       All         13       150.190       1543192       PIN, choke piston       All         13       150.190       1543192       PIN, choke (for 3506 & 3589)       All         16       160.234       1558455       PISTON, step-up       All         16       160.234       1558455 <td< th=""><th>34       121.302       1558447       GASKET, primary venturi cluster       All         35       121.303       1558448       GASKET, pump jet housing       All         36       121.314       1558449       GASKET, thermostatic valve       All         36       121.499S       1560181       GASKET, air horn (for 3507, 3588 &amp; 3725)       All         33       121.511       1562631       GASKET, secondary venturi cluster (for 3725)       All         33       121.511       1562631       GASKET, secondary throttle shaft       All         34       136.159       537198       WASHER, primary throttle shaft       All         38       136.160       1558451       WASHER, secondary throttle shaft       All         39       136.160       1558452       WASHER, carb. idle adj. screw       All         31       136.160       1558453       WASHER, carb. idle adj. screw       All         31       150.190       1543192       PIN, choke piston       All         31       150.190       1543192       PIN, choke (for 3506 &amp; 3589)       All         32       160.201       1558454       PISTON, choke (for 3507, 3588 &amp; 3725)       All         36       160.250       1558455       PISTON, choke (for</th><th>32</th><th>PARTS Carter No. 121-292</th><th>-Cont'd. Studebake No. 1558445</th><th>GASKET, air horn (for 3506 &amp; 3589)</th><th></th><th></th></td<>	34       121.302       1558447       GASKET, primary venturi cluster       All         35       121.303       1558448       GASKET, pump jet housing       All         36       121.314       1558449       GASKET, thermostatic valve       All         36       121.499S       1560181       GASKET, air horn (for 3507, 3588 & 3725)       All         33       121.511       1562631       GASKET, secondary venturi cluster (for 3725)       All         33       121.511       1562631       GASKET, secondary throttle shaft       All         34       136.159       537198       WASHER, primary throttle shaft       All         38       136.160       1558451       WASHER, secondary throttle shaft       All         39       136.160       1558452       WASHER, carb. idle adj. screw       All         31       136.160       1558453       WASHER, carb. idle adj. screw       All         31       150.190       1543192       PIN, choke piston       All         31       150.190       1543192       PIN, choke (for 3506 & 3589)       All         32       160.201       1558454       PISTON, choke (for 3507, 3588 & 3725)       All         36       160.250       1558455       PISTON, choke (for	32	PARTS Carter No. 121-292	-Cont'd. Studebake No. 1558445	GASKET, air horn (for 3506 & 3589)		
	1       181-331S       1562632       CAM, fast idle (for 3725)       All         12       186-70       1558462       BAFFLE, fuel bowl       All	01       181-331S       1562632       CAM, fast idle (for 3725)       All         02       186-70       1558462       BAFFLE, fuel bowl       All	456 3789 234566 8990	121-302 121-303 121-314 121-499S 121-511 122-108S 136-159 136-160 136-166 136-174 136-219 150-190 150A-10 160-207 160-234 160-250 163-94 169-44S 170-781S 170AD-47	$\begin{array}{r} 1558447\\ 1558448\\ 1558449\\ 1560181\\ 1562631\\ 1558450\\ 537193\\ 1558450\\ 537193\\ 1558451\\ 1558452\\ 458918\\ 1558452\\ 458918\\ 1558453\\ 1558453\\ 1558454\\ 1558455\\ 1558456\\ 1558456\\ 1558458\\ 1558458\\ 1558459\\ 28S\\ 1561964\end{array}$	GASKET, primary venturi cluster GASKET, pump jet housing GASKET, thermostatic valve GASKET, air horn (for 3507, 3588 & 3725) GASKET, secondary venturi cluster (for 3725) BALL CHECK, pump inlet WASHER, primary throttle shaft WASHER, secondary throttle shaft WASHER, secondary throttle shaft WASHER, carb. idle adj. screw (for 3507 & 3588) WASHER, carb. idle adj. screw WASHER, choke shaft PIN, choke piston SPRING, pin PISTON, step-up PISTON, choke (for 3506 & 3589) PISTON, choke (for 3507, 3588 & 3725) SEAL, idle adj. screw (for 3507 & 3588) VALVE, thermostatic HOUSING and PLUG, piston 4 COIL and HOUSING, thermostatic (for 3506 & 3589)	All         A	• • • • • • • • • • • • • • • • • • • •

Reserve 3 page numbers (No. 36, 37 and 38) for detail parts of carburetors, models AFB-3808S, 3810S and 3811S.

 Detail parts not available, will be furnished at a later date.



ŧ

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	CA
0303-CA	RBURETOR	AIR CLEANER (Plate 01-1 and 03-4, 5)		
	1557265	AIR CLEANER, carb.	R1	. 1
	1562826	AIR CLEANER, carb.		. 1
0303-1	1557240	AIR CLEANER, carb.	R2	. 1
0303-1	1559479	AIR CLEANER, carb	R2	. 1
0303-1	1559699	AIR CLEANER, carb. (not used crankcase vent.)		
0303-1	$1562825 \\ 1563055$	AIR CLEANER, carb. (not used crankcase vent.)	R4	
	1563055 1563056	AIR CLEANER, carb. (used with crankcase vent.)	R4	1
	1557166	STUD, to carburetor 1/4" - 20 x 4" (for 1557265)	R1	. 1
	1558574	STUD, to carburetor 1/4" - 20 x 3-1/4" (for 1562826)	R1	. 1
	1563057	STUD, to carburetor 1/4" - 20 x 3-3/4"	R4	. 2
	G219281	WING NUT 1/4" - 20		
	$G120375 \\G456643$	NUT, hex. 1/4" - 20 SCREW, to rad. core support 5/16" - 18 x 3/4"		
	G456643 G120368	NUT, to support $5/16'' \cdot 24$		· I –
	G120308 G120214	WASHER, lock 5/16"		
	0120214			
	1557533	GASKET, air cleaner to carb.		
	1557533	GASKET, air cleaner to carb.	$\mathbb{R}^{\mathbf{R}_{4}}$	. 2
0303-8	1557351	SUPPORT, air cleaner to manifold	. R2	. 1
		COVER, air cleaner (for 1557265 & 1562826)	DI	
	1559179	COVER, air cleaner (for 1557240)		
	$\frac{1563231}{1563234}$	COVER, air cleaner (for 1559479, 1559699 & 1562825)	R2 R2	
	1563294 1563297	COVER, lower, air cleaner (for 1563055)		
	1563298	COVER, lower, air cleaner (for 1563056)		
	1558962	ELEMENT, air cleaner		
	1555053	ELEMENT, air cleaner		
	1563296			1
	1563299	SCREEN, air cleaner	. R4	. 1
0304—FU	IEL FILTER	AND HOSE (Plate 03-1)		
0304-1	AC-2987	FILTER, fuel (incls. hose & clamps)	. R3, R4	. :
	1558669	FUEL FILTER ASSY.	. R1, R2	. 1
	1560508	ELEMENT KIT, fuel filter	. R1, R2	. 1
0304-3	3132X174 1936X12	HOSE, fuel filter to carb. pipe (2" long)		
0007 0		ANK GAGE AND MOUNTINGS (Plate 02.1)		
0307-G/ 0307-1	1555947	ANK, GAGE AND MOUNTINGS (Plate 03-1) TANK, gasoline	A 11	
0307-1	1000947	TANK, gasonne	. An	·   '
0307 - 1 - 1	1556030	STRAP, gas tank mounting		
	G271506	NUT, to floor pan $7/16'' - 20$		
	G181637	SCREW, to floor pan $3/8'' - 24 \times 1''$		
	G120382	WASHER, lock 3/8"	. All	
0307-3	1261X6	INSULATOR, gas tank to mtg. strap	. All	.   :
	AC-3335	LOCKING FILLER CAP, gas tank (accessory)	. All	
0307-7	1558091	CAP, gas tank filler		
0307-7	1563219	CAP, gas tank filler	. <b>R3, R4</b>	•
0307-9	1556120	NECK, gas tank filler	. All	
	3190X1	SCREW, to qtr. panel No. 10 - 12 x 3/4"           GASKET, gas tank filler neck		
000701	1554674	GAOREI, gas tank inter neck	- All	:
		HOSE may tank filler neck	<b>A</b> 11	
0307-9-1 0307-11	1554436 G111627	HOSE, gas tank filler neck	. All	

ILLUST. NUMBER		DESCRIPTION	MODELS	C/
207 64		NK, GAGE AND MOUNTINGS—Cont'd. (Plate 03-1)		
307-18 307-19	3132X176 3132X177 1936X12	HOSE, gas tank vent	All	
307-19-1	108X23	PIPE, gas tank vent hose connector	All	
		Gasoline Gage (Tank Unit)		
607-20	1555957 3228X1 187763	GAGE, gasoline SCREW, to tank No. 10 x 3/4" WASHER, special	All	
07-21	1556074	GASKET, gasoline gage	All	
08—FU	EL (GASOLI	NE) LINES AND CONNECTIONS (Plate 03-1)		
08-1 08-2	1558425 G137399 G178917 G444734 905560 G177999	PIPE, gas tank to fuel pump         NUT, pipe 3/8"         TEE, pipe         PLUG, tee drain pipe         CLIP, to frame         SCREW, to frame 1/4" - 14 x 1/2"	All All All All All	•
08-3	3132X130 G272845	HOSE, gas tank to fuel pump pipe (5" long) CLAMP, hose 5/8"	All	
08-8	1544868	ELBOW, gas tank to fuel pump pipe hose		
	1558666 1558315 1558315 3132X194 908914 172652	PIPE, front, fuel pump to gas tank return         PIPE, rear, fuel pump to gas tank return         PIPE, fuel pump to gas tank return         HOSE, insulating         CLIP, long, to frame         CLIP, short, to frame	R1, R2           R3           All           All	
	3132X215 3132X188 3132X193 G272843 1558295	HOSE, gas return pipe (pump end)HOSE, gas return pipe (pump end)HOSE, gas return pipe (tank end)CLAMP, hoseNIPPLE, hose	R3 All All	•
308-12 308-11 308-12 308-11 308-12 308-11	$\begin{array}{c} 1558671\\ 1558670\\ 1561087\\ 1561111\\ 1561087\\ 1563137\\ G137398\\ G137422\\ 1544868\\ G137406\\ 1558787\\ G116341\\ G9409943\\ G143483\\ G137406\\ 1544868\\ \end{array}$	PIPE w/NUT, fuel pump to carb. (pump end)PIPE w/NUT, fuel pump to carb. (carb. end)PIPE w/NUT, fuel pump to carb. (pump end)PIPE w/NUT, fuel pump to carb. (carb. end)PIPE w/NUT, fuel pump to carb. (pump end)PIPE w/NUT, fuel pump to carb. (pump end)PIPE w/NUT, fuel pump to carb. (carb. end)NUT, pipe 5/16"ELBOW, pipe 5/16" (pump end)ELBOW, fuel pump inletNIPPLE, pipe 5/16" (carb. end)CLIP, to water pumpELBOW, pipe 5/16" (carb. end)TEE, pipe 1/8" (pump end)TEE, pipe 1/8" (carb. end)NIPPLE, pipe 5/16" (pump end)ELBOW, fuel pump inlet	R1, R2         R3         R3         R4         R4         R1, R2         R4         R1, R2         R3, R4         R3, R4         R3	· · · · · · · · · · · · · · · · · · ·
308-14	154308 1543943 1563135 G137398 G137422	GROMMET, to s/c air chamber base PIPE w/NUTS, front carb. to rear carb. NUT, pipe 5/16" ELBOW, pipe 5/16" FUEL FILTER and HOSE (See Group 0304)	R3 R4 R4 R4	

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PI C.
)312—AC	CELERATO	R AND THROTTLE CONTROLS (Plate 03-3)		
312-1	$1560745 \\ 1501 X27$	PEDAL, accelerator SCREW, to floor pan 1/4" - 20 x 1"		
	AC-2029	COVER, accelerator pedal (accessory)	All	
312-3 312-3	$1556160 \\ 1563132$	PUSH ROD, accelerator PUSH ROD, accelerator	R1, R2, R3 R4	
312-4 312-12	195716 184526 G120392	SWIVEL, accelerator push rod WASHER, spring WASHER, plain 9/32" COTTER, to rod 1/16" x 3/4" COTTER, to bellcrank 3/32" x 3/4"	All All All	
312-5	513536X1	SLEEVE, accelerator push rod	All	
312-15	1547836 G132915 G120614	BELLCRANK, throttle control           SCREW, stop No. 10 - 32 x 1"           NUT lock No. 10 - 32	All	
312-20 312-20	1539612 1563136 G120613 G121753	ROD, bellcrank to carb.	R4	
0312-23 312-23	1539610 1560962 G120613 G120613 G121753	END, bellcrank to carb. rod adj. END, bellcrank to carb. rod adj. NUT, locking 1/4" - 28 NUT, ball stud 1/4" - 28 WASHER, shakeproof 1/4"	R3, R4	
312-26	1558972	SHAFT and LEVER, bellcrank to carb. aux. (illust. plate 03-5)	R3	
312-26-1	1558970 G120361 G138479	LEVER, outer, bellcrank to carb. aux. shaft (illust. plate 03-5) NUT, to shaft No. 10 - 24 WASHER, lock No. 10		
312-28-1 312-29-1	$537355\ 1549684$	SPRING, throttle return		
312-28-2 312-29-2	$537355 \\ 536596$	SPRING, bellcrank return CLIP, to rocker arm cover		
	1562997 G120613 184526 G120392	ROD, accelerator control (frt. to rear carb.)          NUT, lock 1/4" - 28          WASHER, spring          WASHER, plain 9/32"          COTTER 1/16" - 3/4"	R4	
	195716 184526 G120392	SWIVEL, accelerator control rodWASHER, springWASHER, plain 9/32"COTTER 3/32" x 3/4"	R4        R4        R4        R4        R4	
312-46	1557451 G121547 G120391	ROD, bellcrank to transmission—w/AD. PIN, clevis 3/16" x 19/32" WASHER, plain 7/32"	All All All	
312-47	1557697	WASHER, plain 7/32 WASHER, spring COTTER 1/16" x 3/4"	All	
312-48	1557345	END, bellcrank to trans. rod adj.—w/AD.		
)312-12	G120613 184526 G120392	NUT, locking 1/4" - 28         WASHER, spring         WASHER, plain 9/32"         COTTER 3/32" x 3/4"	All	

\*---Use as required.


ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PER
320—SUI	PERCHARGI	ER ASSEMBLY (Plates 03-4, 5)		
)320-1	1556851 G180079 G120214	SUPERCHARGER           SCREW, to bracket 5/16" - 18 x 1"           WASHER, lock 5/16"	R2, R3	. 3
)320-2	1556852 G180091 G120214 G180144 G136857	BRACKET, supercharger mounting         SCREW, to water pump 5/16" - 18 x 2-1/2"         WASHER, lock 5/16"         SCREW, to water pump 7/16" - 14 x 7/8"         WASHER, lock 7/16"	R2, R3           R2, R3           R2, R3	$  2 \\ 2 \\   1$
9320-3	1556854 G179839 G120382 G271506 G120383	SUPPORT, supercharger mtg. bracket         SCREW, to bracket 3/8" - 16 x 1"         WASHER, lock 3/8"         NUT, to head 7/16" - 20         WASHER, lock 7/16"	R2, R3           R2, R3           R2, R3	. 2 . 2 . 2
0105-57	••••	PULLEY, supercharger drive (see Group 0105)	R2, R3	. 1
0320-4 0320-5	1556858 1542940 G181338 41X594 G120214	PULLEY, supercharger driven         KEY, feather 1/8" x 1-15/16"         SCREW, to supercharger 5/16" - 24 x 7/8"         WASHER, plain 5/16"         WASHER, lock 5/16"	R2, R3	. 1 . 1
0320-7 0320-7-1 0320-8	1556486 1552401 G271501 G120383 1552571	PULLEY, supercharger idler         BOLT, to arm 7/16" - 14 x 2-1/16"         NUT, hex. 7/16" - 14         WASHER, lock 7/16"         SPACER, idler pulley	R2, R3           R2, R3           R2, R3	. 1 . 1 . 1
)320-9 )320-9	$1555319 \\ 1555320$	BELT SET, supercharger drive (std.) BELT SET, supercharger drive (high output)		
	$\frac{1552569}{1552570}$	BEARING, supercharger idler pulley RING, snap		
)320-10 )320-11	1556855 41X32 1542364	ARM w/SHAFT, idler pulley WASHER, plain 41/64" RING, snap	R2, R3	. 1
320-12	1542363	BUSHING, idler pulley arm	R2, R3	. 2
320-14	1542308	SHAFT, idler pulley arm	R2, R3	. 1
)320-16 )320-17	1542361 41X22 1542365	SPRING ASSY., idler pulley arm WASHER, plain RING, snap	R2, R3	. 2
320-28	1542309	SHAFT, idler pulley arm tension spring mtg.	R2, R3	. 2
320-30	1542362	BUSHING, tension spring mtg. shaft—nylon		
320-45	1557350 G451243	HOSE, supercharger to air cleaner CLAMP, hose 4-1/16"	R2	·   2
320-45	1560542 G451238	HOSE, supercharger to air cleaner	<b>R3</b>	. 2
)320-46	1560543	GROMMET, to fender apron		
)320-46-1 )320-48 )320-48 )320-48-1	$\begin{array}{c} 1559749 \\ 1557751 \\ 1558947 \\ 1558328 \end{array}$	ELBOW, supercharger to air cleaner hose	R2 R3	. 1
0320-50	1556953 1557166 G219281	ADAPTER, supercharger to carb. air inlet	R2	. 1


ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS
0320—SU	PERCHAR	ER ASSEMBLY—Cont'd. (Plates 03-4, 5)	
0320-51	1557533	GASKET, supercharger to carb. air inlet adapter	
0320-52	1542765 1501X20V	VALVE, supercharger to carb. air inlet adapter vent $\dots$ V SCREW, to adapter No. 10 - 24 x 1/4"	
	1558884 1558885 2047X2W	SCREEN, supercharger to carb. air inlet adapter RETAINER, to adapter SCREW, to adapter No. 10 - 24 x 1/4"	R2
0321-PA	RTS FOR	SUPERCHARGER (Plate 03-6)	
2 4	$\frac{1542904}{1542905}$	GAGE, supercharger oil level	
3	1542906	"O" RING, oil level gage	
7	1542938	SLEEVE, oil level gage (pressed in housing)	
49 50 52 51	1559172 1559173 G132056 1559174	COVER, air scroll CONNECTOR, pressure pipe SCREW, to scroll No. 10 - 24 x 7/8" WASHER, plain No. 10	
45 48 47 46	1542925 G181610 G120214 41X97	IMPELLER SCREW, to shaft 5/16" - 24 x 1-1/4" WASHER, plain 5/16" WASHER, lock 5/16"	
44 44 44	$\begin{array}{c} 1560253 \\ 1560254 \\ 1560255 \end{array}$	SHIM, impeller adj004 SHIM, impeller adj010 SHIM, impeller adj022	
	1558166	HOUSING ASSY., bearing (incls. seal & sleeve)	
5 9 9 10	G180023 1559950 1559169	HOUSING, bearing SCREW, to scroll 1/4" - 20 x 1-1/8" SCREW, to scroll 1/4" - 20 x 1-1/8" (drilled) WASHER, plain 1/4"	
11	1542933	"O" RING, bearing housing	
	1542943	OIL PUMP ASSY.	
14	1542949	BODY and BUSHING, oil pump	
18 19 20	$1542948 \\ 1542947 \\ 1542946$	PLUNGER, oil pump SPRING, coil PLUG, retaining	
21 22	$\frac{1542945}{1542944}$	SCREEN, oil pump	
24 25	$\frac{1558165}{1542873}$	SHAFT w/BUSHING, input SCREW, to ball driver	
23 13	$\frac{1542951}{1542942}$	BEARING, inner, input shaft BEARING, outer, input shaft	
6	$\frac{1542937}{1560252}$	SEAL, input shaft oil	
12	1543206	SPACER, input shaft oil seal	
26	1542952	DRIVER, output drive ball	
27	$\frac{1558544}{1542956}$	RACE LOAD ASSY., planetary drive	
*—Use as	required.		

0321						
ILLUST. NUMBER	PART NUMBER		DESCRIPTION	M	ODELS	PER CAR
0321-PA	RTS FOR	SUPERCHARGER-	Cont'd. (Plate 03-6)			
30	1563153	SPRING, race	load coil	R2, R3 .		. 14
28 31	$1542959 \\ 1542957$		race load springrace load spring			
32	1558168	DRIVE ELEMI	ENT SET-MATCHED (consist of next 4 items)	R2, R3 .		. 1
33 39	1542960	RACE SET, pl PIN, retainin	anetary drive ball (use 1558168) g	R2, R3 . R2, R3 .		$\begin{array}{c} 1\\ 2\end{array}$
40	· · · ·	BALL SET, pla	anetary drive (use 1558168)	R2, R3		1
34 36	1542967		, output (incls. next 3 items) (use 1558168)			
37	1542965	RING, output s	shaft labyrinth	R2, R3 .		. 2
38	1542966	SLINGER, out	out shaft oil	R2, R3 .		. 1
41 43	$1558485 \\ 1542969$	SCROLL w/PI PIN, dowel .	NS, air	R2, R3 . R2, R3		. 1
42	1542970	COVER, scroll	air hole	R2, R3 .		. 1

#### **DUAL EXHAUST SYSTEM**

Plate 04-1

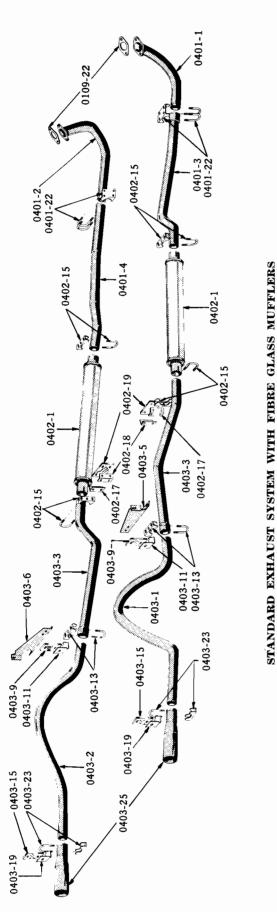

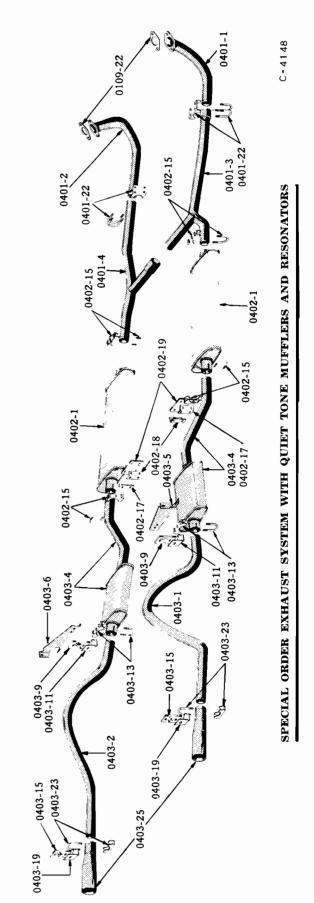

## **DUAL EXHAUST SYSTEM**


ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PER
		ES (Plate 04-1)		
			DI DO	
)401-1 )401-2	$1555718 \\ 1556359$	PIPE, right, front exhaust       not used w/exhaust         PIPE, left, front exhaust       header eq.		
)401-2	1562951	PIPE, right front exhaust) neader eq	R1, R2	
401-2	1558641	PIPE, right, front exhaust	R1, R2	1
401-1	1558640	PIPE, right, front exhaust	R3. R4	] 1
401.2	1558641	PIPE, left, front exhaust	R3, R4	. 1
	37X212	STUD, right, to manifold 3/8" - 16-24 x 2-1/16"		
	37X162	STUD, left, to manifold 3/8" - 16-24 x 1-1/2"		
	37X162	STUD, to manifold 3/8" - 16 - 24 x 1-1/2"		
	$G114547 \\ 41X243$	NUT, hex. 3/8" - 24 WASHER, plain 13/32"		
401-3	1556360	PIPE, right, rear exhaust) w/fibre glass muffler		
401-5	1556361	PIPE, left, rear exhaust) before serial 1753		
)401-3	1560001	PIPE, right, rear exhaust) w/fibre glass muffler		
)401-4	1560002		All	
401-3	1560001	PIPE, right, rear exhaust) w/quiet tone muffler		
401-4	1560002	PIPE, left, rear exhaust) after serial 1457	All	. 1
109-22	536183	GASKET, exhaust pipe flange (not used w/exhaust header eq.)	R1. R2	2
109-22	1556102	GASKET, exhaust pipe flange (w/exhaust header eq.)	R1, R2	2
109-22	1556102	GASKET, exhaust pipe flange		
401-22	1547588	U-BOLT & SADDLE ASSY., rear pipe		1
402-MI	JFFLERS AN	ID SUPPORTS (Plate 04-1)		
402-1	1557754	MUFFLER (fibre glass packed) (Std.)		
0402-1	1560065	MUFFLER (quiet tone) (special orders)	All	. 2
402-15	1557634	U-BOLT & SADDLE ASSY., muffler	All	. 4
0402-17	1556371	BRACKET, muffler rear supt. (muffler end)	A 11	2
0402-18	1553886	BRACKET, muffler rear supt. (frame end)		
	G186986	SCREW, to frame 5/16" - 18 x 1/2"		
0402-19	1553904	STRAP, muffler rear supt.	All	1 2
	G181338	BOLT, to brkts. 5/16" - 24 x 7/8"		
	G120368	NUT, hex. 5/16" - 24		
	41X322	WASHER, plain 13/32"		
	G120214	WASHER, lock 5/16"	All	. 8
403-OL	JTLET PIPES	AND SUPPORTS (Plate 04-1)		
403-1	1556318	PIPE, right, outlet	All	1
403-2	1556319	PIPE, left, outlet		
403-3	1557181	PIPE, outlet extension (used w/fibre glass muffler)	All	2
403-4	1556317	RESONATOR & PIPE ASSY., (used w/quiet tone muffler)	All	2
403-5	1539856	BRACKET, right, outlet pipe extension rear supt.		
403-5	1539850 1539857	BRACKET, left, outlet pipe extension rear supt		
100-0	G186986	SCREW, to frame $5/16'' \cdot 18 \ge 1/2''$		
	G181636	BOLT, to frame $3/4'' - 24 \ge 7/8''$		
	G120369	NUT, hex. 3/8" - 24		
	G120382	WASHER, lock 3/8"		
403-9	1544725	STRAP, outlet pipe extension rear supt.	All	2
200-0	G181338	BOLT, to brkt. & supt. $5/16'' - 24 \ge 7/8''$		
	G120368	NUT, hex. 5/16" - 24		
	41X322	WASHER, plain 13/32"		
	G120214	WASHER, lock 5/16"		
403-11	526459	SUPPORT, outlet pipe extension rear	All	. 2
		U-BOLT & SADDLE ASSY., outlet pipe to supt. clamping		
403-13	1557634			

# **DUAL EXHAUST SYSTEM**


ILLUST.	PART		MODELS	PE
NUMBER	NUMBER			C/
403_01	ITLET PIPE	S AND SUPPORTS—Cont'd. (Plate 04-1)		
403-15	1544725 G181338 G120368 41X322 G120214 G443945 41X322 G138485	STRAP, outlet pipe supt.         BOLT, strap to supt. 5/16" - 24 x 7/8"         NUT, hex. 5/16" - 24         WASHER, plain 13/32"         WASHER, lock 5/16"         SCREW, strap to rear crossmember 5/16" - 18 x 1"         WASHER, plain 13/32"         WASHER, plain 13/32"         WASHER, plain 13/32"	All         All	•
403-19	526486	SUPPORT, outlet pipe	A11	
03-23	1557634	U-BOLT & SADDLE ASSY., outlet pipe to supt. clamping	All	
103-25	AC-3339	DEFLECTOR, outlet pipe exhaust	All	

# MEMORANDA


To assure prompt shipment of parts, always give Car Serial and Engine Number
L H C — Left hand drive only
<b>R H C</b> — Right hand drive only

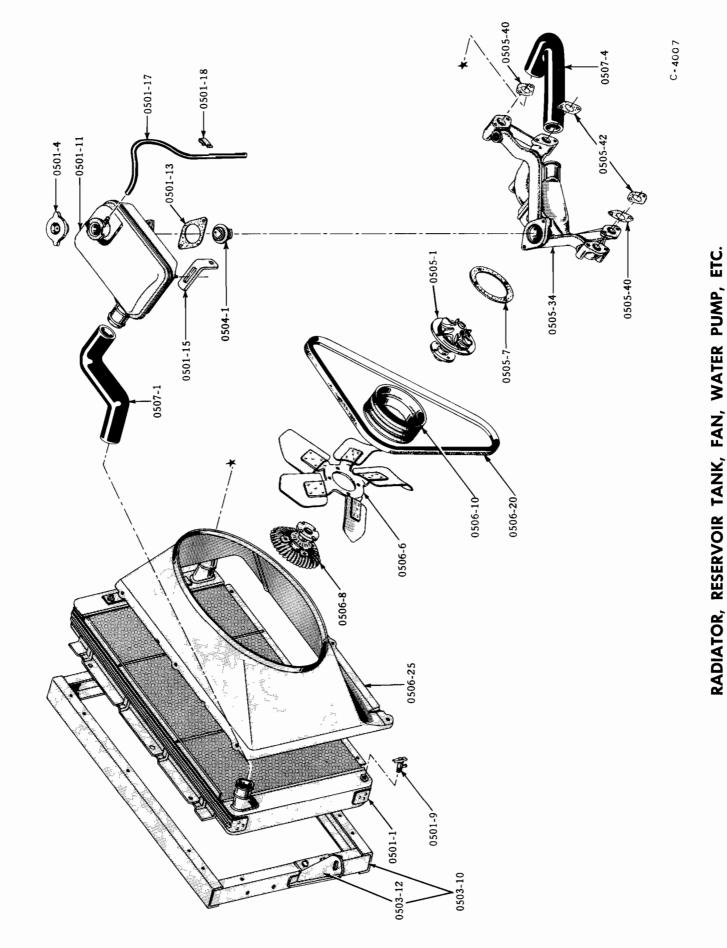


#### COOLING

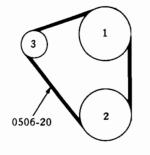

STANDARD

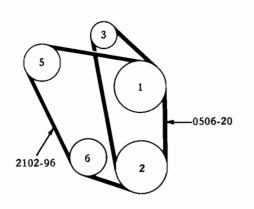


AIR COND.

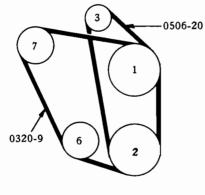


SUPER CHARGER


- 1 Fan pulley
- 2 Crankshaft pulley
- 3 Alternator pulley
- 4 Power steering pump pulley

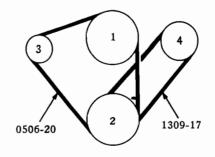

STANDARD W/ POWER STEERING

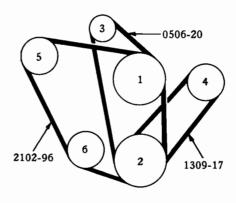

AIR COND. W/ POWER STEERING

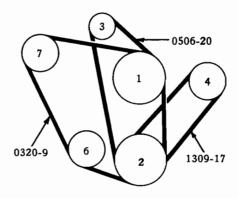

#### SUPERCHARGER W/POWER STEERING


5 — Air compressor pulley


- 6 Idler pulley
- 7 --- Supercharger pulley

C-4026

#### PULLEY AND BELT DRIVE SYSTEMS

#### COOLING

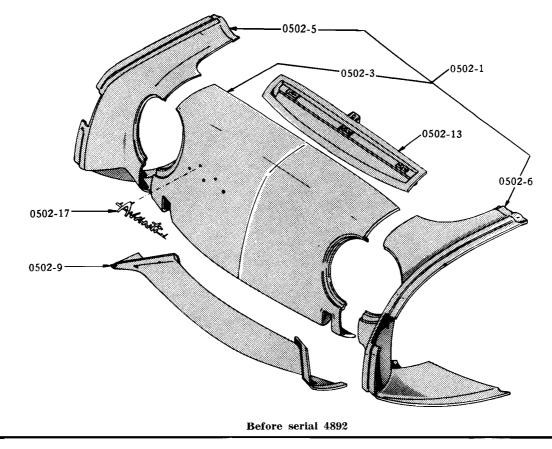

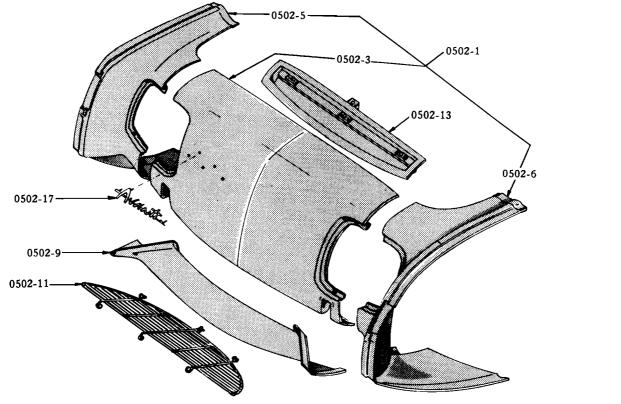

After serial 4892

C•4222

#### **RADIATOR AIR INTAKE PANELS**

ILLUST.	PART			PER
NUMBER			MODELS	CAR
0501-RA	DIATOR CO	RE, RESERVOIR TANK AND CAP (Plate 05-1)		
0501-1	1556070	CORE, radiator (w/ST. & 4 spd.)		
0501-1	1556071	CORE, radiator (w/AD.)		
	G456643	SCREW, radiator core to supt. 5/16" - 18 x 3/4"		
0501-4	1551190	CAP, radiator pressure filler	All	. 1
0501-9	1543441	COCK, radiator core drain	All	. 1
0501-11	1555873	RESERVOIR TANK, radiator		
	G180078	SCREW, to water manifold 5/16" - 18 x 7/8"		
	G120214	WASHER, lock 5/16"		l
0501-13	1550816	GASKET, radiator reservoir tank	All	1
0501 - 15	1555874	BRACKET, radiator reservoir tank support		
	G179826 G120393	SCREW, to block 5/16 - 18 x 2"		
	G120353 G271172	NUT & WASHER, to tank stud $1/4"$ - 20		
	G120392	WASHER, plain 7/32"		
0501-17	3132X175	HOSE, radiator reservoir tank overflow	All	1
)501-18	182050	CLIP, fastened w/timing gear cover screw		
0502-RA	DIATOR AII	R INTAKE PANELS AND GRILLE ASSEMBLY (Plate 05-3)		1
502-1	1350051	PANEL ASSY., upper, rad. air intake (before serial 4892)	All	
0502-1	1358950	PANEL ASSY., upper, rad. air intake (after serial 4892)	All	1
0502-3	1351202	PANEL, center, rad. air intake (part of 1350051) (before serial 4892)	All	
)502-3	1358951	PANEL, center, rad. air intake (part of 1358950) (after serial 4892)	All	1
502-5	1351200	PANEL, right, radiator air intake .) before serial 4892	All	
502-6	1351201	PANEL, left, radiator air intake .) part of 1350051		
)502-5 )502-6	$1358952 \\ 1358953$	PANEL, right, radiator air intake ) after serial 4892	All	
		, <u> </u>		
0502-9	1350052		AII	·  1
	1358783	GRILLE KIT, radiator air intake Consists of: Grille assembly and fastening parts	A 11	1
502-11		GRILLE & MLDG. ASSY., rad. air intake opening (order 1358783) .	All	
	G161903 1578X59	SCREW, to upper panel No. $10 - 12 \ge 3/4^{"}$	All	-
	G120391	WASHER, plain 7/32"	All	
	G271166	NUT & WASHER, to lower panel No. 10 - 24	All	
	G120391	WASHER, plain 7/32"	All	3
0502-13	1350039	DEFLECTOR ASSY, panel reinf. and upper air (before serial 4892) DEFLECTOR ASSY, panel reinf. & upper air (after serial 4892)		_
0502-13	1358807		All	
0502-17	1351155W 3055X7	NAME PLATE, radiator air intake panel "Avanti"	All	$\begin{vmatrix} 1\\5 \end{vmatrix}$
	3030A I	KUI, fastening	An	
0503-RA	DIATOR SU	PPORT (Plate 05-1)		
)503-10	1358717	SUPPORT ASSY., radiator core	All	1
	G181377	BOLT, to frame 3/8" - 24 x 1-3/4"	R1, R2	
	G181650 G120369	BOLT, to frame 3/8" - 24 x 2-1/2"	R3, R4	
	41X557	WASHER, plain 3/8"		
	G120382	WASHER, lock 3/8"	All	1
	2043X14	SCREW & WASHER, to lower panel & fender	All	
	G187993	SCREW & WASHER, to upper air deflector	АП	0

# COOLING


ILLUST.	PART	CHANGE DESCRIPTION	MODELS	PE
NUMBER	NUMBER			
)503-RA		;UPPORT—Cont'd. (Plate 05-1)		
0503-12	1358728 1358729 G181003 G120367 G120380	BRACKET & GUSSET ASSY., right, radiator core supt. BRACKET & GUSSET ASSY., left, radiator core supt. BOLT, to core supt. 14" - 28 x 5/8" NUT, hex. 1/4" - 28 WASHER, lock 1/4"	. All	. 10 . 10
0504—TH	ERMOSTA	T (Plate 05-1)		
0504-1 0504-1 0504-1	$\begin{array}{c} 1560841 \\ 1560842 \\ 1560843 \end{array}$	Opens atTHERMOSTAT, engine water (Std.)170°THERMOSTAT, engine water (low)160°THERMOSTAT, engine water (high)180°	All All All	. :
0505—W	ATER PUN	P (Plate 05-1)		
0505-1	1560395 1548931 G114622	WATER PUMP w/FAN HUB ASSY SCREW, to water manifold 5/16" - 18 x 5/8" GASKET, annular 5/16"Cop. Asb	. All	
0505-7	527246	GASKET, water pump	. All	
0505-34	1555739 G180085 G180078 G179828 G179826 G120393 G120214	MANIFOLD, water SCREW, to cyl. block 5/16" - 18 x 1-3/4" SCREW, to head 5/16" - 18 x 7/8" SCREW, thru alt. brkt. 5/16" - 18 x 2-1/2" SCREW, thru reservoir tank brkt. 5/16" - 18 x 2" WASHER, plain 11/32" WASHER, lock 5/16"	All All All All All	
	G114981	COCK, water manifold air bleed drain	. All	
0505-40 0505-42	$527240 \\ 527856$	GASKET, upper, water manifold		
0506-FA	N AND B	ELTS (Plates 05-1, 2)		
0506-6 0506-6	1556021 1560547 1563111 G180073 G138485	FAN BLADES (5 blade—17") (Std.)         FAN BLADES (5 blade—14") (spec. order)         FAN BLADES (7 blade—17") (spec. order)         SCREW, to fan drive 5/16" - 18 x 1/2"         WASHER, sh'prf. 5/16"	. R3, R4 . All . All	
0506-8	1560257 G179816 G138485	FAN DRIVE ASSY. SCREW, to hub 5/16" - 18 x 3/4" WASHER, sh'prf. 5/16"	. All	
)506-10 )506-10 )506-10	$1556483 \\ 1563110 \\ 1562905$	PULLEY, water pump & fan drive (Std.) (L/A.C.) PULLEY, water pump, comp. & fan drive (w/A.C.) PULLEY, water pump & fan drive (spec. order—high output)	. R1, R4	
0506-12	1560402	HUB, fan	. All	
)506-20 )506-20 )506-20 )506-20	1557585 1548509 1557587 1548509	BELT, fan & alternatorBELT, fan & alternatorBELT, fan & alternator (L/A.C.)BELT, fan & alternator (w/A.C.)BELT, fan and compressor (see group 2102C)BELT SET, fan and supercharger (see group 0320)BELT, power steering pump drive (see group 1309B)	R3         R4         R4         All         All	• •
0506-25	1560614G456643	SHROUD, fan		


0502

# COOLING

ILLUST. NUMBER	PART NUMBER		DESCRIPTION	 MODELS	CA
0507R	ADIATOR A	ND WATER PUMP	HOSES AND CLAMPS (Plate 05-1)		
0507-1	1555934 G111622		ank to radiator inlet		
0507-4	1555929 G111622		p inlet (incl. spring)		

# Plate 06-1

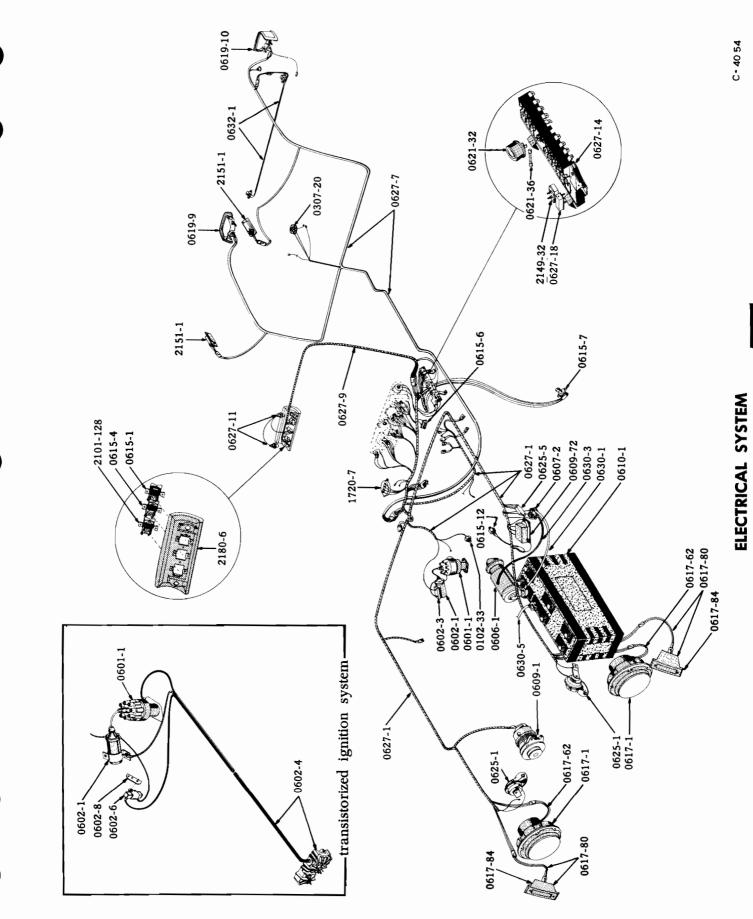


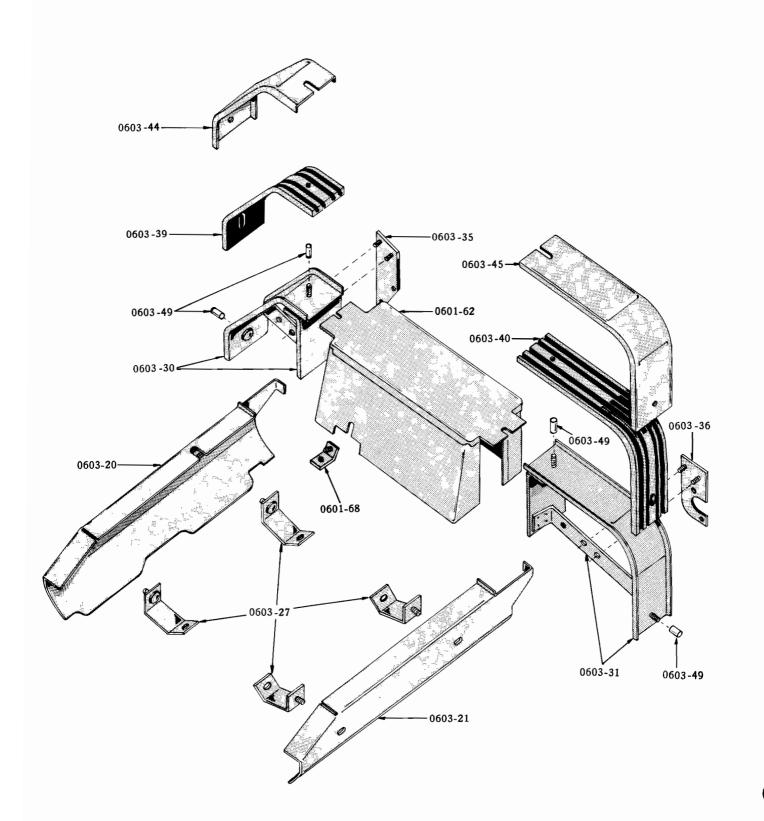


C- 40 30

#### ELECTRICAL EMISSION SHIELDING

PAGE NO. 56

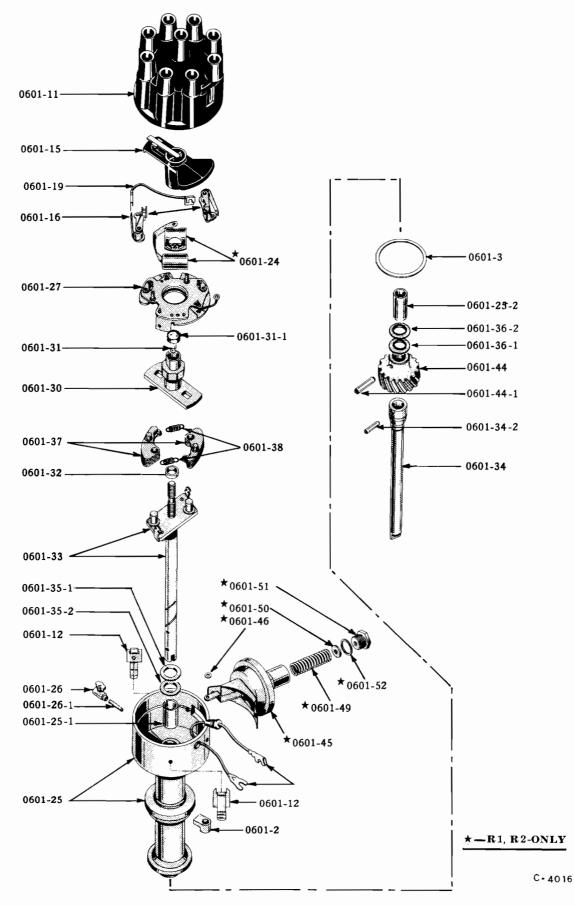

**TYPICAL DISTRIBUTOR** 

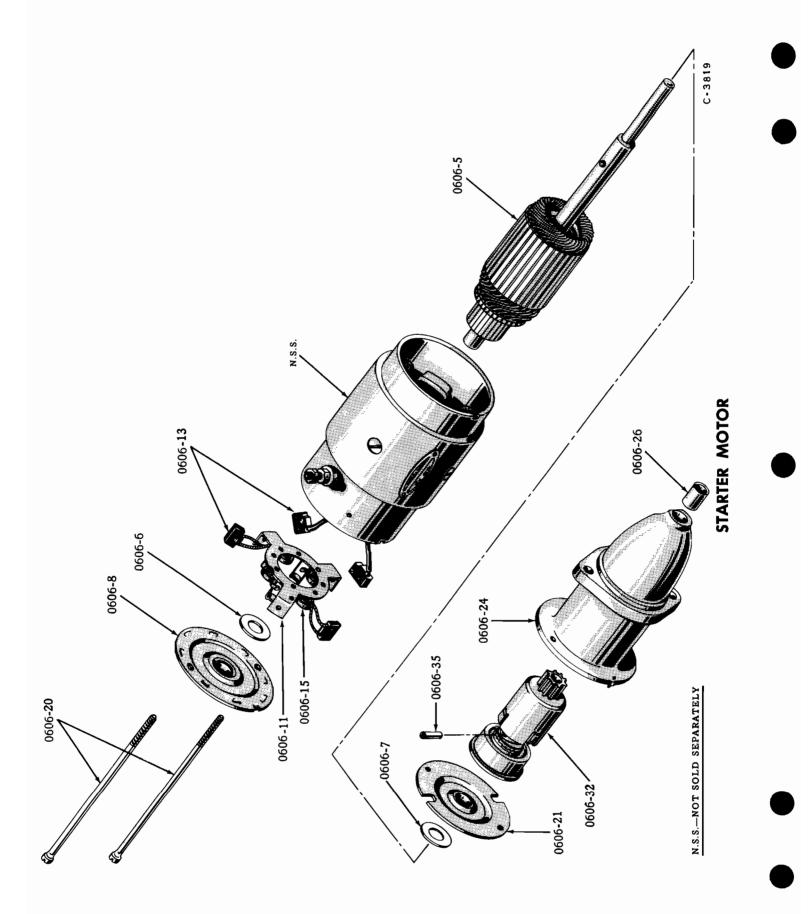


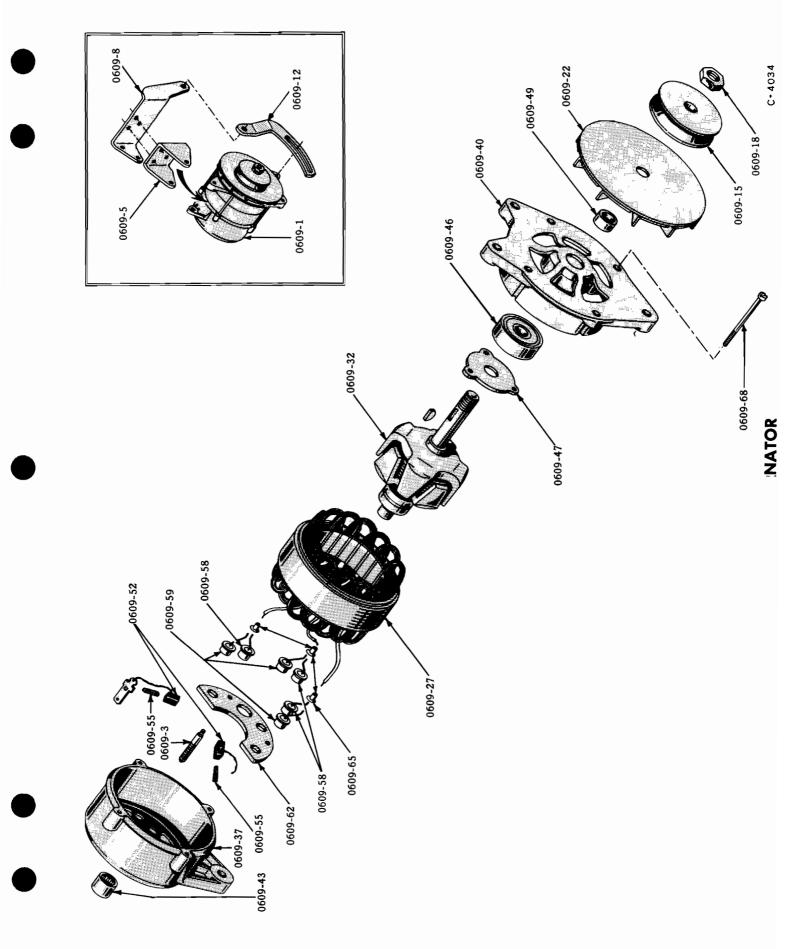



Plate 06-6

#### **ELECTRICAL**

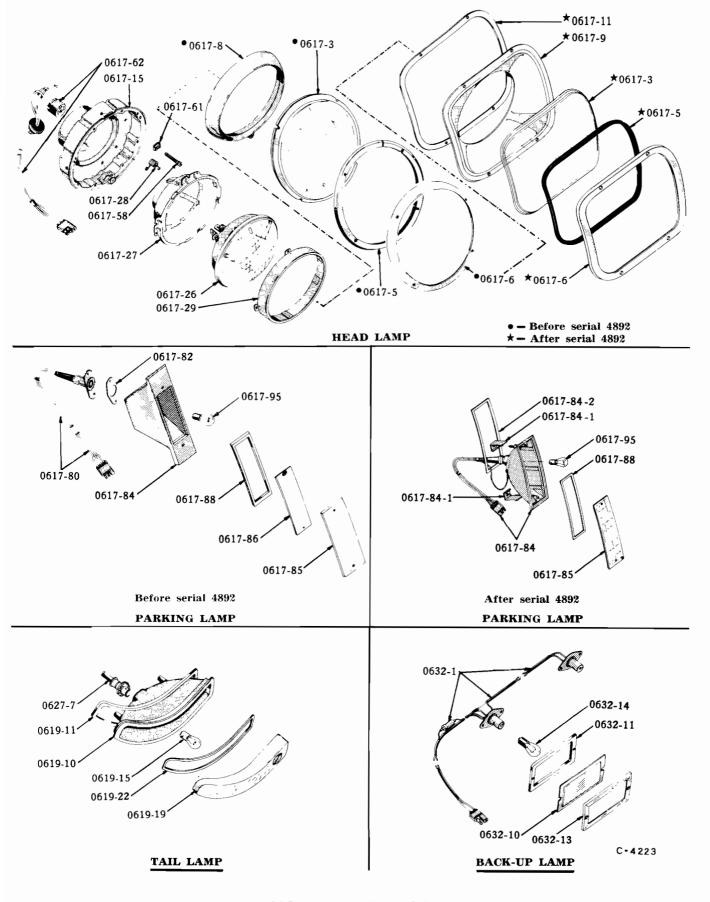

HEAD, PARKING, TAIL AND BACK-UP LAMPS

PAGE NO. 60

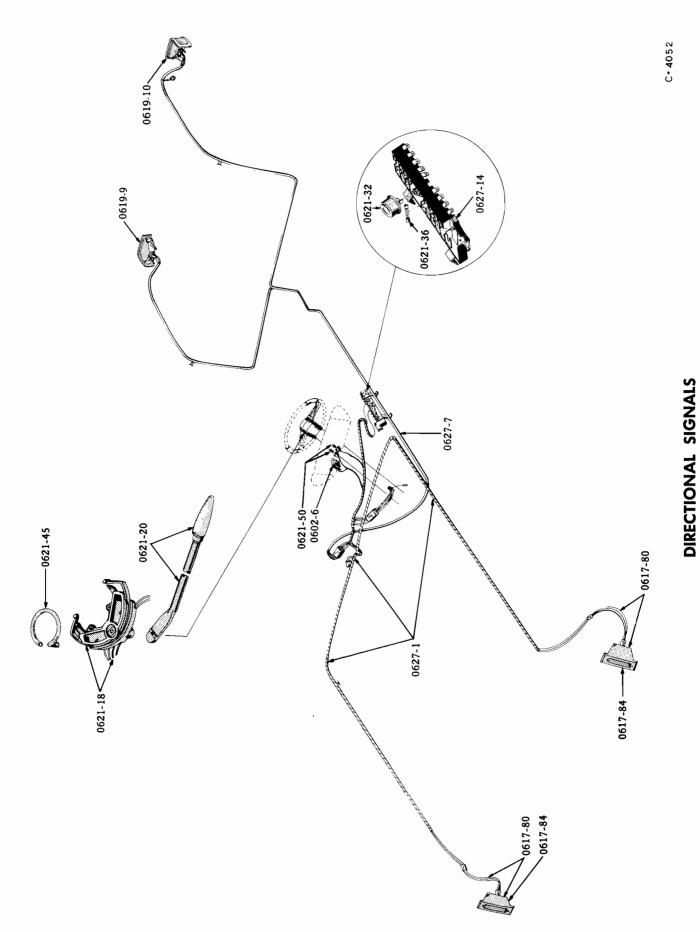

ł

ILLUST. NUMBER	PART NUMBER	DESCRIPTION	MODELS	Pi C
		ISTRIBUTOR, CONDENSER AND SPARK ADVANCE Plates 06-1, 2, 3)		
601-1 601-1	<ul> <li>●1557897</li> <li>●1557347</li> <li>●1562923</li> <li>●1562924</li> <li>●1560550</li> </ul>	DISTRIBUTOR w/MODIFIER, ignition DISTRIBUTOR w/MODIFIER, ignition DISTRIBUTOR w/MODIFIER, ignition (spec. orders) DISTRIBUTOR w/MODIFIER, ignition (spec. orders) DISTRIBUTOR, ignition (with supercharger)	R2 R1 R2	
501-2	532491 G180079 G120214	LOCK PLATE, dist. SCREW, to block 5/16" - 18 x 1" WASHER, lock 5/16"	All	
601-3	533010	GASKET, dist. to block	. All	
501-11 501-12 501-12	1555503 6484245 6484246 	CAP, distributor SPRING and SUPPORT, retainer (cap locating) SPRING and SUPPORT, retainer SCREW, to base No. 8 - 32 x 3/8" WASHER, lock No. 8	All All All	
	1560000	TUNE UP KIT, dist.—Consists of: 1—1555502 Rotor   1—1560473 Point Set 1—1560358 Condenser	R1, R2	•
01-15	1555502	ROTOR, distributor	All	
01-16	1560473 458363 1558292 G131949	POINT SET, dist. contact SCREW, contact arm spring WASHER, plain SCREW, contact plate No. 8 - 32 x 3/16" WASHER, plain No. 8	All          All          All	
01-19	1558284	CABLE, dist. contact points jumper	All	
01-24	1560358	CONDENSER, distributor		
501-25 501-25 501-25-1 501-25-2 501-26 501-26-1	1558282 1563282 1555499 188476 527343 527329	BASE w/BUSHING, dist. timer BASE w/BUSHING, dist. timer BUSHING, upper, timer base BUSHING, lower, timing base OILER, base OIL WICK, oiler	R3, R4	
501-27 501-27	1558294 1563284 1563283 1563285	PLATE, dist. timer base         PLATE, dist. timer base         GROMMET, dist. timer base plate         LEAD, dist. breaker arm         SCREW (see SCREW, cap spring and support)	R3, R4 R3, R4 R3, R4	
501-30 501-30 501-30 501-31 501-31-1	1558287 1558288 1563287 513667 1561625 905833	CAMSHAFT and CAM, dist. timer CAMSHAFT and CAM, dist. timer CAMSHAFT and CAM, dist. timer SPACER, dist. timer camshaft LOCK RING SET, camshaft OIL WICK, camshaft	R2 R3, R4 All All	•
01-33	1561624	SHAFT less WEIGHTS, dist.	All	
301-34 301-34-2	$1558281 \\ 1548436$	SHAFT w/COUPLING, dist. drive (incl. pin)		

Without transistorized ignition system.
With transistorized ignition system.

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE C/
M	ODIFIER-C	STRIBUTOR, CONDENSER AND SPARK ADVANCE ont'd. (Plates 06-1, 2, 3)		
0601-36-1 0601-36-2	$527332 \\ 527337$	THRUST WASHER, lower large, dist. shaft		
601-37	516196	WEIGHT, dist. timer	All	
)601-38 )601-38 )601-38	$\begin{array}{c} 1558285 \\ 1558286 \\ 1563286 \end{array}$	SPRING SET, dist. timer weight SPRING SET, dist. timer weight SPRING SET, dist. timer weight	R2	
)601-44 )601-44-1	$1555493 \\ 1557201$	GEAR, dist. and oil pump drive shaft PIN, to shaft		
0601-45 0601-46	1558290 G132096 G121801 1553186	SPARK MODIFIER SCREW, to base No. 10 - 32 x 1/4" WASHER, sh'prf. No. 10 LOCK RING, control arm to plate	R1, R2 R1, R2 	
601-49	1558291	SPRING, spark modifier	R1, R2	
)601-50 )601-50 )601-50	527353X2 527353X1 527353X3	WASHER, modifier spring calibrating—.010 thick WASHER, modifier spring calibrating—.032 thick WASHER, modifier spring calibrating—.065 thick	R1, R2	
)601-51 )601-52	$527342 \\ 527303$	FITTING, spark modifier suction		
	1555010 1557360 G137396	PIPE w/NUTS, modifier—dist. end PIPE w/NUTS, modifier—carb. end NUT, pipe 3/16"	R1, R2	ļ
	3132X159	HOSE, modifier pipe	R1, R2	ĺ
	G137404	NIPPLE, modifier pipe—carb. end		
601-62	1556936 1563167 1563034	SHIELD, dist. and ignition coil emission         SHIELD, dist. and ignition coil emission         SHIELD, dist. and ignition coil emission	<b>R</b> 3	
0601-68	1557660 25X88 G121753	BRACKET, dist. and coil emission shield CROWN NUT, fastening WASHER, sh'prf. 1/4"	All	
		TACHOMETER and PARTS-See Group 1720		
602_IGN		NL, SWITCH AND LOCK (Plate 06-1)		ł
)602-1 )602-1 )602-1	1553539 1558582 1560562 G120614 G106497	COIL, ignition (less bracket) (R2-after serial 5280) COIL, ignition (less bracket) (R2-before serial 5280) COIL, transigniter ignition (with bracket)-spec. orders on R1, R2 NUT, terminal hex. No. 10 - 32 WASHER, lock No. 10	R2 All R1, R2	
)602-3 )602-3	1550556 1558482 G177999	RESISTOR, ignition coil primary (R2-after serial 5280) RESISTOR, ignition coil primary (R2-before serial 5280) SCREW, fastening 1/4" x 1/2"	R2	
602-4	1560561 G180034 3183X1 G120380 286138 3190X3	BOLT, fastening 1/4" - 20 x 1-1/2"	All All All	
602-6	1560563 1721X25 G271163		All All All	
*—Use as		NUT and WASHER No. 8 - 32 )	All	

0602

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PER
			<u> </u>	<u> </u> 
0602—IG	NITION CO	DIL, SWITCH AND LOCK—Cont'd. (Plate 06-1)		
0602-8	1563193 G132900	BRACKET, transigniter primary ballast supt. ) spec. orders SCREW, fastening No. 10 - 32 x 5/8" on R1, R2		
	$\begin{array}{c} 1540269 \\ 533314 \end{array}$	CABLE, ignition coil to primary resistor		
602-10	1560596	CABLE, coil to primary ballast—spec. orders on R1, R2	. All	. 1
	1542897 G132930 G186986	BRACKET, ignition coil	. R1, R2	
	1546393 2078X2 G1200614 G138479	■JUNCTION BLOCK, transigniter heatsink wire SCREW, fastening No. 8 - 32 x 3/8" NUT, terminal No. 10 - 32 WASHER, lock No. 10	. R1, R2	. 2 . 3
	1556951 1563009 1951X13	BRACKET, ignition coil bracket support BRACKET, ignition coil bracket support SCREW and WASHER, fastening 5/16" - 18 x 3/8"	. R3, R4	. :
		SHIELD, coil emission—See SHIELD, dist, and coil emission—Group 060	<b>1</b> All	
	1549705 1557550 1546371 1544987 G271169	SWITCH less LOCK and KEYS, ignition and starting         ESCUTCHEON, switch         SPRING, tension         SPACER, tension spring         NUT and WASHER, terminal No. 10 - 32	. All All	
	$\frac{1556928}{1561788}$	LOCK KIT, ignition and door (Yale) (before serial 4892) LOCK KIT, ignition and door (Yale) (after serial 4892)		
	$\frac{1555547}{1561784}$	LOCK CYLINDER w/KEYS, ignition (before serial 4892) LOCK CYLINDER w/KEYS, ignition (after serial 4892)		
	$\begin{array}{c} 1555538\\ 1561740\\ 1555550\\ 1561741 \end{array}$	KEY, ignition lock (coded to specified key No.) (before serial 4892) KEY, ignition lock (coded to specified key No.) (after serial 4892) KEY, ignition lock (blank) (before serial 4892)	. All	
0603—SP	ARK PLUG	AND DISTRIBUTOR CABLES (Plates 01-2, 06-2)		
9603-1 9603-1 9603-1 9603-1 9603-1 9603-1	1559195 1558062 1560136 1560973 1560136 1560564	SPARK PLUG, 14mm Champion No. J-12YSPARK PLUG, 14mm Champion No. J9YD (1st step cold)SPARK PLUG, 14mm Champion No. J61Y (2nd step cold)SPARK PLUG, 14mm Champion No. J10SPARK PLUG, 14mm Champion No. J61Y (1st step cold)SPARK PLUG, 14mm Champion No. J61Y (1st step cold)SPARK PLUG, 14mm Champion No. J79 (2nd step cold)	.       R1, R2         .       R1, R2         .       R3, R4         .       R3, R4	
	536599	GASKET, spark plug	. All	
	$\frac{1557780}{1563131}$	CABLE SET, ignitionconsists of: spark plug andCABLE SET, ignitiondist. coil high tension cables		_
	$\begin{array}{c} 1557766\\ 1557767\\ 1557768\\ 1557769\\ 1557770\\ 1560552\\ 1560553\\ 1560553\\ 1560554 \end{array}$	CABLE, spark plug—No. 1, 2, 4CABLE, spark plug—No. 3CABLE, spark plug—No. 5, 6CABLE, spark plug—No. 7CABLE, spark plug—No. 8CABLE, spark plug—No. 1, 2, 4CABLE, spark plug—No. 3CABLE, spark plug—No. 5, 6	R1, R2         R1, R2         R1, R2         R1, R2         R1, R2         R1, R2         R3, R4         R3, R4	
*—Used	as required	With transistorized ignition system.		

ILLUST. NUMBER		CHANGE DESCRIPTION	MODELS	C
)603—SP/	1560555	AND DISTRIBUTOR CABLES—Cont'd. (Plates 01-2, 06-2) CABLE, spark plug No. 7	R3 R4	
	1560555	CABLE, spark plug No. 8	R3, R4	
	$1557776 \\ 1560576 \\ 1558289$	CABLE, dist. to coil high tensionCABLE, dist. to coil high tensionCABLE, dist. to coil low tension	R1, R2 R3, R4 R1, R2	
	$\begin{array}{c} 44961 \\ 526794 \end{array}$	NIPPLE, high tension cables—dist. end NIPPLE, high tension cables—coil end		
)603-20 )603-21	1556944 1556941 25X88 G121753	SHIELD, right, spark plug emission SHIELD, left, spark plug emission CROWN NUT, to support WASHER, sh'prf. 1/4"	All	
603-27	1556947	SUPPORT, spark plug emission shield	All	
)603-30 )603-31	1557221 1557215 G120393 G120375 G120380	SHIELD, right, spark plug cables emission         SHIELD, left, spark plug cables emission         SPACER, left shield         NUT, to support hex. 1/4" - 20         WASHER, lock 1/4"	All	
603-35 603-36	$1557723 \\ 1557730$	SUPPORT, right, spark plug cables emission shield		
603-39 603-40	$1557569 \\ 1557568$	INSULATOR, right, spark plug cables emission shield		
)603-44 )603-45 )603-49	1557225 1557226 1557658 25X88 G120392 G121753	COVER, right, spark plug cables emission shield COVER. left, spark plug cables emission shield SPACER, cover CROWN NUT, to shield WASHER, plain 1/4" WASHER, sh'prf. 1/4"	All All All All	
606—ST	ARTER MO	TOR (Plates 06-1, 4)		
0606-1 0606-1	1560946 1560947 1550791 G120214 529367 G271506 G120383	STARTER MOTOR ASSY. (except AD.) STARTER MOTOR ASSY. (with AD.) NUT, terminal (special) WASHER, lock 5/16" BOLT, to clutch housing (special) NUT, hex. 7/16" - 20 WASHER, lock 7/16"	All	
606-5	1555490	ARMATURE, starter motor	All	
606-6 606-6 606-6 606-6 606-7	510774 190460 1686879 1686878 510774	THRUST WASHER, armature commutator end—1/32" thickTHRUST WASHER, armature commutator end—3/64" thickTHRUST WASHER, armature commutator end—1/16" thickTHRUST WASHER, armature commutator end—5/64" thickTHRUST WASHER, armature commutator end—5/64" thickTHRUST WASHER, armature commutator end—5/64" thick	All	
606-8	1550794	PLATE, starter motor commutator end	All	
606-11	1550792 1550793 G120622	PLATE, starter motor brush SCREW, to frame (special) BOLT, to frame No. 8 - 32 x 7/16" NUT, hex. No. 8 - 32	All	•
0606-13	1550789	WASHER, lock No. 8 BRUSH SET, starter motor	All	
1000-19	1000100	DRUGH SE1, Starter motor	All	1

0606


ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE
606-ST	ARTER MO	TOR—Cont'd. (Plates 06-1, 4)		
606-15	176203	SPRING, starter motor brush	A 11	
606-20	1550790 G120380	BOLT, starter motor frame thru (special) WASHER, lock 1/4"	All	
606-21	1550796	PLATE and BUSHING, starter motor center		
000-21	G138479	SCREW, to housing No. 10 - 32 x 7/16"	All	
606-24 606-24	1555491 1555492	HOUSING w/BUSHING, Bendix Drive (except AD.)	All	
000-24		DOWEL, pin 1/8" x 7/16"		
606-23	1540779	BUSHING, Bendix drive housing	All	
$606-32 \\ 606-35$	$\frac{1550373}{1550797}$	BENDIX DRIVE COMPLETE, starter motor PIN, to shaft		
607—ST	ARTER SW	ITCH (Plate 06-1)		
		SWITCH, starter (See SWITCH, ignition and starting-Group 0602)	All	
607-2	1539716 G120368	SWITCH, starter (magnetic)	All	
	G120308	NUT, terminal 5/16" - 24 WASHER, sh'prf. 5/16"		
	1296X253	SCREW, fastening 1/4" - 20 x 3/4"	All	
		WASHER, sh'prf. 1/4"	All	·
509–AL	TERNATOR	AND REGULATOR (Plates 06-1, 5)		ĺ
509-1	1556902	ALTERNATOR w/PULLEY ASSY.		
609-1 509-3	$1561640 \\ 1558019$	ALTERNATOR less PULLEY ASSY.		
009-0	G120613	STUD, terminal		
	G120392	WASHER, plain 1/4"		
	G120380	WASHER, lock 1/4"	All	
	G181639	BOLT, to bracket $3/8'' - 24 \times 1 \cdot 1/4''$		
	G186312 G120369	BOLT, to bracket 3/8" - 24 x 4" NUT, hex. 3/8" - 24		
	G120305 G120382	WASHER, lock 3/8"		
609-5	1555897	BRACKET, alternator mtg. (less A.C.)		
		BRACKET, alternator mtg. (with A.C.) See BRACKET, compressor mtg.—Group 2102	R1, R4	
		BRACKET, alternator mtg. (less A.C.) See BRACKET, supercharger mtg.—Group 0320	R2, R3	
	G181338	BOLT, to base $5/16'' - 24 \ge 7/8'' \dots$	R1, R4	
	G120368	NUT, hex. $5/16'' - 24$		
	G120214	WASHER, lock 5/16")	R1, R4	1
509-8	1555899	BASE, alternator mtg. bracket)	R1, R4	
	G179859 G136857	SCREW, to pump 7/16" - 14 x 1-1/8". { less A.C	R1, R4 R1, R4	
<b>609-12</b>	1555898	ARM, alternator adj. (less A.C.)	R1. R4	
509-12 509-12	1555909	ARM, alternator adj. (less A.C.)	,	
	G180078	SCREW, to alternator 5/16" - 18 x 7/8"		
	G120393 G120214	WASHER, plain 5/16"		
309-15	1558003	PULLEY, alternator drive	R1, R2	
609-15	1559311	PULLEY, alternator drive		
609-18	G106750 639053	KEY, woodruff No. 6 NUT, to rotor (special) WASHER, lock	All	
	···· · ·	WASHER, DER		
TIGO OF	s required.			

ILLUST. NUMBER		CHANGE DESCRIPTION	MODELS	PI C
		AND REGULATOR-Cont'd. (Plates 06-1, 5)		
		FAN, alternator	A 11	
609-22	1558004	•		
609-27	1558010	STATOR, alternator		
609-32	$\frac{1558006}{639055}$	ROTOR and SLIP RING, alternator		
609-37	1558013	HEAD, alternator slip ring end	All	
609-40	1558008	HEAD, alternator drive end	All	
609-43	1558014	BEARING, alternator slip ring end head	All	
)609-46 )609-47	1558009 ▲	BEARING, alternator drive end head RETAINER, bearing SCREW and WASHER, retainer No. 10 - 32 x 1/2"	All	
609-49	1558007	SPACER, alternator drive end head bearing	All	
)609-5 <b>2</b>	1558002	BRUSH SET, alternator	All	
609-55	1558018	SPRING, alternator brush	All	
)609-58 )609-59	$1558015 \\ 1558016$	RECTIFIER, alternator positive		
609-62	1558017	PLATE, alternator positive rectifier mounting SCREW, fastening No. 10 - 24 x 5/8"		
609-65	1558012	EYELET, alternator rectifier and stator terminal connector	All	
)609-68	1558005	BOLT, alternator thru WASHER, lock No. 10	1	- T
0609-72	1556952 1296X253 G121753	REGULATOR, alternator voltage SCREW, fastening 1/4" - 20 x 3/4" WASHER, sh'prf. 1/4"	All	
)610—ST(	ORAGE BA	TTERY (Plate 06-1)		
)610-1 )610-1 )610-1	SP-51185 SP-51181 SP-51182	BATTERY, drained (60 amp.) Export (before serial 4892) BATTERY, drained (53 amp.) Export	All All All	
	SP-51188 SP-51189	ELECTROLYTE (6.1 qt. pkg.) ELECTROLYTE (5 gal. container)		
	SP-51190	DISPENSER, electrolyte	All	.
		BOX, battery (part of fender apron)	A11	
	1351467 1351468 1339477 1337178 1350251 1358836 1358832  3044X2	RIM, front, battery hold down } before serial 4892 RIM, rear, battery hold down } before serial 4892 RIM, battery hold down (after serial 4892) ROD, inner, rim hold down (incl. reinforcement) } before serial 4892 ROD, outer, rim hold down after serial 4892 ROD, rear, rim hold down after serial 4892 RIVET, to apron (outer rod) WING NUT, 5/16" - 18 WASHER, plain 5/16"	All	· · · · · · · · ·
		BATTERY CABLES—See Group 0630		
		AMMETER—See Group 1709		
▲—Not av	v <b>ailable.</b> 5 required.			

Ł

ILLUST. NUMBER		DESCRIPTION	MODELS	PEI CA
		IES —LIGHTING, INSTRUMENT, FOOT DIMMER AND (Plate 06-1)		
)615-1 )615-1	1557419 1561930	SWITCH, lighting (before serial 4879) SWITCH, lighting (after serial 4879) SCREW, fastening No. 6 - 32 x 3/8"	All	1
)615-4 )615-4	1557419 1561930	SWITCH, instrument lamp (before serial 4879)SWITCH, instrument lamp (after serial 4879)SCREW, fastening No. 6 - 32 x 3/8"	All	1
0615-6	1557964 G271169	RESISTOR, instrument lamp BOLT, fastening No. 10 - 32 x 5/8" NUT and WASHER, No. 10 - 32	All	2
		CIRCUIT BREAKERS—See Group 0627		
0615-7	1547356 G120361 G106497	SWITCH, head lamp foot dimmer NUT, hex. No. 10 - 24 WASHER, lock No. 10	All	
0615-12	666858	SWITCH, stop lamp	All	
0617—HE	AD AND P	ARKING LAMPS (Plates 06-1, 6)		
		Head Lamp		
0617-1 0617-1	1350750 1358820 2043X13	HEAD LAMP (before serial 4892) HEAD LAMP (after serial 4892) SCREW and WASHER, fastening 1/4" - 14 x 5/8"	All	:
0617-3	$1350398 \\ 1350399 \\ 1350399$		All	:
0617-3 0617-5	$1358784 \\ 1350397$	GASKET, head lamp well glass cover (before serial 4892)		
0617-5	1358786	GASKET, head lamp well glass cover (after serial 4892)	All	
0617-6 0617-6	1350532W 1350533W 1358849W 2081X21 1578X34 1526X55	RIM, right, head lamp well glass cover       before serial 4892         RIM, left, head lamp well glass cover       before serial 4892         RIM, head lamp well glass cover       for 1350532, 3         SCREW, fastening No. 6 - 18 x 1"       for 1350532, 3	1	
	1743X29	SCREW, fastening No. 6 - 18 x 1" SPEED NUT, No. 6 for 1358849	All	
0617-8	1350113X2 1523X18	RIM, head lamp (before serial 4892)            SCREW, fastening No. 8 - 32 x 1-1/8"		
0617-9	1358798W 1358799W 1526X55 1743X29	BEZEL, right, head lamp BEZEL, left, head lamp SCREW, fastening No. 6 - 18 x 1" SPEED NUT, No. 6	All	
0617-11	1358787	GASKET, head lamp bezel (after serial 4892)	All	
0617-15 0617-15	$1350751 \\ 1358821$	BODY, head lamp (before serial 4892)	All	
0617-26	1332701	SEALED BEAM UNIT, head lamp	All	:
0617-27 0617-28	1330108 1330107 G137948	BASE, sealed beam mounting SPRING, retainer RIVET, spring retaining	All	:
0617-29	1330109 G450211	RING, sealed beam retaining SCREW, to base No. 8 - 32 x 3/8"	All	

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE C/
0617—HE	AD AND I	ARKING LAMPS—Cont'd. (Plates 06-1, 6)		
		Head Lamp—Cont'd.		
)617-58 )617-61 )617-62	1330106 1330103 1350752	SCREW, head lamp focusing	All	
	172653 G120375 G121753	CLIP, to apron BOLT, to apron 1/4" - 20 x 5/8" NUT, hex. 1/4" - 20 WASHER, sh'prf. 1/4"	All	:
		Parking Lamp		
0617-80 0617-80	1350504  G274160	SOCKET and CABLES, parking and signal lamp (before serial SOCKET and CABLES, parking and signal lamp (after serial SCREW, to housing No. 6 - 32 x 1/2" (for 1350504)	al 4892). All	
617-82	1350507	GASKET, parking and signal lamp housing to body (after series	ial 4892) All	
0617-84 0617-84 0617-84-1	1350502 1358720 1358723 1959X1 G271166	HOUSING and CABLES, parking and signal lamp (after seria BRACKET, fastening	All All	
617-84-2	1358715	GASKET, parking and signal lamp housing to body (after seri	al 4892) All	
0617-85 0617-85 0617-85 0617-86 0617-86	1350106 1358722 1360697 1350108 1350595 1529X20	LENS, outer, parking and signal lamp (before serial 4892) LENS, parking and signal (clear) (after serial 4892) LENS, parking and signal lamp (amber) (after serial 4892) LENS, inner, parking and signal lamp (amber) LENS, inner, parking and signal lamp (white) before serial SCREW, fastening No. 6 - 32 x 1/2"	All All I 4892 All	:
)617-88 )617-88	$\frac{1350107}{1358716}$	GASKET, parking and signal lamp lens (before serial 4892) . GASKET, parking and signal lamp lens (after serial 4892)		
617-95 617-95	G454645 1358200	BULB, parking and signal lamp (clear) (No. 1034) BULB, parking and signal lamp (amber)		•
)619–TA	IL AND ST	OP LAMP (Plates 06-1, 6)		
)619-9 )619-10	1350292W 1350293W 1951X14	BODY, right, tail lamp BODY, left, tail lamp SCREW, fastening 1/4" - 20 x 7/8"	All	
619-11	1350768	GASKET, tail lamp to body	All	
619-15	G454645	BULB, tail, stop and signal lamp (No. 1034)		
619-19	1350294 1350295 G450213	LENS, right, tail lamp LENS, left, tail lamp SCREW, to body No. 8 - 32 x 1/2"	All	
619-22	1350296	GASKET, tail lamp lens	All .	
	<b>A</b>	SOCKETS and CABLES, tail lamp (part of wiring harness)	All	

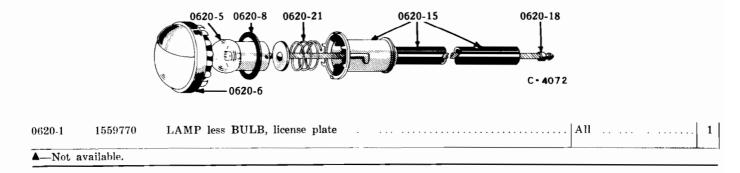

•

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE CA
		rE LAMP—Cont'd. (Illust. Page 69)		
620-5	G142450	BULB, license lamp (No. 67)		
620-6	533704	LENS, license lamp	All	
620-8	534195	★GASKET, license lamp lens	All	
620-15	533705	SOCKET and LOOM, license lamp	All	·
620-21	<b>▲</b> 533707	CABLE, license lamp SPRING, socket coil		
0621—DIR	ECTIONAL	LAMPS (Plates 06-1, 7)		
		LAMP, front signal (See parking lamp—Group 0617) LAMP, rear signal (See tail lamp—Group 0619)		
621-18	1556137 526600X4	SWITCH and CABLES, signal lights) not used tilt CLIP, cable to steering post (lacer)) steering wheel		
	1561632 G274104 G163210	SCREW, fastening No. 10 - 24 x 3/8" { used w/tilt	All All All	
	1561660	CABLE, signal switch to chassis cables connector	All	
	<sup>1</sup> 562317 1562318	SPRING, switch release) used w/tilt SPRING, switch detent	A11	
621-20	$1555280 \\ 1561735$	LEVER, signal switch oper. (not used tilt steering wheel) LEVER, signal switch oper. (used w/tilt steering wheel)		
	1562319	YOKE ASSY. (used w/tilt steering wheel)	All	
	1562316	RING, post retainer (used w/tilt steering wheel)	A11	
	1562320 1562321 G423542	WIRE TUBE and CLAMP ASSY) used w/tlit SCREW, fastening No. 6 - 32 x 5/16" steering wheel SCREW and WASHER, to switch No. 8 - 32 x 1-1/2"	All	
621-32	1558203	FLASHER, signal lights	All	
		BRACKET, flasher supt.—See FUSE BLOCK—Group 0627	A11	
621-36	G120151	FUSE, signal lights (15 amp.)		
	1549503	CONNECTOR, cables (6 wire)		
621-45	1555953 1561646	CAM, steering wheel signal (not used tilt steering wheel) CAM, steering wheel signal (w/tilt steering wheel)	All	
621-50	1555875	BULB, signal lights tell-tale		
J622—LIC	AC-3284	E BRACKETS LICENSE PLATE FRAME KIT	A 11	
)622-10	AC-5284 1350230	BRACKET, rear license plate (illust. plate 21-21)		
022-10		BOLT, to panel 1/4" - 20 x 7/8"	All	
	3183X1 G120380	WELL NUT, 1/4" - 20 WASHER, lock 1/4"		
		BRACKET, front license plate (part of front bumper)		
	G120628	BOLT, license plate fastening		
	G107814 1578X42	NUT, stamped 1/4" - 20 (front plate)	All	
▲—Not av *—Use as	vailable s required.	<b><math>\star</math></b> —Use when socket has no molded gasket.		

ILLUST. NUMBER	PART NUMBER	DESCRIPTION	MODELS	P C
				İ
	RN (Plate			
625-1	1555004	HORN, right (Sparton—high tone)		·
625-1	1555005 1905X18	HORN, left (Sparton—low tone) BOLT, fastening 5/16" - 18 x 1"		
	1505X18 1542X50	SPEED NUT, left horn bolt		
	G271184	NUT and WASHER, hex. 5/16" - 18"		
	G138485	WASHER, sh'prf. 5/16"		
625-5	1557365	RELAY, horn		1
520-0	1296X253	SCREW, fastening		
	G121753	WASHER, sh'prf. 1/4"		
627—CH	ASSIS WI	ING, FUSE BLOCK, CIRCUIT BREAKERS, ETC. (Plate 06-1)		
627-1	1557426	HARNESS, chassis wiring	All	
	1558208	CONNECTOR, starting circuit		
	1540836	GROMMET, to dash	All	
	533314	TERMINAL, cable (spade)		
	1685390	TERMINAL, cable (flag)		
	$1546943 \\ 1544241$	TERMINAL, cable snap on (spade) TERMINAL, cable snap on (spade)		
	1545010	TERMINAL, cable snap on (flag)		
	1540296	TERMINAL and WIRE, cable sleeve		
	1540297	TERMINAL and WIRE, cable sleeve		
	1350094	CLIP, to dash and apron	All	
	905731	CLIP, to dash and apron		
	1350094	CLIP, to apron flange and inst. board	All	
	186090	CLIP, back-up lamp cable (4 spd. and AD. trans.)		
	526600X4 511382	CLIP, signal cables to jacket CLIP, cigar lighter cable		
	3190X3	SCREW, clip No. 10 x 5/8" (for 1350094, 511382 clip)		
		SCREW, clip $3/8" - 16 \ge 1/2"$ (for 186090)		
	G120382	WASHER, lock 3/8"	All	
		BOLT, clip, No. 10 - 32 x 3/4"	All	
	G271169	NUT and WASHER, hex. No. 10 - 32		
627-7	1557336	HARNESS, tail lamp wiring-Note 1	All	
627-7	1560090	HARNESS, tail lamp wiring-Note 2	All	
	1350094	CLIP, to floor pan	All	•
	3190X3	SCREW, No. 10 x 5/8"	All	•
527-9	1557836	HARNESS, w/s header switch wiring		
827-11	1557716	SOCKETS and CABLE, w/s header switch lighting	All	•
	1557883	BULB, w/s header switch lighting		
327-14	$1557464 \\ 1501X32$	FUSE BLOCK w/CIRCUIT BREAKER, electrical SCREW, fastening No. 10 - 24 x 1/2"		
	G147683	FUSE, stop lamp (6 amp.)		
	G148086	FUSE, trans. shift lamp (2 amp.)		
	G147685	FUSE, dome lamp and cigar lighter (14 amp.)		
		FUSE, back-up lamp (10 amp.) See Group 0632		
		FUSE, directional lamp (15 amp.) See Group 0621         FUSE, clock (2 amp.) See Group 1718	All	·
		FUSE, clock (2 amp.) See Group 1718           FUSE, heater (15 amp.) See Group 2101		
		FUSE, radio (2.5 amp.) See Group 2101		

\*---Use as required

Note 1—Used before car serial 63R-2,391. Note 2—Used on and after car serial in Note 1.

NUMBER		DESCRIPTION	MODELS	P C
				Ī
		NG, FUSE BLOCK, CIRCUIT BREAKERS, . (Plate 06-1)		
627-18	1688932	CIRCUIT BREAKER, head lamp (20 amp.) CIRCUIT BREAKER, w/s wiper (5 amp.) See Group 2149		
		SOCKET and CABLES, trunk light (See Group 2130)	All	
	1560412	CABLE, ignition terminal to coil—Note 3	All	·
<b>630–BA</b> 630-1 630-1	<b>ITERY AND</b> 1540075 1540081	STARTING CABLES AND GROUND STRAP (Plate 06-1) CABLE, battery to starter switch (before serial 4892) CABLE, battery to starter switch (after serial 4892)	All	
630-3	1539934 186090	CABLE, starter switch to motor CLIP, to frame SCREW, clip 3/8" - 16 x 1/2"	All	
630-5	1540066	CABLE, battery ground		
	529411X8 1501X15	STRAP, engine ground SCREW, to bracket 5/16" x 1/2"	All	
632_BA	CK-UP LAM			
632-1	1350591 2062X5 G271163 1554097 1350094 172652 3190X3	SOCKETS and CABLES, back-up lamp BOLT, to deck lid No. 8 - 32 x 3/8" NUT and WASHER, No. 8 - 32 CLIP, cable to panel CLIP, cable to panel CLIP, cable to hinge SCREW, clip No. 10 x 5/8" (for 182317)	All	
632-10	1350256 1350257	LENS, right, back-up lamp LENS, left, back-up lamp		
63 <b>2-11</b>	1350260	GASKET, back-up lamp lens	All	,
632-13	1350258 1350259 1526X49 1743X10	RETAINER, right, back-up lamp lens         RETAINER, left, back-up lamp lens         SCREW, to deck lid No. 6 x 3/4"         SPEED NUT, No. 6	All	
632-14	G142456	BULB, back-up lamp	A11	
532-15	1557538	SWITCH and BRACKET, back-up lamp (3 speed trans.)		
332-15	1553052 G157105 G121801	SWITCH, back-up lamp (4 speed trans.) SCREW, to bracket No. 10 - 32 x 1/2" WASHER, sh'prf. No. 10	All	
332-15 332-16	1557359 1557448 G446152 G138479	SWITCH, back-up lamp (with AD.) SCREW, to bracket (special) WASHER, spring WASHER, sh'prf. No. 10	All All	
532-17	1553199	BRACKET, switch to trans. (4 speed trans.) BRACKET, switch mounting (with AD.) See BRACKET, switch— Group 0853		
	••••	SCREW, fastening (4 speed trans.) See SCREW, control housing— Group 0701B		
	1555741	LEVER, switch operating (3 speed trans.) NUT, fastening—See NUT, outer shift lever—Group 0747A	R1	
632-20 632-20-1	1555743 1553200 1557389 631580	ROD, switch operating (3 speed trans.)         ROD, switch operating (4 speed trans.)         ROD, switch operating (with AD.)         CLIP, rod spring	All	
	G142864	FUSE, back-up lamp (10 amp.)		

Note 3—Used on and after car serial 63R-1,832, however, cars before this car serial may be equipped if so desired.

0627


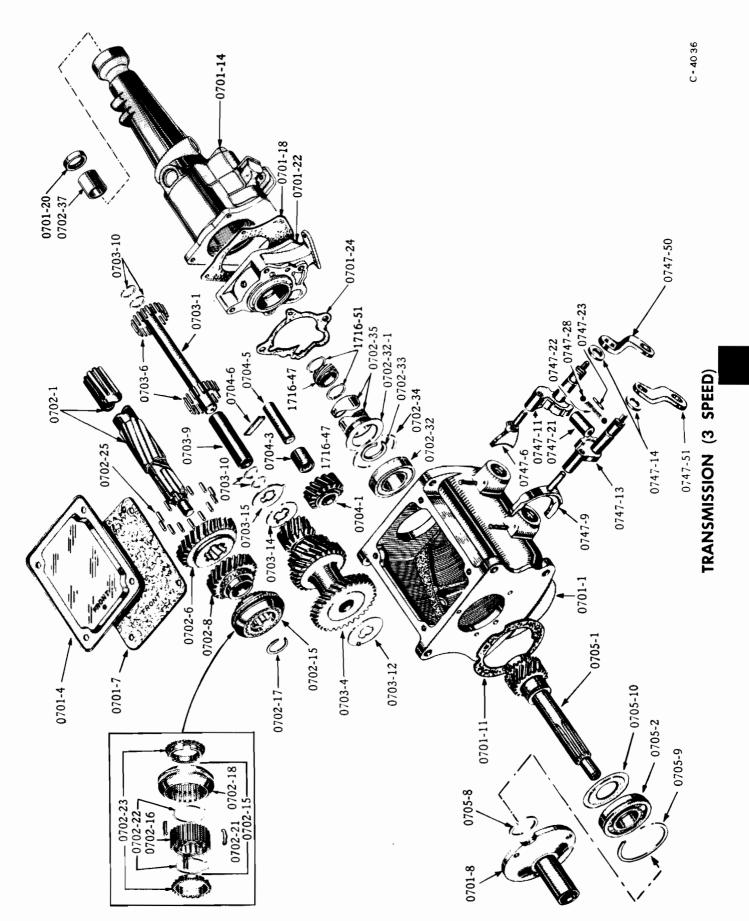


Plate 07-1

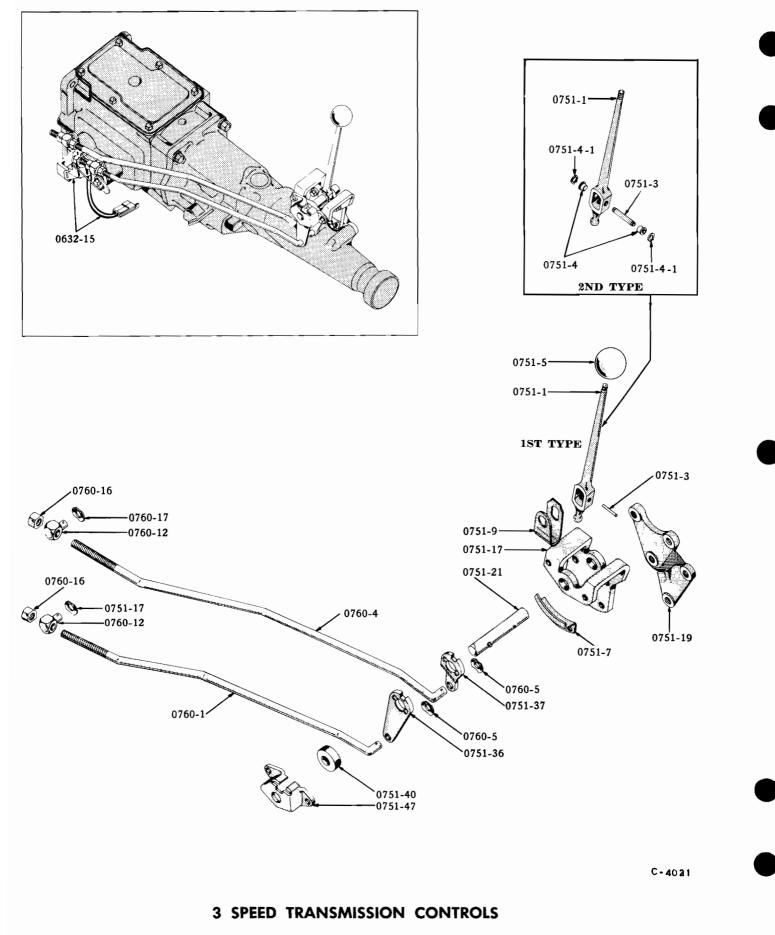

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE CA
07004_1	RANSMISS	ION ASSEMBLY		
₩ UUAI	1557274	TRANSMISSION ASSY. (except 4.09 R/A)	R1	
	1557332 G179861 G120368	TRANSMISSION ASST. (except 4.09 R/A) TRANSMISSION ASSY. (w/4.09 R/A) SCREW, to clutch housing 7/16" - 14 x 1-3/8" WASHER, lock 7/16"	R1 R1	
)701A1		ION CASE (Plate 07-1)		
0701-1	1545141 G444746 G105602	CASE w/PLUGS, transmission PLUG, filler and drain PLUG, expansion 23/32"	R1	
0701-4	1545144 G180091 G138485	COVER, case SCREW, to case 5/16" - 18 x 5/8" WASHER, sh'prf. 5/16"	R1	
0701-7	1545145	GASKET, case cover	R1	
0701-8	1545155 G179817 G138485	FLANGE, front, case	R1	
0701-11	192306	GASKET, front flange	R1	
0701-14	1557610 G103896 G444744 1545143 G179869 G103027 G120383	FLANGE, rear, case         PLUG, expansion         PLUG, filler 1/2" pipe         STUD, to case (special)         SCREW, to case 7/16" - 14 x 2·3/4"         NUT, Stud hex. 7/16" - 14         WASHER, lock 7/16"	R1	•
0701-18	1545166	GASKET, rear flange—paper	R1	
0701-20	1553737	OIL SEAL, rear flange	R1	
0701-22	1545169	PLATE, rear flange adapter	R1	
0701-24	1545173	GASKET, rear flange adapter plate	R1	
07024_1	RANSMISS	ION MAIN SHAFT, GEARS AND BEARINGS (Plate 07-1)		
	1545150	SHAFT AND GEARS, main—consists of:       1—1545153         1—1545153       Shaft       1—1540394         1—674868       Synchronizer       2—196149         1—1540393       Gear       1—188348	R1	
0702-1	1545153	SHAFT, main	R1	
0702-6	1540394	GEAR, low and reverse sliding	R1	
0702-8	1540393	GEAR and BUSHING, second speed	R1	
)702-15	674868	SYNCHRONIZER ASSY., second and high—consists of:          1—674884 Gear       3—198970 Plate         1—198968 Sleeve       2—198971 Snap ring	R1	
)702-16 )702-17	$674884 \\ 188348$	GEAR, second and high synchronizer SNAP RING, gear 1-15/64" I.D.		
0702-18	198968	SLEEVE, second and high synchronizer shifter	R1	
0702-21 0702-22	$\frac{198970}{198971}$	PLATE, second and high synchronizer shifter		
0702-23	1555429	BLOCKING RING, second and high synchronizer	R1	
0702-25	188295	ROLLER, main shaft front bearing	R1	. 1

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION		PE CA
		GION MAIN SHAFT, GEARS AND -Cont'd. (Plate 07-1)		
0702-82 0702-82-1 0702-83 0702-83 0702-83 0702-83 0702-84 0702-85 0702-87 0702-87	1540395 1554138 1554074 1554075 1554076 188521 1554137 1545160 RANSMISS	BEARING, main shaft rear SPACER, bearing SNAP RING, small—.086 · .088 thick SNAP RING, small—.089 · .091 thick SNAP RING, small—.092 · .094 thick SNAP RING, large RETAINER, small snap ring BUSHING, main shaft rear SION COUNTERSHAFT, GEARS AND BEARINGS (Plate 07-1)	R1           R1           R1           R1           R1           R1           R1	
0703-1	1553388	COUNTERSHAFT, trans.	R1	
0703-4	1540389	GEAR CLUSTER, countershaft	R1	:
0703-6	188291	ROLLER, gear cluster bearing	R1	4
0703-9	531713	SPACER and WASHER KIT, gear cluster bearing rollers	R1	·
0703-10	512927	WASHER, gear cluster bearing rollers spacer	<b>R1</b>	.
703-12 703-14 703-15	674873 674872 674874	THRUST WASHER, front, gear cluster—brz.         THRUST WASHER, front, gear cluster—stl. & brz.         THRUST WASHER, rear of rear, gear cluster—stl.	R1	
704A-T	RANSMIS	SION REVERSE IDLER GEAR AND SHAFT (Plate 07-1)		
704-1	1540390	GEAR w/BUSHING, reverse idler	R1	
704-3	188300	BUSHING, reverse idler gear .	<b>R1</b>	
0704-5	521761	SHAFT, reverse idler gear .	R1 .	
704-6	512928	LOCK PLATE, reverse idler shaft and countershaft	<b>R1</b>	
)705A-T	RANSMIS	SION MAIN DRIVE PINION AND BEARINGS (Plate 07-1)		
705-1	1540383	PINION, main drive	. R1 .	
		BEARING, front, pinion (See Clutch Pilot Bearing-Group 0207)	R1 .	
0705-2 0705-8 0705-8 0705-8 0705-8 0705-9 0705-10	1540395 188349 188350 188351 188367 674880	BEARING, rear, pinion SNAP RING, small—.090 SNAP RING, small—.093 SNAP RING, small—.096 SNAP RING, large SLINGER, pinion rear bearing oil	D1	
0747A-G	EARSHIFT	FORKS AND LEVERS (Plate 07-1)		
0747.6	674883	SHOE, gearshift low and reverse (also known as fork)	. R1 .	.
0747-9	198973	FORK, gearshift second and high	R1	
)747-11 )747-13	1545147 525368 G103565	LEVER and SHAFT, inner, low and rev. shift	R1 R1 R1	
0747-14	674869	OIL SEAL, inner shift lever shaft	R1	:
		* Salect size required		

 $\blacksquare$ —Select size required.



PART NUMBER	CHANGE DESCRIPTION	MODELS	PE CA
			İ
674890 674889 674888 674888 674887 521498	Identification           Length         Letter           SLEEVE, shift lever interlock—1.287         C            SLEEVE, shift lever interlock—1.291         B            SLEEVE, shift lever interlock—1.295         A	R1 R1 R1 R1 R1	
674885	SPRING, shift lever interlock	R1	
527517	PLUNGER, shift lever interlock	R1	
G147487	BALL, shift lever interlock 5/16"	R1	
1553067 1553067 G120376 G120393 G120214	LEVER, outer, second and high shift	R1 R1 R1	
GEARSHIFT	HAND LEVER AND BRACKET (Plate 07-2)		
$\begin{array}{c} 1556130 \\ 1559676 \\ 1552932 \\ 1559672 \end{array}$	LEVER, gearshift—Note 1 LEVER, gearshift—Note 2 PIN, to shaft (special)—Note 1 PIN, to shaft (special)—Note 2	R1          R1          R1          R1	
$\frac{1559673}{1559674}$	BUSHING, gearshift lever and pin) RETAINER, bushing	R1	
1555731	BALL, gearshift lever	R1	
1552926 G180016 G120380		R1	
1555823	SPRING, gearshift lever shaft	R1	
1552910 G180121 G120380		R1 R1 R1	
1557229 G180121 G120380	SUPPORT, gearshift lever shaft bracket SCREW, to trans. 3/8" - 16 x 7/8" WASHER, lock 3/8"	R1 R1 R1	
1554964	SHAFT and PIN, gearshift lever	R1	
$\frac{1552930}{1552929}$	LEVER, low and rev. oper. rod	R1	
1554966	SPACER, gearshift lever shaft	R1	
1552928 G180016 G120380	RETAINER, oper. rod lever SCREW, to bracket 1/4 - 20 x 1/2" WASHER, lock 1/4"	R1 R1 R1	
GEARSHIFT	RODS (Plate 07-2)		
$1556136 \\ 1556134 \\ 192057 \\$	ROD, low and rev.         ROD, second and high         WASHER, spring         COTTER 3/32" x 3/4"	R1 R1 R1 R1	
1552795 197402 G120369 184291 G120393	SWIVEL, gearshift rod NUT, outer, adj. (special) NUT, inner, adj. 3/8" - 24 WASHER, spring WASHER, plain 5/16" COTTER 3/32" x 3/4"	R1       .         R1       .         R1       .         R1       .         R1       .         R1       .         R1       .         R1       .         R1       .         R1       .         R1       .	
	GEARSHIFT GEARSHIFT GEARSHIFT GEARSHIFT 674889 674885 521498 674885 527517 G147487 1553067 G120376 G120393 G120214 GEARSHIFT 1556130 1559676 1559672 1559673 1559674 15559674 1555731 1552926 G180016 G120380 1555823 1552910 G180121 G120380 1557229 G180121 G120380 1555823 1552930 1552930 1552930 1552929 G180121 G120380 15552929 G180121 G120380 15552929 G180121 G120380 15552929 G180121 G120380 15552929 G180121 G120380 15552929 G180121 G120380 15552930 1552929 G18016 G120380 CEARSHIFT 1556136 1556134 192057  1552795 197402 G120369 184291 G120393	Number         Identification           GEARSHIFT FORKS AND LEVERS-Cont'd. (Plote 07-1)         Identification           674889         SLEEVE, shift lever interlock-1.287.         C           674889         SLEEVE, shift lever interlock-1.291.         B           674888         SLEEVE, shift lever interlock-1.290.         Not Marked           521498         SLEEVE, shift lever interlock-1.290.         Not Marked           527517         PLUNGER, shift lever interlock         537517           6147487         BALL, shift lever interlock         516°           1553067         LEVER, outer, second and high shift         5160°           6120214         WASHER, plain 5/16°         516100           GEARSHIFT         HAND LEVER AND BRACKET (Plote 07-2)         1556130           1559676         LEVER, gearshift—Note 1         1559673           1559673         BUSHING, gearshift lever and pin	NUMBER         Control         Identification           GEARSHIFT FORKS AND LEVERS—Control. (Plote 07-1)         Identification         Letter           674890         SLEEVE, shift lever interlock—1.287.         C         R1           674880         SLEEVE, shift lever interlock—1.295.         A         R1           674883         SLEEVE, shift lever interlock—1.299.         Not Marked         R1           674885         SLEEVE, shift lever interlock         R1         R1           6748865         SPRING, shift lever interlock         R1         R1           6748865         SPRING, shift lever interlock         R1         R1           1550007         LEVER, noter, low and reverse shift.         R1         R1           1550007         LEVER, noter, low and reverse shift.         R1         R1           1550007         LEVER, noter, low and reverse shift.         R1         R1           1550007         LEVER, gearshift—Note 1         R1         R1           156007         LEVER, gearshift—Note 1         R1         R1           156097         PIN, to shaft (special)—Note 1         R1         R1           1560973         BUSHING, gearshift lever         R1         R1           1569974         R1         R1

Note 1—First type used before engine No. R-1,220, however cars before this engine number may have second type parts installed if so dseired, check before ordering.

Note 2-Second type used after engine No. in Note 1.

# -IMPORTANT-


To assure prompt shipment of parts, always give

Car Serial and Engine Number

- **L H C** Left hand drive only
- **R H C** Right hand drive only


Plate 07-3

#### **TRANSMISSION**—4 SPEED

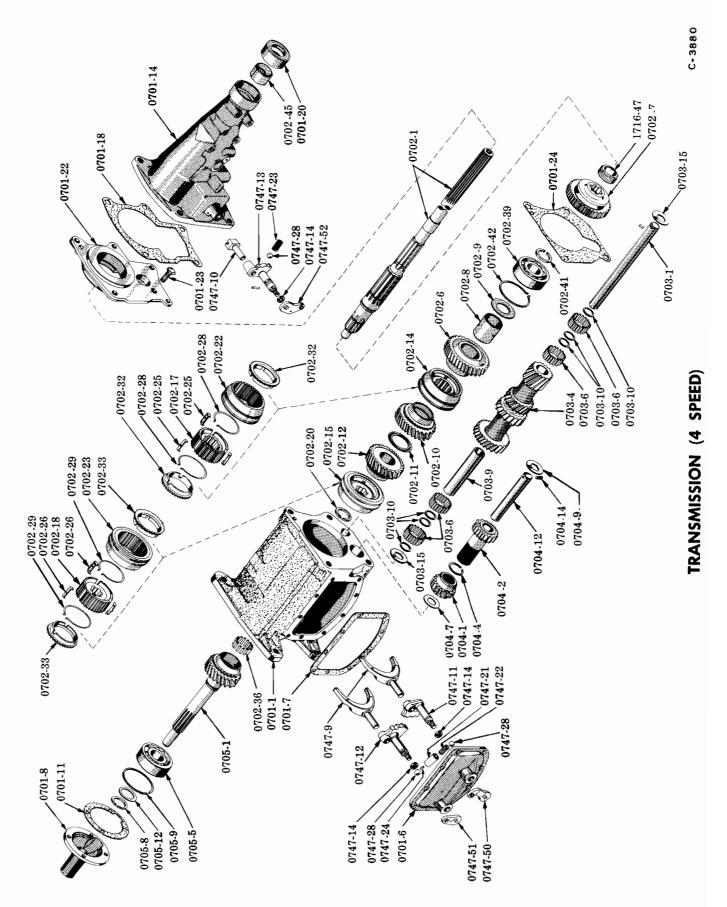

Copyright 1963 Studebaker Corporation

PAGE NO. 79

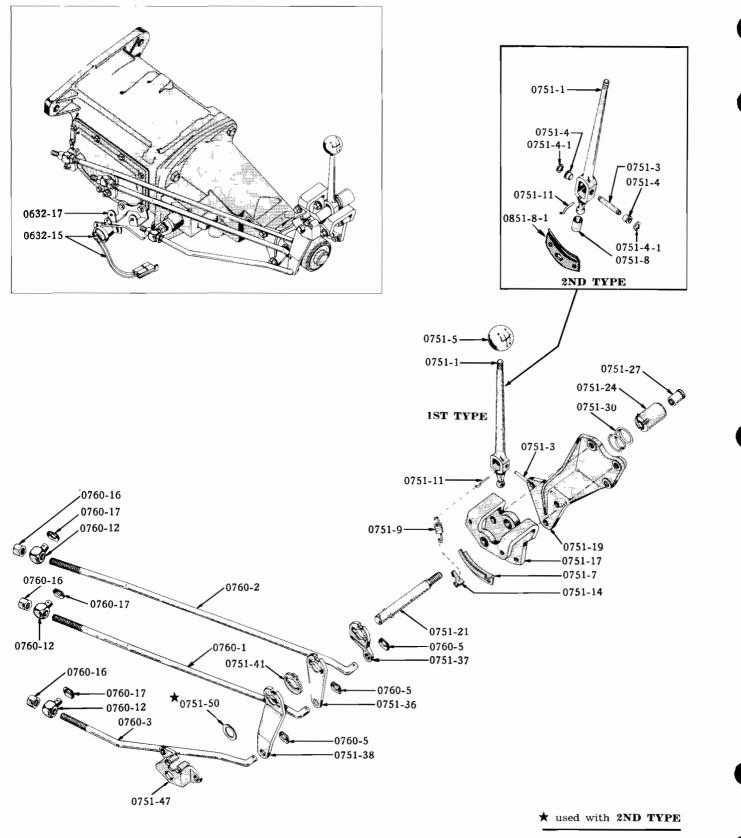

C-4022

#### **4 SPEED TRANSMISSION CONTROLS**

# **TRANSMISSION-4 SPEED**

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE CA
0700BT		TRANSMISSION ASSY (meant 207 & 455 B(A))	A 11	
	$1557162 \\ 1557374$	TRANSMISSION ASSY. (except 3.07 & 4.55 R/A)           TRANSMISSION ASSY. (w/4.55 R/A)		
	1558219	TRANSMISSION ASSY. $(w/3.07 \text{ R/A})$		
	1560567	•TRANSMISSION ASSY. (except 3.07 & 4.55 R/A)		
	1560568	•TRANSMISSION ASSY. (w/4.55 R/A)		
	$1560569 \\ 681705$	•TRANSMISSION ASSY. (w/3.07 RA)		· 1
	G179861	SCREW, to clutch housing $7/16'' - 14 \ge 1.3/8''$		
	G120368	WASHER, lock 7/16"		
0701B—T	RANSMISS	ION CASE (Plate 07-3)		
0701-1	1557393	CASE w/PLUGS, transmission		
0701-6	1553063	HOUSING, gear shift control		
	G179816	SCREW, to case $5/16'' - 18 \ge 3/4''$		
0701 7	G120214	WASHER, lock 5/16"		
0701-7	458438	GASKET, gear shift control housing		
0701-8	1540810 G179816	FLANGE, front, case		·
	G114605	WASHER, sh'prf. 5/16"	All	
0701-11	1553087	GASKET, case front flange		
0701-14	1553095	FLANGE, rear, case		
0101-14	G179859	SCREW, to adapter $7/16'' - 14 \times 1.1/8''$		
	G179886	SCREW, to adapter 1/2" - 13 x 1-5/8"	All	
		WASHER, sh'prf. 7/16"	All	
0701-18	1554057	GASKET, rear flange		
0701-18	1554057 1555257	OIL SEAL, rear flange		
0701-20		PLATE, rear flange adapter		
0701-22	1553078G141221	PIN, dowel	1	
0701 - 23	1553091	SCREW, to case (special)		
0701-24	1554058	GASKET, rear flange adapter plate	All	
	1561840	GASKET SET, trans.—Consists of the following gaskets: 1—458438 Gearshift control   1—1554057 Rear flange	All	
		1-1553087 Front flange 1-1554053 Adapter plate		
0702B—T	RANSMIS	SION MAIN SHAFT, GEARS AND BEARINGS (Plate 07-3)		
0702-1	1553069	SHAFT, main	1	
0702-6	1553075	GEAR, low speed	All	
0702-7	1553080	GEAR, reverse sliding	All	
0702-8	1553076	BUSHING, low speed gear	All	
0702-9	1553077	THRUST WASHER, low gear	All	
0702-10	1560011	GEAR, second speed		
0702-10	1553074	•GEAR, second speed		
0702-11	1553073	BEARING, second speed gear thrust	All	
0702-12	1563243	GEAR, third speed	1	
0702-14 0702-15	$1553071 \\ 1560752$	SYNCHRONIZER ASSY., low and second—consists of:★         SYNCHRONIZER ASSY., third and high—consists of:★         ★1—Gear       3458445 Plate         1—Sleeve       2681642 Snap ring		
		■—2.54 to 1 first gear ratio.		
		•-2.20 to 1 first gear ratio.		

0702B

# TRANSMISSION-4 SPEED

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	CA
		SION MAIN SHAFT, GEARS AND		
В	EARINGS-	Cont'd. (Plate 07-3)		
702-17	<b>A</b>	GEAR, low and second synchronizer		
702-18	<b>A</b>	GEAR, third and high synchronizer		
702.20	1554074	SNAP RING, third and high gear		
702-20	1554075	SNAP RING, third and high gear—.090 thick		
702-20	1554076	SNAP RING, third and high gear		
702-20	1554077	SNAP RING, third and high gear096 thick	All	:
702-22 702-23	▲ ▲	SLEEVE, low and second synchronizer shifter		
702-25	458445	PLATE, low and second synchronizer shifter	A 11	
702-25	458445 458445	PLATE, low and second synchronizer shifter		
702-28	681642	SNAP RING, low and second plate		
702-28	681642	SNAP RING, low and second plate		
				1
702-32 702-33	$\begin{array}{r} 458449 \\ 458449 \end{array}$	BLOCKING RING, low and second synchronizer BLOCKING RING, third and high synchronizer		
702-36	1553089	ROLLER, main shaft front bearing	All	1
702-39	1541089	BEARING, main shaft rear	All	
702-41	1554074	SNAP RING, small087 thick		
702-41	1554075	SNAP RING, small090 thick		
702-41	1554076	SNAP RING, small093 thick	All	.  :
702-41	1554077	SNAP RING, small—.096 thick	All	
702.42	1553079	SNAP RING, large	All	:
02-45	1556345	BUSHING, main shaft rear	All	
703B—TI	RANSMISS	ION COUNTERSHAFT, GEARS AND BEARINGS (Plate 07-3)		
703-1	458462 G103905	COUNTERSHAFT, trans. KEY, woodruff 1/8" x 5/8"		
703-4 703-4	$1560015 \\ 1553083$	GEAR CLUSTER, countershaft	All	
703-6	458461	ROLLER, gear cluster bearing		80
703-9	458456	SPACER, gear cluster bearing roller	All	] ]
703-10	458457	WASHER, gear cluster bearing roller spacer	All	•
03-15	1553084	THRUST WASHER, countershaft gear cluster	All	2
704B—TI	RANSMISS	ION REVERSE IDLER GEAR AND SHAFT (Plate 07-3)		
704-1	1553081	GEAR, front, reverse idler		
04-2	1553092	GEAR, rear, reverse idler		
04-4	1553093	SNAP RING, front gear	All	
704-7	1553082	THRUST WASHER, front reverse idler gear	A 11	
04-9	1553084	THRUST WASHER, rear reverse idler gear	All	
04-12 704-14	$\frac{1553085}{1553094}$	SHAFT, reverse idler gear		
705B—TI	RANSMISS	ION MAIN DRIVE PINION AND BEARINGS (Plate 07-3)		
705-1	1555475		All	
705-1	1553088	•PINION, main drive	All	
		<ul> <li>2.20 to 1 first gear ratio.</li> <li>2.20 to 1 first gear ratio.</li> </ul>		
		▲—Not available.		1

0702B

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE C/
0705B TI		ION MAIN DRIVE PINION AND		
		Cont'd. (Plate 07-3)		
705-5	1541089	BEARING, rear, pinion	All	
0705-8	1554074	SNAP RING, small-0.087 thick		
)705-8	1554075	SNAP RING, small090 thick		
)705-8	1554076	SNAP RING, small—.093 thick		
)705-8	1554077	SNAP RING, small—.096 thick		
)705-9	458471	SNAP RING, large		
0705-12	458472	WASHER, pinion bearing		
105-12	400412	WASHER, philon scaring		1
0747B—G	EARSHIFT	FORKS AND LEVERS (Plate 07-3)		
0747-9	1553068	FORK, gearshift (low and second, third and high)		
0747-10	1553099	FORK, gearshift(reverse)	. All	•
0747-11	1553065	LEVER and SHAFT, inner, low and second	.   All	
0747-12	1553064	LEVER and SHAFT, inner, third and high		
0747-13	1553098	LEVER and SHAFT, inner, reverse		
	G103565	PIN, reverse lever and shaft		
)747-14	684881	OIL SEAL, inner shift lever shaft	All	
0747-21	458434	SLEEVE, shift lever interlock—1.0085 long	.   All	
)747-21	458434	SLEEVE, shift lever interlock—1.0085 long		· 1
				· 1
)747-21 )747-21	$\begin{array}{r} 458433 \\ 458435 \end{array}$	SLEEVE, shift lever interlock—1.0195 long		
		,		
)747-22 )747-23	$\begin{array}{r} 458431 \\ 1553100 \end{array}$	SPRING, shift lever interlock (low and 2nd, 3rd and high) SPRING, shift lever interlock (reverse)		
0747-24	458436	PLUNGER, shift lever interlock		
0747-28	G453593	BALL, shift lever interlock		
0747-50	1553066	LEVER, outer, low and second	A17	
		LEVER, outer, low and second		
0747-51	1553067			
0747-52	1553101	LEVER, outer, reverse		
	G120376	NUT, to inner lever $5/16'' \cdot 18$		
	G120393	WASHER, plain 5/16"		
	G120214	WASHER, lock 5/16"	All	
0751B—G	EARSHIFT	HAND LEVER, SHAFT AND BRACKET (Plate 07-4)		
0751-1	1556129	LEVER, gearshift—Note 1		
0751 - 1	1559677	LEVER, gearshift—Note 2		
0751-3	1552932	PIN, to shaft—Note 1	R1, R2	.
0751 - 3	1559672	PIN, to shaft—Note 2		
0751 - 4	1559673	BUSHING, gearshift lever and pin	All	
0751-4-1	1559674			
0751-5	1552824	BALL, gearshift lever		- 1
0751-7	1552926	GUIDE, gearshift lever		
	G180016	SCREW, to bracket 1/4" - 20 x 1/2"		
0751 0	G180380			1
0751-8	<b>▲</b> 1559675	SLEEVE, gerashift lever guide—Note 2 (order 1563002 Plate)		- 1
0751-8-1	1563002	PLATE, gearshift lever anti-rattle (replaces 1559675 Sleeve)	All	• •
		#—Select size required.		

Note 1—First type used before engine Nos. R-1,220 and RS-1,259, however cars before these engine numbers may have second type parts installed if so desired, check before ordering.
 Note 2—Second type used after engine Nos. in Note 1.

0751

# TRANSMISSION-4 SPEED


ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PER CAR
0751B—G	EARSHIFT	HAND LEVER, SHAFT AND BRACKET—Cont'd. (Plate 07-4)		
0751-9 0751-11	$\frac{1552923}{1552924}$	SPRING, gearshift lever return		
0751-14	1552925	BRACKET, gearshift lever return spring		
0751-17	1552910 G180121 G120382	BRACKET, gearshift lever shaft SCREW, to bracket 3/8" - 16 x 7/8" WASHER, lock 3/8"	All	. 3
0751-19	1557199 G180121 G120382	SUPPORT, gearshift lever shaft bracket SCREW, to trans. 3/8" - 16 x 7/8" WASHER, lock 3/8"	. All	. 3
0751-21	1552912	SHAFT and PIN, gearshift lever	. All	. 1
$0751-24 \\ 0751-27$	$\frac{1552918}{1552915}$	SPRING and HOUSING, gearshift lever shaft		
0751-30	1552927	SPRING, gearshift lever shaft anti-rattle	. All	. 1
0751-36 0751-37 0751-38	$1552930 \\ 1552929 \\ 1556122$	LEVER, low and second oper. rod LEVER, third and high oper. rod LEVER, reverse oper. rod	All	. 1
0751-41 0751-41 0751-41	$1552920 \\ 1552921 \\ 1552922$	PLATE, oper. rod lever interlock—.0598 thick         PLATE, oper. rod lever interlock—.0747 thick         PLATE, oper. rod lever interlock—.0897 thick	. All	. =
0751-47	1552928 41X8 G180016 G120380	RETAINER, oper. rod lever SPACER, to bracket—Note 2 SCREW, to bracket 1/4" - 20 x 1/2" WASHER, lock 1/4"	All	. 2
0751-50	1552381	WASHER, oper. rod lever retainer spring-Note 2	All	. 1
)760B—G	EARSHIFT	RODS (Plate 07-4)		
0760-1 0760-2 0760-3 0760-5	1556126 1556128 1556124 192057	ROD, low and second ROD, third and high ROD, reverse WASHER, spring COTTER 3/32" x 3/4"	All           All           All           All	. 1 . 1 . 3
0760-12 0760-16 0760-17	1552795 197402 G120369 184291 G120393	SWIVEL, gearshift rod NUT, outer, adjusting (special) NUT, inner, adjusting 3/8" - 24 WASHER, spring WASHER, plain 5/16" COTTER 3/32" x 3/4"	All	. 3 . 3 . 3

#-Select size required.


Note 2-Second type used on and after engine Nos. R-1,220 and RS-1,259.

Plate 08-1

## **TRANSMISSION—FLIGHT-O-MATIC**

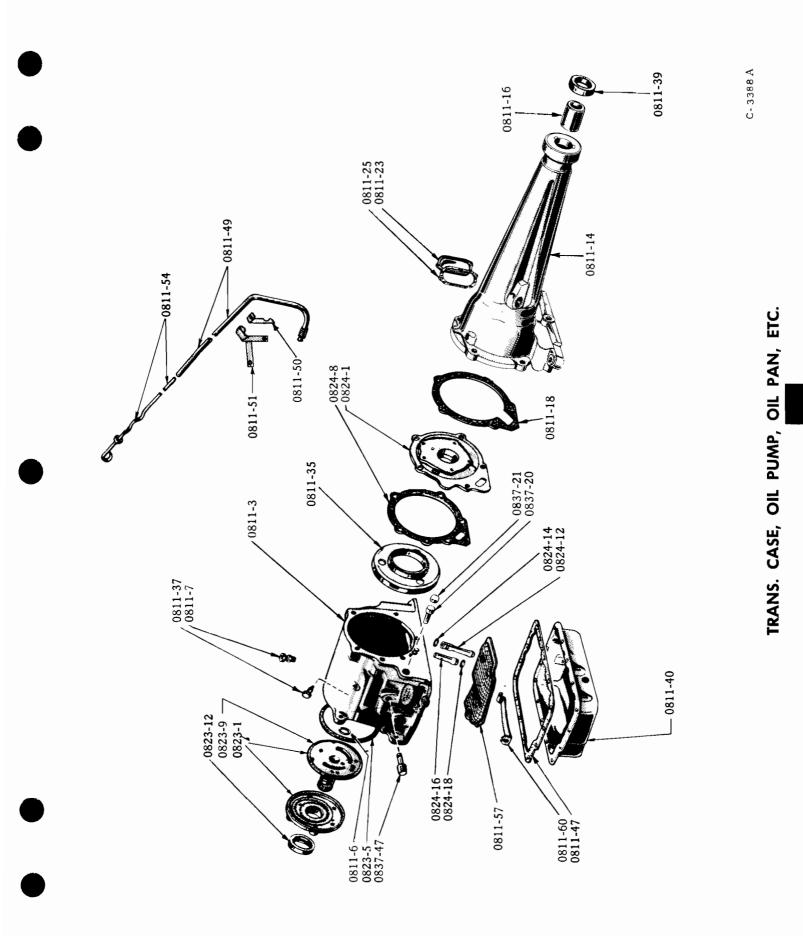


I

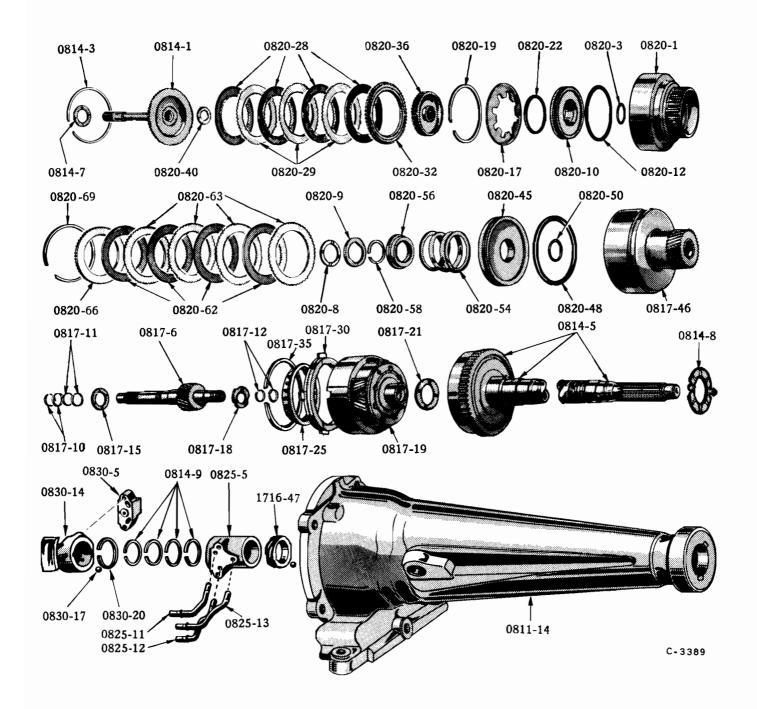


#### TRANSMISSION INTERNAL PARTS


**TRANSMISSION—FLIGHT-O-MATIC** 

Plate 08-3

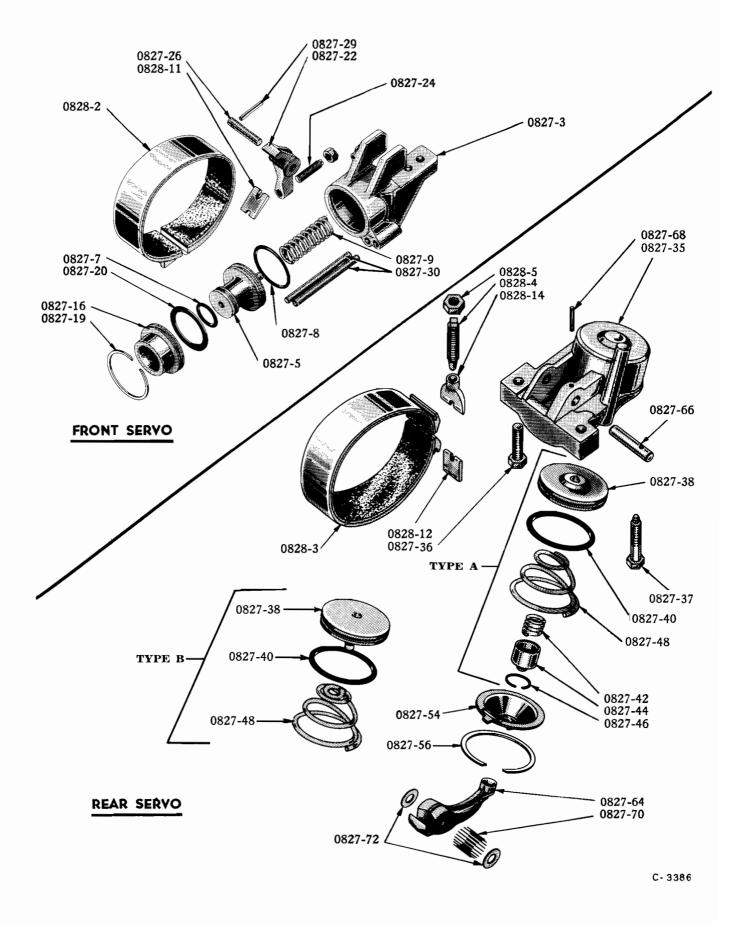

#### TRANS. SERVO UNITS AND BRAKE BANDS

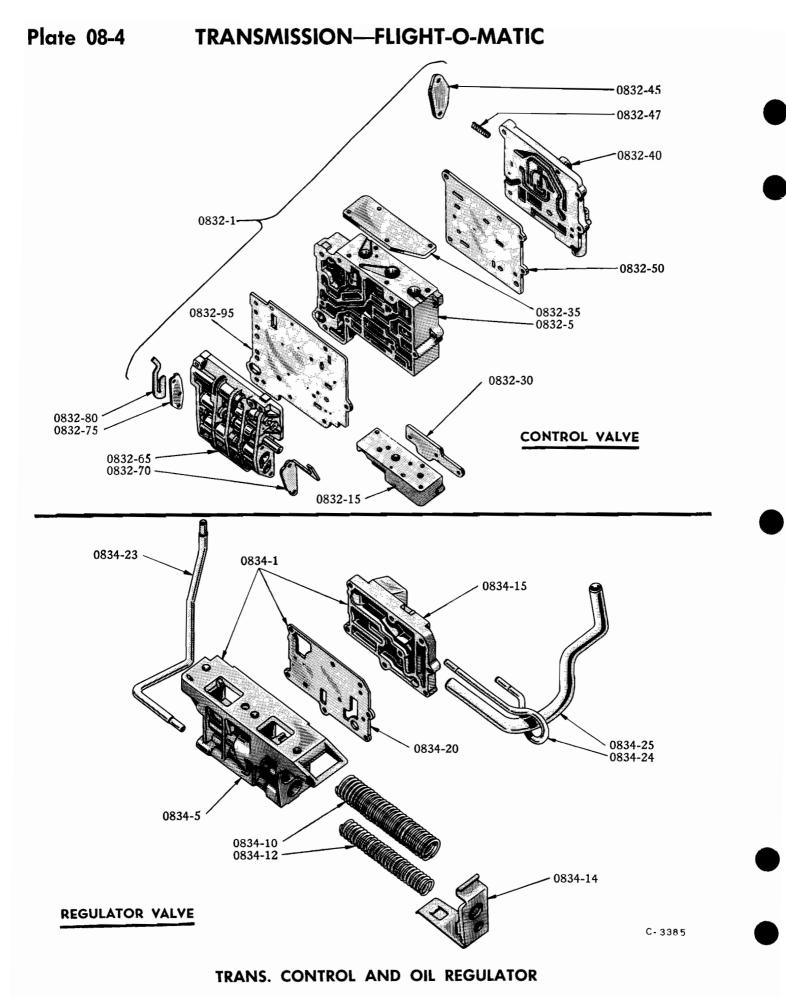

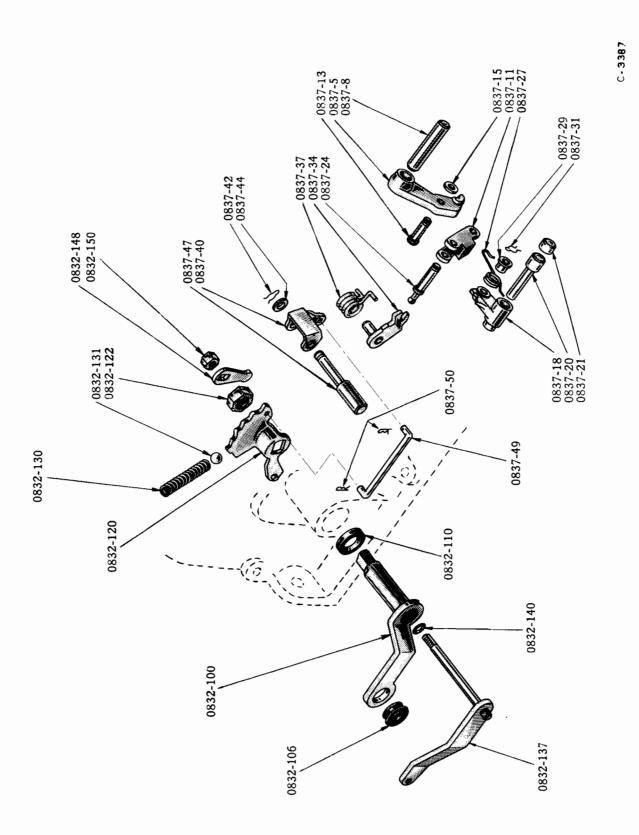


PARKING LINKAGE, THROTTLE AND CONTROL LEVERS

Plate 08-5

## Plate 08-6

**TRANSMISSION—FLIGHT-O-MATIC** 

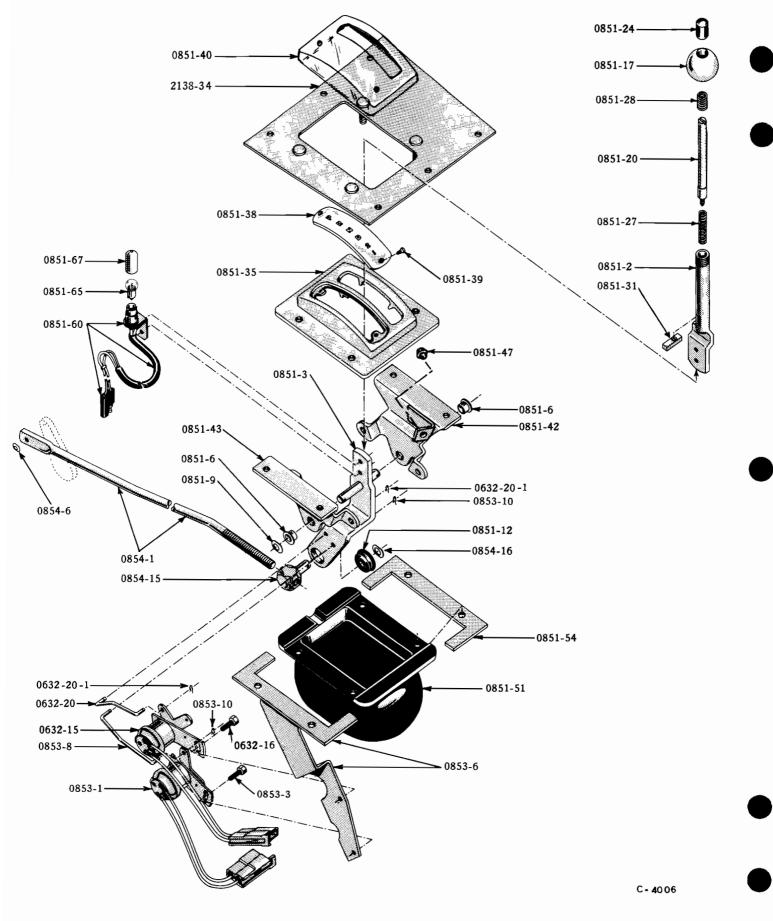

#### TRANSMISSION CONTROL PARTS

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PER
0800-FI	GHT-O-M	ATIC TRANSMISSION		
0000-11	0111-0-111	The transmission serial is stamped on a plate located on the left side of the case.		
	1557163 1557373 G179861 G120383	TRANSMISSION ASSY.—for 4.09, 4.55 R/A         SCREW, to housing 7/16" - 14 x 1-3/8"	All All All All	. 1
	1557608	$\begin{array}{c c c c c c c c c c c c c c c c c c c $	All	1
0811–TR	ANSMISSI	ON CASE (Plates 08-1, 2)		
0811-3	$\frac{1552994}{1540911}$	CASE ASSY., trans. PLUG, pressure take-off	All All	
0811-6	1545274	BUSHING, trans. case	All	.   1
0811-7	1559002	BREATHER, trans. case	All	. 1
0811-14	1545489 1545490 G180124 1541088	HOUSING w/BUSHING, trans. case extension SCREW, to case (special 4.3/16" long) SCREW, to case 3/8" - 16 x 1-1/4"—LHC WASHER, lock (special)	All	<b>1</b> 4
0811-16	1545160	BUSHING, trans. case extension housing	All	. 1
0811-18	1541087	GASKET, extension housing to rear pump	All	. 1
0811-23	1541084 G114353 1541086	COVER, extension housing governor inspection SCREW, to housing 1/4" - 20 - 1/2" WASHER, plain (special)	All	1 2
0811-25	1541085	GASKET, governor inspection cover	All	.   1
0811-35	1552998	SUPPORT and BUSHING, trans. center (one way clutch inner race)	All	
0811-37	$\begin{array}{c} 1541208 \\ 1541209 \\ 1541088 \end{array}$	SCREW, right, support fastening (special) SCREW, left, support fastening (special) WASHER, lock (special)	All All	.   1
0811-39	1553737	OIL SEAL, trans. case extension housing	All	
0811-40	$1553015 \\ 1560870$	PAN ASSY., trans. oil SCREW and WASHER, to case 5/16" - 18 x 5/8"	All	
0811-47	1540935	GASKET, trans. oil pan	All	:
0811-49	1557399	TUBE and NUT, trans. oil filler	All	1
0811-50	1553453	BRACKET, oil filler tube locating	All	
0811-51	1557398	SUPPORT, oil filler tube	All	:
0811-54	1550918	CAP and DIPSTICK, trans. oil filler tube	All	
0811-57 0811-60	$1545195 \\ 1541250$	STRAINER, trans. oil	All	

\*—Use as required

ILLUST. NUMBER	PART NUMBER	DESCRIPTION	MODELS	PER CAR
0814-TR	ANSMISSI	ON INPUT AND OUTPUT SHAFT (Plate 08-2)		
$\begin{array}{c} 0814 - 1 \\ 0814 - 3 \\ 0814 - 5 \end{array}$	$1541166\ 1553000\ 1541185$	SHAFT, input         SNAP RING, input shaft to front clutch cylinder         SHAFT and GEAR, output (incl. parking gear)	All All All	1
0814-7 0814-8	$\frac{1541169}{1545842}$	THRUST WASHER, input shaft		
0814-9	1541248	OIL RING, output shaft—cast iron	All	. 4
0817-TR	ANSMISSI	ON PLANETARY SHAFT, GEARS, ETC. (Plate 08-2)		
0817-6	1543064	SHAFT and GEAR, planetary	All	. 1
$0817-10 \\ 0817-11 \\ 0817-12$	$1541237 \\ 1541238 \\ 1541239$	OIL RING, planetary shaft front clutch OIL RING, planetary shaft rear clutch front OIL RING, planetary shaft rear clutch rear	All All All	2
$0817-15 \\ 0817-18$	$\frac{1541192}{1553382}$	THRUST WASHER, front, planetary shaft and gear THRUST WASHER, rear, planetary shaft and gear	All	
0817-19	1552999	GEAR and DRUM, planetary (incl. rear brake drum)	All	. 1
0817-21 0817-21 0817-21 0817-21	$\begin{array}{c} 1541226 \\ 1541227 \\ 1541228 \\ 1541229 \end{array}$	THRUST WASHER, planetary gear and drum—.061 .063 thick THRUST WASHER, planetary gear and drum—.067 .069 thick THRUST WASHER, planetary gear and drum—.074 .076 thick THRUST WASHER, planetary gear and drum—.081 .083 thick	All	. * . *
0817-25	1694756	CLUTCH, planetary one way	All	. 1
0817-30	1553137	RACE, outer, planetary one way RACE, inner, planetary one way (See SUPPORT and BUSHING, trans.	All	
0817-35	1553138	Center—Group 0811) SNAP RING, outer race	All	
0817-46	1543085	SUN GEAR and DRUM, planetary secondary (incl. frt. brake drum)	All	. 1
0820—TR/	ANSMISSI	ON CLUTCH (Plate 08-2)		
		Front Clutch Assembly		
0820-1	1554227	CYLINDER, trans. front clutch	All	1
0820-3	1541174	OIL RING, front clutch cylinder	All	. 1
0820-8 0820-9	$1541172 \\ 1541173$	THRUST WASHER, front clutch cylinder—bronze         THRUST WASHER, front clutch cylinder—steel.		
0820-10	1560010	PISTON, front clutch cylinder	All	1
0820-12	1541176	OIL SEAL, front clutch cylinder piston	All	. 1
0820-17 0820-19	$1541177 \\ 1541179$	SPRING, front clutch cylinder piston bearing		
0820-22	1541178	RING, front clutch cylinder piston bearing	All	1
0820-28	1554230	DISC, front clutch friction	All	4
0820-29	1541182	PLATE, front clutch do not install separately	All	3
0820-32	1543339	PLATE, front clutch pressure.	All	1
0820-36	1541183	HUB, front clutch	All	. 1
0820-40	1541184	THRUST WASHER, front clutch hub	All	1
*—Use as	required			

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PER
0820TR	ANSMISSI	ON CLUTCH—Cont'd. (Plate 08-2)		
		Rear Clutch Assembly		
		CYLINDER, rear clutch (See SUN GEAR and DRUM-Group 0817) .	All	
0820-45	1543089	PISTON and BALL, rear clutch	. All	
0820-48 0820-50	$1541197 \\ 1541195$	OIL SEAL, outer, rear clutch piston		
0820-54	1541198	SPRING, rear clutch piston	All	
0820-56 0820-58	$1541199 \\1541200$	RETAINER, rear clutch piston spring		
0820-62	1543088	DISC, rear clutch friction		
0820-63	1541202	PLATE, rear clutch	All	. 4
0820-66 0820-69	$\frac{1541203}{1541185}$		All	
0823—FR	ONT PUM	P (Plate 08-1)		
0823-1	1552576 G179826	PUMP COMPLETE, front SCREW, to case 5/16" - 18 x 2"		
0823-5	1540930	GASKET, front pump to case	All	
	<b>A</b>	BODY and GEARS, front pump (order pump complete)	. All	
0823-9	1552577 G110533	COVER and STATOR HUB, front pump body SCREW, to body No. 10 - 24 x 3/4"		
0823-12	1540922	OIL SEAL, front pump body	All	. :
0824RE	AR PUMP	(Plate 08-1)		
0824-1	1545835 G103905	PUMP COMPLETE, rear KEY, woodruff 1/8" x 5/8"		
0824-8	1541127	GASKET, rear pump to case	All	
0824.12 0824.14	$1541255 \\1541256$	TUBE, rear pump inlet         "O" RING, tube		
0824.16 0824.18	$\frac{1541257}{1541258}$	TUBE, rear pump outlet         "O" RING, tube		
0825—TR		ON OIL COLLECTOR (Plate 08-2)		
0825-5	1545831	SLEEVE, trans. oil collector	<b>A</b> ll	
$0825-11 \\ 0825-12 \\ 0825-13$	1545832 1545833 1545834	TUBE, front, oil collector         TUBE, intermediate, oil collector         TUBE, rear, oil collector	. All	. 1
0827_5		(S (Plate 08-3)		
0097 9	1557507	Front Servo Assembly HOUSING, front servo	A 11	. 1
0827-3	1557597 G180124 G120382	SCREW, to case, 3/8" - 16 x 1-1/4" WASHER, lock 3/8"	All	. :
0827-5	1557607	PISTON and PIN, front servo	All	. 1
		A 37 / 11 11.		
		▲—Not available.		
			1	1

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	
827—SE	RVO UNI	TS—Cont'd. (Plate 08-3)		
		Front Servo Assembly—Cont'd.		
827-7	1541139	"O" RING, small, servo piston	. All	. 1
827-8	1541052	"O" RING, large, servo piston	. All	
827-9	1541143	SPRING, servo piston	. All	. 1
827-16 827-19	1557598 1541056	GUIDE, front servo piston SNAP RING, guide retaining	1	
827-20	1541055	SEAL, front servo piston guide	. All	. 1
827-22 827-24	1541058 1541061 G124829	LEVER, front servo brake band operating SCREW, adjusting NUT, screw locking hex. 3/8" - 16"	. All	. 1
827-26 827,29	1541059 G453674	PIN, pivot, operating lever PIN, pivot pin to housing		
827-30	1541254	TUBE, front servo oil jumper	. All	. 1
		Rear Servo Assembly		
827-35 827-36 827-37	1541076 1541080 1541081 G120383	HOUSING, rear servo SCREW, to case (special) SCREW, to case (special) WASHER, lock 7/16"	All	. 1 . 1
827-38 827-38	1541063 1553004	Typ PISTON, rear servo PISTON, rear servo	A   All	
827-40	1541064	"O" RING, rear servo pistonA,	B All	. 1
827-42	1541068	SPRING, rear servo piston accumulator	A A11	. :
827-44 827-46	1541069 1541070	RETAINER, piston accumulator spring SNAP RING, retainer		
827-48 827-48	$1541065 \\ 1553005$	SPRING, rear servo piston		
827-54 827-56	$1541066 \\ 1541067$	RETAINER, rear servo piston SNAP RING, retainer		
827-64 827-64	$\frac{1541071}{1563032}$	LEVER, rear servo branke band operating (rollers required) LEVER, rear servo branke band operating (rollers not required)		
827-66 827-68	1541072 G453674	PIN, operating lever pivot PIN, to housing		
827-70 827-72	1541074 1541075	ROLLER, operating lever       for 1541071         WASHER, roller retaining	. All All	. 29
828—SE	RVO BAN	DS (Plate 08-3)		
828-2 828-3 828-4 828-5	1543070 1541157 1540912 1540913	BAND and LINING, front brake BAND and LINING, rear brake SCREW, rear band adjusting NUT, screw lock	All	. : . :
828-11 828-12	1541156 1541163 1541164	STRUT, front brake operating STRUT, rear brake operating STRUT, rear brake anchor	. All	.  1
828-14	1541164 1543083	TUBE, front brake band lubricating		1

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE C/
0000 TD	A NICAAICCI	ON GOVERNOR (Plate 08-2)		
		GOVERNOR (Fight 06-2) GOVERNOR w/WEIGHT and SLEEVE, trans	4.11	
0830-5, 14				
)830-5	1553328 G114361 G120380	GOVERNOR ASSY, trans. SCREW, fastening 1/4 - 20 x 1-1/2" WASHER, lock 1/4"	All	
)830-14 )830-17 )830-20	G147485 1541099	WEIGHT and SLEEVE, trans. governor counter (not sold separately) BALL, retaining SNAP RING, governor	All	
0832—CO	NTROL V	ALVE (Plates 08-4, 5)		
0832-1	1557603 G179802 G120380	CONTROL ASSY., trans. SCREW, to case 1/4" - 20 x 1-5/8" WASHER, lock 1/4"	All	
0835-5	▲ G179807 G120380	BODY, lower, trans. control valve SCREW, to upper body 1/4" - 20 x 2-1/2" WASHER, lock 1/4"		
0832-15	▲ G189386 1540963	COVER, lower body end SCREW and WASHER, to body No. 10 - 24 x 1" SCREW and WASHER, to body (special)		
0832-30	1540964 G189384 1540965	PLATE, lower body end SCREW and WASHER, to body No. 10 - 24 x 7/16" SCREW, to body (special)	All All All	
0832-35	1557600 G189384  G106497	PLATE, lower body side SCREW and WASHER, to body No. 10 - 24 x 7/16" SCREW, to body No. 10 - 24 x 5/8" WASHER, lock No. 10	All	
0832-40	▲ G189385	COVER, lower body	All	
832-45	1545854 G189384		All	
832-50	1557606	PLATE, lower body separator	All	
0832-65	▲	BODY, upper, trans. control valve	All	
832-70	1540992 G189384		All	
832.75	1540993 G189384	PLATE, upper body rear SCREW and WASHER, to body No. 10 - 24 x 7/16"	All	
832-80	1540994	SPRING, throttle valve return		
832-95	1557601 1540965 G189384	SCREW, to body (special)	All All All	
832-100	1543775	LEVER, trans. operating	All	
832-110	1540906	OIL SEAL, trans. oper. lever	All	
832-120 832-122	$\frac{1557596}{1541022}$		All	
832-127	1560005	SPRING, control lever and detent	All	
0832-131	G453593	BALL, control lever and detent spring	All	

Copyright 1963 Studebaker Corporation

ILLUST. NUMBER	PART NUMBER	DESCRIPTION	MODELS	CA
		ALVE—Cont'd. (Plates 08-4, 5)		
832-137	1541015	LEVER, outer, trans. throttle control		
832-140	1541018	OIL SEAL, trans. throttle control lever	All	. 1
832-148 832-150	$\frac{1541024}{1541025}$	LEVER, inner, trans. throttle control		
834—TR	ANSMISSIC	N OIL REGULATOR (Plate 08-4)		
834-1	1557599	REGULATOR ASSY., trans. oil pressure	All	. 1
	1540997	SCREW, to case (special)		
	G120214	WASHER, lock 5/16"		1 -
834-5	▲	BODY, oil pressure regulator		
834-10 834-12	1557604 ▲	SPRING, large, oil pressure regulator valve		
834-12 834-14	1541005	RETAINER, spring		
834-15	<b>A</b>	COVER, oi pressure regulator		
00110	G189385	SCREW and WASHER, to body No. $10 - 32 \ge 3/4''$		
834- <b>20</b>	1557605	PLATE, oil pressure regulator cover to body	All	. 1
334-23	1541251	TUBE, trans. lubrication line	All	. 1
834-24	1541252	TUBE, trans. compensator line	All	. :
334-25	1541253	TUBE, trans. main line	All	· 1
837—TR	ANSMISSIC	DN PARKING GEAR (Plates 08-1, 5)		
		GEAR, trans. parking (See Output Shaft—Group 0814)	All	. 1
837-5	1541036	PAWL, trans. parking	All	. 1
837-8	1541035	PIN, pawl anchor		
837-11	1541044	LINK, parking pawl to toggle lever		
837-13 837-15	$\frac{1541045}{1541046}$	PIN, to pawl		1
837-18	1541039	LEVER, parking pawl toggle		. 1
837-20	1541035 1541037	PIN, toggle lever		
837-21	1541038	RETAINER, pin	All	. :
837-24	1541043	PIN, parking pawl toggle lever and link	All	. 1
837-27	1541040	SPRING, parking pawl toggle lever release	All	
837-29	1541041	RETAINER, spring	All	
337-31	1541042	CLIP, retainer to pin		
837-34	1541031	LEVER, parking pawl toggle lift		·  1
837-37	1541034	SPRING, parking pawl lift	All	-   -
837-40	1541028	LEVER, parking pawl torsion		
837-42	1541030 1541020	CLIP, to pin		
837-44	1541029			
837-47	1540909	PIN, pawl lift lever and torsion lever		
837-49 837-50	$\frac{1541026}{1541639}$	ROD, parking pawl operating		

▲---Not available.


ILLUST. PART CHANGE NUMBER NUMBER	DESCRIPTION	MODELS	PER CAR
0841-TRANSMISSION OIL COOLER			

	0841-24	0841-5
0841-12	0841-1	
OIL COOLER PIPES		C-4031

0841-1 0841-3 0841-5	1557279 1547627 1557278 G137398	PIPE w/NUTS, inlet, oil cooler         PIPE w/NUTS, outlet, oil cooler (radiator end)         PIPE w/NUTS, outlet. oil cooler (trans. end)         NUT, inverted flare 5/16"	All All		
0841-12	1557450	COUPLING, flexible, oil cooler pipes	All		2
	G137422 G137422	ELBOW, oil cooler pipes to trans			2 1
	G116341	NIPPLE, oil cooler inlet pipe to radiator	All		1
0841-18	G137414	UNION, oil cooler outlet pipe	All		1
0841-24	1539975 531013 	CLIP, oil cooler pipes to engine pan          SPACER, clip          SCREW, fastening          WASHER, lock	All All	· · · · · · · · · · · · · · · · · · ·	1 1 1 1
		OL SELECTOR LEVERS, BRACKET AND INDICATOR () (Plate 08-6)			
0851-2	1556333 G114988	LEVER, upper, gearshift			$\frac{1}{2}$
0851-3 0851-6 0851-9	1556334 1556349 192057 G120394	LEVER and SHAFT, lower, gearshift BUSHING, shaft WASHER, spring WASHER, plain 3/8" COTTER 1/16" x 3/4"	All All All		2
0851-12	1539489	INSULATOR, gearshift lever	All		1
0851-17	1556346	BALL, gearshift lever	A11		1
0851-20	1556383	SHAFT and BUSHING, parking and reverse lockout	All		1
0851-24	1556344	CAP, parking and reverse lockout shaft	All	<i></i>	1
$0851-27 \\ 0851-28$	$1556342 \\ 1556343$	SPRING, primary, parking and rev. lockout shaft	All All		1 1

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	CA
		ROL SELECTOR LEVERS, BRACKET AND INDICATOR		
		FT)—Cont'd. (Plate 08-6)		
851-31	1556341 G138530	PAWL, parking and reverse lockout shaft		
851-35	1556338	HOUSING, gearshift lever	Ail	
851-38 851-39	$\frac{1556328}{1556347}$	DIAL, gearshift housing indicator SCREW, to housing (special)		
851-40	1562545	COVER, gearshift lever housing (after approximately 5400 unit	s) All	1
9851-42 9851-43	1558210 1556348 G181566 G120367 G120380	BRACKET, right, gearshift lever mounting BRACKET, lett, gearshift lever mounting BOLT, fastening 1/4" - 28 x 3/4" NUT, hex. 1/4" - 28 WASHER, lock 1/4"	All All All	· · · · 2 · · · · 2
851-47	287533	BUMPER, gearshift lever	All	
		PLATE, gearshift lever mounting	All	
		GASKET, lever mounting plate (See GASKET, trans. control cover plate—Group 2138)	All	
851-51	1556350	BOOT, gearshift lever		
851-54	1556351	RETAINER, right, gearshift lever boot RETAINER, left, gearshift lever boot (See BRACKET, starter cu	All	
	G120375 G120380	switch—Group 0853) NUT, hex. 1/4" - 20 WASHER, lock 1/4"	All	4
851-60	1556337	SOCKET and CABLE, gearshift indicator lamp (fastened with a to lower lever rivet)		1
851-65	1557883	BULB, gearshift indicator lamp	All	1
851-67	1543399	SHIELD, gearshift indicator lamp bulb	All	1
052 UA		ROL STARTER CUT-OUT SWITCH (Plate 08-6)		
			All	
)853-1 )853-3	1558650 1557448 G446152 G138479	SWITCH, starter cut-out SCREW, to bracket (special) WASHER, spacing WASHER, sh'prf. No. 10	All All All	1
853-6	1557447	BRACKET, starter cut-out and back-up lamp switch		
)853-8	1557390	ROD, starter cut-out switch		1
853-10	631580	CLIP, rod spring		
)854—HA	ND CONT	ROL ROD (Plate 08-6)		
0854-1 0854-6	1557319 G121547 1557697 G120391	ROD, shift lever to trans.         PIN, clevis 3/16" x 31/64"         WASHER, spring         WASHER, plain No. 10         COTTER 1/16" x 1/2"	All All All	1 1 1
0854-15 0854-16	1541533 G120369 192057 G120388	SWIVEL, trans. rod NUT, adj. and lock hex. 3/8" - 24 WASHER, spring WASHER, plain 7/16" COTTER 3/32" x 1"	All All All	1 1

# **PROPELLER SHAFT**

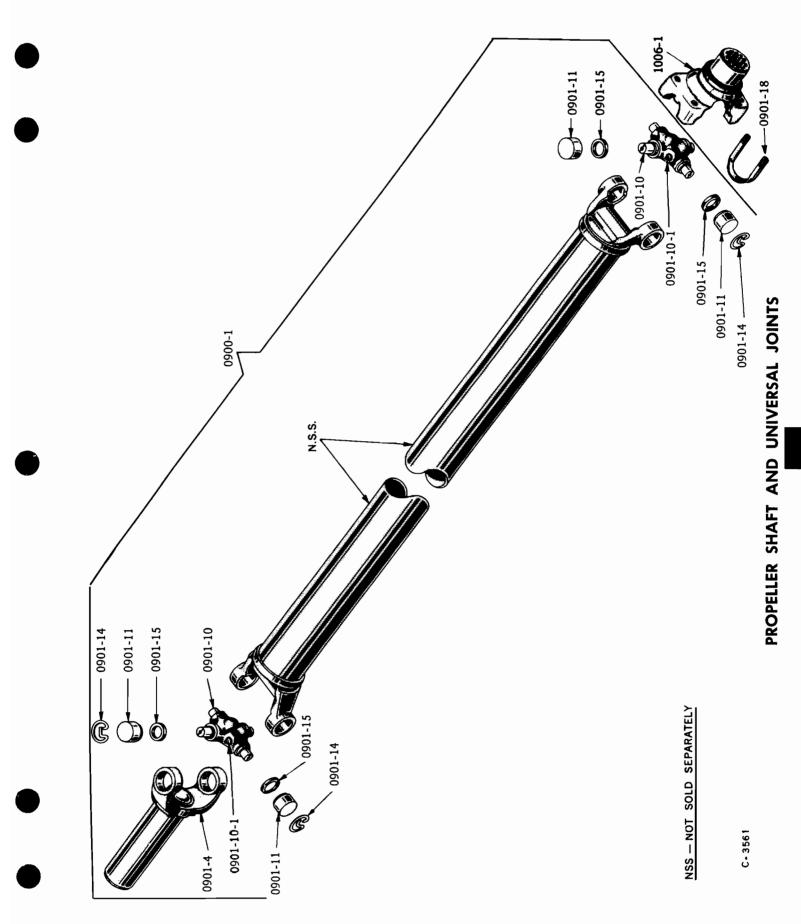


#### 0900

# **PROPELLER SHAFT**

ILLUST. NUMBER	PART NUMBER		DESCRIPTION	MODELS	PER CAR
0900PR	OPELLER	HAFT (Plate 09-	1)		
		-	and joints assemblies include: shaft and yokes, two cross units and one slip yoke, but less bearing clips and rear		
0900-1 0900-1 0900-1 0900-1 0900-1	1552616 1552615 1561877 1552789 1561905	SHAFT & JO SHAFT & JO SHAFT & JO	Length INTS (w/3 spd.)	R1 All All All All	1 1 1
	••••	SHAFT & YO	KES (not sold separately)	All	1
0901-UN	IIVERSAL	JOINT (Plate 09-	1)		
09 <b>01-4</b> 0901-4	$1548504 \\ 1552766$		sal joint slip (w/3 spd. & AD)sal joint slip (w/4 spd.)		
	1562019	CROSS & BEA 1Cross 4Snap ring	RINGS UNIT, universal joint—consists of: 4—Bearings gs 4—Seals	All	2
0901-19 0901-10-1	▲ G271287		sal joint (furnished only in unit) ITTING, cross (service only)		
0901-11	<b>A</b>	BEARING, uni	versal joint cross (furnished only in unit)	All	8
0901-14	182540	SNAP RING,	universal joint cross bearing	All	8
0901-15	<b>▲</b>	SEAL, univers	al joint cross bearing (furnished only in unit)	All	8
0901-18	187425 G120368 G120214	NUT, hex. 5	l joint cross bearing	All	4
		FLANGE, rear	axle universal joint (See Group 1006)	All	1

 $\blacktriangle$ —Not available

# Plate 10-1

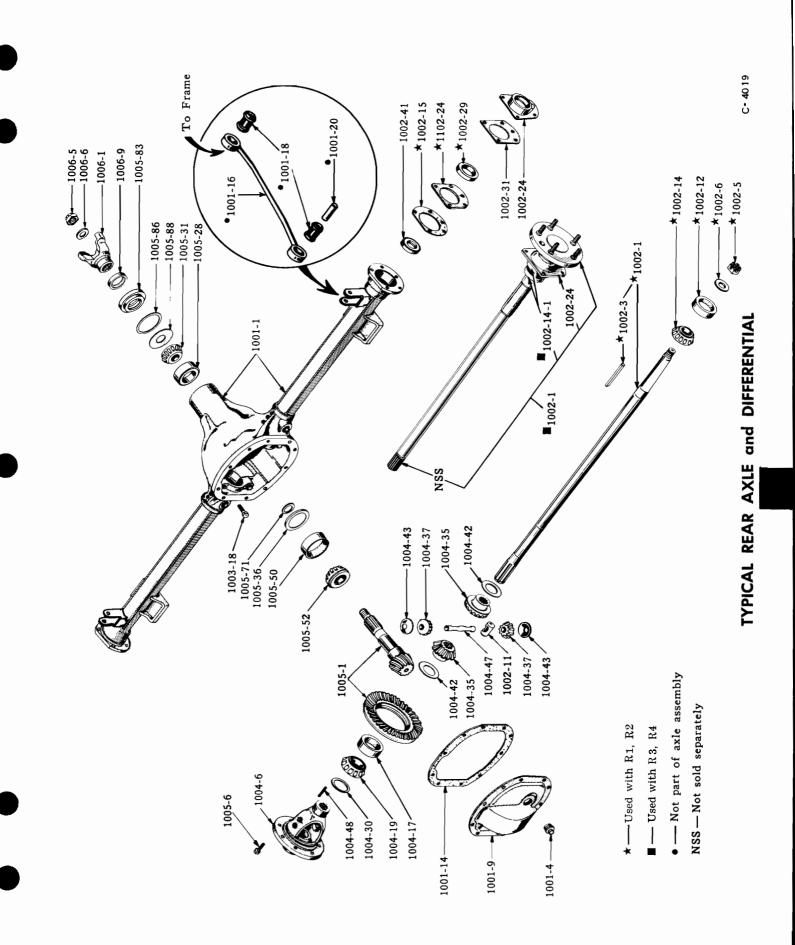


Copyright 1963 Studebaker Corporation

Printed in U.S.A.

	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE CA
000R		ASSEMBLIES (Plate 10-1)		
		Rear axle assemblies are furnished complete with universal joint flange		
		but are less brake backing plates and brake shoes.		
		Rear Axles With Standard Differentials	atio	
	1557406	AXLE ASSY., rear	3.07 R1, R2	
	1557407	AXLE ASSY., rear	3.31 R1, R2	]
	1557408	AXLE ASSY., rear	3.54 R1, R2	·  :
	$\frac{1557409}{1557410}$	AXLE ASSY, rear		
	1557410	AXLE ASSY., rear		
	1559921	AXLE ASSY., rear		
		Rear Axles With Twin Traction Differentials—Special Orders		
	1557412	AXLE ASSY., rear	R 07 R1 R9	
	1557413	AXLE ASSY., rear	831 R1 R2	
	1557414	AXLE ASSY., rear	3.54 R1. R2	
	1557415	AXLE ASSY., rear	3.73 R1. R2	1
	1557416	AXLE ASSY., rear	1.09 R1, R2	
	1557417	AXLE ASSY., rear	4.55 R2	
	1559927	AXLE ASSY., rear	3.31 R3, R4	
	1559928	AXLE ASSY., rear		
	1559929	AXLE ASSY., rear	$3.73$ R3, R4 $\ldots$	·
001R	EAR AXLE	HOUSING AND RADIUS ROD (Plate 10-1)		
001-1	1557939	HOUSING & CARRIER ASSY., R/A	R1, R2	.  :
001-1	1560863	HOUSING & CARRIER ASSY., R/A	R3, R4	
001-4	G103869			· · · ·
001-9	1561782 G442695	COVER, R/A housing	All	. 1
001-14	1561783	GASKET, R/A housing cover		
001-16	1557384	RADIUS ROD, R/A		
001-10	G181676		A 11	
	0101010	$DOD1, to R/A DIRt. 1/10 - 20 \times 2-1/2 \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots$		·
	G271506	NUT fastening $7/16''$ , 20		
	G271506 G120383	NUT, fastening 7/16" - 20           WASHER lock 7/16"	All	
01-18	G120383	WASHER, lock 7/16"	All	•
01-18	G120383 1557385	WASHER, lock 7/16" BUSHING, R/A radius rod	All All All	•
01-18	G120383	WASHER, lock 7/16" BUSHING, R/A radius rod RETAINER, R/A radius rod front bushing	All	
	G120383 1557385 41X326	WASHER, lock 7/16" BUSHING, R/A radius rod	All         All         All         All         All         All         All         All         All         All         All         All         All	
001-20	G120383 1557385 41X326 ▲ 1557388	WASHER, lock 7/16" BUSHING, R/A radius rod RETAINER, R/A radius rod front bushing BRACKET, R/A radius rod (welded to R/A housing)	All         All         All         All         All         All         All         All         All         All         All         All         All	•
001-20 <b>002R</b> I	G120383 1557385 41X326 ▲ 1557388	WASHER, lock 7/16" BUSHING, R/A radius rod RETAINER, R/A radius rod front bushing BRACKET, R/A radius rod (welded to R/A housing) SPACER, R/A radius rod bracket SHAFTS AND BEARINGS (Plate 10-1)	All         All         All         All         All         All         All         All         All         All         All         All         All         All         All         All         All	•
001-20 <b>002R</b> 002-1	G120383 1557385 41X326 ▲ 1557388 EAR AXLE	WASHER, lock 7/16" BUSHING, R/A radius rod RETAINER, R/A radius rod front bushing BRACKET, R/A radius rod (welded to R/A housing) SPACER, R/A radius rod bracket	All         All         All         All         All         All         All         All         All         All         All         All         All         All         All         All         All         R1, R2	•
001-20 <b>002R</b> 002-1 002-1	G120383 1557385 41X326 ▲ 1557388 EAR AXLE 1558486	WASHER, lock 7/16" BUSHING, R/A radius rod RETAINER, R/A radius rod front bushing BRACKET, R/A radius rod (welded to R/A housing) SPACER, R/A radius rod bracket SHAFTS AND BEARINGS (Plate 10-1) SHAFT & KEY KIT, R/A	All         All         All         All         All         All         All         All         All         All         All         Ril         R1, R2         R3, R4	
001-20 <b>DO2</b> RI 002-1 002-1 002-3	G120383 1557385 41X326 ▲ 1557388 EAR AXLE 1558486 1560862	WASHER, lock 7/16" BUSHING, R/A radius rod RETAINER, R/A radius rod front bushing BRACKET, R/A radius rod (welded to R/A housing) SPACER, R/A radius rod bracket SHAFTS AND BEARINGS (Plate 10-1) SHAFT & KEY KIT, R/A SHAFT & BEARING ASSY., R/A (incl. studs & retainers)	All         All         All         All         All         All         All         All         All         All         Ril         R1, R2         R3, R4         R1, R2	
001-20 002-1 002-1 002-3 002-5	G120383 1557385 41X326 ▲ 1557388 EAR AXLE 1558486 1560862 194841	WASHER, lock 7/16" BUSHING, R/A radius rod RETAINER, R/A radius rod front bushing BRACKET, R/A radius rod front bushing SPACER, R/A radius rod bracket SHAFTS AND BEARINGS (Plate 10-1) SHAFT & KEY KIT, R/A SHAFT & BEARING ASSY., R/A (incl. studs & retainers) KEY, shaft to hub 1/4" x 2-3/8" NUT, shaft to hub 7/8" - 14 WASHER, plain 29/32"	All         All         All         All         All         All         All         All         All         All         All         All         All         All         All         R1, R2         R3, R4         R1, R2         R1, R2         R1, R2         R1, R2         R1, R2	
001-20 <b>DO2R</b> 002-1 002-3 002-5	G120383 1557385 41X326 ▲ 1557388 EAR AXLE 1558486 1560862 194841 510516	WASHER, lock 7/16" BUSHING, R/A radius rod RETAINER, R/A radius rod front bushing BRACKET, R/A radius rod (welded to R/A housing) SPACER, R/A radius rod bracket SHAFTS AND BEARINGS (Plate 10-1) SHAFT & KEY KIT, R/A SHAFT & BEARING ASSY., R/A (incl. studs & retainers) KEY, shaft to hub 1/4" x 2-3/8" NUT, shaft to hub 7/8" - 14	All         All         All         All         All         All         All         All         All         All         All         All         All         All         All         R1, R2         R3, R4         R1, R2         R1, R2         R1, R2         R1, R2         R1, R2	
001-20 002- <b>-</b> RI 002-1 002-3 002-5 002-6 002-11	G120383 1557385 41X326 ▲ 1557388 EAR AXLE 1558486 1560862 194841 510516 510518  530706	<ul> <li>WASHER, lock 7/16"</li> <li>BUSHING, R/A radius rod</li> <li>RETAINER, R/A radius rod front bushing</li> <li>BRACKET, R/A radius rod (welded to R/A housing)</li> <li>SPACER, R/A radius rod bracket</li> <li>SHAFTS AND BEARINGS (Plate 10-1)</li> <li>SHAFT &amp; KEY KIT, R/A</li> <li>SHAFT &amp; BEARING ASSY., R/A (incl. studs &amp; retainers)</li> <li>KEY, shaft to hub 1/4" x 2-3/8"</li> <li>NUT, shaft to hub 7/8" - 14</li> <li>WASHER, plain 29/32"</li> <li>COTTER, 1/8" x 1-1/2"</li> <li>THRUST BLOCK, R/A shaft (w/Std. diff.) (incl. in 530705)</li> </ul>	All         All         All         All         All         All         All         All         All         All         All         All         All         All         R1, R2         R3, R4         R1, R2         R1, R2         R1, R2         R1, R2         All	
001-20 002-1 002-1 002-3 002-5 002-6 002-11 002-11	G120383 1557385 41X326 ▲ 1557388 EAR AXLE 1558486 1560862 194841 510516 510518  530706 1544810	WASHER, lock 7/16" BUSHING, R/A radius rod RETAINER, R/A radius rod front bushing BRACKET, R/A radius rod (welded to R/A housing) SPACER, R/A radius rod bracket SHAFTS AND BEARINGS (Plate 10-1) SHAFT & KEY KIT, R/A SHAFT & BEARING ASSY., R/A (incl. studs & retainers) KEY, shaft to hub 1/4" x 2-3/8" NUT, shaft to hub 1/8" - 14 WASHER, plain 29/32" COTTER, 1/8" x 1-1/2" THRUST BLOCK, R/A shaft (w/Std. diff.) (incl. in 530705) THRUST BLOCK, R/A shaft (w/T.T. diff.)	All         All         All         All         All         All         All         All         All         All         All         R1, R2         R3, R4         R1, R2         All         All	
001-18 001-20 <b>002R</b> 002-1 002-3 002-5 002-6 002-11 002-11 002-12	G120383 1557385 41X326 ▲ 1557388 EAR AXLE 1558486 1560862 194841 510516 510518  530706	<ul> <li>WASHER, lock 7/16"</li> <li>BUSHING, R/A radius rod</li> <li>RETAINER, R/A radius rod front bushing</li> <li>BRACKET, R/A radius rod (welded to R/A housing)</li> <li>SPACER, R/A radius rod bracket</li> <li>SHAFTS AND BEARINGS (Plate 10-1)</li> <li>SHAFT &amp; KEY KIT, R/A</li> <li>SHAFT &amp; BEARING ASSY., R/A (incl. studs &amp; retainers)</li> <li>KEY, shaft to hub 1/4" x 2-3/8"</li> <li>NUT, shaft to hub 7/8" - 14</li> <li>WASHER, plain 29/32"</li> <li>COTTER, 1/8" x 1-1/2"</li> <li>THRUST BLOCK, R/A shaft (w/Std. diff.) (incl. in 530705)</li> </ul>	All         All         All         All         All         All         All         All         All         All         All         All         All         All         All         All         R1, R2         R3, R4         R1, R2         R1, R2         R1, R2         R1, R2         R1, R2         R1, R2         All         All         R1, R2	

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PER
1002—RE	AR AXLE	SHAFTS AND BEARINGS—Cont'd. (Plate 10-1)		
1002-14-1	1560984	BEARING & RETAINER RING KIT, R/A shaft	R3, R4	. 2
1002-15 1002-15 1002-15 1002-15 1002-15	194844 194845 194846 1539920	SHIM, R/A shaft bearing adjusting005SHIM, R/A shaft bearing adjusting010SHIM, R/A shaft bearing adjusting030SHIM, R/A shaft bearing adjusting057063	R1, R2 R1, R2	*
$1002-24 \\ 1002-24$	$533161\ 1561047$	WASHER & RETAINER, outer, R/A shaft bearing grea RETAINER, R/A shaft bearing		
1002-29	197216	WASHER, outer, R/A shaft bearing grease-felt	R1, R2	2
$1002-31 \\ 1002-31$	$\frac{197436}{1560983}$	GASKET, R/A shaft outer retainer and reinforcement pl GASKET, R/A shaft bearing retainer		
1002-41 1002-41	$530573 \\ 1560865$	OIL SEAL, inner, R/A shaft—leather OIL SEAL, inner, R/A shaft		
1003-DI	FFERENTIA	L CARRIER (Plate 10-1)		
		CARRIER, differential (integral with axle housing)	All	1
1003-18	G179890	SCREW, differential carrier bearing cap $1/2''$ - 13 x 2-1/4	″	

#### 1004-DIFFERENTIAL CASE AND BEARINGS (Plate 10-1)

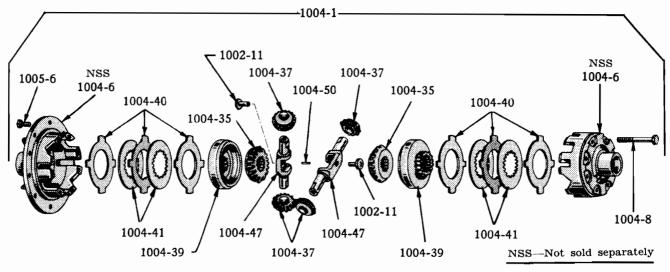

TWIN TRACTION DIFFERENTIAL CASE ASSY.

C-3557


		Ratio	
1004-1	1560656	CASE ASSY., diff)	
1004-1	1560657	CASE ASSY., diff	
1004-6	530703	CASE, diff )	
1004-6	530702	CASE, diff.       w/Std. diff.       3.07, 3.31, 3.54, 3.73       All       1         CASE, diff.       4.09, 4.55       R1, R2       1	
1004-6		CASE, diff.	
		(fur. only in 1560655 kit). (	
1004-6		CASE, diff	
		(fur. only in 1560654 kit).) 4.09, 4.55 R1, R2	
1004-8	1547806	SCREW, diff., case to case 3/8" - 16 x 2·3/4" (w/T.T. diff.)	
* **			
*—Use a:	s required		

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE CA
004DI	FFERENTIA	CASE AND BEARINGS-Cont'd. (Plate 10-1)		
		R	atio	
	$\frac{1560655}{1560654}$	CASE KIT, diff.       w/T.T. diff.       3.07, 3.31, 3.54, 3.         CASE KIT, diff.       w/T.T. diff.       4.09, 4.         consist of:       2—Friction plates (dished)         2—Cross shafts       2—Friction discs (flat)         4—Friction plates (flat)       2—Friction discs (dished)	73 All 55 R1, R2	
004-17	190047	CUP, diff. bearing	All	. 2
004-19	190048	CONE & ROLLERS, diff. bearing	1	
004-30 004-30 004-30 004-30	$1692003 \\ 1692004 \\ 1692005 \\ 1692005 \\ 1692005 \\ 1692006 \\ 10000000 \\ 10000000 \\ 10000000 \\ 100000000$	SHIM, diff. bearing adjusting—.003         SHIM, diff. bearing adjusting—.005         SHIM, diff. bearing adjusting—.010	All	. *
004-30	1692006 530705	SHIM, diff. bearing adjusting—.030         GEAR & PINION KIT, diff. side bevel (w/Std. diff.) consists of:         2— Gears       1—530706 Thrust block         2— Pinions       1—1692002 Shaft         2—511678 Thrust washers       1—510722 Pin		1
	1546166	GEAR & PINION KIT, diff. side bevel (w/T.T. diff.) consists of: 2Gears   4Pinions	All	. 1
004-35 004-35	,	GEAR, diff. side bevel (w/Std. diff.) (fur. only in 530705 kit) $\dots$ GEAR, diff. side bevel (w/T.T. diff.) (fur. only in 1546166 kit) $\dots$	All All	. 2
$004.37 \\ 004.37$		PINION, diff. (w/Std. diff.) (fur. only in 530705 kit) PINION, diff. (w/T.T. diff.) (fur. only in 1546166 kit)		
004-39	1544805	RING, diff. side gear (w/T.T. diff.)	All	. 2
004-40 004-40		PLATE, diff. clutch friction (dished) (w/T.T. diff.)	All	
004-41 004-41	1545888	DISC. diff. clutch friction (flat) (w/T.T. diff.) (incl. in 1560655 1560654 & 1560655 kits) DISC, diff. clutch friction (dished) (w/T.T. diff.) (fur. only i	All	
		1560653, 1560654 & 1560655 kits)		. 2
	1560653	PLATE & DISC KIT, diff. clutch friction (w/T.T. diff.) consists of4—Friction plates (flat)2—Friction discs (flat)2—Friction plates (dished)2—Friction discs (dished)	AN	1  .
04-42	511678	THRUST WASHER, side bevel gear (w/Std. diff.) (incl. in 530705 kit)	All	. 2
04-43	511679	THRUST WASHER, diff. pinion (w/Std. diff.) (incl. in 530705 kit) .	All	. 2
)04-47 )04-47	$\frac{1692002}{1547807}$	SHAFT, diff. pinion (w/Std. diff.) (incl. in 530705 kit) SHAFT, diff. pinion cross (w/T.T. diff.) (incl in 1560654 & 1560655 k		
004-48 004-50	$510722 \\ 1547808$	PIN, shaft locking (w/Std. diff.) (incl. in 530705 kit) PIN, shaft locking (w/T.T. diff.)		
005–RE/	AR AXLE	BEVEL DRIVE GEAR, PINION AND BEARINGS (Plate 10-1)		
		The ratio marking is stamped on each gear and pinion. To insure more satisfactory performance only matched gears and pinions are furnished.		
005-1 005-1 —Use as	537876 537637	GEAR & PINION, R/A GEAR & PINION, R/A		

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE CA
		BEVEL DRIVE GEAR, PINION AND Cont'd. (Plate 10-1)		
005-1 005-1 005-1 005-1 005-1	530569 537634 530496 531156 527171	GEAR & PINION, R/A	73 All 99 R1, R2 55 R2	
005-28	190032	CUP, front, R/A pinion bearing		
005-31 005-36 005-36	190033 511652 511653	CONE & ROLLERS, front, R/A pinion bearing SHIM, R/A pinion adjusting—.003 SHIM, R/A pinion adjusting—.005	All	
1005-36 1005-50	$511654 \\ 190035$	SHIM, R/A pinion adjusting—.010          CUP, rear, R/A pinion bearing		
1005-52	190036	CONE & ROLLERS, rear, R/A pinion bearing	. All	
1005-71 1005-71 1005-71 1005-71	190038 190039 190040 190041	SHIM, R/A pinion bearing adjusting003SHIM, R/A pinion bearing adjusting005SHIM, R/A pinion bearing adjusting010SHIM, R/A pinion bearing adjusting030	All	
1005-83	199379X1	OIL SEAL, R/A pinion bearing—leather	All	
1005-86	184161	GASKET, R/A pinion bearing oil seal-paper	All	
1005-88	537678	SLINGER, R/A pinion front bearing oil	All	
1006-REA	AR AXLE	UNIVERSAL JOINT FLANGE (Plate 10-1)		
1006-1 1006-5 1006-6	521825 527432 196965	FLANGE w/COVER, R/A universal joint NUT, to pinion 3/4" - 16 WASHER, plain 25/32"	All	
1006-9	510934	COVER, R/A universal joint flange dust		
*—Use as	required			

# MEMORANDA -IMPORTANT------To assure prompt shipment of parts, always give Car Serial and Engine Number L H C — Left hand drive only **R** H C — Right hand drive only

Plate 11-1

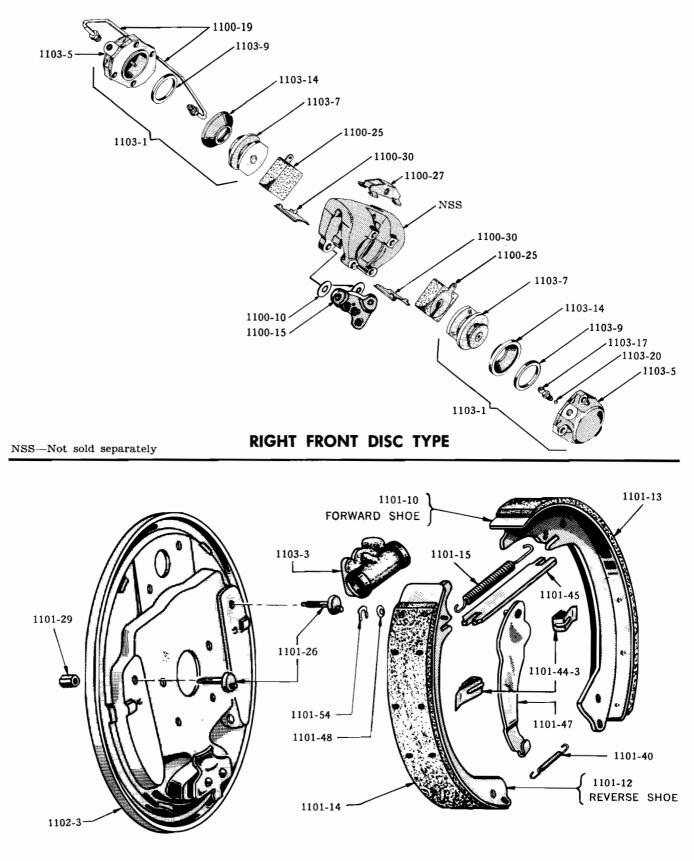


C • 40 37

#### RIGHT REAR


#### FRONT AND REAR BRAKES

PAGE NO. 107

 Plate 11-2




WHEEL CYLINDER

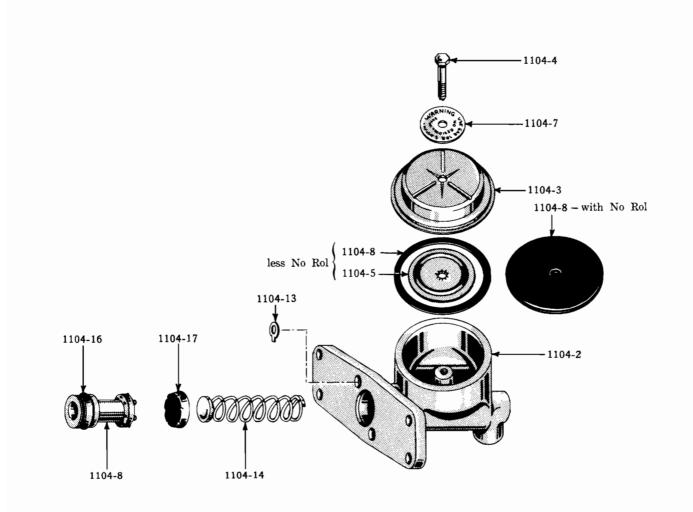


C - 40 48


#### REAR WHEEL CYLINDER AND MASTER CYLINDER

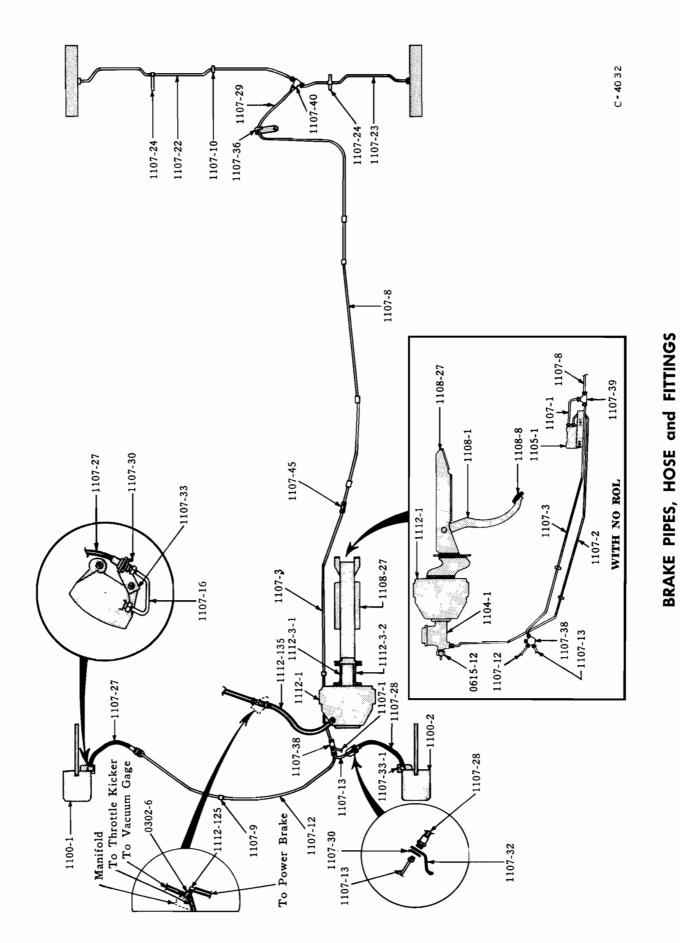

# Plate 11-4


### **BRAKES**

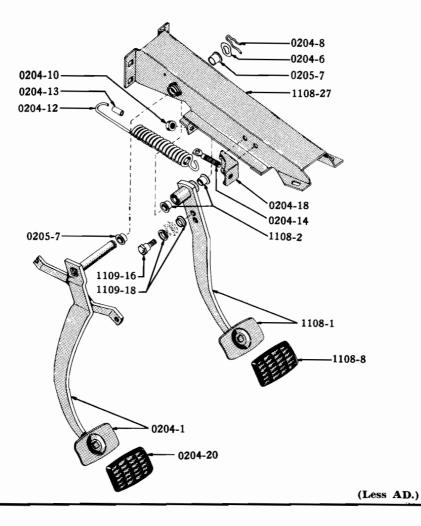


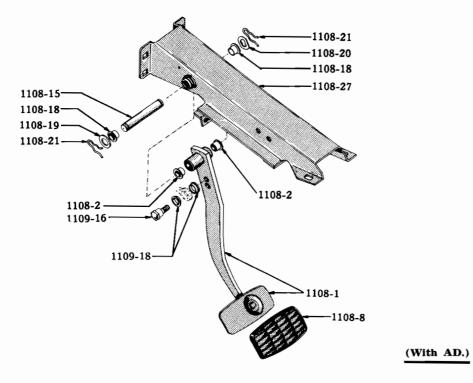

C - 40 39

#### **BRAKE PEDALS**

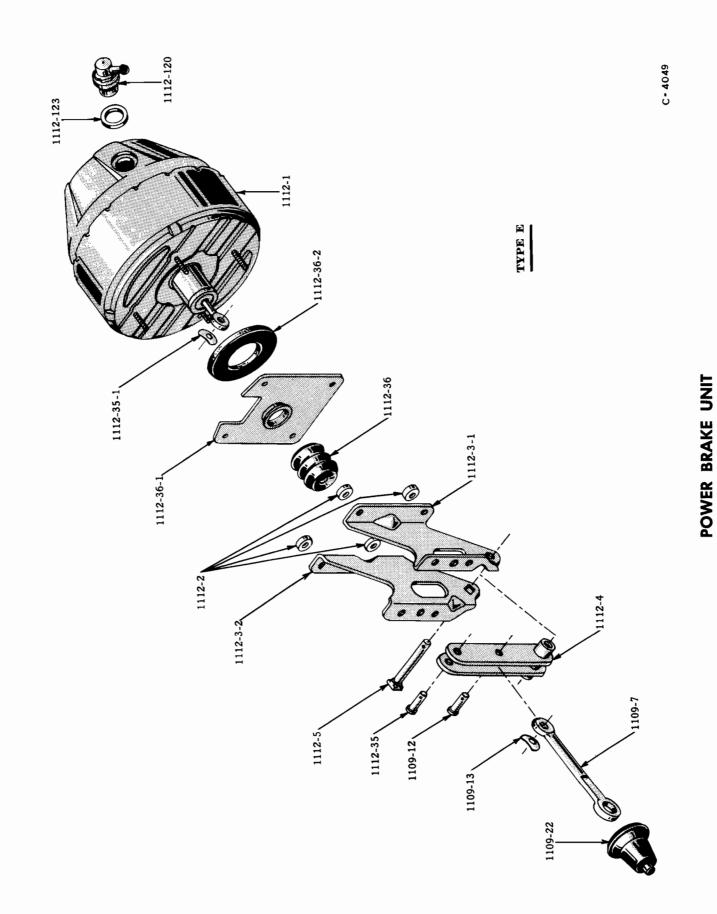

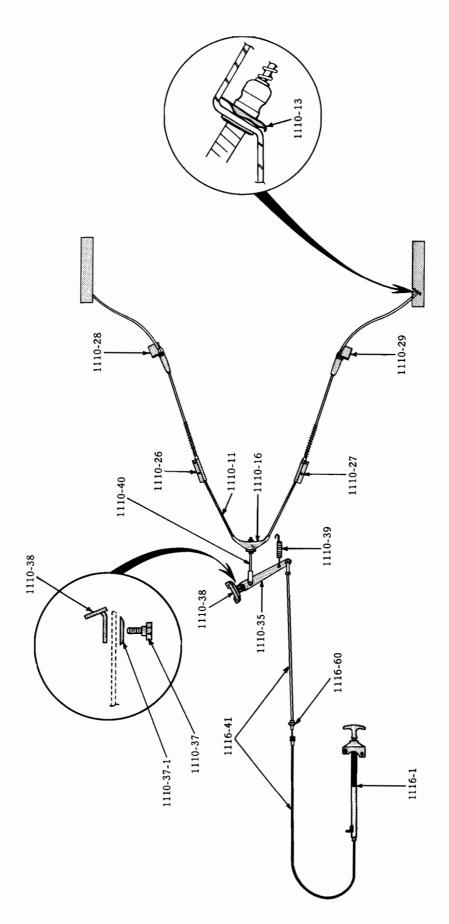

HAND BRAKE

C-4033

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE C/
		PERS, BRACKETS, PADS, ETC. (Plate 11-1)		
100-1 100-2	1557502 1557503	CALIPER ASSY., right, front brake	All	
	G455027 G120396 G103323	SCREW, to bracket 1/2" - 20 x 1-1/4" WASHER, plain 1/2" WASHER, lock 1/2"	All	
100-10	$1557510 \\ 1557511$	SHIM, front brake caliper adj.—.010 thick		
100-10	1557512	SHIM, front brake caliper adj.—.016 thick		
100-10	$1557513 \\ 1557514$	SHIM, front brake caliper adj.—.019 thick	All	
100-15	1557504	BRACKET, right, front brake caliper mounting	All	
	$1557505 \\ G427562$	BRACKET, left, front brake caliper mounting SCREW, to knuckle 3/8" - 16 x 1-1/4"	All	
	G120382	WASHER, lock 3/8"	All	
100-19	$\begin{array}{c} 1558068 \\ 1558069 \end{array}$	PIPE and NUTS, right, front brake caliper cylinder jumper PIPE and NUTS, left, front brake caliper cylinder jumper		
	1558066	PAD SET, front brake caliper lining or—consists of:	All	
100-25	▲	PAD, front brake caliper lining or (See PAD SET)	All	
100-27	1558179	RETAINER, front brake caliper lining or pad		
	G181567	BOLT, to caliper $1/4'' - 28 \ge 7/8''$		
	G120367 G115547	NUT, hex. 1/4" - 28 WASHER, lock 1/4"		
100-30	1558180	PLATE, front brake caliper lining or pad support	All	
101—WF	IEEL BRA	KE SHOES, LININGS, ETC. (Plate 11-1)		
101-10 101-12	$1557530 \\ 1557531$	SHOE and LINING, forward, rear brake		
	1557672	SHOE and LINING SET, rear brake—consists of: 2—1557530 forward Shoe and Lining 2—1557531 reverse Shoe and Lining		
1101-13 1101-14	<b>▲ ▲</b>	LINING, forward shoe.) See Shoe and Lining Set	All	
101-15	685046	SPRING, rear brake shoe return	All	
101-26 101-29	684768 684769 G120382	ECCENTRIC, rear brake shoe take-up NUT, eccentric (special) WASHER, lock 3/8"	All	
101-40	685045	SPRING, rear brake shoe anchor	All	. ]
101-44-3	684771	CLIP, rear brake shoe hold down	All	
101-45	684799	LINK, rear brake shoe oper.		
1101-47	$\begin{array}{c} 684802\\ 684803 \end{array}$	LEVER and PIN, right rear brake shoe oper LEVER and PIN, left rear brake shoe oper	All	
1101-48 1101-54	$684784 \\ 684785$	WASHER, spring RETAINER, to brake shoe		


▲—Not available. \*—Use as required

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE
102_W	HEFI BRAK	E BACKING PLATES (Plate 11-1)		
102-111		PLATE, front brake backing (See DUST SHIELD, front brake di	se	
		Group 1402)		.   1
102-3	1557664	★PLATE, right rear brake backing		
	1557665	*PLATE, left rear brake backing		.   :
102-3	$1562806 \\ 1562807$	<ul> <li>PLATE, right rear brake backing</li> <li>PLATE, left rear brake backing</li> </ul>		
102-3	1561160	PLATE, right rear brake backing		
	1561161	PLATE, left rear brake backing		
	1549653 G120369	BOLT, to housing 3/8" - 24 x 1-1/8"		
	3108X1	WASHER, lock 3/8"	R1, R2	
	1560577 G443340	BOLT, to housing (special)		
102-24	519383	•PLATE, rear backing plate reinforcing (illust. plate 10-1)		
103_W		NDER (Plates 11-1, 2)		
			A 11	.
103-1 103-3	$\frac{1558182}{1557668}$	CYLINDER ASSY., front wheel brake		
	1558181	SCREW, to caliper (special)	<b>A</b> ll	1
	G114547 G423560	WASHER, lock 1/4"		
109 F				
03-5		CYLINDER CASTING, wheel brake		
	1558063	CYLINDER REPAIR KIT, front wheel brakeconsists of: 2-1558064 Seal   2-1558065 Dust Shield	All	•••
	1557671	CYLINDER REPAIR KIT, rear wheel brake—consists of: 2—1557670 Cup   2—1557669 Boot	All	
103-7 103-7	▲ 1558190	PISTON, front wheel brake cylinder PISTON, rear wheel brake cylinder		
03-9	1558064	SEAL, front wheel brake cylinder	All	
03-10	1557670	CUP, rear wheel brake cylinder	All	
03-13	1558191	SPRING, rear wheel brake cylinder	All	
03-14	1558065	DUST SHIELD, front wheel brake cylinder	All	
03-15	1557669	BOOT, rear wheel brake cylinder	· · · · · · · · ·	
103-17	1558070	FITTING, front wheel brake cylinder bleeder		
103-17 103-20	1558192 G145637	FITTING, rear wheel brake cylinder bleeder		
			An	•••
		INDER (M/C) (Plates 11-2, 3)		
104-1	1557910		All	
104-2	▲ G120376	CYLINDER CASTING, master (use Cylinder Complete) NUT, to booster 5/16" - 18		
	G120214	WASHER, lock 5/16"		
04-3 04-4	1558186 G180042	COVER, M/C filler		
104-5	1558233	BAFFLE ,M/C filler cover (less NoRol)		
104-6	1558187	GASKET, M/C filler cover (less NoRol)	All	
104-6	1562867	GASKET, M/C filler cover (with NoRol)	All	
104-7	1558232	SHIELD, M/C filler cover vent	<b>A</b> ll	
		<ul> <li>▲—Not available.</li> <li>★—Tapered R/A shaft equip.</li> <li>●—Flanged R/A shaft equip.</li> </ul>		



ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PER CAR
	ASTER CYL	INDER (M/C)—Cont'd. (Plates 11-2, 3)		
1104-8	1558184	PISTON w/CUP, M/C	. All	. 1
1104-13	1558188 G133757	RETAINER, M/C piston SCREW, piston 1/4" - 20 x 3/8"		
1104-14	1558185	SPRING, M/C piston	, All	1
1104-16	▲	CUP, M/C piston	All	1
1104-17	1558189	CUP, master cylinder	All	1
	1558183	REPAIR KIT, master cylinderconsists of:	All	. 1

#### 1105-NO ROL UNIT (Plate 11-3)

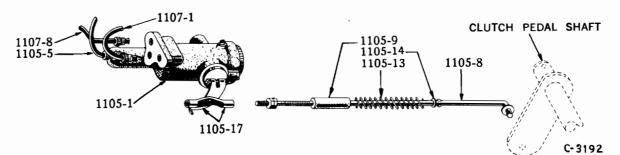

	AC-3348	NO ROL KIT-Consists of all parts for field installation	A11	 1
1105-1	1552294 915054 1696894 187322 G181385 G120369 G138489	VALVE w/LEVER, No Rol PLUG, No Rol valve seat SCREW, bleeder No. 10 - 32 x 1/4" GASKET, bleder screw—copper BOLT, to frame 3/8" - 24 x 3" NUT, hex. 3/8" - 24 WASHER, sh'prf. 3/8"	All All All All All All	 1 1
	1549563 G186986 G181637 G120369 G120382	BRACKET, No Rol valve mounting         SCREW, to frame 5/16" - 18 x 1/2"         BOLT, to frame 3/8" - 24 x 1"         NUT, hex. 3/8" - 24         WASHER, lock 3/8"	All All All	 1 1 1 1 2
	526633	NO ROL REPAIR KIT—consists of: Ball cage assy., head chamber gasket, camshaft plug gasket and camshaft sealing washer	<b>A</b> 11	 1
1107-1 1107-2	 	PIPE w/NUTS, M/C to No Rol (See Group 1107) PIPE w/NUTS, No Rol to tee (See Group 1107)		
1105-8 1105-9	1552303 188323 G120614 G120391	<ul> <li>ROD, No Rol valve operating</li> <li>SLEEVE, adjusting</li> <li>NUT, locking No. 10 - 32</li> <li>WASHER, plain No. 10</li> <li>COTTER 1/16" x 3/4"</li> </ul>	All All All	 1 2
1105-13 1105-14	188322 G120391	SPRING, No Rol valve oper. rod WASHER, plain No. 10		1 1
1105-17	533154 G120614 G106497	LEVER and GUIDE, No Rol valve BOLT, clamping No. 10 - 32 x 7/8" NUT, hex. No. 10 - 32 WASHER, lock No. 10	All All	 1


 $\blacksquare$ —Not available.

ILLUST. NUMBER	PART NUMBER		DESCRIPTION	MODELS	PE CA
	AKE PIPES	HOSE AND FITTINGS (PI	late 11-3)		
1107-1 1107-1 1107-1	$\begin{array}{c} 1557542 \\ 1563184 \\ 1557541 \\ 519864 \end{array}$	PIPE w/NUTS, M/C to PIPE w/NUTS, M/C to	frame fitting (less No Rol) frame fitting (less No Rol) No Rol (with No Rol) 57541)	R3, R4	. 1 . 1
1107-2	1552396	PIPE w/NUTS, No Rol t	o pipe tee (with No Rol)	All	. 1
1107-3	1547899 195567 G186986	CLIP, to frame	tting to pipe union or tee	All	1 1
1107-8	1553104 194702 172651 G177999	CLIP, to frame CLIP, to frame	on or tee to rear hose 4" x 1/2" (for 172651 clip)	All	. :
1107-12 1107-13	1541930 1541931 172651 G186986	PIPE w/NUTS, short, fro CLIP, to frame	nt brake pipe tee to hose ont brake pipe tee to hose 16" - 18 x 1/2"	All	. 1
1107-16	$1557546 \\ 1557547$	PIPE w/NUTS, right, fr	ront brake pipe hose to brake	All	. 1
1107-22 1107-23 1107-24 1107-10	$\begin{array}{c} 1557709 \\ 1557708 \\ 530186 \\ 195567 \\ 531013 \end{array}$	PIPE w/NUTS, left, rear CLIP, large, to axle hou CLIP, small, to axle hou	ar brake pipe tee to brake brake pipe tee to brake using 95567)	All All	. 1 . 2 . 1
	G137396	NUT, brake pipe—inverte	d flare 3/8" - 24 (2 per pipe)	All	. *
1107-27, 28 1107-29 1107-30	$\begin{array}{c} 1557543 \\ 1543003 \\ 675466 \\ 195569 \end{array}$	HOSE, rear brake flexible CLIP, hose lock	le	All	. 1
1107-32 1107-33 1107-33-1	1550470 1557544 1557545	BRACKET, right, front b BRACKET, left, front bra	ose (frame end) orake hose (brake end) ake hose (brake end) " x 5/8" (for 1550470)	All	.   1 .   1
1107-36	1541478 G181338 G103025 G128144 G120214	BOLT, fastening 5/16" - NUT, hex. 5/16" - 24 WASHER, plain 5/16	extension - 24 x 7/8"	All All	. 1
1107-38	1554976 41X562 G443945	FITTING, front brake pip SPACER, to frame	pes	All	. 1
1107-39 1107-40	520482 194697 299288 1541322 G120380	TEE, rear brake hose and SPACER, to axle housin SCREW, to housing (sp	e pipes (with No Rol) l pipes ng necial)	All All	. 1
1107-45	G137412	UNION, front and rear b	rake pipes	All	. 1
1108BR/	AKE PEDA	(Plates 11-3, 4)			
1108-1 1108-1	1556028 1557377 1543914	PEDAL, brake (less AD.)	•••••••••••••••••••••••••••••••••••••••	All	. 1

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION		MODELS	PE CA
			<u> </u>		
108–BR	AKE PEDA	AL—Cont'd. (Plates 11-3, 4)			
108-8 108-8	$\frac{1552334}{1552335}$	PAD, pedal (less AD.) PAD, pedal (with AD.)			
100.15	1550005	SHAFT, pedal (less AD.) (part of clutch pedal)			
108-15 108-18	$1552305 \\ 1543914$	SHAFT, pedal (with AD.) BUSHING, shaft)			· 1
108-19	532035				
108-20	1552381	WASHER, plain	All		
108-21	1552275	PIN, shaft retaining)	All	• • • • • • • • • • • • • • • • • • • •	•
108-27	1556085	BRACKET, pedal support			
	G187303	SCREW, to dash No. 10 x 1/2"			1
	1962X1 1578X57	SCREW and WASHER, to inst. board SPEED NUT, 5/16" - 10			
	1955X2	CAGE NUT, bracket			
109BR	AKE ROD	(Plate 11-5)			
109-7	1557907	ROD, pedal to power brake oper. lever	All		
109-12	1553242	PIN, to lever (special)		· · · · · · · · · · · · · · · · · · ·	· 1
109-13	1557909	WASHER, spring		••••••	
100.10	1559000	COTTER 3/32" x 1"			- 1
109-16 109-18	$1552039 \\ 1552040$	BOLT, to pedal (special) BUSHING, bolt			
105-10	G120369	NUT, hex. 3/8" - 24"			· I -
	G120382	WASHER, lock 3/8"			- I
109-22	1553241	BOOT, pedal to oper. lever rod	All	· · · · · · · · · · · · · · · · · · ·	
1110—BR	AKE CAB	LES (Plate 11-6)			
110-11	1558237	CABLE and ENDS, rear, hand brake			
	512660	BOOT, cable			
110-13	533290	CLIP, to frame bracket			
110-16	530129	EQUALIZER, hand brake rear cable			
110-26	532669	GUIDE, right, hand brake rear cable			
110-27	1549483	GUIDE, left, hand brake rear cable			• •
	G181315 G120367	BOLT, to frame 1/4" - 28 x 1"			
	G120387 G120380	WASHER, lock 1/4"		l	
1110.28	1549481	BRACKET, right, hand brake rear cable	.   A11		
1110-28 1110-29	$1549481 \\ 1549482$	BRACKET, right, hand brake rear cableBRACKET, left, hand brake rear cable			
1110-28 1110-29	1549481 1549482	BRACKET, right, hand brake rear cable BRACKET, left, hand brake rear cable RIVET, to frame 5/16" x 7/8"	All		
	1549482	BRACKET, left, hand brake rear cable	All	l	
1110-29	1549482	<ul> <li>BRACKET, left, hand brake rear cable</li> <li>RIVET, to frame 5/16" x 7/8"</li> <li>BELLCRANK, hand brake</li> <li>BOLT, pivot, to bracket 3/8" - 24 x 15/16"</li> </ul>	All All All All	l l	 
1110-29 1110-35 1110-37	1549482  1549479 519858 G120369	BRACKET, left, hand brake rear cable         RIVET, to frame 5/16" x 7/8"         BELLCRANK, hand brake         BOLT, pivot, to bracket 3/8" - 24 x 15/16"         NUT, hex. 3/8" - 24	All All All All All	l  	  
1110-29 1110-35	1549482  1549479 519858 G120369 534384	<ul> <li>BRACKET, left, hand brake rear cable</li> <li>RIVET, to frame 5/16" x 7/8"</li> <li>BELLCRANK, hand brake</li> <li>BOLT, pivot, to bracket 3/8" - 24 x 15/16"</li> <li>NUT, hex. 3/8" - 24</li> <li>WASHER, spring</li> </ul>	All All All All All All	L	  
1110-29 1110-35 1110-37 1110-37-1	1549482  1549479 519858 G120369 534384 G120382	<ul> <li>BRACKET, left, hand brake rear cable</li> <li>RIVET, to frame 5/16" x 7/8"</li> <li>BELLCRANK, hand brake</li> <li>BOLT, pivot, to bracket 3/8" - 24 x 15/16"</li> <li>NUT, hex. 3/8" - 24</li> <li>WASHER, spring</li> <li>WASHER, lock 3/8"</li> </ul>	All All All All All All All All	l	· · · · · · · · ·
1110-29 1110-35 1110-37	1549482  1549479 519858 G120369 534384 G120382 1549480	BRACKET, left, hand brake rear cable         RIVET, to frame 5/16" x 7/8"         BELLCRANK, hand brake         BOLT, pivot, to bracket 3/8" - 24 x 15/16"         NUT, hex. 3/8" - 24         WASHER, spring         WASHER, lock 3/8"         BRACKET, hand brake bellcrank support	All All All All All All All All	L	· · · · · · · · ·
1110-29 1110-35 1110-37 1110-37-1	1549482  1549479 519858 G120369 534384 G120382 1549480 G181338	BRACKET, left, hand brake rear cable         RIVET, to frame 5/16" x 7/8"         BELLCRANK, hand brake         BOLT, pivot, to bracket 3/8" - 24 x 15/16"         NUT, hex. 3/8" - 24         WASHER, spring         WASHER, lock 3/8"         BRACKET, hand brake bellcrank support         BOLT, to frame 5/16" - 24 x 7/8"	All All All All All All All All All	L	· · · · · · · · ·
1110-29 1110-35 1110-37 1110-37-1	1549482  1549479 519858 G120369 534384 G120382 1549480	BRACKET, left, hand brake rear cable         RIVET, to frame 5/16" x 7/8"         BELLCRANK, hand brake         BOLT, pivot, to bracket 3/8" - 24 x 15/16"         NUT, hex. 3/8" - 24         WASHER, spring         WASHER, lock 3/8"         BRACKET, hand brake bellcrank support         BOLT, to frame 5/16" - 24 x 7/8"         NUT, hex. 5/16" - 24	All All		· · · · · · · · · · ·
1110-29 1110-35 1110-37 1110-37-1	1549482  1549479 519858 G120369 534384 G120382 1549480 G181338 G120368	BRACKET, left, hand brake rear cable         RIVET, to frame 5/16" x 7/8"         BELLCRANK, hand brake         BOLT, pivot, to bracket 3/8" - 24 x 15/16"         NUT, hex. 3/8" - 24         WASHER, spring         WASHER, lock 3/8"         BRACKET, hand brake bellcrank support         BOLT, to frame 5/16" - 24 x 7/8"         NUT, hex. 5/16" - 24	All            All            All            All            All            All            All            All            All            All            All            All            All            All            All            All            All            All		· · · · · · · · · · · · ·
1110-29 1110-35 1110-37 1110-37-1 1110-38	1549482  1549479 519858 G120369 534384 G120382 1549480 G181338 G120368 G120368 G120214	BRACKET, left, hand brake rear cable         RIVET, to frame 5/16" x 7/8"         BELLCRANK, hand brake         BOLT, pivot, to bracket 3/8" - 24 x 15/16"         NUT, hex. 3/8" - 24         WASHER, spring         WASHER, lock 3/8"         BRACKET, hand brake bellcrank support         BOLT, to frame 5/16" - 24 x 7/8"         NUT, hex. 5/16" - 24         WASHER, lock 5/16"         SPRING, bellcrank pull back         ROD, rear cable adjusting	All            All            All            All            All            All            All            All            All            All            All            All            All            All            All            All            All            All            All		· · · · · · · · · · · · · · · · · · ·
1110-29 1110-35 1110-37 1110-37-1 1110-38 1110-39	1549482  1549479 519858 G120369 534384 G120382 1549480 G181338 G120368 G120214 1546335	BRACKET, left, hand brake rear cable         RIVET, to frame 5/16" x 7/8"         BELLCRANK, hand brake         BOLT, pivot, to bracket 3/8" - 24 x 15/16"         NUT, hex. 3/8" - 24         WASHER, spring         WASHER, lock 3/8"         BRACKET, hand brake bellcrank support         BOLT, to frame 5/16" - 24 x 7/8"         NUT, hex. 5/16" - 24         WASHER, lock 5/16"         SPRING, bellcrank pull back         ROD, rear cable adjusting         PIN, to bellcrank 5/16" x 1/2"	All            All            All            All            All            All            All            All            All            All            All            All            All            All            All            All            All            All            All	L	· · · · · · · · · · · · ·
1110-29 1110-35 1110-37 1110-37-1 1110-38 1110-39	1549482  1549479 519858 G120369 534384 G120382 1549480 G181338 G120214 1546335 535108 42X114 G120368	<ul> <li>BRACKET, left, hand brake rear cable RIVET, to frame 5/16" x 7/8"</li> <li>BELLCRANK, hand brake</li> <li>BOLT, pivot, to bracket 3/8" - 24 x 15/16"</li> <li>NUT, hex. 3/8" - 24</li> <li>WASHER, spring</li> <li>WASHER, lock 3/8"</li> <li>BRACKET, hand brake bellcrank support</li> <li>BOLT, to frame 5/16" - 24 x 7/8"</li> <li>NUT, hex. 5/16" - 24</li> <li>WASHER, lock 5/16"</li> <li>SPRING, bellcrank pull back</li> <li>ROD, rear cable adjusting</li> <li>PIN, to bellcrank 5/16" x 1/2"</li> <li>NUT, to equalizer hex. 5/16" - 24</li> </ul>	All            All		•••
1110-29 1110-35 1110-37 1110-37-1 1110-38 1110-39	1549482 1549479 519858 G120369 534384 G120382 1549480 G181338 G120214 1546335 535108 42X114	<ul> <li>BRACKET, left, hand brake rear cable RIVET, to frame 5/16" x 7/8"</li> <li>BELLCRANK, hand brake BOLT, pivot, to bracket 3/8" - 24 x 15/16"</li> <li>NUT, hex. 3/8" - 24</li> <li>WASHER, spring</li> <li>WASHER, lock 3/8"</li> <li>BRACKET, hand brake bellcrank support BOLT, to frame 5/16" - 24 x 7/8"</li> <li>NUT, hex. 5/16" - 24</li> <li>WASHER, lock 5/16"</li> <li>SPRING, bellcrank pull back</li> <li>ROD, rear cable adjusting</li> <li>PIN, to bellcrank 5/16" x 1/2"</li> </ul>	All            All		· · · · · · · · · · · · · · · · · · ·

ILLUST. NUMBER	PART NUMBER	DESCRIPTION	MODELS	PER
1112_PO	WER BRAK	E, CHECK VALVE AND PIPES (Plates 11-3, 5)		
11 <b>12-1</b> 1112-2	1557903 1561759 G120377 G120382	POWER BRAKE UNIT SPACER, to bracket (pkg. of 4) NUT, to bracket hex. 3/8" - 16 WASHER, lock 3/8"	All All	. 1
1112-3-1 1112-3-2	1555583 1555584 G191657	BRACKET, right, power brake mounting BRACKET, le.t, power brake mounting SCREW and WASHER, to dash 3/8" - 16 x 1"	All	. 1
1112-4 1112-5	1557904 1553239	LEVER, power brake operating PIN, lever pivot COTTER 3/32" x 3/4"	All	.  1
		ROD, pedal to power brake oper. lever (See Group 1109)	All	.   1
1112-35 1112-35-1	▲ 1553242 1557909	ROD, control valve oper. PIN, to lever WASHER, spring COTTER 3/32" x 3/4"	All	.   1 .   1
1112-36 1112-36-1 1112-36-2	1555589 1555602 1557908	BOOT, plunger oper. rod RETAINER, boot GASKET, retainer	All	.   1
1112-120	1559721	CHECK VALVE, power brake	All	1
112-123	1555590	"O" RING, check valve	All	.   1
		CROSS, valve hose to manifold (See CROSS, pipe to throttle kicker, booster hose and vacuum gage—Group 0302)	All	
112-125	675058	ELBOW, vacuum hose to manifold tee	R1, R2, R3	.   1
	675721	NIPPLE, vacuum hose to manifold	R4	. 1
1112-135	3132X30 3132X234 G111603	HOSE, vacuum HOSE, vacuum CLAMP, hose 11/16"	R4	.   1

#### 1116-HAND OR PARKING BRAKE (Plate 11-6)

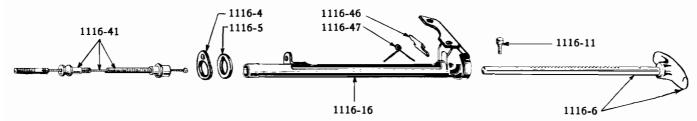

C-3191

1116-1 1116-4 1116-5	1554454 652731 1296X279 1578X43 G120393 1570X3 1578X57	CONTROL COMPLETE, hand brake (See Separate parts) PLATE, dash reinforcement GASKET, dash reinforcement plate BOLT, to dash SPEED NUT, 5/16" - 18 WASHER, plain 5/16" BOLT, to dash 5/16 10 x 3/4" SPEED NUT, 5/16" - 10	A11 A11 A11 A11 A11 A11 A11	· · · · · · · · · · · · · · · · · · ·		 1 1 2 2 2 1
1116-6	1557431	HANDLE and PLUNGER, control cable pull	All			 1
1116-11	1548302	PIN, handle and plunger guide	All		••••	 1
		▲—Not available.				

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PER CAR
<b>1116–HA</b> 1116-16	ND OR P	ARKING BRAKE-Cont'd. (Plate 11-6)		
1116-41	1554477 182317 529401 G181315 G120367 G120380	GUIDE, handle and plunger         CABLE and CONDUIT, control         CLIP, to frame         CLIP, to crossmember         BOLT, fastening 1/4" - 28 x 1"         NUT, hex. 1/4" - 28         WASHER, plain 1/4"         WASHER, lock 1/4"	. All	. 1 . 1 . 1 . 1 . 1 . 1 . 1
$1116-46 \\ 1116-47$	535324 535325	LATCH or PAWL, control plunger SPRING, pawl		
1116-60	195506 G120367 42X1	CLEVIS, control cable NUT, hex. 1/4" - 28 PIN, clevis 1/4" x 3/4" COTTER 1/16" x 3/4"	. All	. 1 . 1
	521738 G120375 G120380	CLAMP, control cable conduit to dash NUT, hex. 1/4" - 20 WASHER, lock 1/4"	. All	. 1
	530353	COVER, control cable conduit clamp	. All	. 1


# -IMPORTANT-To assure prompt shipment of parts, always give Car Serial and Engine Number

**L H C** — Left hand drive only

**R H C** — Right hand drive only

# **FRONT SUSPENSION**

Plate 12-1

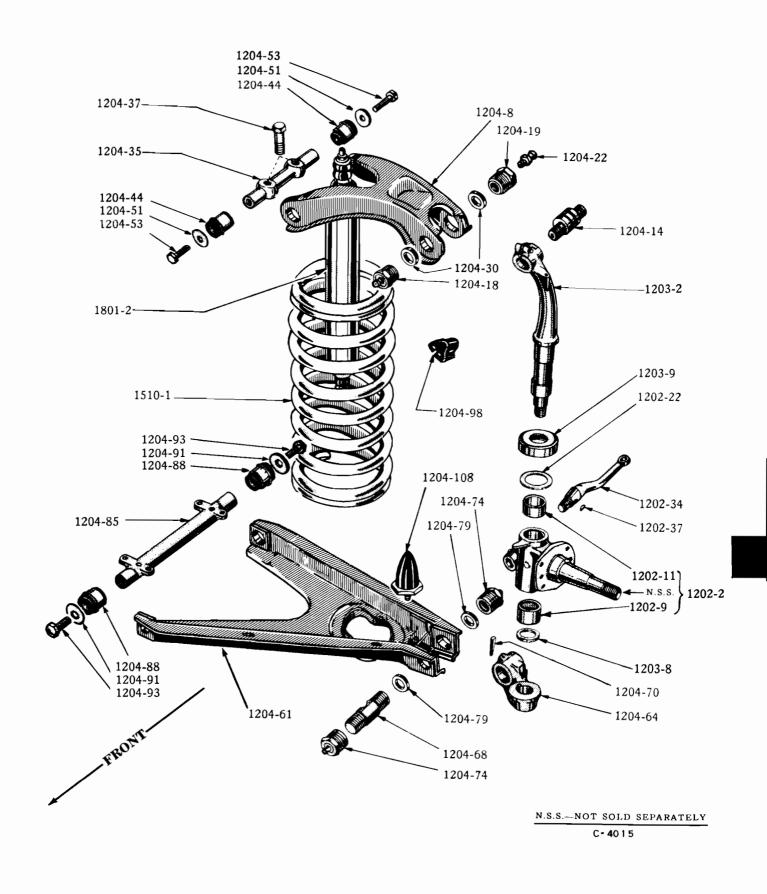


#### STEERING KNUCKLE, CONTROL ARMS and KING PINS

PAGE NO. 121

Plate 12-2

#### FRONT SUSPENSION

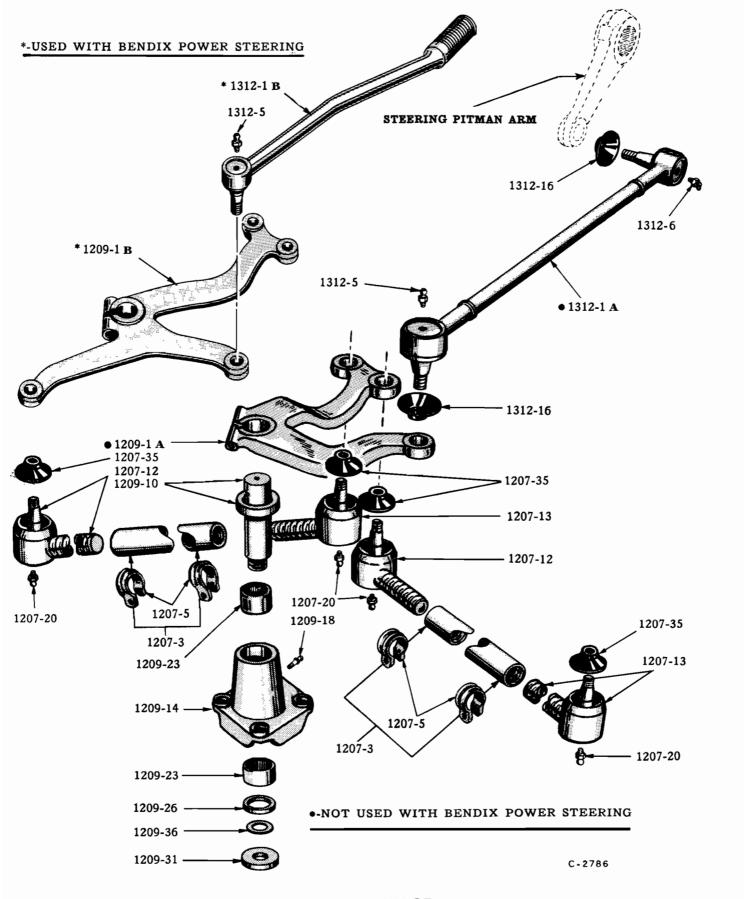


STEERING LINKAGE

# **FRONT SUSPENSION**

ILLUST. NUMBER		DESCRIPTION	MODELS	PER CAR
1202—ST	EERING KN	UCKLE AND ARM (Plate 12-1)		
1202-2	1557522 1557523 G191758	KNUCKLE, right, steering) incl. bearing and         KNUCKLE, left, steering)         upper bushing         GREASE FITTING, straight	All	. 1
1202-9	196859	BEARING, lower, steering knuckle (incl. in 1551279 kit)	All	. 2
1202-11	1550583	BUSHING, upper, steering knuckle (incl. in 1551279 kit)	All	. 2
1202-22 1202-22 1202-22 1202-22 1202-22 1202-22	193684 193685 193686 193687 193688	SHIM, steering knuckle—.009011 (incl. in 1551279 kit)SHIM, steering knuckle—.012014SHIM, steering knuckle—.015017SHIM, steering knuckle—.018020SHIM, steering knuckle—.021023	All All All	, * *
1202-34 1202-37	529050 G124549 G119256	ARM, steering knuckle KEY, woodruff, to knuckle 3/16" x 3/4" NUT, to knuckle 5/8" - 18 COTTER, 1/8" x 1-1/4"	All All	. 2


1203-STEERING KNUCKLE KING PIN AND BEARINGS (Plate 12-1)

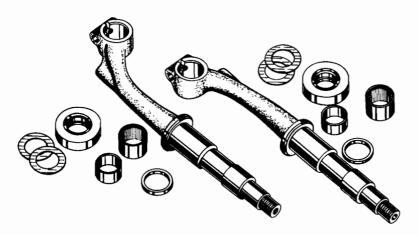

C-2720

	1551279	KING PIN KIT—consists of:       2636965 Bearings, thrust         11551414 King Pin, right       2636965 Bearings, thrust         11551415 King Pin, left       4193684 Shims, knuckle         21550583 Bushings, upper       2519483 Gaskets, king pin         2196859 Bearings, lower	All	1
1203-2	1551414 1551415 1543223	PIN, right, king       incl. in 1551279 kit         PIN, left, king       incl. in 1551279 kit         NUT, to support 3/4" - 16	All	2
1203-8	519483	GASKET, king pin (incl. in 1551279 kit)	All	2
1203-9	636965	BEARING, knuckle thrust (incl. in 1551279 kit)	All	2

\*---Use as required

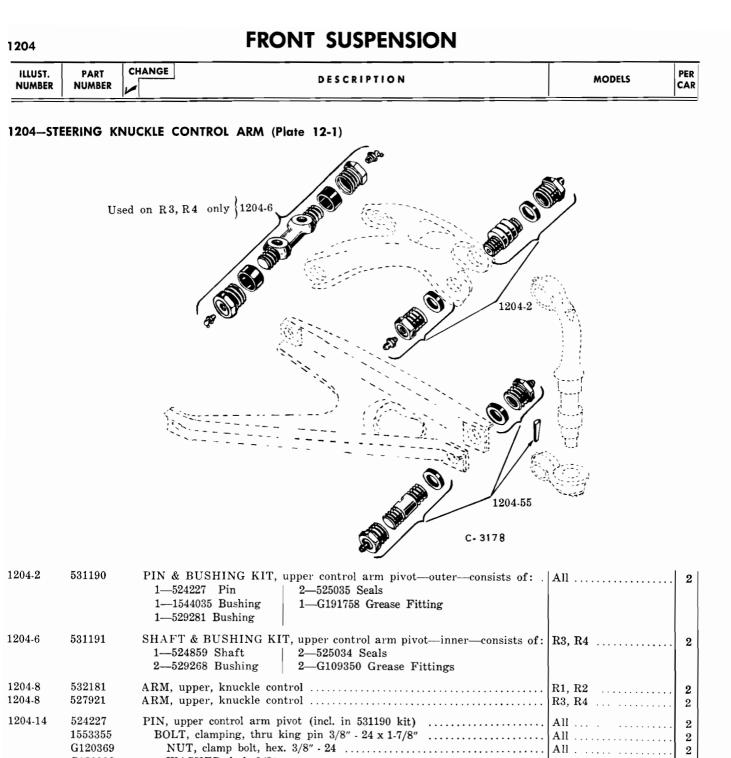


1204-0	021021	Anm, upper, knuckle control 2	L
1204-14	524227 1553355 G120369 G120382	PIN, upper control arm pivot (incl. in 531190 kit)       All       2         BOLT, clamping, thru king pin 3/8" - 24 x 1-7/8"       All       2         NUT, clamp bolt, hex. 3/8" - 24       All       2         WASHER, lock 3/8"       All       2	
1204-18	1544035	BUSHING & GREASE FITTING, front, upper control arm pivot pin	
1204-19	529281	BUSHING less GREASE FITTING, rear, upper control arm pivot pin	
1204.22	G191758	GREASE FITTING, rear	l
1204-30	525035	SEAL, bushing grease (incl. in 531190 kit) 4	
1204.35	1546662	SHAFT, upper control arm pivot 2	l
1204.35	524859	SHAFT, upper control arm pivot 2	l
1204.37	526765	BOLT, to frame 1/2" - 20 x 1-5/8"	l
	G120371	NUT, hex. 1/2" - 20	l
	G103323	WASHER, lock 1/2"	l
			4

# FRONT SUSPENSION

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	CA
1204—STI		UCKLE CONTROL ARM-Cont'd. (Plate 12-1)		
1204-44 1204-44	1553430 529268 G109350	BUSHING, upper control arm pivot shaft BUSHING, inner, upper control arm pivot shaft (incl. in 531191 kit) GREASE FITTING (incl. in 531191 kit)	R1, R2	
	525034	SEAL, upper control arm inner bushing grease (incl. in 531191 kit)	R3, R4	
1204-51 1204-53	532187 1541700 G446211	RETAINER, upper control arm bushing SCREW, to shaft 3/8" - 24 x 1-1/8" WASHER, plain 7/16"	,	
204-55	531192	PIN & BUSHING KIT, lower control arm pivot—consists of:	All	
1204-61	$\frac{1541682}{1541683}$	ARM, right, lower control arm		1
204-64	1551416 1551417 G124551	SUPPORT, right, lower control arm to king pin SUPPORT, left, lower control arm to king pin KEY, woodruff, to king pin 1/4" x 7/8"	All	
$1204-68 \\ 1204-70$	$518431 \\ 510141$	PIN, lower control arm pivot} incl. in 531192 kit	All	
1204-74	1544036	BUSHING & GREASE FITTING, lower control arm pivot pin (incl. in 531192 kit)	All	
1204-79	199385	SEAL, bushing (incl. in 531192 kit)	All	
1204-85	532188 G181399 3091X1 1544218	SHAFT, lower control arm pivot BOLT, to crossmember 7/16" - 20 x 1-3/8" NUT, hex. 7/16" - 20 WASHER, plain	All	
204-88	533164	BUSHING, lower control arm pivot shaft	. All	
1204-91 1204-93	532190 G181429 G103323	RETAINER, lower control arm pivot shaft bushing SCREW, to shaft 1/2" - 20 x 1.1/4" WASHER, lock 1/2"	All	
204-98	537461	BUMPER, upper control arm—rubber	All	
1204-108	524230 G451010	BUMPER, lower control arm jounce—steel and rubber NUT, hex. 3/8" - 24	All	

ILLUST. PART CHANGE DESCRIPTION MODELS	PER CAR
--	------------

## 1205-STEERING KNUCKLE CONTROL ARM STABILIZER

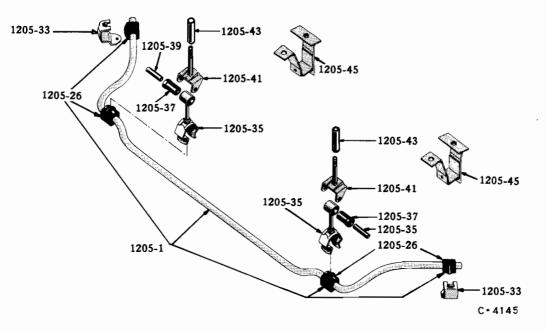

1205-1	1545227	SHAFT w/BUSHINGS, control arm stabilizer	All	1
1205-26	1539472	BUSHING, stabilizer shaft—rubber	All	4
1205-33	529391 G181336 G120368 G120214	RETAINER, stabilizer shaft bushing         BOLT, to arm 5/16" - 24 x 3/4"         NUT, hex. 5/16" - 24         WASHER, lock 5/16"	All	* * *
1205-35	1545231 G181409 G272876 G181336 G120368 G120214	BOLT, upper fast. 7/16" - 20 x 2-3/4"          NUT, hex. 7/16" - 20          BOLT, lower clamping 5/16" - 24 x 3/4"          NUT, hex. 5/16" - 24	All All All All All All	2
1205-37	419932	BUSHING, stabilizer shaft link (before serial 1815)	All	2
1205-39	1544479	SLEEVE, stabilizer shaft link (before serial 1815)	All	2
1205-41	1546105 G120369 G120382	NUT, hex. 3/8" - 24	AII	2 2 2 2
1205-43	1545341	SPACER, link anchor bracket (before serial 1815)	All	2
1205-45	1558373 G189331 G120369 41X557 G120382	BOLT, to frame 3/8" - 24 x 4"         NUT, hex. 3/8" - 24         wASHER, plain 3/8"	All All All All All All	2 4 4 4 4

\*-Use as required.


# FRONT SUSPENSION

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PI C
207—ST	EERING K	NUCKLE TIE ROD AND ENDS (Plate 12-2)		
	▲	ROD w/ENDS, knuckle tie (order component parts)		
207-3	1553703	ROD w/CLAMPS, knuckle tie	. All	$\cdot$
207-5	510487	CLAMP, knuckle tie rod	. All	
201-0	G181341	BOLT, clamping 5/16" - 24 x 1-1/4"	. All	
	G120368 G120214	NUT, hex. 5/16" - 24 WASHER, lock 5/16"	. All	•••
907 19	1554236	END, outer, 19-7/8" long (has R.H. thd.) ) incl. nut, seal & grease fittin		
207-12 207-13	1554236 530204	END, outer, 15-1/8 long (has L.H. thd.) [ Incl. hut, sear & grease fitter END, inner, 3-7/64" long (has L.H. thd.) ] before serial 4904	All	
207-12	1561767	END, outer, 19-1/8" long (has R.H. thd.) ) incl. nut & seal		
207-13	1561769	END, inner, 3-7/8" long (has L.H. thd.)) after serial 4904		
207-20	G271287	GREASE FITTING		
	G102647	NUT, ball stud		
907 9F	530202	SEAL, tie rod end ball stud (before serial 4904)		1
207-35 207-35	1562914	SEAL, the rod end ball stud (after serial 4904)	All	
000 67		ELLCRANK AND BRACKET (Plate 12-2)		
			A 11	
209-1A	$1552345 \\ 1547288$	BELLCRANK, steering (L/power steer.) BELLCRANK, steering (w/power steer.)		
209-1B	G454962	BOLT, clamping 7/16" - 20 x 2-3/4"	All	•••
	674899	NUT, hex. 7/16" - 20		
	G136857	WASHER shipped 7/16"	A 11	
	G454961	SCREW, clamping 7/16" - 20 x 2-1/4")	All	
	G136857			
209-10	1547237	SHAFT & WASHER, bellcrank		
	639040	NUT, hex. 5/8" - 18 COTTER, 1/8" x 1-1/4"		
000 1 4		BRACKET w/BEARINGS, bellcrank (before serial 3074)		
209-14 209-14	$1542212 \\ 1554377$	BRACKET W/BEARINGS, bellcrank (before serial 3074)		
209-14 209-18	G271287	GREASE FITTING, bellcrank (arter serial 5074)		
200-10	G186312	BOLT, long, to crossmember $3/8'' - 24 \ge 4''$		
	G181639	BOLT, short, to crossmember 3/8" - 24 x 1-1/4"		
	G120369	NUT, hex. 3/8" - 24		
	41X562	WASHER, plain 3/8"		
	G120382			
209-23	525013	BEARING, bellcrank bracket (before serial 3074)		
209-23	1554379	BUSHING, bellcrank bracket (after serial 3074)		
209-26 209-26	$525007 \\ 1554380$	SEAL, bellcrank bracket bearing (before serial 3074) SEAL, bellcrank bracket bushing (after serial 3074)		
209-31	1542216	THRUST WASHER, lower, bellcrank		
	525002	SHIM, bellcrank adjusting		
.209-36 .209-36	525002 525003	SHIM, bellcrank adjusting-005011		
209-36	525003 525004	SHIM, bellcrank adjusting—.015017		
209-36	525005	SHIM, bellcrank adjusting-018 - 020		
209-36	525006	SHIM, bellcrank adjusting—.021023	.   All	

\*—Use as required ▲—Not available

# MEMORANDA IMPORTANT---= To assure prompt shipment of parts, always give Car Serial and Engine Number L H C — Left hand drive only **R H C** — Right hand drive only

Plate 13-1

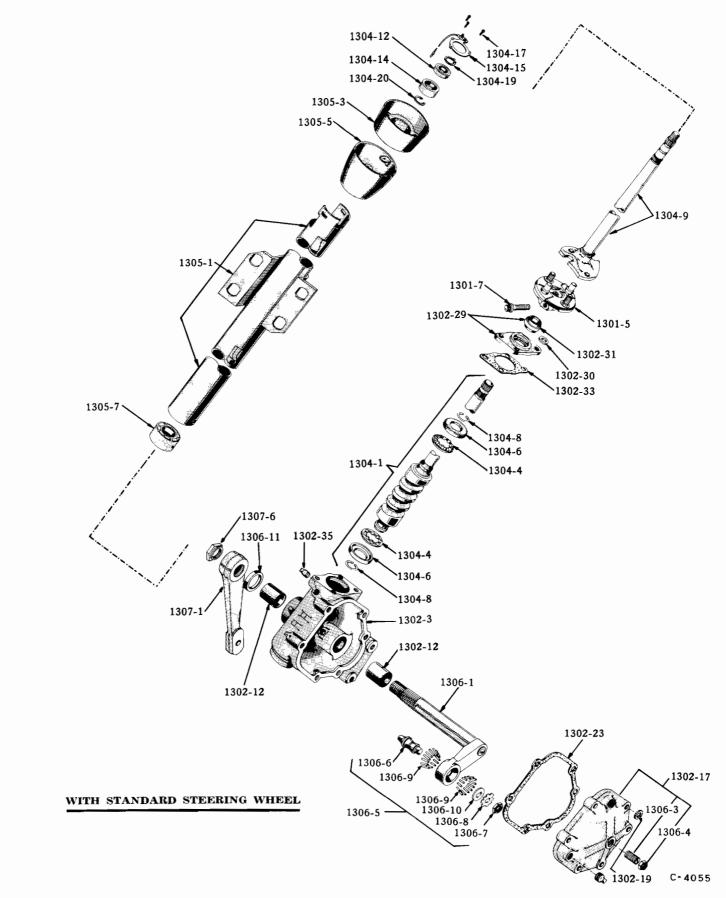


## STEERING GEAR, JACKET and RELATED PARTS

PAGE NO. 129

Plate 13-2

## **STANDARD STEERING**

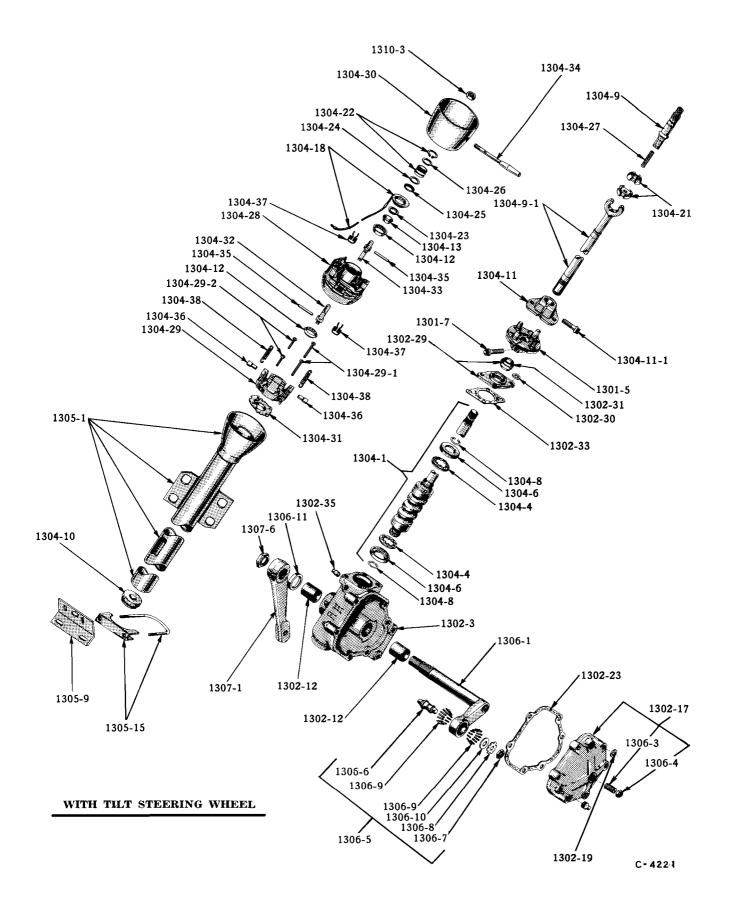

STEERING GEAR, JACKET and RELATED PARTS

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PER
1301A-S	TEERING	GEAR ASSEMBLIES (Plates 13-1, 2)		
		Steering gear assemblies are furnished less pitman arm, flange & insulator, steering post shaft, jacket and steering wheel.		
	1557140	STEERING GEAR ASSY. (22.1 ratio) (L/power steer.)	A 11	1
	$1557142 \\ 1557143$	STEERING GEAR ASST. (22.1 ratio) (L/power seee.)		
	1557143	STEERING GEAR ASSY. (16.1 ratio) (w/power steer.)	All	
	G186311	BOLT, to frame $3/8'' - 24 \times 3 \cdot 3/4''$	All	
	G186309	BOLT, to frame 3/8" - 24 x 3-1/2"	All	.   :
	G451010	NUT, hex. 3/8" - 24	All	:
	41X562	WASHER, upper, plain		
	1559781	WASHER, lower, plain		
	1559780	WASHER, spacer 1/16" (special)	All	.
1301-5	1557139	FLANGE & INSULATOR ASSY., steering gear	A11	
1301-5	1557280	SCREW, clamping (special)		
	G120368	NUT, shart to flange coupling 5/16" - 24		
	G120214	WASHER, lock 5/16"		
1302A-S	STEERING	GEAR HOUSING AND COVERS (Plates 13-1, 2)		
1302-3	1557615	HOUSING, steering gear (incl. bushings, oil seal & plug)	All	
1302-12	680209	BUSHING, housing	All	.   :
1302-17	1557622	COVER ASSY., housing side	All	
	G180126	SCREW, to housing 3/8" - 16 x 1-1/2"		
1302-19	1557618	WASHER, plain (special)		
	G444734	PLUG, housing side cover 1/4" pipe	All	.   1
1302-23	1557623	GASKET, housing side cover	All	1
1302-29	1557617	COVER w/SEAL, housing top	All	
	G180122	SCREW, to housing 3/8" - 16 x 1"	All	
1302-30	1557618	WASHER, plain (special)	All	·   ·
1302-31	1557616	SEAL, housing top cover		
1302-33	1557619	SHIM, housing top cover—.002		
1302-33	1557620	SHIM, housing top cover—.003	All	· .
1302-33	1557621	SHIM, housing top cover010	All	
1302-35	1557624	PLUG, housing vent & filler		
1304A—9	STEERING	GEAR POST AND CAM, SHAFT, BEARING, ETC. (Plates 13-1, 2)		
1304-1	1557626	POST & CAM, steering gear (22.1 ratio)) incl. bearings, cups	A 11	
1304-1 1304-1	1557626	POST & CAM, steering gear (22.1 ratio) Incl. bearings, cups POST & CAM, steering gear (16.1 ratio) & lock rings		
1304-4	1556013	BALL & RETAINER ASSY., post cam bearing		
1304-6	1542674	CUP, post cam bearing		
1304-8	185547	LOCK RING, cup		
1404-9	1555971	•SHAFT, steering post	All	• •
1304-9	1562296	SHAFT, upper, steering post	All	
1304-9-1	1562295	SHAFT ASSY., lower, steering post		
1304-10	1562315	SEAL, steering post lower shaft-plastic	1	
1304-11 1304-11-1	$1562311 \\ 1557280$	<ul> <li>FLANGE, steering post lower shaft coupling</li> <li>SCREW, clamping (special)</li> </ul>	All	
		●Not used with tilt steering wheel equipment. ■Used with special order tilt steering wheel equipment.		
* 11.	a maanimal	= Used with special order the steering wheel equipment.		
⁺—Use a	s required			


ILLUST. NUMBER	PART NUMBER		DESCRIPTION	MODELS	PER CAR
	TEERING lates 13-1		AND CAM, SHAFT, BEARINGS, ETCCont'd.		
$1304-12 \\ 1304-12$	$\frac{1556014}{1562292}$		G, upper, steering post shaft G, steering post shaft	1	
1304-13	1562293	RACE, st	teering post shaft bearing inner	All	1
1304-14	1556047	•INSULA'	TOR, steering post shaft bearing—rubber	All	1
$1304-15 \\ 1304-17$	1557643 G167047	• RETAIN • SCREV	ER & HORN BRUSH ASSY., shaft bearing (incl. cable) V, retainer fastening No. $8 \cdot 32 \ge 1/2^{"}$	All	1 3
1304-18	1562294	HORN C	ONTACT ASSY., steering post	All	1
$1304-19 \\ 1304-20$	$1556064 \\ 1556065$	•LOCK RI •LOCK RI	NG, upper, steering post shaft retaining NG, lower, steering post shaft retaining	All	1
1304-21	1562297	<b>SPHERE</b>	, steering post shaft adj. centering—nylon	All	2
1304-22	1562299	PRELOA	D CAPSULE & RETAINER RING KIT, steer. post shaft brg.	All	1
1304-23	1562300	■SEAT, st	eering post shaft bearing preload capsule	All	1
1304-24	1562301	WASHE	R, steer. post shaft brg. preload capsule seat—rubber	All	1
1304-25	1562302	RETAIN	ER, steer. post shaft brg. preload capsule seat washer	All	1
1304-26	156230?	WASHE	R, steer. post shaft brg. preload capsule retainer	All	1
1304-27	1562298	SPRING,	steer. post shaft adj. preload	All	1
1304-28	1562313	■ACTUAT	OR HOUSING ASSY., steering post	All	1
1304-29 1304-29-1 1304-29-2	$\begin{array}{c} 1562306 \\ 1562307 \\ 1562308 \end{array}$	SCREV	T ASSY., steer. post adj. V, support—large V, support—small	All	2
1304-30	1562310		steering post actuator		]
1304-31	1562305		steering post adj. support lock		
$1304-32 \\ 1304-33$	$1562288 \\ 1562289$		SSY., upper, steering wheel adj. lock		
1304-34	1561736	LEVER,	steering wheel release	All	1
1304-35	1562290	■PIN, stee	ring wheel adj. lock shoe	All	2
1304-36	1562312	■PIN, stee	ring wheel adj. actuator pivot	All	2
1304-37	1562291	SPRING,	steering wheel adj. lock shoe	All	2
1304-38	1562309	SPRING,	steering wheel tilt return	All	2
13054_5	TEERING	POST JACKE	T, HOUSING, BRACKET, ETC. (Plates 13-1, 2)		
1305-1 1305-1	1556004 1562314 G271184 1556097	•JACKET ■JACKET NUT &	& MOUNTING BRACKET, steering post & MOUNTING BRACKET, steering post WASHER, brkt. to inst. board 5/16" - 18 HER, plain (special)	All	14
1305-3	1556033 532549 532550	• BOLT,	T, upper, steering post jacket anchor, to jacket (special) , hex. (special)	All	2
1305-5	1555999 G449611		G, upper, steering post jacket trim		
1305-7	1559515 G177999 G121753	<ul> <li>SCREW</li> <li>WAS</li> <li>—Not use</li> </ul>	G, lower, steering post jacket—plastic	All	2


ILLUST. NUMBER	PART NUMBER	DESCRIPTION		MODELS	PI C/
3054_9	TEERING	POST JACKET, HOUSING, BRACKET, ETC. (Plates 13-1, 2)			
305-9	1556313 G180078 41X204 G120214 680445	<ul> <li>BRACKET, lower, steering post jacket support</li> <li>SCREW, brkt. to dash 5/16" - 18 x 7/8"</li> <li>WASHER, plain</li> <li>WASHER, lock 5/16"</li> <li>SPACER, steering post jacket support 1/4"</li> </ul>	All All All		.
05-15	1557634	■U-BOLT & SADDLE ASSY., jacket to brkt. clamping			
		GEAR CAM LEVER SHAFT (Plates 13-1, 2)			
806-1 806-3 806-4 806-5	1560667 630651 G124934 1559766	SHAFT, STUD & ROLLERS, cam lever         SCREW, adj. 1/2" - 20 x 1-1/16"         NUT, lock 1/2" - 20         STUD & ROLLER KIT, cam lever shaft—consists of:	All All		
06-6	100004	1	All		
06-7 06-8	$\frac{1689694}{172441}$	NUT, to stud (special)	All All	••••	
06-9	1542846	ROLLER, cam lever shaft stud (incl. in 1559766 kit)	All	··· ···· · · · ·	
6-10	1541706	RETAINER, shaft stud roller (incl. in 1559766 kit)	All	••••	
06-11	190276	OIL SEAL, cam lever shaft	All		
07A-S	TEERING	GEAR PITMAN ARM (Plates 13-1, 2)			
07-1 07-6	1557161 168093 G103336	ARM, steering gear pitman NUT, to shaft 7/8" - 14 WASHER, lock 7/8"	All		

-Used with special order tilt steering wheel equipment.

				1	
ILLUST. NUMBER	PART NUMBER	CHANGE	DESCRIPTION	MODELS	PER CAR

#### 1310A-STEERING WHEEL AND RELATED PARTS

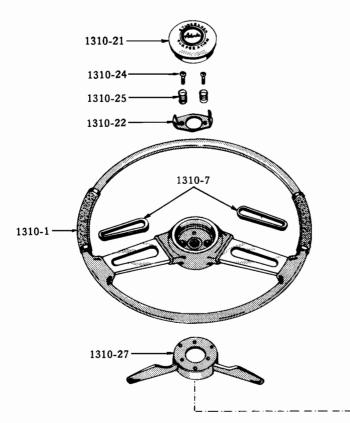

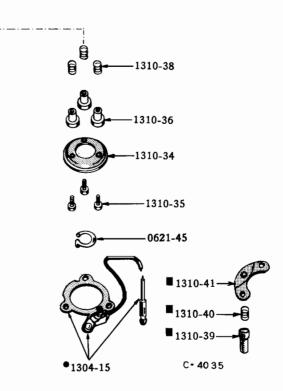

#### •— WITH STANDARD STEERING WHEEL — WITH TILT STEERING WHEEL

1310-1 1310-1	$\frac{1556029}{1561658}$	WHEEL, steering—fawn tan WHEEL, steering—walnut brown	All	 	1
1310-3	3091X2 3091X12	<ul> <li>NUT, to post shaft 5/8" - 18</li> <li>NUT, to post 1/2" - 20</li> </ul>			
1310-7	1556051	INSERT, steering wheel spoke—plastic	All	 	2
1310-21	1557894	EMBLEM, steering wheel	All	 	1
1310-22 1310-24	$\frac{1557353}{1557677}$	RETAINER, steering wheel emblem SCREW, retainer (special)			
1310-25	1556034	SPRING, steering wheel emblem retainer	All	 	2
1310-27	1557463	HORN BAR & SWITCH ASSY., steering wheel	All	 	1
1310-34 1310-35 1310-35 1310-35	1556044 1556042 1556042 G132715 1556050	<ul> <li>PLATE, horn bar &amp; switch contact</li> <li>SCREW &amp; WASHER, to steering wheel No. 6 x 3/4"</li> <li>SCREW &amp; WASHER, to steering wheel No. 6 x 3/4"</li> <li>SCREW, ret. plate to steer. wheel No. 6 x 7/8"</li> <li>WASHER, ret. plate insulating—nylon</li> </ul>	All All All	   	3 1 2
1310-36	1556045	SPACER, horn bar & switch contact	All	 	3
1310-38	1556034	SPRING, horn bar & switch contact	All	 	3
1310-39	1561654	BRUSH, steering wheel horn	All	 	1
		<ul> <li>→Not used with tilt steering wheel equipment.</li> <li>■→Used with special order tilt steering wheel equipment.</li> </ul>			


ILLUST. PART NUMBER NUMBE	CHANGE DESCRIPTION		MODELS	PER
	G WHEEL AND RELATED PARTS_Cont'd.			
1310-40 156165		All		1
1310-41 156165				1
1304-15	•RETAINER & HORN BRUSH ASSY. (See Group 1304A)			
1312A—STEERIN	G REACH ROD AND ENDS (Plate 12-2)			
1312-1A 15420				
1312-1A 15617' 1312-5 3036X 1312-6 G2712 G1026	1ROD & ENDS, reach (incl. nuts & seals) (after serial 4992)4GREASE FITTING, front (90°)87GREASE FITTING, rear (straight)	All All All All All		. 1 . 1 . 2
1312-16         530203           1312-16         156293				
	<ul> <li>-Not used with tilt steering wheel equipment.</li> <li>Used with special order tilt steering wheel equipment.</li> </ul>			


# MEMORANDA

	······································
	A N T
To assure prompt shipment a Car Serial and Eng	of parts, always give
L H C — Left hand	drive only

**R H C** — Right hand drive only

1308-103 1308-99 1308-121 1308-113 1308-109 1308-125 1308-123 1308-129 1308-91

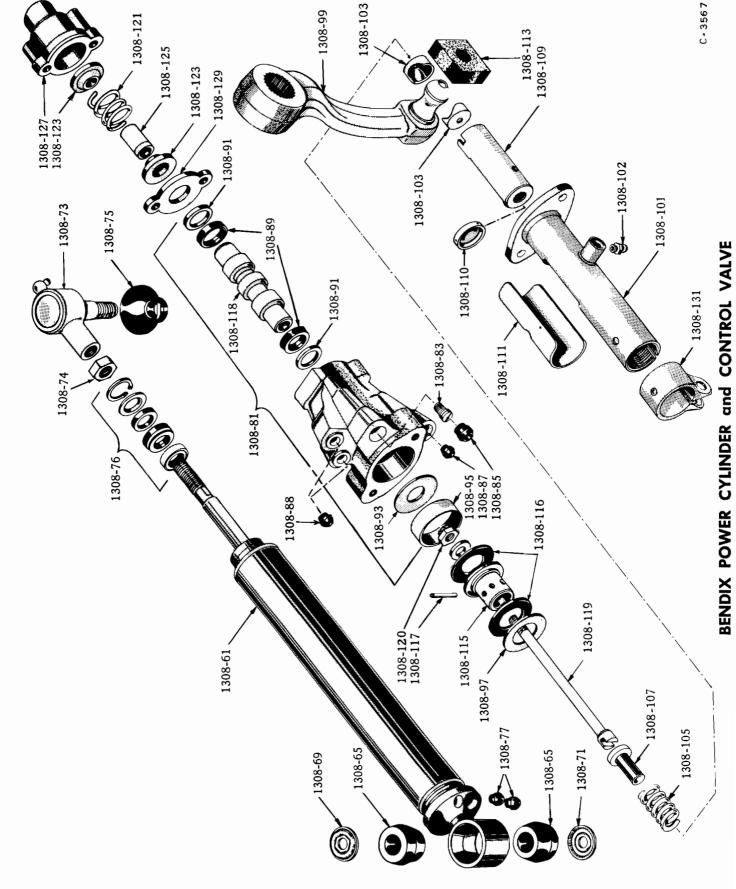

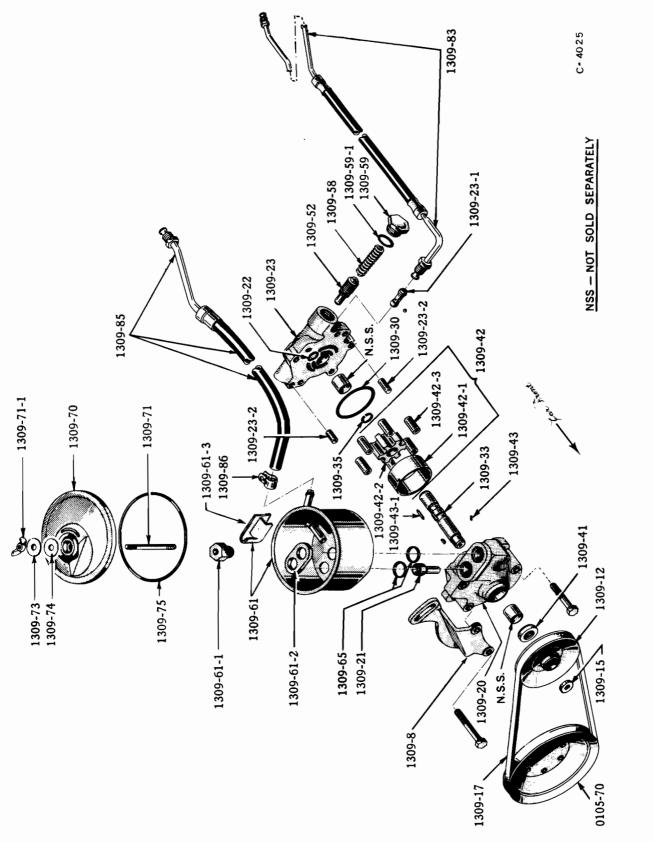


ILLUST. NUMBER	PART NUMBER	CHANGE	DESCRIPTION	MODELS	PER CAR	н
-------------------	----------------	--------	-------------	--------	------------	---

#### 1301B-STEERING GEAR ASSEMBLIES (Plates 13-1, 2)

Note—Bendix type power cylinder and control valve is used with standard steering gear—groups 1301A thru 1306A.

1308B-POWER CYLINDER, BRACKET, CONTROL VALVE HOSES, ETC. (Plate 13-3)

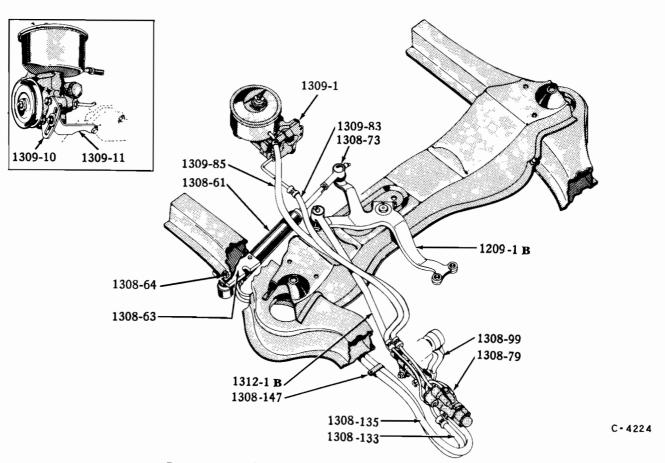

BENDIX POWER STEERING, CONTROL VALVE. POWER CYLINDER and ETC.

#### **Power Cylinder and Bracket**

1308-61	1551362 G443340	CYLINDER ASSY., power         All         1           NUT, to anchor brkt. stud 1/2" - 20         All         1	
1308-63 1308-64	1546135 G271506 G181608 G120368 G120214	BRACKET & STUD ASSY., anchor (cylinder to frame)       All       1         NUT, stud fastening 7/16" - 20       All       1         BOLT, to frame 5/16" - 24 x 1"       All       1         NUT, hex. 5/16" - 24       All       1         WASHER, lock 5/16"       All       1	
1308-65	1546133	BUSHING, power cylinder 2	
1308-69 1308-71	$\frac{1546162}{679278}$	RETAINER, upper, bushing       All       1         RETAINER, lower, bushing       All       1	
1308-73	1562228 3036X3	END ASSY., power cylinder       All       1         GREASE FITTING (45°)       All       1	
1308-74	G272123 G102647	NUT, hex. end locking       All       1         NUT, stud to bellcrank 1/2" - 20       All       1         COTTER 3/32" - 1"       All       1	

ILLUST. NUMBER	PART NUMBER		MODELS	P C
		INDER, BRACKET, CONTROL VALVE, —Cont'd. (Plate 13-3)		
		Power Cylinder and Bracket—Cont'd.		
308-75	530202	SEAL, power cylinder end grease (before serial 4904)	All	
308-76	1553403	SEAL KIT, power cylinder—consists of:         1— Oil seal         1— Oil seal bushing         1— Dust seal		
308-77	458053	SEAT, power cylinder tube	All	
		Control Valve and Hoses		
808-79	1556068	CONTROL VALVE w/PITMAN ARM ASSY	All	
308-81	1551365	HOUSING & SPOOL ASSY., control valve		
808-83	436452	RELIEF VALVE, control valve housing		1
308-85 308-87	$1689266 \\ 458053$	SEAT, control valve housing port tube 3/8" SEAT, control valve housing port tube 1/4"	All	
308-88	1551366	SEAT, control valve housing port tube 1/4	All	
	1545332	OIL SEAL KIT, control valve—consists of: 2—1545312 Oil seals 1—1543902 Dust seal 1—1545329 Dust shield	All	
308-89	1545312	OIL SEAL, control valve housing (incl. in 1545332 kit)	All	
308-91 308-93	$1545311 \\ 1545313$	BUSHING, control valve housing oil seal RETAINER, bushing		
308-95 308-97	$1545314 \\ 1545317$	SPACER, control valve housing bushing	All	
308-99	1557147	ARM & BALL STUD ASSY., pitman		
308-101 308-102	1545315 G271287 G120229 G120214	SLEEVE, pitman arm ball stud housing GREASE FITTING SCREW, to housing 5/16" - 18 x 7/8" WASHER, lock 5/16"	All	
308-103	1545327	SEAT, pitman arm ball stud		
308-105	1545326	SPRING, pitman arm ball stud		
308-107	1545325	SEAT, pitman arm ball stud spring		
308-109	1562669	SLEEVE, inner, pitman arm ball stud housing		
308-110	1562670	PLUG, pitman arm ball stud housing inner sleeveplastic		
308-110	1545329	DUST SHIELD, pitman arm ball stud (incl. in 1545332 kit)		
308-111	1543902	SEAL, pitman arm ball stud dust—rubber (incl. in 1545332 kit)		
308-115 308-115	1543902 1553497			
308-115 308-116 308-117	1553497 1553498 1545324	STOP SCREW, control valve centering spring adj CUSHION, stop screw—rubber PIN, stop screw locking	All	
308-118 308-119 308-120	474281 911882X4 G120393	SPOOL, control valve housing (use 1551365)         BOLT, to stop screw 5/16" - 24 x 4·3/4"         NUT, locking 5/16" - 24         WASHER, plain 5/16"	All	
308-121	1552647	SPRING, control valve housing centering	All	
308-123	1562994	SEAT, centering spring	All	

1308B

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PER
1 308B—P( H(	OWER CY DSES, ETC	LINDER, BRACKET, CONTROL VALVE, .—Cont'd. (Plate 13-3)		
		Control Valve and Hoses—Cont'd.		
1308-125	1545319	SPACER, centering spring	. All	. 1
1308-127	1545322 G114361 G120380	COVER, control valve housing end SCREW, to housing 1/4" - 20 x 1-1/2" WASHER, lock 1/4"	. All	. 2
1308-129	1545321	ADAPTER, cover to housing	. All	. 1
1308-131	1545316 G181371 G120369 G120382	CLAMP, reach rod BOLT, clamping 3/8" - 24 x 1-3/8" NUT, hex. 3/8" - 24 WASHER, lock 3/8"	. All	. 1
1308-133 1308-135	$1551345 \\ 1551344$	HOSE & PIPE ASSY., control valve to power cylinder (left turn) 27". HOSE & PIPE ASSY., control valve to power cylinder (right turn) 31-1/4	" All	. 1
1308-147	1543994 G177999	CLIP, to frame SCREW, hex. S.T. 1/4" - 14 x 1/2"		
1309B—P	OWER ST	ERING PUMP, PULLEY, BELT, ETC. (Plate 13-4)		
		Pump, Support Brackets, Pulley and Belt		
1309-1	1558689 G179849 G138489	PUMP, hydraulic (L/reservoir) SCREW, to support 3/8" - 16 x 2.1/2" WASHER, sh'prf. 3/8"	. All	. 2
1309-8	1547256 1547363 1547364 G120368 41X204 G120214	BRACKET, pump support STUD, to block 5/16" - 18 - 24 x 3-3/8" STUD, to cyl. head 5/16" - 18 - 24 x 2-7/8" NUT, hex. 5/16" - 24 WASHER, plain 11/32" WASHER, lock 5/16"	. All	. 1 . 1 . 2
1309-10	1549567F G179847 G138489	BRACKET, pump brace fastening SCREW, to pump body 3/8" - 16 x 2" WASHER, sh'prf. 3/8"	. All	. 2
1309-11	1549568F G181333 G446882 41X204 G120214	BRACE, pump	. All	. 1 . 1
1309-12 1309-15	1547257 G124543 G180078 1548803	PULLEY, pump drive shaft         KEY, to shaft 1/8" x 1/2"         SCREW, to shaft 5/16" - 18 x 7/8"         WASHER, plain (special)	All	. 1
	G120214	WASHER, lock 5/16"	. All	. 1
1309-17	1548513	BELT, pump drive	. All	. 1
		Pump Body, Cover, Seals, Shaft, Valve and Spring		
1309-20	1558690	BODY & BUSHING ASSY, pump		
$1309-21 \\ 1309-21$	$\frac{1548204}{1558691}$	VENTURI, pump flow control (before engine R1220, RS1261) VENTURI, pump flow control (after engine R1220, RS1261)		
1309-22	1541256	SEAL, body by pass "O" ring		
1309-23	1548207 G179847	COVER & BUSHING ASSY., pump body SCREW, to body 3/8" - 16 x 2"	. All	. 3
1309-23-1	1548208	SEAT, pump cover orifice	. All	. 1


NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PI C/
309B-P	OWER STE	ERING PUMP, PULLEY, BELT, ETC.—Cont'd. (Plate 13-4)		
		Pump Body, Cover, Seals, Shaft, Valve and Spring—Cont'd.		
309-23-2	1548209	PIN, pump cover dowel	. All	
309-30	1548206	SEAL, body to cover "O" ring	.   All	
309-33	1558692	SHAFT, pump drive	. All	
309-35	1548211	SNAP RING, pump drive shaft	. All	
309-41	1558693	OIL SEAL, pump drive	. All	
309-42	1548217	REPAIR KIT, pump impeller—consists of:       1         1       Pump housing insert       6         1       Carrier       6	. All	
309-42-1		PUMP HOUSING INSERT (fur. only in 1548217 kit)	. All	
309-42-2		CARRIER, (fur. only in 1548217 kit)	. All	
309-42-3		ROLLERS, (fur. only in 1548217 kit)	. All	
309-43	1548218	PIN, pump cam dowel	. <b>A</b> 11	
309-43-1	1548219	PIN, pump carrier drive	. All	
309-52	1548213	VALVE ASSY., pump flow control	. All	
309-58	1548214	SPRING, pump flow control valve	. All	
309-59	1548215	CAP, pump control valve	. All	
309-59-1	1548216	SEAL, pump control valve cap	. All	
		Reservoir, Cover, Spring and Gasket		
309-61	1553296	RESERVOIR w/BAFFLE ASSY., pump	<b>A</b> 11	
309-61-1	1548201	STUD, reservoir to body fastening		
309-61-2	1548199	PLATE, reservoir reinf.		
309-61-3	1553354	BAFFLE, pump reservoir		
309-65	1548200	GASKET, reservoir to body—rubber		
.309-70 .309-71	1553297 1548197	COVER w/GASKET, pump reservoir		
309-71-1	G148313	WING NUT 5/16" - 18		
309-73	1548198	WASHER, plain (special)		
.309-74	1553299	GASKET, pump reservoir stud washer		
309-75	1553298	GASKET, pump reservoir cover	. All	•
		Hose and Pipe Assemblies		
309-83	1559779	HOSE & PIPE ASSY., pump to control valve pressure	. All	
309-85	1559778	HOSE & PIPE ASSY., pump to control valve return		
309-86	1541400	CLAMP, return hose		
	1543994 G155343 G120375 G120380	CLIP, hose to fender apron SCREW, to fender apron 1/4" - 20 x 5/8" NUT, hex. 1/4" - 20 WASHER, lock 1/4"	. All	

		POWER STEERING			13			
ILLUST. NUMBER	PART NUMBER	CHANGE	DESCRIPTION		MODELS	PER CAR		
		REACH ROD AND EN	IDS (Plate 12-2)					
.312-1B 312-1B 312-5	1546218 1561778 3036X4 G102647	ROD & END, reac ROD & END, reac GREASE FITTI NUT, to ball stud	th       (before serial 4992)         th       (after serial 4992)         NG, front          d.       1/2" - 20         " x 1"		All All All	1 1 1		
.312-16 .312-16	$530202 \\ 1562914$		end grease (before serial 49 end grease (after serial 499					
						. 1		

To assure prompt shipment of parts, always give Car Serial and Engine Number
L H C — Left hand drive only
<b>R H C</b> — Right hand drive only

**WHEELS** 


## Plate 14-1

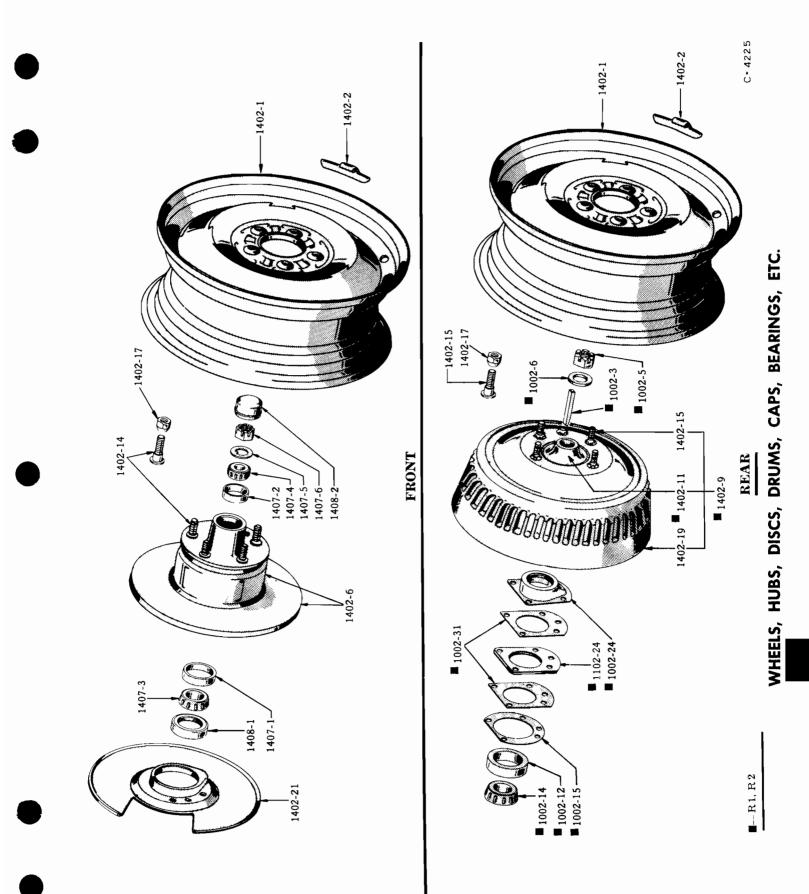


Copyright 1963 Studebaker Corporation

# WHEELS

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE CA
	•	SS AND DISCS, HUBS AND DRUMS (Plate 14-1)		
402-1	1557724P	WHEEL-prime		
402-2	678157	WEIGHT, wheel balance—1/2 oz		
402-2 402-2	$190983 \\ 190984$	WEIGHT, wheel balance—1 oz		·
402-2	190985	WEIGHT, wheel balance—3 oz.		
402-2	1555186	WEIGHT, wheel balance—4 oz.		
	1557717	VALVE ASSY., tubeless tire	All	
		Hubs, Discs and Drums		
402-5	1557500	HUB & DISC, front (incl. cups & studs)		
	▲	HUB w/CUPS, front wheel (use 1557500)		
1402-9	1557400	HUB w/DRUM, rear	R1, R2	
402-11	533901	HUB, rear wheel	R1, R2	
1402-14	1557509	STUD, front wheel hub		
402-15	1561095	STUD, rear wheel hub		
1402-17	196308	NUT, hub stud		. 2
1402-19	1557401	DRUM, rear wheel brake		
402-19	$1558906 \\ 1560560$	DRUM, rear wheel brake		
402-21	1557506	DUST SHIELD, right, front wheel brake disc		
	1557507	DUST SHIELD, left, front wheel brake disc	All	
	G181636 G120369	BOLT, to disc 3/8" - 24 x 7/8"		
	G120382	WASHER, lock 3/8"		· I
1407—FR	ONT WHE	L BEARINGS, NUTS, ETC. (Plate 14-1)		
1407-1 1407-2	$473259 \\ 473257$	CUP, inner, front wheel bearing		
1407-3	473258	CONE & ROLLERS, inner, front wheel bearing	All	
1407-4	473256	CONE & ROLLERS, outer, front wheel bearing	All	
407-5	1539026	WASHER, bearing nut lock	All	
1407-6	1543223	NUT, bearing lock 3/4" - 16	All	
		COTTER 1/8" x 1-1/2"	All	·
408—FR	ONT WHE	L GREASE WASHERS AND CAPS (Plate 14-1)		
408-1	1539027	WASHER & RETAINER, front wheel grease	All	•
408-2	1539025	CAP, front wheel hub grease retainer	All	
409-WI	HEEL HUB	COVERS AND CAPS (Plate 14-1)		
	AC-3332 AC-3521	COVER, wheel (disc)		
	1562864	CAP & EMBLEM ASSY., hub	A11	
	1562863	SCREW, fastening (special) $\dots$ ) for AC-3521 $\dots$	All	. 1
-Not av				

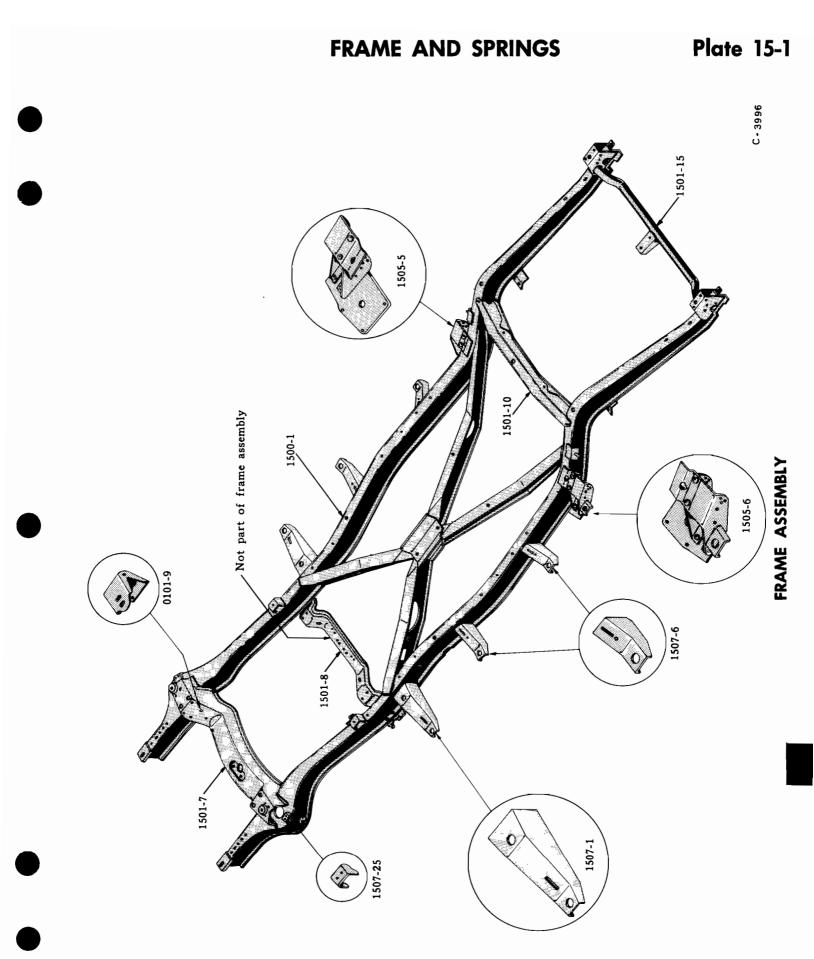

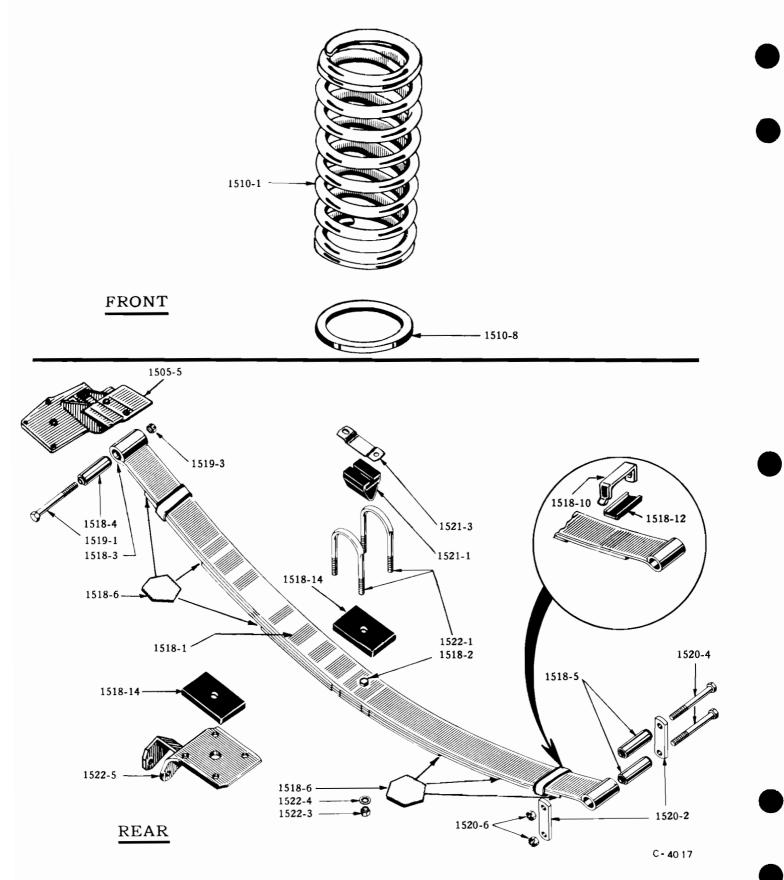


## FRONT AND REAR SPRINGS

NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE C/
				Τ
500—FR	AME ASS	EMBLY (Plate 15-1)		
500-1	1555881	FRAME ASSY.	All	
501—FR	AME CRO	SSMEMBERS (Plate 15-1)		
1501-7	1545042	MEMBER, front cross RIVET, to frame 3/8" x 7/8"	All	_ I
1501-8	1555889 G181360 G451010	MEMBER, engine rear supt. cross BOLT, to frame 3/8" - 24 x 3/4" NUT, hex. 3/8" - 24	All All	
1501-10	1557296	MEMBER, rear shock absorber cross	All	
501-15	1555884	MEMBER, rear cross—welded		- I
I 505RE	AR SPRIN	G HANGERS (Plαtes 15-1, 2)		
1505-5 1505-6	1556166 1556167	HANGER & BODY BRACKET, right, rear spring front HANGER & BODY BRACKET, left, rear spring front RIVET, to frame 3/8" x 1"	All	
507—FR	AME MISC	ELLANEOUS ATTACHMENTS (Plate 15-1)		
507-1	1555883	BRACKET, body front pillar support-welded	All	
507-6	1550337	BRACKET, frame body support—welded	All	
507-25	529332	BRACKET, front suspension upper arm bumper-welded	All	
	<b>A</b>	BRACKET & STUD ASSY., R/A radius rod frame-welded	All	
1510—FR	ONT SPRI	NGS (Plate 15-2)		
		Part number of spring is stamped on the end coil.		
1510-1 1510-1 1510-1	$526135 \\ 526134 \\ 526134 \\ 526134$	SPRING, front (Std.) (L/air cond.)         SPRING, front (H.D.)         SPRING, front	R1, R2	
1510-8 1510-8 1510-8	$526830\ 1560409\ 1560408$	SPACER, front spring $3/16"$ (w/air cond.)SPACER, front spring $3/8"$ SPACER, front spring $1/2"$ SPACER, front spring $1/2"$	All	
1518–RE	AR SPRIN	GS (Plate 15-2)		
1518-1 1518-1 1518-1 1518-2 1518-2 1518-2 1518-2	1557249 1557378 1560578 104X273 104X274 104X274	SPRING w/BUSHINGS, rear (Std.)         SPRING w/BUSHINGS, rear (H.D.)         SPRING w/BUSHINGS, rear         BOLT, center 3/8" - 24 x 1-3/4" (Std.)         BOLT, center 3/8" - 24 x 2" (H.D.)         BOLT, center 3/8" - 24 x 2"	R1, R2 R3, R4 R1, R2 R1, R2 R1, R2	· · · · · ·
1518-3 1518-3 1518-3	$1557252 \\ 1548771 \\ 1548771$	LEAF, rear spring main (Std.)	R1, R2 R1, R2 R3, R4	
$1518-4 \\ 1518-5$	$1539484 \\ 1544481$	BUSHING, front, rear spring	All	
1518-6	$1554542 \\530431 X_{\odot}^{\circ}$	INSERT, rear spring leaf tip—plastic	All	
	1554546	CLIP STRAP, rear spring		- 1
1518-10				
1518-10 1518-12	1554550	LINER, rear spring clip strap—rubber	All	· 1

ILLUST. NUMBER	PART NUMBER	CHANGE		MODELS	PER CAR
1519–RE	AR SPRING	G BOLT (P	Plate 15-2)		
1519-1 1519-3	1296X618 G272876		front, rear spring 7/16" - 20 x 4"		
1520-RE	AR SPRING	SHACKL	E (Plate 15-2)		
1520-2 1520-4 1520-6	529169 G186331 G272876	BOL	XLE, rear spring         T, shackle 7/16" - 20 x 4-1/4"         JT, lock 7/16" - 20	All	. 4
1521-RE	AR SPRING	G AND RE	EAR AXLE BUMPER (Plate 15-2)		
1521-1	1547536	BUMP	ER, rear axle	All	. 2
1521-3	1547124P G456645		NER, rear axle bumper            EW, to frame 5/16" - 18 x 5/8"		
1522-RE	AR SPRING	G CLIPS A	ND PLATES (Plate 15-2)		
1522-1 1522-1 1522-1 1522-3 1522-4	1557488 1561634 1561634 674899 G136857 G103342	CLIP of CLIP of NUT WA	or U-BOLT, Std. rear spring or U-BOLT, H.D. rear spring or U-BOLT, rear spring ', hex. 7/16" - 20 ASHER, sh'prf. 7/16" ASHER, plain 15/32"	R1, R2 R3, R4 All All All All	. 4 . 4 . 8 . 8
1522-5 1522-6 1522-5 1522-6	1555774 1555775 1558534 1558535 1553206 1553207	PLATI PLATI PLATI	E, right, rear spring clip) after serial 1225 rear spring clip plate to $R/A-1^{\circ}$	All	. 1 . 1

#### 1525-REAR STABILIZER

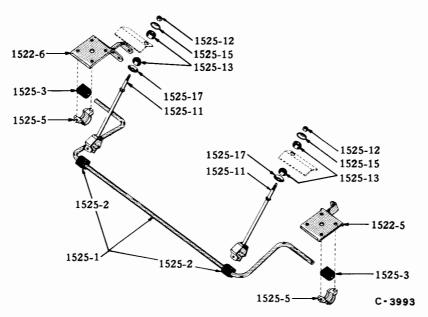

1525-1	1557576	SHAFT w/INNER BUSHINGS, rear stabilizer	All	· · · · · ·		 1	
1525-2 1525-3	529392 522518	BUSHING, inner, rear stabilizer shaft BUSHING, outer, rear stabilizer shaft	All All	•••••	· · · · · · · · ·	 2 2	
*Use as	required.						

ILLUST. NUMBER	PART NUMBER	CHANGE	DESCRIPTION		MODELS	PER CAR
<b>1525RE</b> 1525-5	AR STABI 1557476		nt'd. CKET, rear stabilizer shaft outer bushing retainer	All		. 2
1525-11 1525-12	1557477 510569 G107828 G181336 G120368 G120214	NU F BO N	ASSY., rear stabilizer shaft support T, link to frame fastening $3/8" - 24$ PAL NUT, locking $3/8" - 24$ LT, lower clamping $5/16" - 24 \times 3/4"$ NUT, hex. $5/16" - 24$ VASHER, lock $5/16"$	All All All All		. 2 . 2 . 2 . 2
1525-13 1525-15 1525-17	1554004 1553902 1553903	RETA	MMET, rear stabilizer shaft link         AINER, upper, rear stabilizer shaft link grommet         AINER, lower, rear stabilizer shaft link grommet	A11		. 2

# -IMPORTANT-

=


. . .....

To assure prompt shipment of parts, always give Car Serial and Engine Number

- **L H C** Left hand drive only
- **R H C** Right hand drive only

Plate 16-1

## FENDERS AND HOOD

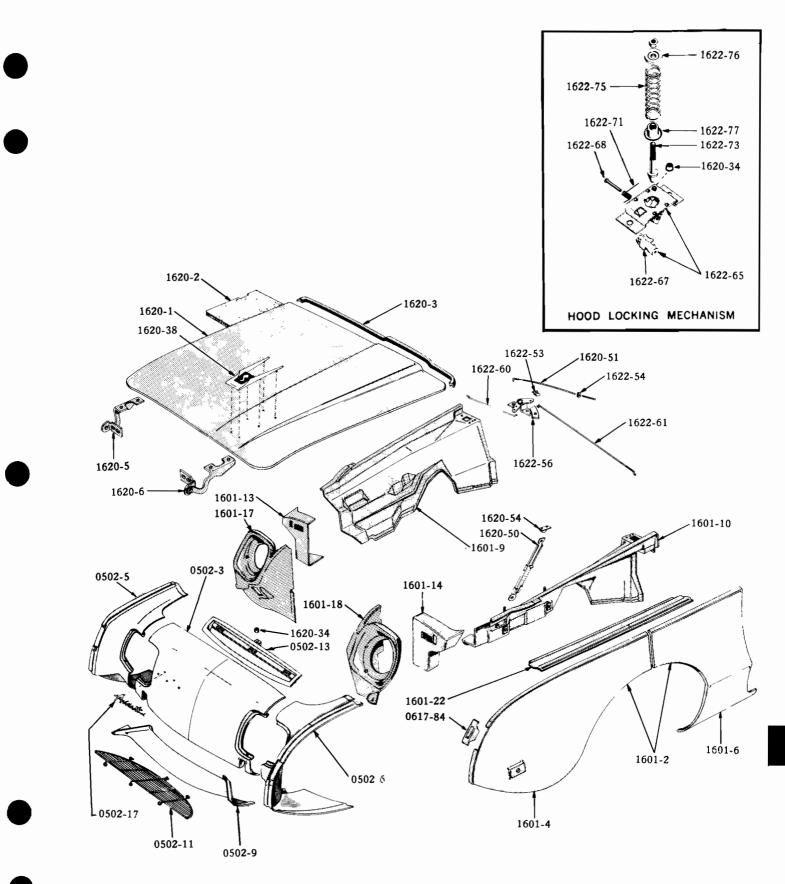

C-4028

## **TYPICAL FENDERS and HOOD**

# FENDERS AND HOOD

ILLUST. NUMBER	PART NUMBER	DESCRIPTION	MODELS	PER CAR
601_FR		ERS (Plate 16-1)		
001–1K		Fender and Aprons		
1601-2	1350022 1350023 1358790 1358791	FENDER less APRON, right       before serial 4892         FENDER less APRON, left          FENDER less APRON, right	All	1
601-4 601-4	<ul> <li>1351216</li> <li>1351217</li> <li>1358788</li> <li>1358789</li> </ul>	FENDER HALF, left front       before serial 4892         FENDER HALF, right front       after sorial 4892	All All All All	1
601-6	<ul><li>●1351218</li><li>●1351219</li></ul>	FENDER HALF, right rear		
1601-9 1601-10 1601-9 1601-10 1601-13 1601-14	1350024 1350025 1358976 1358793 1358977 1350992 1350993	APRON, right fender       before serial 4892         APRON, left fender       after serial 4892         APRON, right fender       after serial 4892         APRON, right fender       before serial 4892         EXTENSION, right fender apron       before serial 4892	R1, R2, R4 All R3	
1601-14 1601-13 1601-14	1350553 1358838 1358839	EXTENSION, right fender apron after serial 4892	All	Î
601-17 601-18	1350042 1350043 1358778	AIR DEFLECTOR and HEADLAMP WELL, right fender side (before serial 4892)         AIR DEFLECTOR and HEADLAMP WELL, left fender side (before serial 4892)         AIR DEFLECTOR and HEADLAMP WELL, right fender side (after serial 4892)	All All R1, R2	
	1358779 1358802 1358779	AIR DEFLECTOR and HEADLAMP WELL, left fender side (after serial 4892) AIR DEFLECTOR and HEADLAMP WELL, right fender side AIR DEFLECTOR and HEADLAMP WELL, left fender side	R1, R2 R3 R3	1
601-22 601-22	$\begin{array}{c} 1350054 \\ 1350055 \\ 1358734 \\ 1358735 \end{array}$	SIDE PANEL, right, front fender hood openingbefore serial 4892SIDE PANEL, left, front fender hood openingsiDE PANEL, right, front fender hood openingafter serial 4892SIDE PANEL, left, front fender hood openingafter serial 4892	All All All All	1
		Splashguard Kits		
	AC-3306 AC-3307	SPLASHGUARD KIT, fender—white. SPLASHGUARD KIT, fender—black. } for 2 fenders	All	1 1
	1339149 291736 1523X38 G120622 G131015 G121841 692X9	SPLASHGUARD, fender—white SPLASHGUARD, fender—black BOLT, to fender NUT, hex. No. 8 - 32 WASHER, plain 3/16" WASHER, lock No. 8 WASHER, finishing	All All All All All	2 6 6 6 6
		Fender Emblems		
	1350498W 1358726W 3055X7	EMBLEM, fender, "Supercharged" (before serial 4879)         EMBLEM, fender, "Supercharged Avanti" (after serial 4879)         STAMPED NUT 1/8"	R2, R3	2
		•—Repair section.		

L

# FENDERS AND HOOD


ILLUST. NUMBER	PART NUMBER	DESCRIPTION	MODELS	C
;				
		MBLY (Plate 16-1)		
620-1 620-1	$\frac{1350013}{1358880}$	TOP, hood (before serial 4892) TOP, hood (after serial 4892)	All	
620-2	1350859	INSULATOR, hood top		
620-3	3207X2	SEAL, hood top to cowl		
620-5	1350870	HINGE, right, hood top} before serial 4892		
620-6	1350871	HINGE, left, hood top before serial 4892	All	
520-5	1358934	HINGE, right, hood top	<b>A</b> ll	
620-6	1358935	HINGE, left, hood top after serial 4892	All	
320-0	1905X18	SCREW, to apron and hood		
620-34	1552311	BUMPER, hood top (rubber)	. All	
	G180079	BOLT, to air deflector 5/16" - 18 x 1"	. All	
	G180084	BOLT, to hood lock plate 5/16" - 18 x 1-5/8"	. All	
	G124824	LOCK NUT 5/16" - 18		
	1578X43	SPEED NUT 5/16"		
620-38	1351226	ORNAMENT, hood top (incls. insert) (before serial 4879)	A11	
620-38	1358746	ORNAMENT, hood top (incls. insert) (after serial 4879)		
-00	3055X7	STAMPED NUT 1/8"		
				- 1
620-50	1336801	SUPPORT, hood top (before serial 4892)		
520-50	1358707	SUPPORT, hood top (after serial 4892)		
	1336807	BOLT, to apron & hood	. All	
	G120368		. All	
	1463X36	WASHER, spring	. All	
	41X195	WASHER, plain	. All	
	G138538	WASHER, lock 5/16"	. All	
	1358708	BOLT, to apron & hood	. All	
	G272474	NUT and LOCK WASHER No. 12 - 24 after serial 4892	. All	
	1463X33	WASHER, spring	. All	
	G446363	WASHER, plain	. All	
	1336818	SPRING, hood top support tension	. All	
620-54	1350145	BRACKET, hood top support (before serial 4892)	All	
620-54	1358714	BRACKET, hood top support (after serial 4892)		
010-01	G180077	SCREW, to hood $5/16'' - 18 \times 3/4''$		
	G138538	WASHER. lock 5/16"		
	0100000			•••
622—HC	OD LOCK	S (Plate 16-1)		
622-51	293902X8	· · · · · · · · · · · · · · · · · · ·		
622-51	293902X1			
	G124934	NUT, to bracket 1/2" - 20		
	G114608	WASHER, shakeproof		
	1903X3	CLIP, control wire retainer		
622.53	537674	CLIP, control tube anchor		
	G120583	BOLT, to dash $1/4'' - 20 \times 5/8''$		
	G120375	NUT, hex. 1/4"-20		
622-54	1351088	GROMMET, hood lock control dash		
	1339035	BRACKET, hood lock control inst. board		
	G180077	SCREW, to inst. board 5/16" - 18 x 3/4"		
	41X199	WASHER, plain 5/16"	. All	• •
622-56	1351135	BELLCRANK & BRACKET, hood lock control	. All	
	G187993	SCREW, to dash 5/16" - 18 x 3/4"		
	1351132	LINK, right, hood lock control bellcrank to lock	All	
622-60	1001104	LINK, right, hood lock control benchank to lock		
622-60 622-61	1351132 1351133	LINK, left, hood lock control bellerank to lock	. All	

I

1622

# FENDERS AND HOOD

ILLUST. NUMBER		DESCRIPTION		MODELS	PER CAR
1622—HC		—Cont'd. (Plate 16-1)			
1622-65	1353931 1905X14	PLATE ASSY., hood lock SCREW, to fender apron $5/16'' - 18 \ge 3/4''$			. 2 . 4
$1622-67 \\ 1622-68$	$\frac{1350594}{1332072}$	LEVER, hood lock latch RIVET, to plate—special	All All		2 . 2
1622-71	1353929	SPRING, hood lock latch lever return	All		. 2
1622-73	284526 1356177 G124934	DOVETAIL, hood lock (before serial 4878)             DOVETAIL, hood lock (after serial 4878)             NUT, to hood 1/2" - 20	All		
1622-75 1622-76 1622-77	1350539 286105 274907	SPRING, hood top lift RETAINER, upper RETAINER, lower	All		2 2 2

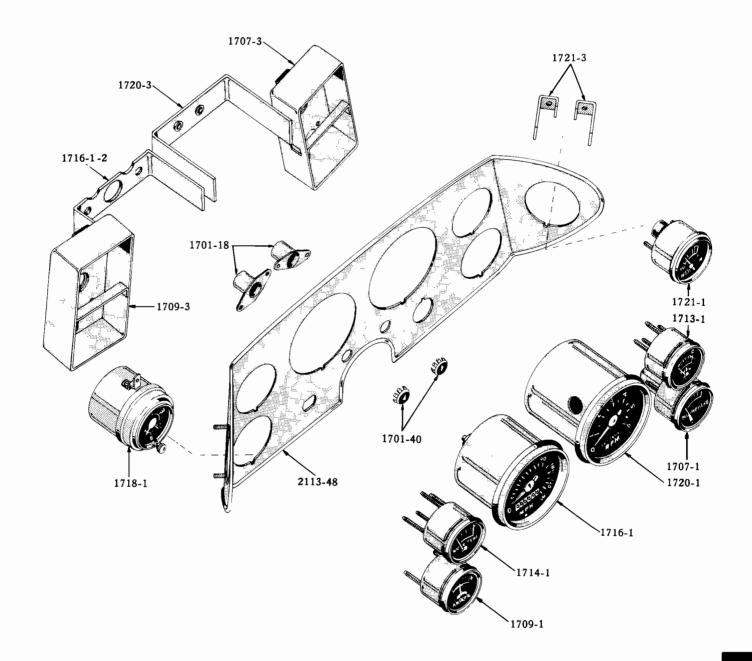


C• 40 27

## SPEEDOMETER and INSTRUMENTS

 PAGE NO. 157

# SPEEDOMETER AND INSTRUMENTS

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PER
1701—IN	STRUMENT	PANEL (Plate 17-1)		
2113-48		OVERLAY, inst. board instruments (see group 2113)	All	. 1
1701-18	1350925 1093X54 G134530	SHIELD, directional lights SCREW, to inst. board No. 6-32 x 5/8" WASHER, shakeproof No. 6	All	. 4
1701-40	1343581	BUTTON and DISC, directional lights signal	All	. 2
	$\begin{array}{c} 1557882 \\ 1541674 \\ 1555875 \end{array}$	BULB, instrument panel lamp (No. 57R) BULB, bright light signal lamp No. 1445 BULB, directional signal lamp No. 1816	All	. 1
1707–Ol	L PRESSUR	E GAGE (Plate 17-1)		
1707-1	1557111	GAGE, oil pressure	All	. 1
1707-3	1557114 G120614 G138479	BRACKET or CASE, oil pressure & gas gage mtg. NUT, to gage No. 10-32 WASHER, shakeproof No. 10	All	. 2
1709—AA	AMETER (P	late 17-1)		
1709-1	1557113	AMMETER	All	. 1
1709-3	1557115 G120614 G138479	BRACKET or CASE, ammeter & radimeter mtg. NUT, to gage No. 10-32 WASHER, shakeproof No. 10	All	. 2
1713—GA	SOLINE G	AGE (Plate 17-1)		
1713-1	1557110	GAGE, gasoline	All	. 1
	G120614 G138479	BRACKET or CASE, gas gage mtg. (see group 1707) NUT, to gage No. 10-32 WASHER, shakeproof No. 10	All	. 2
1714-RA	DIMETER	OR WATER TEMPERATURE INDICATOR (Plate 17-1)		
1714-1	1557112	RADIMETER—dash unit	All	. 1
	G120614 G138479	BRACKET or CASE, radimeter mtg. (see group 1709) NUT, to gage No. 10-32 WASHER, shakeproof No. 10	All	. 2
1716—SF	PEEDOMETI	ER AND DRIVE PARTS (Plate 17-1)		
1716-1 1716-1	$\begin{array}{c} 1557107 \\ 1560098 \\ 1560407 \end{array}$	SPEEDOMETER (head) miles (140 miles)SPEEDOMETER (head) miles (160 miles)SPEEDOMETER (head) metric (280 kilometers)	R2, R3, R4	. 1
1716-1-2	1557109 G120614 G138479	BRACKET, speedometer mtg. NUT, to speedo. No. 10 - 32 WASHER, shakeproof No. 10	All	. 2



1716-20 1716-20	1544768 1557262	SHAFT w/CORE, speedo. (3 speed & Automatic trans.)       R1       1         SHAFT w/CORE, speedo. (4 speed trans.)       R1       1

1701

# SPEEDOMETER AND INSTRUMENTS

ILLUST. NUMBER	PART NUMBER	CHANGE	DESCRIPTION	MODELS	PER
1716—SPI	EEDOMETE	R AND D	RIVE PARTS—Cont'd. (Plate 17-1)		
1716-20 1716-20	1557262 1544768 G180018 G120380 511382	SHAF' SCR W	T w/CORE, speedo. (3 and 4 speed trans.) T w/CORE, speedo. (automatic trans.) EW, to transmission 1/4" - 20 x 5/8" ASHER, lock 1/4" P, to steer. post jacket	R2, R3, R4 All	. 1 1 1
1716-35	1544875	GASKI	ET, speedo. shaft to transmission	All	. 1
1716-40	1548474	GROM	MET, speedo. shaft dash	All	. 1
1716-45	1544772	CORE,	, speedo. shaft	All	. 1
1716-47		GEAR	, speedometer drive) See speedo. gear	All	. 1
1716-48			N, speedometer drive and pinion chart		
	1553172 G179793 G120380	SCR	PLATE, speedo. (shaft to trans.)         EW, to trans. 1/4" - 20 x 5/8"         ASHER, lock 1/4"	All	. 1
	1544875	GASKI	ET, speedo. drive pinion lock plate (4 speed)	All	. 1
	G147485	BALL,	speedo. drive gear (3 speed)	R1	. 1
	1554074	RING,	drive gear retainer (3 speed)	R1	. 2
	1544811	RING,	drive pinion lock (auto. trans.)	All	. 1





### SPEEDOMETER GEAR AND PINION CHART

			3-SPEED				AUTOMATIC				4-SPEED						
MODEL	TIRE SIZE	AXLE RATIO	T Y P E	GEAR	T E T H	PINION	T E T H	T Y P E	GEAR	T E E T H	PINION	T E T H	T Y P E	GEAR	T E T H	PINION	T E T H
R-Q R-Q R-Q R-Q R-Q R-Q	6.70 6.70 6.70 6.70 6.70 6.70	3.07 3.31 3.54 3.73 4.09 4.55	B B B B B	$\begin{array}{c} 1546046\\ 1546046\\ 1546046\\ 1546046\\ 1546046\\ 1547568\end{array}$	8 8 8 7	$\begin{array}{c} 1544760\\ 1544762\\ 1544763\\ 1547613\\ 1544763\end{array}$	$     \begin{array}{r}       18 \\       20 \\       21 \\       22 \\       21 \\       21     \end{array} $		$\begin{array}{c} 1546046\\ 1546046\\ 1546046\\ 1546046\\ 1546046\\ 1547568\\ 1547568\end{array}$	8 8 8 7 7	$\begin{array}{c} 1544760\\ 1544762\\ 1544763\\ 1547613\\ 1544763\\ 1544763\\ 1547614\end{array}$	$     \begin{array}{r}       18 \\       20 \\       21 \\       22 \\       21 \\       23 \\     \end{array} $	B B B	1552794 1557264 1557264 1557264 1557264 1557264 1557264	7 7 7 7 7 5	$\begin{array}{c} 1556040\\ 1556036\\ 1556041\\ 1556037\\ 1556038\\ 1556039\end{array}$	16 17 18 19 21 17

#### 1718-CLOCK (Plate 17-1)


1718-1	1557298 G134530 G138473	CLOCK, electric NUT, to clock No. 6-32 WASHER, lock No. 6	All All All	 $\begin{vmatrix} 1 \\ 2 \\ 2 \end{vmatrix}$
	1555875	BULB, clock—No. 1816	All	 1
	G148086	FUSE, clock (No. 1 AG 2)	All	 1

# SPEEDOMETER AND INSTRUMENTS


ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PER CAR
1720—TA	CHOMETER	R (Plate 17-1)		
1720-1	$\frac{1557116}{1560548}$	TACHOMETER		
1720-3	1557117 G120622 G121752	BRACKET, tachometer mounting NUT, to tachometer No. 8-32 WASHER, shakeproof No. 8	All	. 4
1720-7 1720-7	1557959 1560549 1501X43	•SENDING UNIT, tachometer	All	. 1
1721—V	ACUUM G	AGE (Plate 17-1)		
1721-1	$\frac{1557118}{1560758}$	GAGE, vacuum (before serial 5183)	All	. 1 . 1
17 <b>21-</b> 3	1540126 G120614 G138479	BRACKET, vacuum gage mounting NUT, to gage No. 10 - 32 WASHER, shakeproof No. 10	. All	. 2
	$1557560 \\ 908914$	PIPE, vacuum gage to inlet manifold CLIP, to w/s wiper motor and dash		
	3132X85 3132X90	HOSE, vacuum gage to inlet manifold pipe (gage end) HOSE, vacuum gage to inlet manifold pipe (man. end)	. All	. 1 . 1
1721-5	1540321	NIPPLE, vacuum gage to inlet manifold pipe hose (illust. page No. 30)	All	. 1
	1557882	BULB, vacuum gage light (No. 57R)	. All	. 1

•---Not used with transistorized ignition system. ‡---With transistorized ignition system.

## SHOCK ABSORBERS AND BUMPERS Plate 18-1

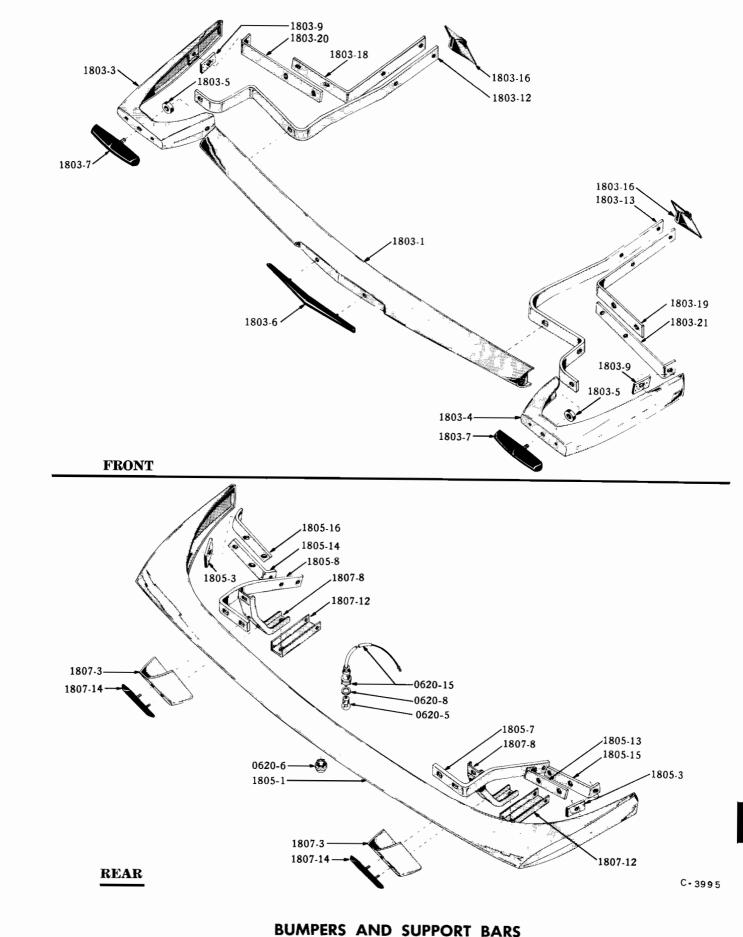

### SHOCK ABSORBERS AND BUMPERS

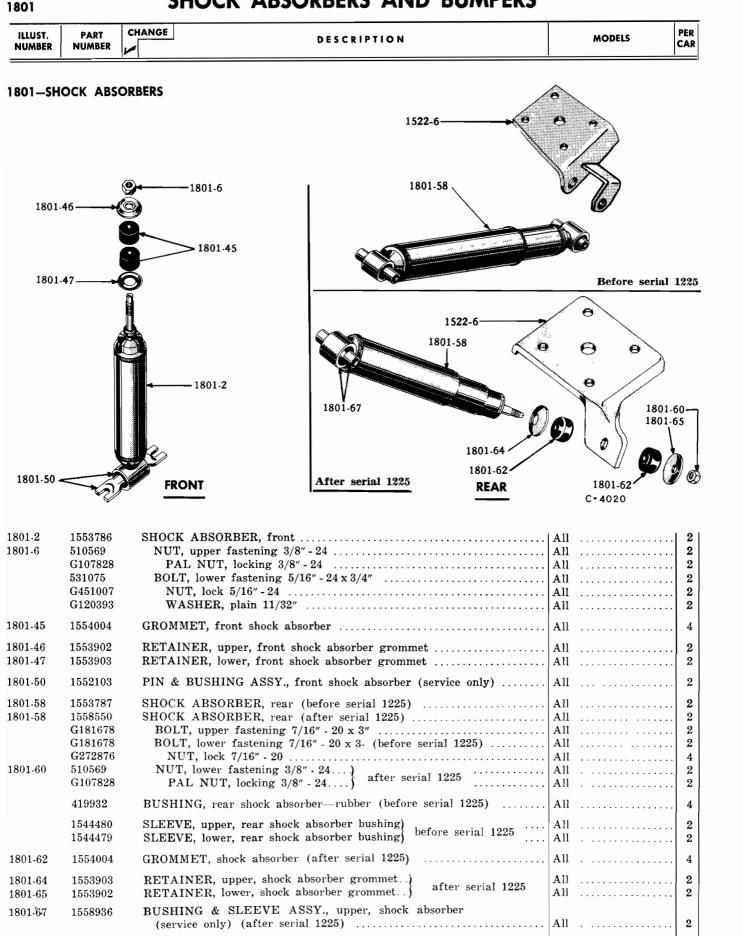

# SHOCK ABSORBERS AND BUMPERS

ILLUST. NUMBER	PART NUMBER	DESCRIPTION	MODELS	PE C/
		PEPS (Plate 18-1)		
1803-1	1556190	PERS (Plate 18-1) BAR, center, outer face, front bumper		
1803-3 1803-4	$1559986 \\ 1556191$	BAR, right end, outer face, front bumper BAR, left end, outer face, front bumper		
1000-4	G179864	BOLT, end and center bumper fast. $7/16'' - 14 \times 1-3/4''$		
	1955X6	NUT 7/16" - 14 (special)	All	
	G120383	WASHER, lock 7/16"		
1803-5	527974 G272599	SPACER, end, bumper to supt. bars NUT, center bumper to supt. bar 7/16" - 14		
	G120395	WASHER, plain 15/32"	All	
803-6	1555923 G271172	RUBBER CUSHION, center, front bumper—Stl. & Rbr NUT & WASHER 1/4" - 20	All	
1803-7	1555924		1	
	G272599	RUBBER CUSHION, end, front bumper—Stl. & Rbr NUT, hex. 7/16" - 14		
	G120395	WASHER, plain 15/32"		
1803-9	1556198	SHIM, end bumper to fender 1/8" x 1-1/2" x 2-1/2"—rubber	All	
803-9	1556199	SHIM, end bumper to fender 1/4" x 1-1/2" x 2-1/2"—rubber		
		Front Bumper to Frame Support Bars and Braces		
803-12	1556192	BAR, right, support		
803-13	1556193 1296X90	BAR, left, support BOLT, to frame 7/16" - 20 x 3"		
	$1250 \times 50$ 1541479	NUT, hex. 7/16" - 20	All	ĺ
	41X359	WASHER, plain 7/16"	All	:
803-16	1350045	GROMMET, support bar—rubber	All	
803-18	1557236			
803-18	1557236 1557237	BRACE, inner right, front bumper end BRACE, inner left, front bumper end		
803-20	1557234	BRACE, outer right, front bumper end	All	
803-21	1557235	BRACE, outer left, front bumper end	All	
	$G180147 \\G272599$	BOLT, outer to inner brace $7/16'' - 14 \times 1 - 1/4''$		
	G272599 G120395	NUT, hex. 7/16" - 14 WASHER, plain 15/32"		
	534241	WASHER, locking (special)		
	1296X335	SCREW, outer brace to end bumper $7/16'' - 14 \times 1-5/8''$	All	.
	G120395	WASHER, plain 15/32"	All	
	G120383	WASHER, lock 7/16"	All	•
805—RE	AR BUMPI	ERS (Plate 18-1)		
805-1	1556200	BAR, outer face, rear bumper	All	
	G272599 G120395	NUT, bumper to supt. bar 7/16" - 14		
		WASHER, plain 15/32"	l	1
805-3	1556198	SHIM, bumper to fender 1/8" x 1-1/2" x 2-1/2"—rubber		
805-3	1556199	SHIM, bumper to fender 1/4" x 1-1/2" x 2-1/2"—rubber	All	·
90E 7	1550004	Rear Bumper to Frame Support Bars and Braces		
.805-7 .805-8	$1556204 \\ 1556205$	BAR, right, support BAR, left, support		
	G109426	STUD, to frame 7/16" - 14 - 20 x 1-13/16"	All	.
	1541479	NUT, hex. 7/16" - 20	All	
	G120395 G120383	WASHER, plain 15/32"		
005 15				T
1805-13 1805-14	$\frac{1557210}{1557211}$	BRACE, inner right, rear bumper end BRACE, inner left, rear bumper end		
	100,011	,		1
-Use as	required.			
— Use as	required.			1


# SHOCK ABSORBERS AND BUMPERS

ILLUST. NUMBER	PART NUMBER	DESCRIPTION	MODELS	PER
1805RE	AR BUMPE	RS—Cont'd. (Plate 18-1)		
		Rear Bumper to Frame Support Bars and Braces—Cont'd.		
1805-15 1805-16	1557208 1557209 G180147 G272599 G120395 534241 1296X335 G120395 G120383	BRACE, outer right, rear bumper end BRACE, outer left, rear bumper end BOLT, outer to inner brace 7/16" - 14 x 1-5/8" NUT, hex. 7/16" - 14 WASHER, plain 15/32" WASHER, locking (special) SCREW, outer brace to bumper 7/16" - 14 x 1-5/8" WASHER, plain 15/32" WASHER, plain 15/32"	All	. 1 . 4 . 4 . 8 . 4 . 2 . 2
1807–VE	RTICAL BU	MPERS (Plate 18-1)		
1807-3	1556201	VERTICAL BUMPER, rear bumper	All	. 2
1807-8	1556202 1962X1 1578X45	SUPPORT, rear vertical bumper SCREW & WASHER, to frame brkt. 5/16" - 1" SPEED NUT 5/16" - 10	All	22
1807-12	1556203 G179869 G272599	BRACKET, rear vertical bumper supt. BOLT, to frame 7/16" - 14 x 2-3/4" NUT, lock 7/16" - 14	All	22
1807-14	1555925 G126002 G120393	RUBBER CUSHION, rear vertical bumper—Stl. & Rbr NUT, hex. 5/16" - 24 WASHER, plain 11/32"	All	
1812 <b>—</b> TO	OLS			
	1689485	PUMP, tire (spec. orders export only)	All	. 1
	G127832	GUN, grease (spec. orders export only)	All	. 1
	513201	WRENCH, wheel socket	All	. 1
	1557701	JACK, less handle	All	. 1
	1557702	HANDLE, jack	All	. 1

1805




### Plate 21-1

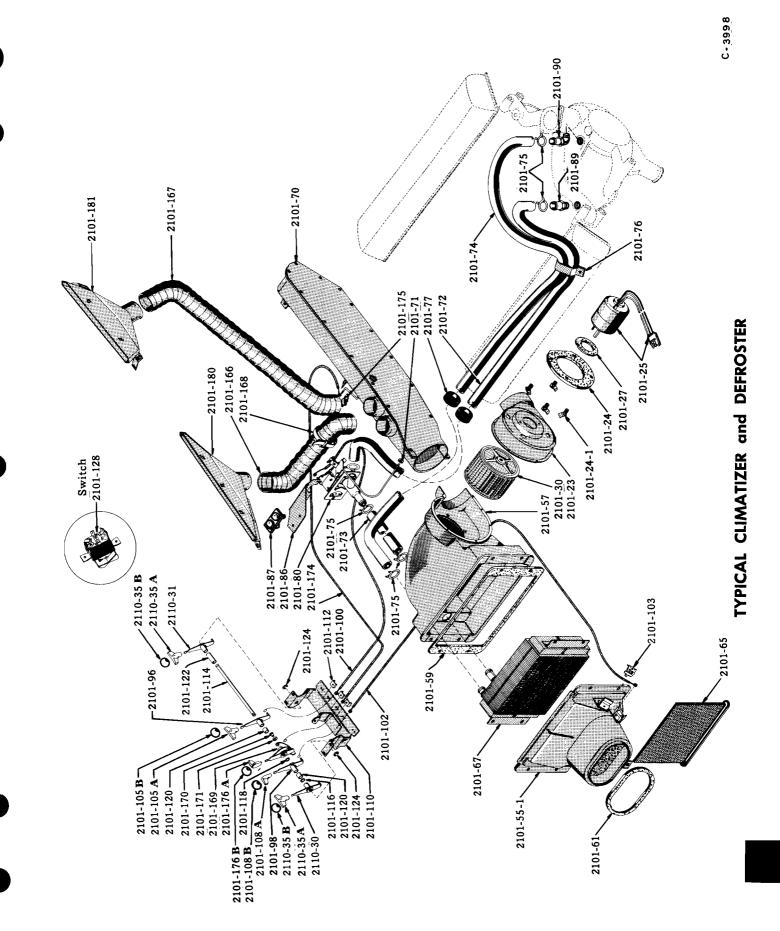

ILLUST. NUMBER		DESCRIPTION	MODELS	PER
2101_CLI	MATIZER A	ND DEFROSTER (Plate 21-1)		
		2101A—Climatizer		
		HOUSING, rear half climatizer blower—NSS (part of core housing) .	A 11	
101-23	1556796	HOUSING, front half, climatizer blower	All	
	G161788	SCREW, climatizer blower housing No. 6-20 x 1/4"	All	. 7
101-24	1556912	GASKET, housing to dash panel		
101-24-1	3081X1	BOLT & CLIP, to dash $1/4'' - 20 \times 5/8''$		
	G120392 G271178	WASHER, plain 9/32" NUT & LK. WASHER, hex. 1/4" - 20		
101 05				
101-25 101-27	$\frac{1556924}{1540092}$	MOTOR, blower		
101-21	3031X4	NUT & SEALER, motor mounting No. 10-32		
101 00				
101-30	532871 G140880	FAN, blower		$  1 \\ 1 \\ 1$
101 55 -				
101-55-1 101-57	$1556914 \\ 1556920$	HOUSING, climatizer core—outer		
101-57	1556920 1556923	GASKET, core housing		1
	G180022	BOLT, core housing fastening $1/4'' - 20 \times 1''$		4
	G120392	WASHER, plain 9/32"		
101 01	G271178	NUT & LK. WASHER, hex. 1/4" - 20		
101-61	1556913	GASKET, housing to side panel SCREW, to side panel 1/4" - 20 x 1"		
<b></b>				1
101-65	1556919	FILTER, climatizer core housing		1
101-67	1556925	CORE, climatizer	All	.  1
101-70	1556926	DUCT, air distribution	All	. 1
		BOLT, mounting 1/4" - 20 x 3/4"		1
	G120392	WASHER, plain 5/8"		
101-71	1578X42	SPEED NUT 1/4"		
101-71	1558327	GROMMET, water valve capillary tube		
101-72	1548497X3	HOSE, engine to control valve (formed)	All	1
101-73 101-74	3132X178	HOSE, control valve to core inlet—6" long HOSE, core outlet to water pump (formed)		
101-74	1548497X18 G272852	CLAMP, hose		
101-76	195407	CLIP, to rocker arm cover		
	526600X1	CLIP, lacer		
101-77	1556859	GROMMET, dash	All	·  2
101-80	1557364	VALVE, climatizer—thermostatic		
	G163210	SCREW, to mtg. bracket No. 10 - 16 x 3/8"	All	· 2
101-86	1554521	BRACKET, valve mounting	All	. 1
2101-87	1558152	PLATE, mtg. bracket to glove box	All	1
202.01	G120376	NUT, hex. 5/16" - 18		
	G120214	WASHER, lock 5/16"		. 2
2101-89	1548305	NIPPLE, engine to valve hose	All	. 2
101-90	1691714	ELBOW, climatizer to engine hose	All	1
101-96A	1351189	CONTROL, water valve (before serial 4878)	All	. 1
101-96B	1358905	CONTROL, water valve (lefter serial 4878)		
2101-98A	1351189	CONTROL, air intake valve (before serial 4878)	All	] 1
101-98A 110-98B	1351189 1358905	CONTROL, air intake valve (after serial 4878)		
	1557682	CABLE and CONDUIT, water valve control		} :
2101-100			1	1
2101-102	1557681	CABLE and CONDUIT, air intake valve control	All	
2101-103	1331825	CLIP, to core housing	All	·  1

LLUST. IUMBER		DESCRIPTION	MODELS	PEF
01CLI	MATIZER A	ND DEFROSTER—Cont'd. (Plate 21-1)		
		2101A-CLIMATIZER-Cont'd.		
01-105 01-108	1351089W 1351214W G173677	HANDLE, air intake valve control .   before serial 4878	All All All	. 1
01-105 01-108	1358823 1358823 G193222	KNOB, air intake valve control after serial 4878	All All All	.   :
01-110 01-110 01-112	1351186 1358901 G9414295 514013 G449815	BRACKET, control retainer (before serial 4878) BRACKET, control retainer (after serial 4878) SCREW, to console No. 10 - 24 x 5/8" CLIP, to bracket SCREW, to bracket No. 8 - 32 x 5/8"	All All All	· ·
01-114 01-116 01-118 01-120 01-122 01-116 01-118 01-124	1351195 1351204 1351205 1351206 1351207 G120385 1358908 3209X1 41X423	SHAFT, control retainer bracket         SHIM, to shaft         SPACER, to sh	All         All         All         All         All         All         All         All         All         All         All         All         All         All         All	
01-128 01-128	1557419 1561930	SWITCH, climatizer fan (before serial 4879) SWITCH, climatizer fan (after serial 4879) SCREW, fastening No. 6-20 x 1/4"	All	
	G120151	FUSE, climatizer-15 amp.	All	•••
		2101B—Windshield Defroster		
01-166 01-167 01-168	1548455X2 1548455X7 526600X9	HOSE, right defroster air—24" long HOSE, left defroster air—39" long CLIP, hose to distribution duct	All	.   :
01-169 01-169 01-170 01-171	1351295 1358913 1351199 1351208	CONTROL, defroster (before serial 4878) CONTROL, defroster (after serial 4878) RIVET, to retainer brkt. WASHER, spacer	All	
$01-174 \\ 01-175$	$1557680 \\ 1331825$	CABLE and CONDUIT, control to valve		
01-176	1351215W G173677	HANDLE, defroster control) SCREW, set No. 6-32 x 1/8") before serial 4878	All	
01-176	1358823 G193222	KNOB. defroster control	All	
01-180 01-181	1350946 1350948	OUTLET, right defroster OUTLET, left defroster SCREW, to cowl cross bar No. 8 - 18 x 3/8" WASHER, plain 1/4"	All	


2101

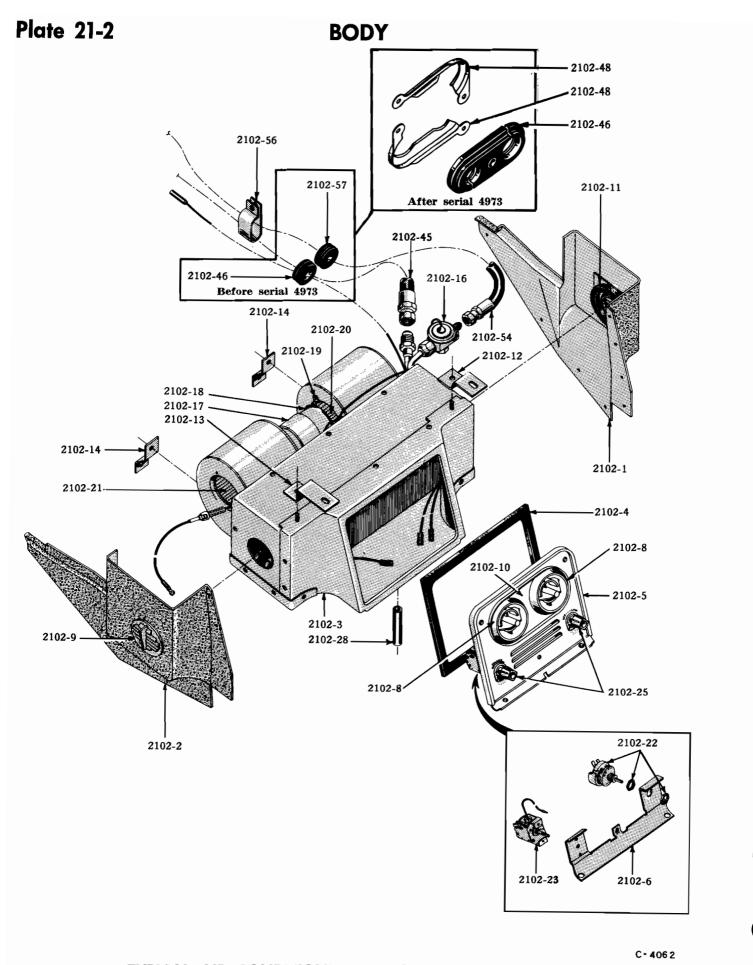

#### TYPICAL AIR CONDITIONER EVAPORATOR AND FITTINGS

PAGE NO. 168

### Plate 21-3

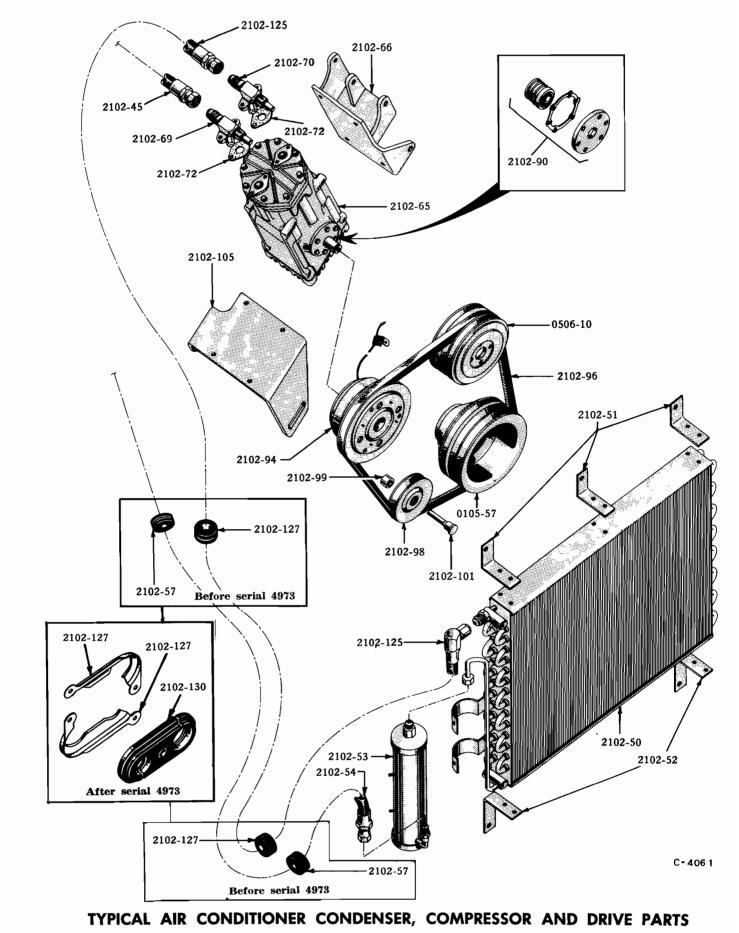

Copyright 1963 Studebaker Corporation PAGE NO. 169


#### 2102

ILLUST. NUMBER	PART C NUMBER	DESCRIPTION	MODELS	PER CAR
102—All	R CONDITIO	NER UNIT (Plates 21-2, 3)		
	★AC-3337	Color AIR CONDITIONER UNIT (before serial 4973)	R1	. 1
	AC-3469	AIR CONDITIONER UNIT (after serial 4973)		
2102-1	1347652X1	PANEL & CARPET ASSY., right, console frt. sideBlack		
102-1	1347652X1 1347653X1	PANEL & CARPET ASSY, left, console frt. sideBlack		
102-1	1347652X2	PANEL & CARPET ASSY., right, console frt. side Turq. & Black		
102-2	$1347653\mathbf{X2}$	PANEL & CARPET ASSY., left, console frt. side Turg. & Black	R1, R4	. 1
102-1	1347652X3	PANEL & CARPET ASSY., right, console frt. side Orange & Black		
102-2 102-1	1347653X3 1347652X4	PANEL & CARPET ASSY., left, console frt. sideOrange & Black PANEL & CARPET ASSY., right, console frt. sideFawn & Black		
102-1	1347652X4 1347653X4	PANEL & CARPET ASSY., left, console frt. sideFawn & Black		
102-1	1347652X5	PANEL & CARPET ASSY., right console frt. sideRed & Black		
102-2	1347653 X5	PANEL & CARPET ASSY., left, console frt. sideRed & Black	R1, R4	. 1
	<b>•</b>	CARPET, side panel console (see group 2141D illust. 2141-44)	R1, R4	
		2102A—Air Conditioner Evaporator		
102-3	1556820	EVAPORATOR ASSY., air conditioner	R1, R4	. 1
102-4	1556830	GASKET, evaporator to console	R1, R4	.  1
102-5	1558073	PANEL, air conditioner control (before serial 4877)	R1	1
102.5	1562453	PANEL, air conditioner control (after serial 4877)		
		SCREW, upper, to console No. $10 - 24 \times 5/8''$		
		SCREW, lower, to console No. $8 - 15 \times 3/4''$	R1, R4	. 2
102-6	1558078	BRACKET, control switches & lamp mtg.	,	. 1
	1558086	BULB, air conditioner indicator	R1, R4	.  1
102-8	1558074	DEFLECTOR, evaporator air (front panel)	R1, R4	. 2
102.9	1351242	DEFLECTOR, evaporator air (side panel)		. 2
	1558075	RING, frt. deflector, retaining		
	1351244	RING, side deflector, retaining	R1, R4	. 4
102.10	1558076	PLATE, deflector retaining (before serial 4973)		
102-10	1561824	PLATE, deflector retaining (after serial 4973)	R1, R4	.  1
102-11	1351245	GASKET, evaporator air deflector	R1, R4	. 2
102-12	1556827	BRACKET, upper right, evaporator support	R1, R4	. 1
102 - 13	1557489	BRACKET, upper left, evaporator support		
102.14	1556828	BRACKET, lower, evaporator support		
	G271178	BOLT, brkt. to inst. board 1/4" - 20 x 1/2" NUT & LK. WASHER, hex. 1/4" - 20		
		SCREW, brkt. to floor pan No. $8 - 15 \times 1/2''$	R1, R4	
102-16	1552651	VALVE, evaporator core expansion		
102-17	1559648	MOTOR, evaporator blower		
102-18	1555764	GASKET, motor to housing	,	
102-19	1555765	BRACKET, motor mounting	R1, R4	2
102-20	1555768	FAN, right, evaporator blower	R1, R4	
102-21	1555767	FAN, left, evaporator blower	R1, R4	1
102-22	1558079	SWITCH, evaporator blower air control		
102.23	1552650	SWITCH, evaporator temp. control	R1, R4	1
		SCREW, switch mtg. No. $6 - 32 \times 1/4''$	R1, R4	2
		<ul> <li>*—Also order 1—Right and Left PANEL &amp; CARPET ASSY., according to trim color.</li> <li>*—Also order 1—Right and Left Side Panel Carpet after serial 4892.</li> </ul>		

ILLUST. NUMBER	PART NUMBER	CHANGE	DESCRIPTION	MODELS	PE
2102—AIR	CONDIT	IONER UN	NIT—Cont'd. (Plates 21-2, 3)		
		2102A	AAir Conditioner Evaporator—Cont'd.		
2102-25	1558085	KNOB	, temp. and air control	R1, R4	
2102-28	3132X170 G272845		, evaporator drain		
2102-45 2102-45 2102-46 2102-46 2102-48	1548357 1561405 1557434 1561296 1561297 3190X1	HOSE GRO GRO RET	, evaporator to compressor suction (before serial 4973) , evaporator to compressor suction (after serial 4973) DMMET, to dash (before serial 4973) DMMET, to dash CAINER, grommet CREW, grommet retainer No. 10 - 12 x 3/4") after serial 4973	R1, R4	
		2102B	Air Conditioner Condenser		
2102-50	1555954	COND	ENSER ASSY., air conditioner	R1, R4	
2102-51 2102-52	1555955 1555956 G456643	BRAC	KET, upper, condenser support         KET, lower, condenser support         EW, to radiator core support	R1, R4	
2102-53 2102-53	$1558160 \\ 1561304$		, dehydrator and receiver (before serial 4973)		
2102-54 2102-54 2102-56 2102-57 2102-57	1548358 1561373 195407 G181595 G120368 G120214 1557432 1561296	HOSE CLII BC N W GRO	, condenser to evaporator liquid (before serial 4973), , condenser to evaporator liquid (after serial 4973) P, to fender apron OLT, to clip $5/16'' - 24 \times 3/4''$ UT, hex. $5/16'' - 24$ ASHER, lock $5/16''$ OMMET, to dash & air deflector (before serial 4973) OMMET, to panel)	R1, R4 R1, R4 R1, R4 R1, R4 R1, R4 R1	
2102-60	1561297 3190X1	RET	TAINER, grommet	R1, R4 R1, R4 R1, R4	
		21020	C—Air Conditioner Compressor		
2102-65 2102-65	1555962 1560820 G180121 G180124 G120382	COMP SCR SCR	RESSOR ASSY. (less values & pulley) (before serial 4973) RESSOR ASSY. (less values & pulley) (after serial 4973) EW, to brkt. $3/8" - 16 \ge 7/8"$ EW, to brkt. $3/8" - 16 \ge 1.1/4"$ ASHER, lock $3/8"$	R1, R4 R1, R4 R1, R4	·
2102-66	1555900 	SCR	KET, compressor and alt. mounting         EW, to water pump 7/16" - 14 x 7/8"         ASHER, lock 7/16"	R1, R4	
2102-69 2102-69 2102-70 2102-70	1543681 1561416 1555445 1561415 G179824	VALV VALV VALV	E, compressor discharge (before serial 4973) E, compressor discharge (after serial 4973) E, compressor suction (before serial 4973) E, compressor suction (after serial 4973) EW, to compressor 5/16" - 18 x 1-3/4"	R1, R4 R1 R1, R4	•
2102-72	1543682	GASK	ET, discharge and suction valve	R1, R4	
2102-90 2102-90	$1551379 \\ 1560857$		KIT, compressor drive shaft (before serial 4973) KIT, compressor drive shaft (after serial 4973)		
	$1551380 \\ 1560856$		E PLATE KIT, compressor (before serial 4973) E PLATE KIT, compressor (after serial 4973)		
	1550753 1553891 1560858	GASK	ET, valve plate to cylinder ET, valve plate to cylinder head (before serial 4973) ET, valve plate to cylinder head (after serial 4973)	R1	

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PER CAR
2102–All		ONER UNIT—Cont'd. (Plates 21-2, 3)		
		2102C—Air Conditioner Compressor—Cont'd.		
0105-57		PULLEY, compressor drive (on c/s) see group 01	05 R1, R4	-
2102-94 2102-94	1550843 1561700 G106750 1551471 1549216	PULLEY and CLUTCH, compressor (before serial PULLEY and CLUTCH, compressor (after serial KEY, woodruff 5/32" x 5/8" SCREW, retainer WASHER, plain 21/64"	4973)       R1, R4         R1, R4       R1, R4         R1, R4       R1, R4	1 1
0506-10		PULLEY, compressor drive (on fan hub) see grou	p 0506 R1, R4	1
$2102-96 \\ 2102-96$	$\frac{1694301}{1694306}$	BELT, compressor and fan drive BELT, compressor and fan drive		1 1
2102-98 2102-99 2102-101	1552400 G271501 G120395 G103322 1552402 1552401	PULLEY & BEARING, drive belt adj. idlerNUT, to bracket 7/16" - 14WASHER, plain 15/32"WASHER, lock 7/16"SPACER, pulleySTUD, pulley	R1, R4         R1, R4         R1, R4         R1, R4         R1, R4         R1, R4         R1, R4	1 1 1 1
2102-105	1555904 G181374 G120369 G120382 41X243	BRACKET, drive belt adj. idler pulley BOLT, to compressor brkt. 3/8" - 24 x 1-1/2" NUT, hex. 3/8" - 24 WASHER, lock 3/8" WASHER, spacer	R1, R4         R1, R4         R1, R4         R1, R4         R1, R4	2 1 1
2102-125 2102-125 2102-127 2102-127 2102-127 2102-130	1557480 1557481 1557433 1561296 1561297 3190X1	HOSE, compressor to condenser discharge (before HOSE, compressor to condenser discharge (after s GROMMET, to air deflector (before serial 4973) GROMMET, to panel	rerial 4973) R1, R4 R1 R1, R4 R1, R4	2 1

Printed in U.S.A.

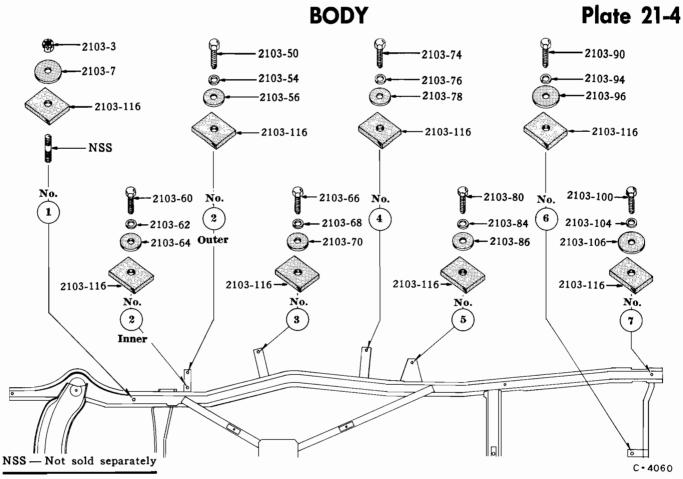

BODY HOLD DOWN BOLTS AND SHIMS

ILLUST. NUMBER		DESCRIPTION	MODELS	PE
103-BC	DY HOLD	DOWN BOLTS AND SHIMS (Plate 21-4)		
		Hold down bolts are numbered from cowl to rear of body.		
103-3 2103-7	G272876	STUD, No. 1 body hold down (Part of Frame Assy.)            NUT, hex. 7/16" - 20            WASHER, plain 15/32"	All	
103-50 103-54 103-56	1296X625 G120382	SCREW, No. 2 outer, body hold down 3/8" - 24 x 1"           WASHER, lock 3/8"           WASHER, plain 3/8"	All	
103-60 103-62 103-64	1296X625 G120382	SCREW, No. 2 inner body hold down 3/8" - 24 x 1"            WASHER, lock 3/8"            WASHER, plain 3/8"	All	
103-66 103-68 103-70	1296X625 G120382	SCREW, No. 3 body hold down 3/8" - 24 x 1"           WASHER, lock 3/8"           WASHER, plain 3/8"	All	
103-74 103-76 103-78	1296X625 G120382	SCREW, No. 4 body hold down 3/8" - 24 x 1"           WASHER, lock 3/8"           WASHER, plain 3/8"	All	
2103-80 2103-84 2103-86	1296X625 G120282	SCREW, No. 5 body hold down 3/8" - 24 x 1"           WASHER, lock 3/8"           WASHER, plain 3/8"	All	

NUMBER	NUMBER				MODELS	CAR
2103—В	ODY HOLD	DOWN BOLTS AND SHIMS—Cont'd. (Plate 21-4)				
2103-90 2103-94 2103-96	1296X625 G120382	SCREW, No. 6 to rear crossmember 3/8" - 24 x 1"           WASHER, lock 3/8"           WASHER, plain 3/8"		All		1
2103-100 2103-104 2103-106	1296X625 G120382	SCREW, No. 7 body hold down 3/8" - 24 x 1"		All		2
2103-116 2103-116 2103-116	$287685 \\ 294488 \\ 1336199$	SHIM, body—steel         SHIM, body—steel         SHIM, body—steel		All		*
2105-RC	OF DRIP M	OULDINGS (Plate 21-22)				
2105-2	1351478 1351479 3204X2	MOULDING, right, roof drip MOULDING, left, roof drip after SCREW, moulding fasteing No. 6 - 18 x 1/2"	serial 4420	All		1
2105-4	1351476 1351477 G161791	MOULDING, right, windshield drip MOULDING, left, windshield drip	serial 4420	All		1
2105-6	1351384	COVER, w/s side to roof side drip mldg. joint (after ser	ial 4420)	All		2
2109—SH	ROUD KICK	PADS AND DASH LINERS (Plate 21-23)				
		2109A—Shroud Kick Pads and Carpets				
	1347666X1	Cover KICK PAD & CARPET, rightBlack	Carpet Rod & Plack			1
2109-3	1347667X1					
	1347666X2	KICK PAD & CARPET, right Turq	Turq. & Black	All		1
2109-3	1347667X2					
	1347666X3	KICK PAD & CARPET, right Orange Ora	ange & Black	All		

DESCRIPTION

	1351479 3204X2	SCREW, moulding fasteing No. 6 - 18 x 1/2")		
I	1351476 1351477 G161791	MOULDING, right, windshield drip MOULDING, left, windshield drip SCREW, moulding fasteing No. 6 - 18 x 3/8"	All All All	
	1351384	COVER, w/s side to roof side drip mldg. joint (after serial 4420) $\ldots$	All	
cui		PADS AND DASH LINERS (Plate 21-23)		
-211		PADS AND DASH LINERS (Plate 21-23)		
		2109A—Shroud Kick Pads and Carpets		
		Cover Carpet		
	1347666 X1	KICK PAD & CARPET, rightBlackRed & Black	All	
;	1347667X1	KICK PAD & CARPET, leftBlackRed & Black	All	
	1347666X2		All	
5	1347667X2	KICK PAD & CARPET, leftTurqTurq. & Black	All	
	1347666X3	KICK PAD & CARPET, right Orange Orange & Black	All	
;	1347667X3	KICK PAD & CARPET, leftOrange Orange & Black		
	1347666X4		All	
\$	1347667X4		All	
	1347666 X5	KICK PAD & CARPET, right Red	All	
1	1347667X5	KICK PAD & CARPET, leftRed	All	
	1347666X6	KICK PAD & CARPET, rightElk 4892Fawn & Black	All	
;	1347667X6			
	1347666X7	KICK PAD & CARPET, rightBlackFawn & Black	All	
3	1347667X7	KICK PAD & CARPET, leftBlackFawn & Black	All	
	1347666X8	KICK PAD & CARPET, right Elk Turq. & Black	All	
3	1347667X8	KICK PAD & CARPET, leftElk Turg. & Black		· · · · · · · · · · · · · · · · · · ·
	1347666X9			
;	1347667X9	KICK PAD & CARPET, left Black / Turq. & Black	All	
	1347860X1			
3	1347861X1	KICK PAD & CARPET, leftBlackBlack	All	
	1347860 X2	KICK PAD & CARPET, right Turq	All	
3	1347861X2	KICK PAD & CARPET, leftBlack	All	
	1347860X4	KICK PAD & CARPET, rightElk after Black	All	
3	1347861X4	KICK PAD & CARPET, leftElk serial Black	A11	
	1347860 X 5	KICK PAD & CARPET, rightRed	All	
3	1347861X5	KICK PAD & CARPET, leftRed	All	
	1347860X6	KICK PAD & CARPET, right MaroonBlack	All	
3	1347861X6	KICK PAD & CARPET, left Maroon/		
		SCREW, kick pad carpet fastening No. 6 - 18 x 1/2"	All	
9	1347558	MOULDING, kick pad trim (before serial 4892)	All	
)	1347846	MOULDING, kick pad trim (after serial 4892)		
	G162141	SCREW, to panel No. $4 - 24 \times 3/4''$		
		,, -		
	manning			

PAGE NO. 174

#### \*---Use as required.



1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

1

6

2

2

4

PER

MODELS

2109-3

2109-3

2109-3

2109-3

2109-3

2109-3

2109-3

2109-3

2109-3

2109-3

2109-3

2109-3

2109-9

2109-9


ILLUST.

CHANGE

PART

ILLUST. NUMBER	PART NUMBER		DESCRIPTION		MODELS	<b>C</b>
109—SHI	ROUD KIC	2109/	AND DASH LINERS (Plate 21-23) A—Shroud Kick Pads and Carpets—Cont'd. .INER, kick pad	All		
		61 RETA SCI	INER, kick pad INER, kick pad EW, retainer fastening No. 8-15 x 1/2" EN, air outlet—see group 2110	All All		
			B—Dash Liner			
09-17	1347540 1347794 1347540  41X358	DASH DASH DASH SCI	<ul> <li>Dash Liner</li> <li>I LINER, (left side only (before serial 3791)</li> <li>I LINER, right (after serial 3791)</li> <li>I LINER, left (after serial 3791)</li> <li>REW, to dash No. 8 - 15 x 1"</li> <li>/ASHER, plain 3/16"</li> </ul>	All All All	l l	· ·   · ·
	1347497X 1347497X 1347497X 1347497X 1347497X 1347497X	CARI CARI CARI CARI CARI CARI SCI	Color PET, left, dash liner	ack All ack All ack All ack All ack All ack All All	L L L L L	· · · · · · ·
109-17 109-17	1347514X 1347514X 1347514X 1347514X 1347514X 1347514X	CARI CARI CARI CARI CARI CARI CARI	PET, right, dash       Bl         PET, right, dash       Turq. & Bl         PET, right, dash       Turq. & Bl         PET, right, dash       Sefore serial 4879         PET, right dash       Fawn & Bl         PET, right dash       Sefore serial 4879         PET, right dash       Red & Bl	ack All ack All ack All ack All ack All ack All	l l l l l	· · · · ·
109-17 109-17 109-17 109-17	13475142 13475142 13475142	K3 CARI K4 CARI K5 CARI	PET, right, dash	ack All ack All ack All	I I I	

2109

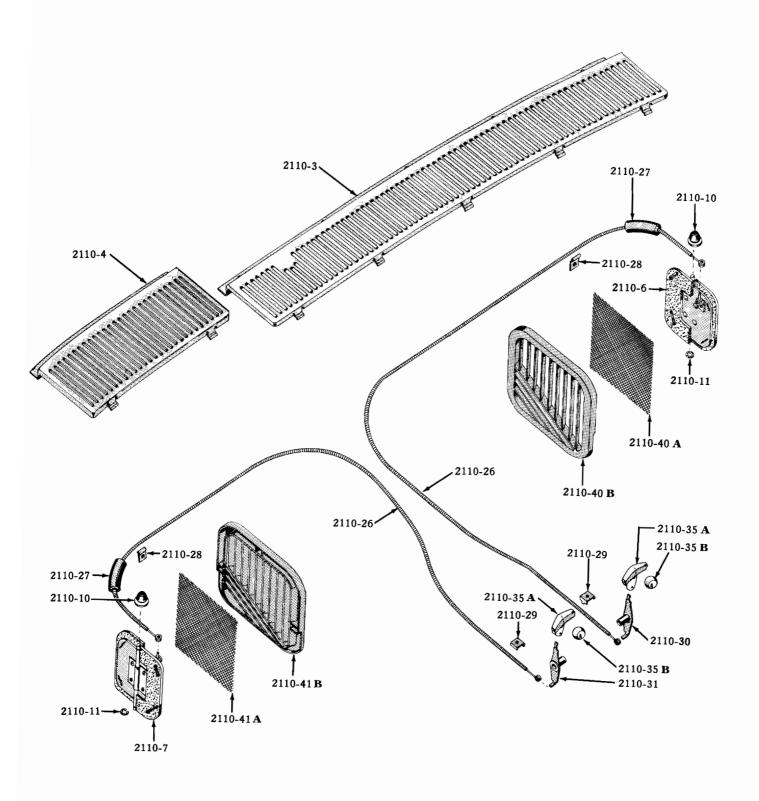


C-4219

#### **AIR VENTILATOR**

ILLUST. NUMBER		CHANGE DESCRIPTION		MODELS	PI C/
		TOR (Plate 21-5)			
2110-AIK 2110-3	1350099	GRILLE, cowl top air intake opening (before serial 4892)	All		
110-3	1350099	GRILLE, right, cowl top air intake opeing (after serial 4892)			
110-4	1358739	GRILLE, left, cowl top air intake opening (after serial 4892)			
		SCREW, grille fastening No. $8 - 15 \times 1/2''$			
		WASHER, plain 3/16"			
110-6	1351100	VALVE, right, air outlet} before serial 4892	All		
110-7	1351101	VALVE, left, air outlet) before serial 4892	All		
110-6	1358862	VALVE, right, air outlet	All	. <i></i> <b></b>	
110-7	1358863	VALVE, left, air outlet) after serial 4892	All		
110-10	1351076	GROMMET, valve shaft	All		
110-11	1351077	CLIP, shaft retaining	All		
110-26	1557683	CABLE and CONDUIT, valve control	A 11		
110-26	1357085 1358872	GROMMET, valve control cable & conduit (after serial 4892)			
110-21	537674	CLIP, to dash			
110-20		SCREW, to dash No. $10 - 12 \times 5/8''$			
110-29	514013	CLIP, to control bracket			
	G449815	SCREW, to bracket No. $8 - 32 \times 5/8''$			
110-30	1351194	CONTROL, right air valve	All	• • • • • • • • • • • • • • • • • • • •	- 1 -
110-31	1351189	CONTROL, left air valve) before serial 4878	All		
$110-30 \\ 110-31$	$1358903 \\ 1358905$	CONTROL, right, air valve	All		
110-35A	1351089WG173677	HANDLE, valve remote control SCREW, set No. $6 - 32 \ge 1/8''$ before serial 4878	All All		
110-35B	1358823 G193222	KNOB, value remote control $\dots$ after serial 4878 $\dots$ $\dots$			
110-40A,4	1A 1347545 	SCREEN, air outlet SCREW, to panel No. $6 - 18 \times 1/2^{"}$ before serial 4892	All All		
2110-40B 2110-41B	$\frac{1358874}{1358875}$	GRILLE, right, air outlet			

2110



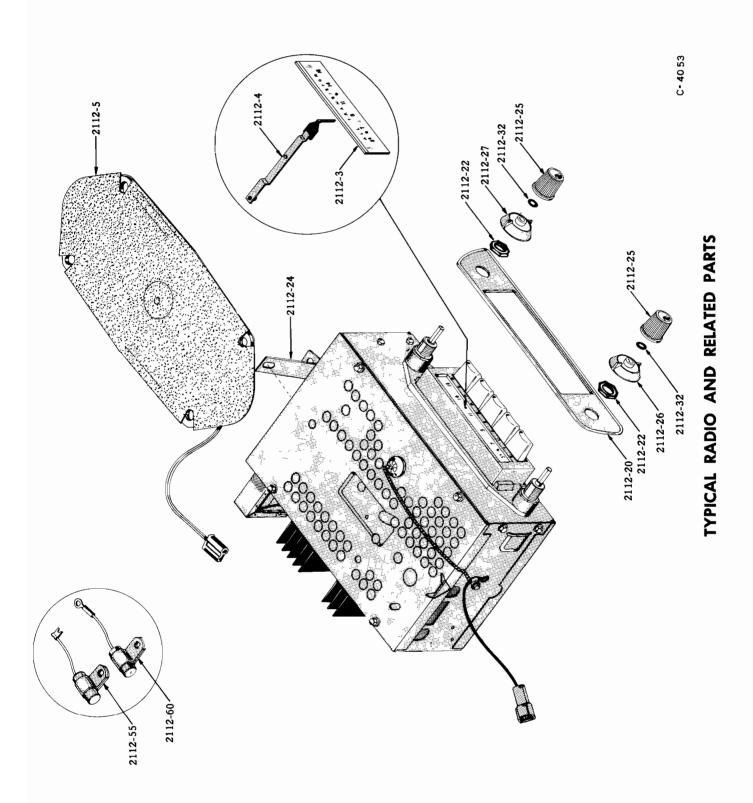

ILLUST. NUMBER		DESCRIPTION		MODELS	PE CA
2112—RA	DIO AND A	ANTENNA (Plate 21-6)			
		1ST TYPE 2ND TYPE		C-4146	
		2112A-Radio and Components Typ			
	AC-3378 ★AC-3507	RADIO & ANTENNA—Note 2 (before serial 4979)2n RADIO & ANTENNA (after serial 4979)	. All		:
2112-3	1558225	DIAL, radio receiver			
2112-3 2112-3	$\star 1560059$ 1562853	DIAL, radio receiver DIAL, radio receiver (AM-FM)			
2112-4	1556011	POINTER, radio receiver dial			
	1557564	BULB, radio receiver dial			
2112-5	1557562	SPEAKER, radio—Note 1			
2112-5	1558823	SPEAKER, radio-Note 22n	d All		
2112-5	<b>*</b> 1561729	SPEAKER, radio			
	G271166 1540528	NUT & LK. WASHER, hex. No. 10-24 RADIO SUPPRESSION KIT, consists of			
		2—1540361 Capacitor       1— Screw No. 10 x 3/8"         1—1540354 Capacitor       1— LK. WASHER No. 10         1—1540525 Ground Strap       1— LK. WASHER 5/16"         1—1540721 Ground Strap       1— Screw No. 8 x 3/8"         1—1540722 Clamp			
2112-20 2112-20 2112-20 2112-20 2112-20 2112-22	1350918X1 1558985X1 ★1561702X1 1562450 416339	BEZEL or OVERLAY, radio opening-Note 2 47302n	d All . All . All	· · · · · · · · · · · · · · · · · · ·	
2112-22	1558938	NUT, receiver mtg.—Note 2			
2112-24	1557342 G271172	BRACKET, radio support—Note 11: NUT & LK. WASHER, bracket to receiver 1/4"-20	t All . All		
2112-25	1557356	KNOB, volume and tuning			
2112-25 2112-26	$\star 1561562 \\ 1557354$	KNOB, volume and tuning			
2112-20	1557355	KNOB, dummy	. All		
	1562203	KNOB, band selector (AM-FM)			- 1
2112-32	416356	WASHER, knob anti-rattle			
	1555422	FUSE, radio 2-1/2" amp			
2112-55 2112-60	$\frac{1540361}{1540354}$	CAPACITOR, radio suppression-regulator & coil CAPACITOR, radio suppression-alternator			
		2112B—Rear Compartment Speaker			
	AC-3329 AC-3391	SPEAKER KIT, rear comp't—Note 1			
	$\frac{1549623}{1559275}$	SPEAKER, rear comp't.—Note 1	st All		
	G156798 G274800	BOLT, speaker fastening No. 8-32 x 1" NUT, lock No. 8-32			
		that have wood grain overlay.			


the volume and tuning side. Note 2—Bezel or Overlay with the 2nd type radio has two holes on the volume and tuning side. Knobs must be removed to determine type.

#### 2112

### BODY

ILLUST. NUMBER	PART NUMBER	CHANGE DESCR	RIPTION		MODELS	CA
2112–RA	DIO AND	ANTENNA (Plate 21-6)				
		2112B—Rear Compartment Speake	r—Cont'd.			
	1540514	SCREEN, speaker		All .		.  ;
	1540513	BEZEL, speaker		All .		
	1559198 416339 G120396	SWITCH, speaker (less knob) NUT, mounting WASHER, spacer		All .		
	$1557356 \\ \star 1561562 \\ 1555880$	KNOB, speaker control KNOB, speaker control KNOB, dummy		All .		
	1555879	ESCUTCHEON, speaker switch		All .		
	AC-3330 1558100	<b>2112C—Radio Antenna</b> ANTENNA KIT, rear fender—extern CABLE ASSY., rear antenna				

 $\star$ —Used with radios that have wood grain overlay.

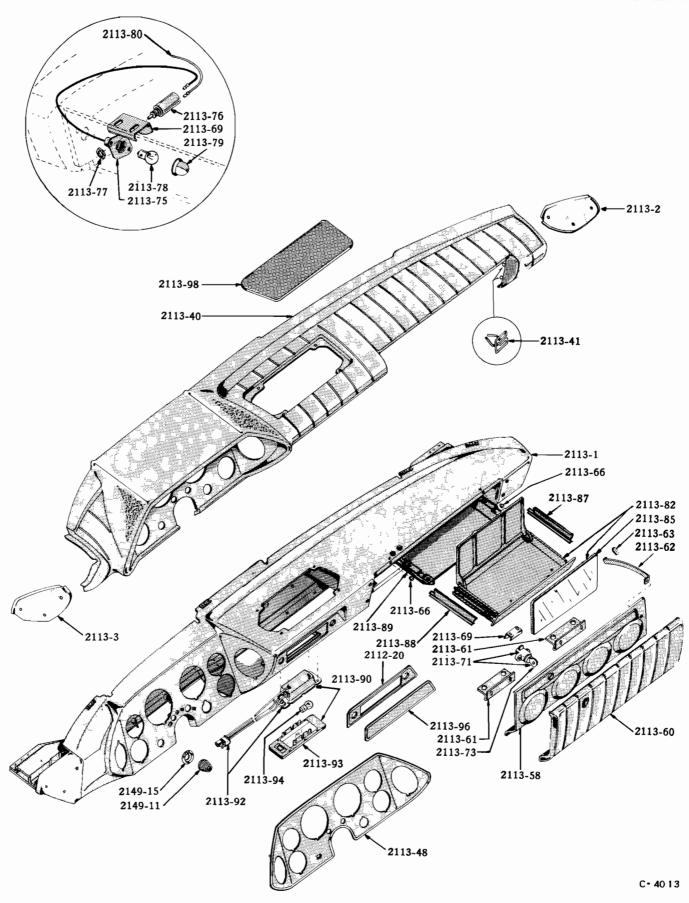


#### TYPICAL INSTRUMENT BOARD


-	-	-	-	
7	1	1	2	
			J.	

NUMBER		DESCRIPTION	MODELS	PEI CA
113–IN9	STRUMENT B	SOARD (Plate 21-7)		
		2113A—Instrument Board		
113-1	1351183	Color BOARD, instrument	A 11	
10-1	G180087	SCREW, to cowl No. 5/16" - 18 x 3/4"		
	· · · ·	WASHER, plain 5/16"		
119.0		CAP, right, inst. board end		1
113-2 113-3	$1350630 \\ 1350631$	CAP, left, inst. board end		
		SCREW, to board No. 6 - 18 x 5/8"		
113-40	1350520X1	COVER, safety pad (incl. pad)		
$113-40 \\ 113-40$	$1350520X2 \\ 1350520X3$	COVER, safety pad (incl. pad)BlackCOVER, safety pad (incl. pad)Turquoise	All	. 1
113-40	1350520X3	COVER, safety pad (incl. pad),Turquoise COVER, safety pad (incl. pad) after serial 4892Elk	All	
113-40	1350520X5	COVER, safety pad (incl. pad) Red	All	.  1
$113-40 \\ 113-41$	$1350520 \mathrm{X6} \\ 1350675$	COVER, safety pad (incl. pad)/Maroon CLIP, safety pad fastening	All	
110-41	3081X8	BOLT & CLIP, fastening No. $8 - 32 \times 1/2''$		
	G120622	NUT, hex. No. 8 - 32		
113-48	1350854X1	OVERLAY, inst. board instruments (before serial 4730)		
113-48	1358994X1	OVERLAY, inst. board instruments (after serial 4730)		
	G272733	NUT, hex. 6 - 32		
		2113B—Compartment Door, Lock, Light and Vanity		
113-58	1350224	DOOR, compartment (less hinges)	All	:
113-60	1350523X1	COVER, comp't. door safety pad (incl. pad)Fawn	All	. 1
113-60	1350523X2	COVER, comp't. door safety pad (incl. pad)Black COVER, comp't. door safety pad (incl. pad)) afterTurquoise	All	·] ]
113-60 113-60	1350523X3 1350523X4		All	
113-60	1350520X5	COVER, comp't. door safety pad (incl. pad)		· I · ·
113-60	1350523X6	COVER, comp't. door safety pad (incl. pad) Maroon	All	.  :
		SCREW, pad fastening No. $8 - 18 \ge 3/8''$		
113-61	1350887	HINGE, compartment door	All	. 2
	G445947 G9415361	SCREW, to comp't. door No. 10 - 12 x 7/16" SCREW, to inst. board No. 10 - 24 x 5/8"		
		WASHER, plain 1/4"	All	. 4
	G271166	NUT & LK. WASHER, hex. No. 10-24	All	·   •
113-62	1350995	CHECK, comp't. door		
		SCREW, check fastening No. 8 - 15 x $1/2''$		
2113-63	1350996	BUMPER, check strap		
2113-66	1312875	BUMPER, compartment door	All	·{ :
2113-69	1350994	KEEPER, door lock (before serial 4877)		
113-69	$1358854 \\ 1535X13$	KEEPER, door lock (after serial 4877) SCREW, to board No. 8-15x1/2"		
	10001110	The following lock kit consists of: 1—Lock comp't. door, 1—Lock, console comp't. and 1—Key		
	1350825	KIT, comp't. door & console comp't. lock (Yale) (before serial 4892).	All	
	1360830	KIT, comp't. door & console comp't. lock (Yale) (after serial 4892)	1	

ILLUST. NUMBER	PART NUMBER	DESCRIPTION	MODELS	PE C/
				<u>–</u> –
113–IN	STRUMENT	BOARD—Cont'd. (Plate 21-7)		
		2113B—Instrument Board—Cont'd.		
		The following locks are not coded to specified key numbers		
2113-71	1350826	LOCK & HOUSING w/LATCH & KEY, comp't. door (Yale)		
113-71	1360831	(before serial 4892) LOCK & HOUSING w/LATCH & KEY, comp't. door (Yale) (after serial 4892)	. All	
	• • • •	SCREW, to door No. $6 - 18 \times 1/2''$		
2113-73 2113-73	$\begin{array}{c} 1555539 \\ 1360848 \\ 1343378 \\ 1360849 \end{array}$	KEY, door lock (coded to specified key number) (before serial 4892)KEY, door lock (coded to specified key number) (after serial 4892)KEY, door lock (blank) (before serial 4892)KEY, door lock (blank) (after serial 4892)	. All	
2113-75	1350477 G155043 G271163	SOCKET, compartment light           SCREW, to board No. 8 - 32 x 1/2"           NUT & LK. WASHER, hex. No. 8 - 32	. All	
113-76 113-76 113-77	G271163 304808 1358856 291145W G138544	SWITCH, compartment light (before serial 4877) SWITCH, compartment light (after serial 4877) NUT, retaining 3/8" - 32) for 204808	. All	
113-78	G127934	BULB, compartment light (Mazda No. 57)	. All	
113.79	298825	LENS, compartment light	. All	
113-80	1314822	CABLE, compartment light ground	. All	
113-82	1355370X  1811X6	VANITY, inst. board comp't. SCREW, to board 1/4" - 14 x 1/2" SPEED NUT, No. 14	. All	
113-85	1351150	MIRROR, inst. board, comp't. vanity		
113-85 113-87	1360858	SLIDE, right, inst. board comp't. vanity tray		
113-87	1360859	SLIDE, left, inst. board comp't. vanity tray	All	
113-89	1355376	RETAINER, vanity tray	. All	••
		2113C—Courtesy Light		
113-90	1351142	LAMP COMPLETE, courtesy	. All	
113-92	1351143 G161373	BODY COMPLETE, courtesy lamp SCREW, to board No. 6 - $18 \times 1/2^{"}$		
113-93	1321895	DOOR and LENS, courtesy lamp	. All	
13-94	G455136	BULB, courtesy lamp (Mazda No. 1004)	. All	
		2113D—Radio Hole Cover, Radio Grille & Inst. Bezels		
113-96 113-96	1350916X 1358984X 1360026X G446059	COVER, radio control hole opening (from serial 4730 to 4892)	. All	
113-98	1350893 3081X6 G144567	GRILLE, radio BOLT and CLIP, fastening No. 10-24 x 3/4" NUT, mounting No. 10-24	. All	
		BEZEL, radio opening—see group 2112	. All	
		SPEEDOMETER & INSTRUMENTS-see group 17	. All	

 PAGE NO. 183

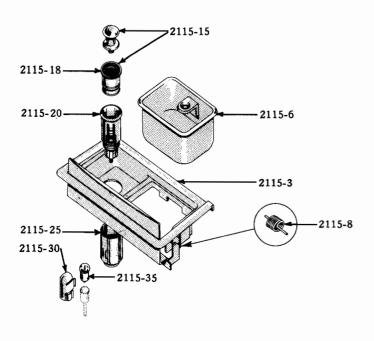



C-4003


CONSOLE

REAR QUARTER

#### ASH RECEIVERS AND CIGAR LIGHTER

2115

ILLUST. NUMBER	PART NUMBER	DESCRIPTION	MODELS	PER CAR
2115—AS		S AND CIGAR LIGHTER (Plate 21-8)		
		2115A—Ash Receivers		
2115-3 2115-3	1350210X1 1358919X1	RETAINER, ash receiver (console) (before car serial 4730) RETAINER, ash receiver (console) (after serial 4730) SCREW, to console No. 6 - 18 x 5/8"	All	. 1
2115-6 2115-6	1347715 1347714W	TRAY, ash receiver (console) TRAY, ash receiver (rear quarter)		
2115-8 2115-8	$\frac{1351169}{1347719}$	SPRING, ash receiver lid tension (console) SPRING, ash receiver lid tension (rear quarter)		
		2115B—Cigar Lighter		
2115-15	1556963	KNOB and ELEMENT, cigar lighterch	rome All	. 1
2115-18	1540026	ELEMENT, cigar lighter	All	. 1
2115-20	1557453	SOCKET, ASSY., cigar lighter	All	. 1
2115-25	1555813	CLAMPING SHELL, cigar lighter	All	. 1
2115-30	1557454	SHIELD, cigar lighter light	All	. 1
2115-35	1541674	BULB, cigar lighter (Mazda 1445)	All	. 1
	G147685	FUSE, cigar lighter—14 amp.	All	. 1

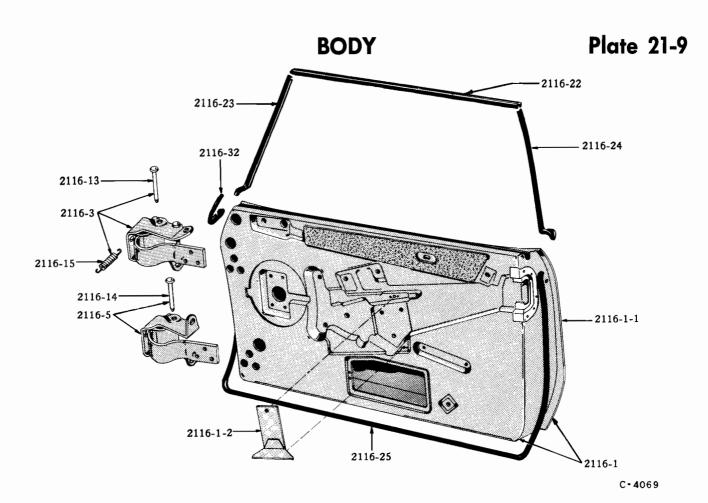

#### DOORS, HINGES, WEATHERSTRIPS AND CHECKS

2116

ILLUST. NUMBER		DESCRIPTION	MC	INDELS 11	
2116—DC	ORS, HING	ES, WEATHERSTRIPS AND CHECKS (Plate 21-9)			
		2116A—Doors			
		The following doors are less paint, trim, glass, hardware, etc.			
2116-1	$\frac{1350030}{1350031}$	DOOR, right front DOOR, left front	All		
2116-1-1	$\frac{1350032}{1350033}$	PANEL, right door outer (incl. upper reinf.) PANEL, left door outer (incl. upper reinf.)	All All		
2116-1-2	$\frac{1350976}{1350977}$	PLATE, right, arm rest mounting PLATE, left, arm rest mounting	All All		
		2116B—Door Hinges			
2116-3 2116-5	$\begin{array}{c} 1350416\\ 1350417\\ 1350418\\ 1350419\\ 1351340\\ 1296X627\\ 1296X628\\ 3142X3 \end{array}$	HINGE, upper, right front doorHINGE, upper, left front doorHINGE, lower, right front doorHINGE, lower, left front doorSHIM, hinge to door .100 thickSCREW, front door, to body $3/8" - 24 \ge 1"$ SCREW, front door, to door $3/8" - 24 \ge 1.5/8"$ WASHER, lock $3/8"$	All           All           All           All           All           All           All           All           All           All           All           All           All           All           All		
2116-13, 1		PIN, front door hinge 11/32" x 3-5/32"			-
2116-15 *—Use as	1350427 s required.	SPRING, upper hinge	All		

#### 2116


#### BODY

ILLUST. NUMBER	PART NUMBER		DESCRIPTION	M	ODELS	PER CAR
2116-DC	ORS, HIN	GES, WEATHER	STRIPS AND CHECKS—Cont'd. (Plate 21-9)			

#### 2116C–Door Opening Weatherstrips

					í –
2116-21	<b>A</b>	WEATHERSTRIP, upper & sides, right front door) order separate	All	 1	
	<b>A</b>	WEATHERSTRIP, upper & sides, left front door) parts	All	 1	Ĺ
2116-22	1351334	WEATHERSTRIP, upper, right front door	$\mathbf{All}$	 1	l.
	1351335	WEATHERSTRIP, upper, left front door	All	 1	l.
2116-23	1360896	WEATHERSTRIP, front upper side, right front door	All	 1	
	1360897	WEATHERSTRIP, front upper side, left front door			
2116-24	1350856	WEATHERSTRIP, rear upper side, right front door	$\mathbf{All}$	 1	
	1350857	WEATHERSTRIP, rear upper side, left front door	All	 1	
2116.25	1350764	WEATHERSTRIP, lower & sides, right front door	All	 1	
	1350765	WEATHERSTRIP, lower & sides, left front door	All	 1	
2116-32	1350164	WEATHERSTRIP, front center, right front door	A 11	1	
	1350165	WEATHERSTRIP, front center, left front door			
				. !	4

 $\blacksquare$ —Not available.

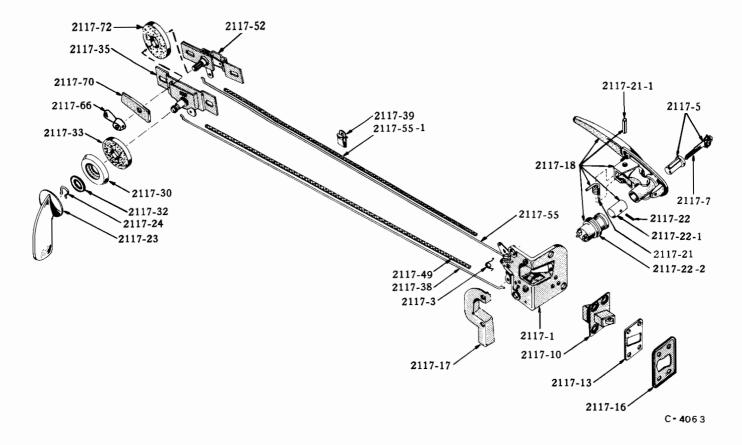

#### **RIGHT DOOR LOCKING MECHANISM**

2117


ILLUST. NUMBER		DESCRIPTION	MODELS	PE
2117–DC	OR LOCKS,	STRIKERS, HANDLES AND REMOTE CONTROLS (Plate 21-10)		
		2117A—Door Locks and Strikers		
2117-1	1350350 1350351 3203X1W	LOCK, right front door LOCK, left front door SCREW, to door 1/4" - 20 x 5/8"	All	
2117-3	$\frac{1351172}{1351173}$	SPRING, right door lock control lever SPRING, left door lock control lever		
		The following kits consists of 2-door outside locks, 1-ignition loc cylinder and 2-keys	ek	
	$\frac{1556928}{1561788}$	KIT, door lock & ign. lock cyl. (before serial 4892)		
2117-5 2117-5	$\frac{1351296}{1360828}$	LOCK w/KEYS, door outside (before serial 4892) LOCK w/KEYS, door outside (after serial 4892)	All	
2117-7 2117-7 2117-7 2117-7 2117-7	$1555538 \\ 1555550 \\ 1561740 \\ 1561741$	KEY, door outside lock (specify letter & number) (before serial 48 KEY, door outside lock (blank) (before serial 4892) KEY, door outside lock (specify letter & number) (after serial 488 KEY, door outside lock (blank) (after serial 4892)	All 92) . All	
2117-10	$\frac{1350658}{1350659}$	STRIKER, right front door	All	
2117-13 2117-13	$1351046 \\ 1351047$	SHIM, to pillar .0598 thick         SHIM, to pillar .0418 thick         SCREW, to pillar 1/4" - 20 x 1"	All	

\*—Use as required

#### 2117

ILLUST. NUMBER		DESCRIPTION	MODELS	C
		S, STRIKERS, HANDLES AND REMOTE ont'd. (Plate 21-10)		
		2117A—Door Locks and Strikers—Cont'd.		
117-16	1350411	ESCUTCHEON, lock striker	All	
117-17	1350188W 1350189W G156780 G156771	ESCUTCHEON, right door lock ESCUTCHEON, left door lock SCREW, door lock escutcheon No. 8 - 32 x 3/4" SCREW, door lock escutcheon No. 8 - 32 x 1/2"	All	
		2117B—Door Handles		
117-18	1350440 	HANDLE ASSY., front door outside SCREW, to door No. 10-24 x 3/8" WASHER, lock No. 10	All	
117-21	1351316	SPRING, door handle tension	All	
117-21-1	1351315	PIN, door handle pivot	All	
117-22	G273436	PIN, door handle adapter	All	
117-22-1	1351317	ADAPTER, door handle	All	
117-22-2	1351314	OPERATOR, door handle	All	
2117.23 2117.23 2117.24	1350221W 1358711W 1312646	HANDLE, front door inside (before serial 4879)HANDLE, front door inside (after serial 4879)CLIP, to control	All	
2117-30	1319242	ESCUTCHEON, front door inside handle	All	
117-32	1312647	SEPARATOR, inner handle to trim	All	
2117-33	306018	SPACER, to trim foundation	All	
		2117C—Door Remote Control		
2117-35	1350542 1350543 1296X626 G121753	CONTROL, right front door remote CONTROL, left front door remote SCREW, to door 1/4" - 20 x 9/16" WASHER, lock 1/4"	All	
2117-38	1351010	LINK, front door remote control	All	
117-49	3050X3	LOOM, front door remote control link (cut to length required)	All	
		2117D—Door Locking Controls		
2117-52	1350860 1350861 1296X626 G121753	CONTROL ASSY., right front door CONTROL ASSY., left front door SCREW, to door 1/4" - 20 x 9/16" WASHER, lock 1/4"	All	
2117-55 2117-39	$1351011 \\ 1332077$	LINK, front door locking control CLIP, to door SCREW, clip to door No. 8-15x1/2"	All	
117-55-1	3050X3	LOOM, front door locking control link	1	
2117-66 117-66	1350414W 1358712W G156617	LEVER, front door locking control (before serial 4879) LEVER, front door locking control (after serial 4879) SCREW, fastening No. 4-40 x 3/8"	All	•
2117.70 2117.70	1350415W 1358713W	ESCUTCHEON, locking control lever (before serial 4879) ESCUTCHEON, locking control lever (after serial 4879)		
2117-72	1330056	SPACER, to trim foundation	All	



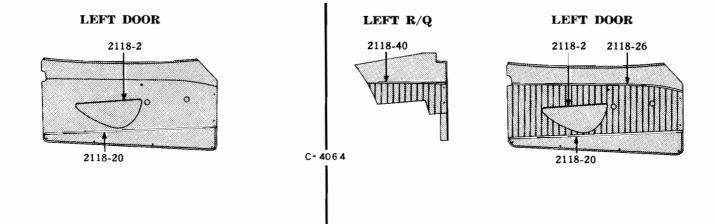


#### DOOR AND R/Q PANEL INSIDE TRIM MOULDINGS

2118


ILLUST. NUMBER	NUMBER	CHANGE	D E S	CRIPTION			MODELS	PE CA
2118—AR	M RESTS	AND TRIM MOULDIN	NGS (Plates 21-	11, <b>23</b> )				
		2118A—Door and	R/Q Arm Res	its	color			
	1347432X1	ARM REST, right	, door		Black	All		
2118-2	1347433 X1	ARM REST, left,	door\		Black	All		
	1347432X2		, door		Turquoise	All		
2118-2	$1347433\mathbf{X2}$	,,	door			All		
	1347432X3			. 1 4050	Orange	All		
2118-2	1347433X3	ARM REST, left,	door> <sup>betc</sup>	ore serial 4879	Orange	All		
	1347342X4	ARM REST, right	, door		Elk			
2118-2	1347433X4	ARM REST, left,	door		$\dots$ Elk	All		
	1347432X5	ARM REST, right	, door		$\dots$ Red	All		
2118-2	1347433X5				Red			
	1347784X1	ARM REST, right	, door		Black	All		
2118-2	1347785X1	ARM REST, left,	door		Black	All		
	1347784X2	ARM REST, right	., door			All		
2118-2	$1347785 X_{2}$	ARM REST, left,	door			All		
	1347784X3		, door		Orange	All		
2118 - 2	1357785X3	ARM REST, left,	door	1 1050	Orange			
	1347784X4	ARM REST, right	t, door $\ldots$ $($ and	er serial 4879	Elk	All		
2118-2	1347785X4	ARM REST, left,	door		$\dots$ Elk	All		
	1347784X5				$\dots$			
2118-2	1347785 X5				$\ldots \ldots \mathbf{Red}$			
	1347784X6	, 0			Maroon	All		
2118-2	$1347785 \mathrm{Xe}$				Maroon	All		
		SCREW, to mtg	. bracket No. 6 -	18 x 3/4"		All		. 4

#### 2118

1347780       PLATE, arm rest insert (after         1347710X1       ARM REST, right, r/q         2118-8       1347711X1         1347710X2       ARM REST, left, r/q         2118-8       1347710X2         1347710X2       ARM REST, right, r/q         2118-8       1347710X2         1347710X2       ARM REST, right, r/q         2118-8       1347711X2         1347710X3       ARM REST, right, r/q         2118-8       1347710X3         1347710X4       ARM REST, right, r/q         2118-8       1347710X4         1347710X5       ARM REST, right, r/q         1347710X6       ARM REST, right, r/q         1347710X6       ARM REST, right, r/q         1347710X6       ARM REST, right, r/q         1347711X6       ARM REST, right, r/q         1350675       CLIP, to panel          SCREW, front upper, hold of         2118-20       1347556         1347640       MOULDING, upper, right front         2118-26       1347641         MOULDING, upper, left front dor         1347625       MOULDING, r/q—pleated trim of         2119-DOOR SILL FINISHING PLATES (Plate 21-23)         2119-1       1351136 </th <th></th> <th></th> <th>CA</th>			CA
1347729       PLATE, arm rest insert (before PLATE, arm rest insert (after         1347780       PLATE, arm rest insert (after         1347710X1       ARM REST, right, r/q         118-8       1347710X2         1347710X2       ARM REST, right, r/q         118-8       1347710X2         118-8       1347710X2         118-8       1347710X3         118-8       1347710X3         118-8       1347710X3         118-8       1347710X4         118-8       1347710X5         118-8       1347710X4         ARM REST, right, r/q         118-8       1347711X4         ARM REST, right, r/q         118-8       1347710X5         ARM REST, right, r/q         118-8       1347711X5         ARM REST, right, r/q         118-8       1347711X5         ARM REST, left, r/q         1347710X6         ARM REST, left, r/q         1350675         CLIP, to panel          SCREW, front upper, hold of         118-20       1347640         MOULDING, lower, front door         1347640       MOULDING, upper, right front         MOULDING, upper, left front d			<u></u>
1347729       PLATE, arm rest insert (before         1347780       PLATE, arm rest insert (after         1347710X1       ARM REST, right, r/q         18-8       1347710X1       ARM REST, left, r/q         18-8       1347710X2       ARM REST, left, r/q         18-8       1347711X1       ARM REST, left, r/q         18-8       1347710X2       ARM REST, right, r/q         18-8       1347711X2       ARM REST, right, r/q         18-8       1347710X3       ARM REST, left, r/q         18-8       1347711X3       ARM REST, right, r/q         18-8       1347710X4       ARM REST, right, r/q         18-8       1347710X5       ARM REST, right, r/q         18-8       1347711X4       ARM REST, right, r/q         18-8       1347711X5       ARM REST, right, r/q         18-8       1347711X5       ARM REST, left, r/q         18-8       1347711X6       ARM REST, left, r/q         18-8       1347640       MOULDING, lower, front door         18-20       1347640       MOULDING, upper, lef	(Plates 21-11, 23)		
1347780       PLATE, arm rest insert (after         1347710X1       ARM REST, right, r/q         18-8       1347710X1       ARM REST, left, r/q         18-8       1347710X2       ARM REST, right, r/q         18-8       1347710X2       ARM REST, right, r/q         18-8       1347710X2       ARM REST, left, r/q         18-8       1347710X3       ARM REST, right, r/q         18-8       1347710X3       ARM REST, right, r/q         18-8       1347710X4       ARM REST, left, r/q         18-8       1347710X4       ARM REST, right, r/q         18-8       1347710X5       ARM REST, left, r/q         18-8       1347710X5       ARM REST, left, r/q         18-8       1347710X6       ARM REST, right, r/q         18-8       1347711X6       ARM REST, left, r/q         18-8       1347640       MOULDING, lower, front door         1347640       MOULDING, upper, left front <td>Rests—Cont′d.</td> <td></td> <td></td>	Rests—Cont′d.		
1347780       PLATE, arm rest insert (after         1347710X1       ARM REST, right, r/q         18-8       1347710X1       ARM REST, left, r/q         18-8       1347710X2       ARM REST, right, r/q         18-8       1347710X2       ARM REST, right, r/q         18-8       1347710X2       ARM REST, left, r/q         18-8       1347710X3       ARM REST, right, r/q         18-8       1347710X3       ARM REST, right, r/q         18-8       1347710X4       ARM REST, left, r/q         18-8       1347710X4       ARM REST, right, r/q         18-8       1347710X5       ARM REST, left, r/q         18-8       1347710X5       ARM REST, left, r/q         18-8       1347710X6       ARM REST, right, r/q         18-8       1347711X6       ARM REST, left, r/q         18-8       1347640       MOULDING, lower, front door         1347640       MOULDING, upper, left front <td>color</td> <td></td> <td></td>	color		
1347710X1       ARM REST, right, r/q         18-8       1347711X1       ARM REST, left, r/q         18-8       1347710X2       ARM REST, right, r/q         18-8       1347710X2       ARM REST, right, r/q         18-8       1347710X2       ARM REST, left, r/q         18-8       1347710X2       ARM REST, right, r/q         18-8       1347710X3       ARM REST, right, r/q         18-8       1347710X4       ARM REST, left, r/q         18-8       1347710X4       ARM REST, right, r/q         18-8       1347710X4       ARM REST, left, r/q         18-8       1347710X5       ARM REST, left, r/q         18-8       1347710X5       ARM REST, right, r/q         18-8       1347710X6       ARM REST, left, r/q         18-8       1347711X6       ARM REST, left, r/q         18-8       1347640       MOULDING, lower, front door         1347640       MOULDING, upper, le	e serial 4879)		
18-8       1347711X1       ARM REST, left, r/q         1347710X2       ARM REST, right, r/q         18-8       1347711X2       ARM REST, left, r/q         18-8       1347710X3       ARM REST, right, r/q         18-8       1347711X3       ARM REST, right, r/q         18-8       1347711X3       ARM REST, right, r/q         18-8       1347711X3       ARM REST, right, r/q         18-8       1347711X4       ARM REST, left, r/q         18-8       1347711X4       ARM REST, right, r/q         18-8       1347711X5       ARM REST, right, r/q         18-8       1347711X5       ARM REST, left, r/q         18-8       1347711X5       ARM REST, right, r/q         18-8       1347711X6       ARM REST, left, r/q         18-8       1347615       MOULDING, lower, front door         18-20       1347640       MOULDING, upper, right front         18-26       1347641       MOULDING, upper, left front do         18-40       13	serial 4879)	All	
18-8       1347711X1       ARM REST, left, r/q         1347710X2       ARM REST, right, r/q         18-8       1347711X2       ARM REST, left, r/q         18-8       1347710X3       ARM REST, right, r/q         18-8       1347711X3       ARM REST, right, r/q         18-8       1347710X3       ARM REST, right, r/q         18-8       1347711X3       ARM REST, right, r/q         18-8       1347710X4       ARM REST, right, r/q         18-8       1347711X4       ARM REST, right, r/q         18-8       1347711X5       ARM REST, right, r/q         18-8       1347711X5       ARM REST, right, r/q         18-8       1347711X5       ARM REST, right, r/q         18-8       1347711X6       ARM REST, right, r/q         18-8       1347711X6       ARM REST, left, r/q         1350675       CLIP, to panel           SCREW, front upper, hold of          SCREW, front upper, right front         18-20       1347640       MOULDING, upper, right front         18-26       1347641       MOULDING, upper, left front dor         18-40       1347625       MOULDING, upper, left front dor         18-40       1347625       MOUL	Black	All	.]
18-8       1347711X2       ARM REST, left, r/q         1347710X3       ARM REST, right, r/q         18-8       1347711X3       ARM REST, left, r/q         18-8       1347710X4       ARM REST, right, r/q         18-8       1347711X4       ARM REST, right, r/q         18-8       1347711X4       ARM REST, left, r/q         18-8       1347711X4       ARM REST, right, r/q         18-8       1347711X5       ARM REST, right, r/q         18-8       1347711X5       ARM REST, left, r/q         18-8       1347711X6       ARM REST, right, r/q         18-8       1347711X6       ARM REST, left, r/q         18-8       1347640       MOULDING, lower, front door         18-26       1347641       MOULDING, upper, left front d         18-40       1347625	Black		
1347710X3       ARM REST, right, r/q         18-8       1347711X3       ARM REST, left, r/q         1347710X4       ARM REST, right, r/q          18-8       1347711X4       ARM REST, right, r/q          18-8       1347711X4       ARM REST, left, r/q          18-8       1347710X5       ARM REST, right, r/q          18-8       1347711X5       ARM REST, left, r/q          18-8       1347711X6       ARM REST, right, r/q          18-8       1347711X6       ARM REST, left, r/q          1350675       CLIP, to panel           18-20       1347640       MOULDING, lower, front door          18-26       1347641       MOULDI	Turquoise	All	
18-8       1347711X3       ARM REST, left, r/q         1347710X4       ARM REST, right, r/q         18-8       1347711X4       ARM REST, left, r/q         18-8       1347711X5       ARM REST, right, r/q         18-8       1347711X5       ARM REST, right, r/q         18-8       1347711X5       ARM REST, left, r/q         18-8       1347711X6       ARM REST, right, r/q         18-8       1347711X6       ARM REST, right, r/q         18-8       1347711X6       ARM REST, left, r/q         1350675       CLIP, to panel           SCREW, front upper, hold of         18-20       1347640       MOULDING, upper, right front         18-26       1347641       MOULDING, upper, left front d         18-40       1347625       MOULDING, r/q—pleated trim of         19–DOOR SILL FINISHING PLATES (Plate 21-23)<		All	• •
1347710X4       ARM REST, right, r/q         18-8       1347711X4       ARM REST, left, r/q         1347710X5       ARM REST, right, r/q          18-8       1347711X5       ARM REST, right, r/q          18-8       1347711X5       ARM REST, left, r/q          18-8       1347711X6       ARM REST, right, r/q          1347710X6       ARM REST, left, r/q          18-8       1347711X6       ARM REST, left, r/q          1350675       CLIP, to panel           SCREW, front upper, hold of          SCREW, front upper, hold of         18-20       1347640       MOULDING, lower, front door         1847641       MOULDING, upper, right front         18-26       1347625       MOULDING, upper, left front d         18-40       1347625       MOULDING, r/q—pleated trim of         19–DOOR SILL FINISHING PLATES (Plate 21-23)       1351136         19-1       1351136       PLATE, right, door sill    <			
18-8       1347711X4       ARM REST, left, r/q         1347710X5       ARM REST, right, r/q         18-8       1347711X5       ARM REST, left, r/q         1347710X6       ARM REST, left, r/q         1347710X6       ARM REST, right, r/q         1347710X6       ARM REST, right, r/q         1347710X6       ARM REST, left, r/q         1347710X6       ARM REST, right, r/q         1347710X6       ARM REST, left, r/q         1347711X6       ARM REST, left, r/q         1350675       CLIP, to panel          SCREW, front upper, hold of         2118B—Door & R/Q Inside Tr         18-20       1347556         1347640       MOULDING, lower, front door         18-26       1347641         MOULDING, upper, right front         18-40       1347625         MOULDING, r/q—pleated trim of         19–DOOR SILL FINISHING PLATES (Plate 21-23)         19-1       1351136			
18-8       1347711X5       ARM REST, left, r/q         1347710X6       ARM REST, right, r/q         18-8       1347711X6       ARM REST, left, r/q         1350675       CLIP, to panel       1350675          SCREW, front upper, hold of         2118B—Door & R/Q Inside Tr         18-20       1347556         MOULDING, lower, front door         1347640       MOULDING, upper, right front         18-26       1347641       MOULDING, upper, left front d         18-40       1347625       MOULDING, r/q—pleated trim of         19–DOOR SILL FINISHING PLATES (Plate 21-23)       19-1         19-1       1351136       PLATE, right, door sill	Elk	All	
1347710X6       ARM REST, right, r/q         18-8       1347711X6       ARM REST, left, r/q         1350675       CLIP, to panel          SCREW, front upper, hold of         2118B—Door & R/Q Inside Tr         18-20       1347556         1347640       MOULDING, lower, front door         18-26       1347641         18-26       1347642         18-40       1347625         MOULDING, upper, right front         18-26       1347641         MOULDING, upper, left front do         18-40       1347625         MOULDING, upper, left front d         18-40       1347625         MOULDING, upper, left front d         18-40       1347625         MOULDING, upper, left front d         18-40       1347625         MOULDING, r/q—pleated trim o         19–DOOR SILL FINISHING PLATES (Plate 21-23)         19-1       1351136			
18-8       1347711X6       ARM REST, left, r/q         1350675       CLIP, to panel          SCREW, front upper, hold of <b>2118B—Door &amp; R/Q Inside Tr</b> 18-20       1347556         1347640       MOULDING, lower, front door .         1347640       MOULDING, upper, right front         18-26       1347641         18-40       1347625         MOULDING, upper, left front d         18-40       1347625         MOULDING, r/q—pleated trim of         19-DOOR SILL FINISHING PLATES (Plate 21-23)         19-1       1351136			
1350675 CLIP, to panel SCREW, front upper, hold of2118B—Door & R/Q Inside Tr2118B—Door & R/Q Inside Tr18-201347556 1347640 MOULDING, lower, front door . 1347640 MOULDING, upper, right front18-261347641 MOULDING, upper, left front do MOULDING, upper, left front d MOULDING, r/q—pleated trim of 19—DOOR SILL FINISHING PLATES (Plate 21-23)19-11351136PLATE, right, door sill			
SCREW, front upper, hold of 2118B-Door & R/Q Inside Tr 18-20 1347556 MOULDING, lower, front door . 1347640 MOULDING, upper, right front 18-26 1347641 MOULDING, upper, left front de 18-40 1347625 MOULDING, r/q-pleated trim of 19-DOOR SILL FINISHING PLATES (Plate 21-23) 19-1 1351136 PLATE, right, door sill			
2118B—Door & R/Q Inside Tr18-201347556MOULDING, lower, front door .1347640MOULDING, upper, right front18-261347641MOULDING, upper, left front do18-401347625MOULDING, r/q—pleated trim do19—DOOR SILL FINISHING PLATES (Plate 21-23)19-11351136PLATE, right, door sill	down No. 6 - 18 x 1/2"	All	
18-201347556MOULDING, lower, front door1347640MOULDING, upper, right front18-261347641MOULDING, upper, left front do18-401347625MOULDING, r/q—pleated trim do19-DOOR SILL FINISHING PLATES (Plate 21-23)19-11351136PLATE, right, door sill			
1347640 MOULDING, upper, right front 18-26 1347641 MOULDING, upper, left front d 18-40 1347625 MOULDING, r/q—pleated trim o <b>19—DOOR SILL FINISHING PLATES (Plate 21-23)</b> 19-1 1351136 PLATE, right, door sill	<b>v</b>		
<ul> <li>18-26 1347641 MOULDING, upper, left front de 18-40 1347625 MOULDING, r/q—pleated trim de 19-DOOR SILL FINISHING PLATES (Plate 21-23)</li> <li>19-1 1351136 PLATE, right, door sill</li> </ul>		All	
<ul> <li>18-40 1347625 MOULDING, r/q—pleated trim of</li> <li>19—DOOR SILL FINISHING PLATES (Plate 21-23)</li> <li>19-1 1351136 PLATE, right, door sill</li> </ul>	door—pleated trim only	All	• •
19—DOOR SILL FINISHING PLATES (Plate 21-23) 19-1 1351136 PLATE, right, door sill			
19-1 1351136 PLATE, right, door sill		АП	
		All	
1351137 PLATE, left, door sill			
1526X58 SCREW, to sill No. $8 - 15 \times 3/4$	4″)	All	.   2
1358844 PAD, right, door sill (rubber)		All	
1358845 PAD, left, door sill (rubber)		All	:
1358840 MOULDING, inner, door sill pac	a	All	. :
1358841 MOULDING, outer, door sill pac	d b	All	
1358842 MOULDING, front, door sill pac		All	
1358843MOULDING, rear, door sill pad1526X58SCREW, outer mldg. No. 6 - 1			
2048X20 SCREW, butter mildg. No. 8 - 1		All	
, 0			
	3″	All	1
	· · · · · · · · · · · · · · · · · · ·	An	

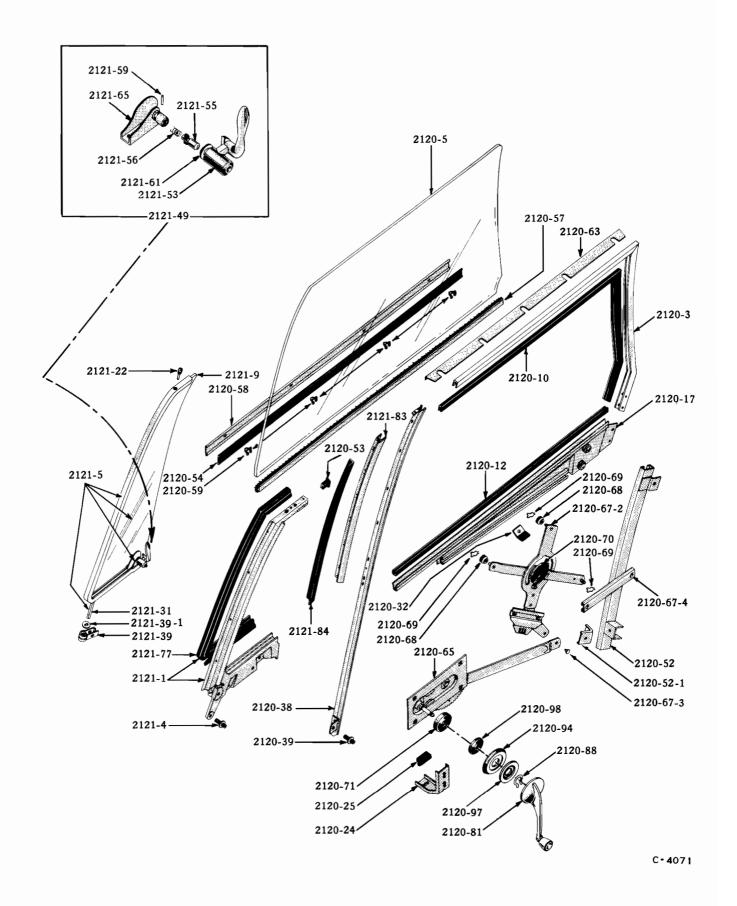

#### **RIGHT FRONT DOOR WINDOW AND REGULATOR MECHANISM**

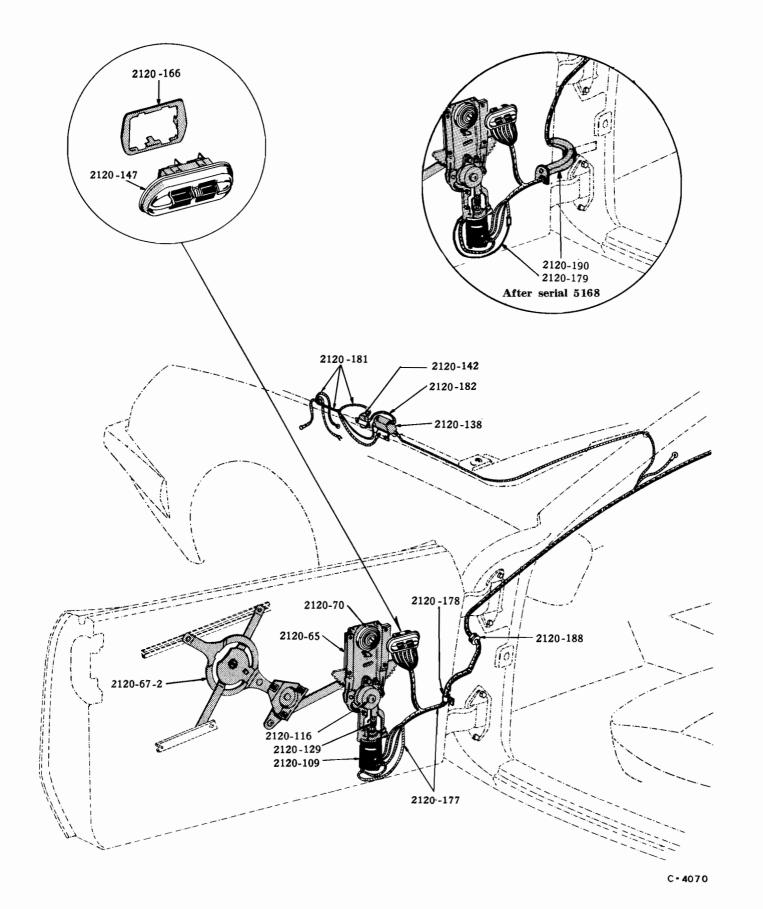

ELECTRIC WINDOW LIFT MECHANISM

REG 1 1 1 2120-3 1 2120-5 1 2120-5 1	ULATORS 1350720 1350721 1350722 1350723 1350728 1350728 1350724 1350724 1350724 1350725 1350726 1350727 1479X52	DWS, CHANNELS, RUNS, WEATHERSEALS, AND HANDLES (Plates 21-12, 13)         2120A-Door Windows         WINDOW w/FRAME, right door         WINDOW w/FRAME, left door         WINDOW w/FRAME, right door (colored glass)         WINDOW w/FRAME, left door (colored glass)         WINDOW w/FRAME, left door (colored glass)         FRAME, upper and rear, right door window glass         FRAME, upper and rear, left door window glass         SCREW & WASHER, to lift channel No. 8 - 32 x 1/4"         GLASS, right front door window         GLASS, right front door (colored)         GLASS, left front door (colored)	All All All All All All All All All		. 1 . 1 . 1 . 1 . 1 . 4
1 1 2120-3 1 1 2120-5 1 2120-5 1	350721         350722         350723         350728         350729            1350724         1350725         1350726         1350727         1479X52	<ul> <li>WINDOW w/FRAME, right door</li> <li>WINDOW w/FRAME, left door</li> <li>WINDOW w/FRAME, right door (colored glass)</li> <li>WINDOW w/FRAME, left door (colored glass)</li> <li>FRAME, upper and rear, right door window glass</li> <li>FRAME, upper and rear, left door window glass</li> <li>SCREW &amp; WASHER, to lift channel No. 8 - 32 x 1/4"</li> <li>GLASS, right front door window</li> <li>GLASS, left front door window</li> <li>GLASS, right front door (colored)</li> </ul>	All All All All All All All All All		. 1 . 1 . 1 . 1 . 1
1 1 2120-3 1 1 2120-5 1 2120-5 1	350721         350722         350723         350728         350729            1350724         1350725         1350726         1350727         1479X52	<ul> <li>WINDOW w/FRAME, left door</li></ul>	All All All All All All All All All		. 1 . 1 . 1 . 1 . 1
1 	350729  1350724 1350725 1350726 1350727 1479X52	<ul> <li>FRAME, upper and rear, left door window glass</li> <li>SCREW &amp; WASHER, to lift channel No. 8 - 32 x 1/4"</li> <li>GLASS, right front door window</li> <li>GLASS, left front door window</li> <li>GLASS, right front door (colored)</li> </ul>	All All All All All All		. 1 . 4
1 2120-5 1	1350725 1350726 1350727 1479X52	GLASS, left front door window	All All		1
-	479X52		[ A ]]		. 1 . 1
	L479X50	CUSHION, upper and rear, door window CUSHION, lower, door window	All		. 1
		2120B—Door Window Lift and Division Channels			
	1350734 1350735	CHANNEL, right front door glass lift CHANNEL, left front door glass lift			
2120-24 1 1 0 0	1350931 1350931 1296X626 G120375 G121753 3142X2	BRACKET, window stop (down position) (Manual) BRACKET, window stop (down position) (Electric) BOLT, to inner panel 1/4" - 20 x 9/16" NUT, hex. 1/4" - 20 WASHER, lock 1/4" WASHER, pyramidal 1/4"	All All All All		. 4 . * . *
	1343114 1343114	BUMPER, stop bracket—rubber (Manual) BUMPER, stop bracket —rubber (Electric)			
22	1350933 278950 G271184	BRACKET, window stop (up position) BOLT, to inner panel NUT & WASHER, hex. 5/16" - 18 WASHER, plain 5/16"	All All		. 2 2
		2120C—Door Window Runs and Guides			Ĺ
1 1 2120-39	1350572 1350573 1328497W 1328498 1350482 G120369 3142X3	RUN, front, right front door window RUN, front, left front door window RIVET, lower to frame 5/16" x 19/32" RIVET, lower to frame 1/4" x 5/16" BOLT, mounting adjusting NUT, jam WASHER, pyramidal 3/8"	All All All All All	· · · · · · · · · · · · · · · · · · ·	. 1 . 2 . 4 . 2 . 2
1 1 8	1350486 1350487 1296X626 3142X2 1908X2	GUIDE, rear, right front door window GUIDE, rear, left front door window SCREW, to inner panel 1/4" - 20 x 9/16" WASHER, pyramidal 1/4" WASHER, sealer	All All All		. 1 . 4 . 4
1	1350628 1296X626 3142X2	BRACKET, lower, guide SCREW, to inner panel 1/4" - 20 x 9/16" WASHER, pyramidal 1/4" -	All		. 2
	1328454 1328499	STOP, front door window RIVET, to frame	All All		. 2

\*—Use as required

2120


ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE
		OWS, CHANNELS, RUNS, WEATHERSEALS, S AND HANDLES—Cont'd. (Plates 21-12, 13)		
		2120D—Door Window Weatherseals		
120-54 120-57 120-57	$1350963 \\1347574 \\1347575 \\1347840 \\1347841$	WEATHERSEAL, outer, front door window WEATHERSEAL, inner, right front door window WEATHERSEAL, inner, left front door window WEATHERSEAL, inner, right front door window WEATHERSEAL, inner, left front door window WEATHERSEAL, inner, left front door window	9 All	
120-58 120-59	1350964 1350930	RETAINER, outer weatherseal	. All	
120-63	1351036 1351037	MOULDING, right, upper door open. weatherstrip) before seria MOULDING, left, upper door open. weatherstrip) 4420 SCREW, to roof No. 8 - 15 x 5/8"	1 A11	
		MOULDING, side drip moulding (see group 2105) (after serial 4420	) All	
		2120E—Door Window Regulators		
20-65 20-65	1350844 1350845 1357722	REGULATOR, right front door window} REGULATOR, left front door window} REGULATOR, right front door window (before serial 5507	. An	·
20-65	1357723 1355292	REGULATOR, left front door window (before serial 5507 REGULATOR, right front door window)	. All	
	1355293 G273564 3142X2 1908X2	(after serial 5507) REGULATOR, left front door window (after serial 5507) SCREW, to door 1/4" - 20 x 3/4" WASHER, pyramidal 1/4" WASHER, sealer	. All	•
20-67.2 60-67-2	$1350832 \\ 1350833 \\ 1357718$	IDLER w/ARMS and BRACKET, right regulator-		.]
20-67-3	1357719 G181561 3142X2 1908X1 1327437	ibblit w/iiwito and buitofibit, fort regulator-	. All	
20-67-4 20-69	1350834 1350838 1296X626 3142X2 1908X2	TRACK, regulator idler arm	. All	
20-68 20-69	$\frac{1350837}{1350838}$	ROLLER, regulator to lift channel guide		
20-70 20-70	$309470\ 1351269$	SPRING, regulator idler balance (Manual)		
120-71	1330056	SEAL, window regulator to inner panel (Manual)	. All	

ILLUST. NUMBER	PART NUMBER	DESCRIPTION	MODELS	P
		OWS, CHANNELS, RUNS, WEATHERSEALS, 5 AND HANDLES—Cont'd. (Plates 21-12, 13)		
		2120F—Door Window Regulator Handles		
120-81 120-88	1312643X 1312646	HANDLE, door window regulator		
120-94	1319242	ESCUTCHEON, regulator handle	All	
120-97	1312647	SEPARATOR, regulator handle	All	
120-98	306018	SPACER, door window regulator (Manual)	All	
		2120G—Electric Window Lift Motor, Wiring and Controls (Plate 21-13)		
2120-109	1351263	MOTOR, window lift SCREW, to drive No. 10 - 32 x 3/4" WASHER, lock No. 10	All	
2120-116	1351258 1351259  G120375  G120392	DRIVE, right front door window regulator) incl. housing DRIVE, left front door window regulator) & gears SCREW, to regulator 1/4" - 20 x 1-1/8" SCREW, to regulator 1/4" - 20 x 7/8" SCREW, to regulator 1/4" - 20 x 5/8" NUT, hex. 1/4" - 20 WASHER, lock 1/4" WASHER, plain 9/32"	All           All           All           All           All           All           All           All           All           All           All           All           All           All           All           All	· · · · · · · · · · · ·
2120-129	1351268	COUPLING, motor to drive	All	
2120-138	1312029 G132900	RELAY, window lift motor SCREW, mounting No. 14 - 10 x 1/2" SCREW, terminal No. 10 - 32 x 3/8" WASHER, lock, No. 10	All	 
2120-142	1314144  G120614	CIRCUIT BREAKER, window lift SCREW, mounting No. 14 - 10 x 1/2" NUT, hex. terminal No. 10 - 32 WASHER, lock, No. 10	All	
2120-147	$\frac{1351273}{1351272}$	SWITCH, right front door (1—button) SWITCH, left front door (2—button)		
2120-166	$1351275 \\ 1351274$	PLATE, right front door switch mounting (1—button) PLATE, left front door switch mounting (2—button)		
2120-177 2120-177	$1351276 \\ 1351377$	HARNESS, front door window lift wiring (before serial 5353) HARNESS, front door window lift wiring (after serial 5353)		
2120-178	181814	CABLE, regulator motor ground (after serial 5353)		
2120-179	1351378	SCREW, clip No. 10 - 12 x 5/8"		
2120-181	1351277	HARNESS, relay to voltage regulator and ground	All	
2120-182	1351348	CABLE, circuit breaker to relay	All	
2120-188	131026	GROMMET, hinge pillar window reg. control cable (before serial	1 5168) All	
2120-190	1360586 1360587 G456794 G121752	SHIELD, right door motor cable (after serial 5168) SHIELD, left door motor cable (after serial 5168) SCREW, fastening No. 8 - 15 x 1/2" WASHER, lock No. 8	All	 

2121

## BODY

ILLUST. NUMBER	PART NUMBER		DESCRIPTION	MODELS	PER CAR
 2121_DO		W VENTILATORS (Plates 2)	1-12, 13)		
2121-1	1350584 1350585 1296X253 G121753 1296X627 3142X6	FRAME, left front door ve SCREW, to belt reinf. 1/ WASHER, lock 1/4" SCREW, mounting 3/8" - 3	vent. outer	All All All All	1 2 2 4
2121-4	1350482 G120369 3142X6	BOLT, mounting adjusting NUT, -jam 3/8"	g /8"	All	22
2121-5 2121-5	1350586 1350587 1350588 1350589	VENTILATOR, left front d VENTILATOR, right front	door window oor window door window (colored glass) oor window (colored glass)	All	1
2121-9 2121-9	1350560 1350561 1350562 1350563	GLASS, left front door ven GLASS, right front door ve	ent.  ent. (colored glass) nt. (colored glass)	All	1 1
	1479X57	CUSHION, front door vent.	glass	All	2
2121-22	1350483	SCREW, upper, vent. pivot		All	2
2121-31	1350558 1350559	PIVOT, lower, left front do	door vent. oor vent. ead) 9/64" x 5/16"	All	1
2121-39 2121-39-1	295796 G271166 304374	BOLT, spring No. 10-24 NUT, hex. No. 10-24.	por vent. lower pivot tension	All	22
2121-49	$1350580 \\ 1350581$		ght front door vent ft front door vent		
2121-53 2121-55 2121-56 2121-59 2121-61	1328478W 1328479W 1328480 1328481 1355038 1463X12	HANDLE, left front door v PLUNGER, vent. handle SPRING, plunger PIN, to shaft	vent	All All All All	1 2 2 2
2121-65	1350568 1350569	SHAFT & BRACKET, left	t front door vent. handle front door vent. handle	All	1
2121-77	$1350564 \\ 1350565$		ont door vent		
2121-83	1350576	CHANNEL, front door ven	t. division	All	2
2121-84	1350577		oor vent. division channel el 3/32″ x 1/8″		

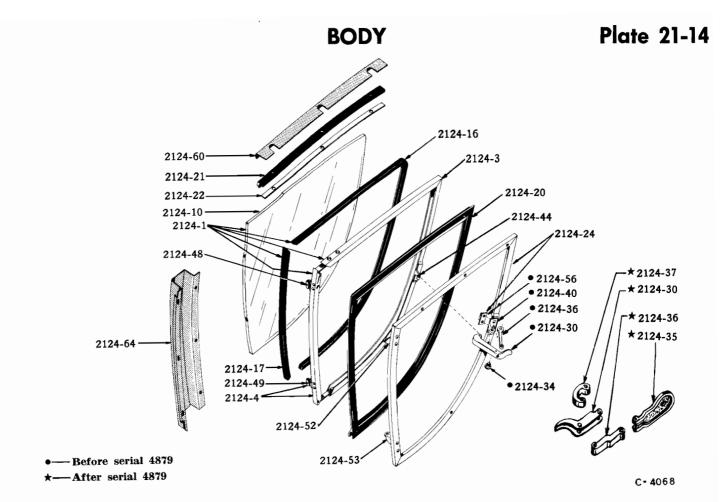

#### TYPICAL RIGHT REAR QUARTER WINDOW

ILLUST. NUMBER		DESCRIPTION	MODELS	PEI
		R WINDOWS, CHANNELS, RUNS, WEATHERSEALS, AND MOULDINGS (Plate 21-14)		
2124-1	$\frac{1350694}{1350695}$	FRAME w/GLASS, right window	All	· I
2124-1 2124-1	$1350696 \\ 1350697 \\ 1358930$	FRAME w/GLASS, left window (colored)	All	
2124-1	$\frac{1358931}{1358932}$	FRAME w/GLASS, right window       after serial 4879         FRAME w/GLASS, right window (colored)       after serial 4879	All            All            All	
2124-3	1358933 1350712	FRAME w/GLASS, left window (colored)) FRAME, top & rear, right window) FRAME, top & rear, left window	All	
214-3	$\begin{array}{c} 1350713 \\ 1358960 \\ 1358961 \end{array}$	FRAME, top & rear, right window)	All           All           All           All	]
2124-4	1350710 1350711	FRAME, front right window         FRAME, front left window         SCREW, fastening No. 8-32 x 1/4"	All	·
2124-10	$1350700 \\ 1350701$	GLASS, left window	All	
2124-10	$1350702 \\ 1350703$	GLASS, right window(colored) GLASS, left window (colored)	All	
2124-16 2124-17 *Used_a	1479X53 1479X54 as required.	CUSHION, top & rear, window glass CUSHION, front, window glass		

			<u></u>
		R WINDOWS, CHANNELS, RUNS, WEATHERSEALS, AND MOULDINGS—Cont'd. (Plate 21-14)	
2124-20	1350692 1350693	WEATHERSTRIP, right window} before serial 4879	All 1 All 1
2124-20	$1358964 \\ 1358965$	WEATHERSTRIP, right window	All 1 All 1
2124-21	3202X2	WEATHERSTRIP, top drip moulding	All 2
2124-22	1350538	INSERT, top drip moulding weatherstrip	All 2
2124-24 2124-24	$\begin{array}{r} 1350950 \\ 1350951 \\ 1358936 \end{array}$	RETAINER, right window w/strip       before serial 4879         RETAINER, left window w/strip       before serial 4879         RETAINER, right window w/strip       after serial 4879	All       1         All       1         All       1         All       1
	1358937	SCREW, front, fastening No. 8 - 15 x 3/4"	All 6
		SCREW, upper rear, fastening No. 8-18x1/2" SPEED NUT, No. 8	AII
2124-30	1350460W 1350461W	HANDLE left latch	All 1 All 1
2124-34	1350463W	SCREW, shoulder to link	All         2           All         2
	1463X39 G454666	WASHER, wave 1/8"	All 4 All
2124-30	1358946W		All 1
	1358947W G9413436	PIN, to links 5/32" x 1/2" after serial 4879	All 1 All 4
2124-35	1463X40 1358944		All 4 All 1
	1358945 G454573	ESCUTCHEON, left latch handle PIN, to link 5/32" x 7/8"	All 1 All 2
	1463X40	SCREW, to body No. 8 - 18 x 1"	All         2           All         4           All         2
2124-36 2124-36	1350462W 1358943W	LINK, latch handle (before serial 4879) LINK, latch handle (after serial 4879)	All 2
2124-37	1358942W G454573 1463X40	PIN, to latch bracket 5/32" x 7/8" . after serial 4879	All       2         All       2         All       4
2124-40		BRACKET, right, latch handle link	All       1         All       4         All       2
2124-44 2124-44	$1350466 \\ 1358941$	BRACKET, latch handle BRACKET, latch handle (after serial 4879) RIVET, to frame 9/64" x 1/4"	All 1
2124-48	$\frac{1351066}{1351067}$	HINGE, upper, right window (window half) HINGE, upper, left window (window half)	
2124-49	1351067 1351066	HINGE, lower, right window (window half)         HINGE, lower, left window (window half)         RIVET, to front channel 9/64" x 1/4"	All         1           All         1           All         1
2124-52	1351068 1351069	HINGE, upper, right window (retainer half) HINGE, upper, left window (retainer half)	
2124-53	1351069 1351069 1351068	HINGE, lower, right window (retainer half)         HINGE, lower, left window (retainer half)         RIVET, to front channel 9/64" x 1/4"	All         1           All         1           All         5
2124-56	1350975 76X31	STOP, window w/strip retainer glass) RIVET, link & stop 9/64" x 9/32") before serial 4879	All
* Tico	as required.		

DESCRIPTION

Copyright 1963 Studebaker Corporation Printed in U.S.A.


PER CAR

MODELS

ILLUST. NUMBER CHANGE

PART NUMBER


ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PER
2124RE/ RI	AR QUAR	TER WINDOWS, CHANNELS, RUNS, WEATHERSEALS, S AND MOULDINGS—Cont'd. (Plate 21-14)		
2124-60	1350667	MOULDING, r/q window top drip (before serial 4420) SCREW, to body No. 8-15 x 1/2"	. All	. 2 . 6
		MOULDING, r/q window drip (see group 2105) (after serial 4420).	All	. 2
2124-64	1350880 1350881	MOULDING, upper, right lock pillar MOULDING, upper, left lock pillar SCREW, to pillar No. 8-32 x 3/8"	. All	. 1

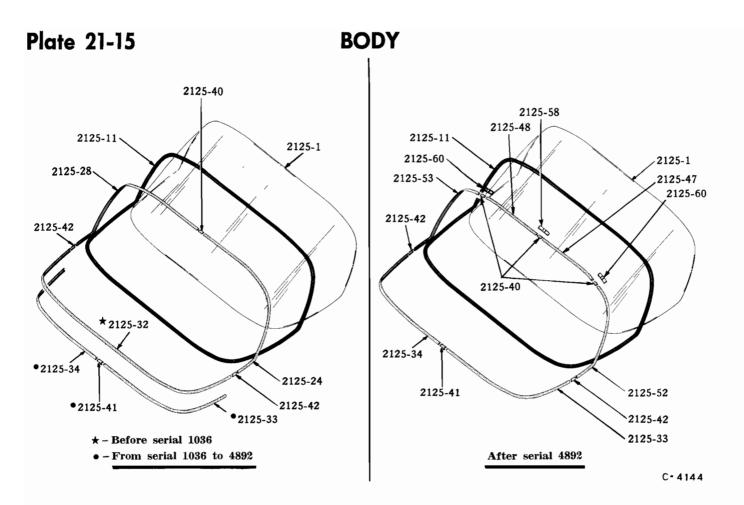

#### TYPICAL BACK WINDOW AND MOULDINGS

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PER CAR
2125—BA		OW, GARNISH MOULDINGS, ETC. (Plate 21-15)		
2125 - 1	1350105	GLASS, window (colored)	All	. 1
2125-1	1350749	GLASS, window (colored w/sunshade band)	All	. 1
2125-11	3260X2	WEATHERSTRIP, window	All	. 1
2125-24	1350616	MOULDING, right, upper and side reveal (before serial 4892)	All	1
2125-28	1350617	MOULDING, left, upper and side reveal (before serial 4892)		
2125-32	1350618	MOULDING, lower reveal—Note 1		
2125-33	1350470	MOULDING, right, lower reveal-Note 2		
2125-34	1350471	MOULDING, left, lower reveal-Note 2		
2125-40	1350615	CLIP, upper, reveal moulding-Note 1		
2125-42	1350615	CLIP, side, reveal moulding-Note 1	All	. 2
2125-40	1350472	CLIP, upper, reveal moulding-Note 2	All	. 1
2125-41	1350473	CLIP, lower, reveal moulding-Note 2	All	. 1
2125-42	1350473	CLIP, side, reveal mouldingNote 2	All	. 2
	1351333	PLATE, reinforcement (before serial 4892)		
		SCREW, to plate No. 8 - 32 x 1-1/4"		
2125.47	1360810	MOULDING, right, upper reveal)	All	1
2125-48	1360811	MOULDING, left, upper reveal MOULDING, left, upper reveal after serial 4892	All	. 1
2125-52	1360812			
2125.53	1360813	MOULDING, left, side reveal	All	. 1
2125-40	1350472	CLIP, upper, reveal moulding	All	. 3
2125-58	1358701	PLATE, center, reinforcement		
2125-60	1358702	PLATE, side, reinforcement		
	G271421	SCREW, clip No. 8 - 32 x 1-1/4"		
	G120622	NUT, hex. No. 8 - 32	All	. 3

Note 1—One piece lower reveal moulding used before car serial 63R-1036. Note 2—Two piece lower reveal moulding used after car serial in Note 1.

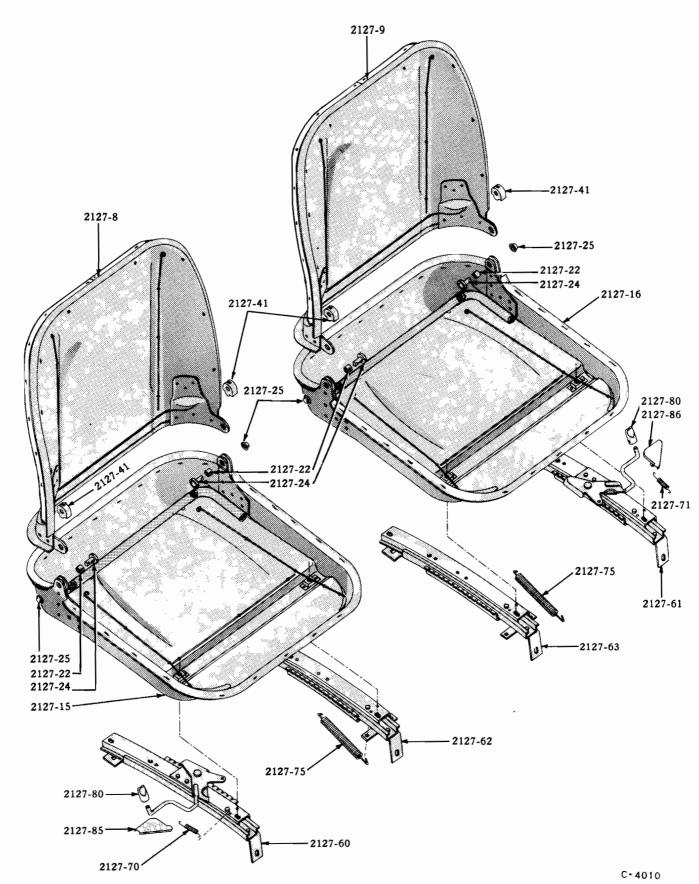


#### FRONT SEAT AND ADJUSTING MECHANISM

PAGE NO. 201

2127


ILLUST. NUMBER		DESCRIPTION	MODELS	PER
2127—SEA	ATS AND SE	EAT BELTS (Plate 21-16)		
		Seats complete, seat cushions and seat backs must be ordered by description. To assure correct trim, car serial, body symbol and number must be furnished.		
2127-8, 9 2127-8, 9	$\frac{1347450}{1347925}$	FRAME, seat back (before serial 5361) FRAME, seat back (after serial 5361)		
127.15,16 127.15,16		FRAME, seat bottom (less track) (before serial 5361) FRAME, seat bottom (after serial 5361)		
127-22	1347429	SLEEVE, bottom to back pivot	All	. 4
2127-24 2127-25	1347428 3106X2W	BOLT, bottom to back pivot PUSH NUT 3/8"		
		Color		
$127-41 \\ 1$	1347409X1 1347409X2 1347409X3 1347409X4 1347409X5 1347409X5	COVER, hinge       Black         COVER, hinge       Turquoise         COVER, hinge       Orange         COVER, hinge       Elk         COVER, hinge       Red         COVER, hinge       Maroon	All	. 4 . 4 . 4
2127-60 2127-61 2127-62,63	1347402 1347403 1347400 G132325 G132349 1905X15 1950X2 G138485 41X204	<ul> <li>TRACK COMPLETE, right seat adj. (outer)</li> <li>TRACK COMPLETE, left seat adj. (outer)</li> <li>TRACK COMPLETE, seat adj. (inner)</li> <li>BOLT, frt., track to seat frame 5/16" - 18 x 3/4"</li> <li>BOLT, rear, track to seat frame 5/16" - 18 x 1-1/2"</li> <li>BOLT, frt., track to floor pan 5/16" - 18 x 3/4"</li> <li>BOLT, rear, track to floor pan 5/16" - 18 x 1-1/8"</li> <li>WASHER, lock, track to frame 5/16"</li> </ul>	All All All All All All All All	. 1 . 2 . 4 . 4 . 4 . 4
2127-70, 71	1347427	SPRING, seat adj. track lock	All	. 2
127-75	1347426	SPRING, seat pullback	All	. 2
127-80	1350219 G147448	KNOB, seat adj. track lever SCREW, knob to adj. lever 1/16" x 1/2"	All	. 2
127-85 127-86	$\frac{1347452}{1347453}$	COVER, right, seat adj. track handle COVER, left, seat adj. track handle	All	
	AC-3242 AC-3285 AC-3286 AC-3287 AC-3288 AC-3289 AC-3289 AC-3400	FRONT AND REAR SEAT BELT KIT       Gray         FRONT AND REAR SEAT BELT KIT       Blue         FRONT AND REAR SEAT BELT KIT       Brown         FRONT AND REAR SEAT BELT KIT       Turquoise         FRONT AND REAR SEAT BELT KIT       Red         FRONT AND REAR SEAT BELT KIT       Red         FRONT AND REAR SEAT BELT KIT       Black         FRONT AND REAR SEAT BELT KIT       Black         FRONT AND REAR SEAT BELT KIT       Maroon	All         All         All         All         All         All         All	. 4 . 4 . 4 . 4

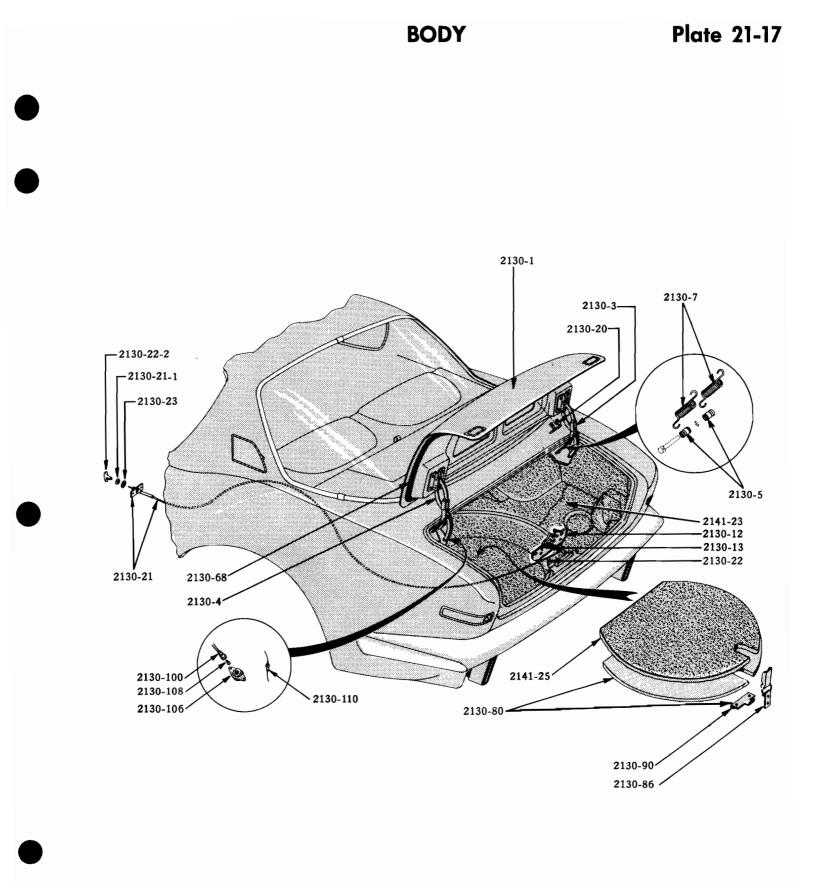

C-4065


#### REAR COMPARTMENT OR TRUNK AND LID

ILLUST. NUMBER		DESCRIPTION	MODELS	C
130_TPI		CK LID (Plate 21-17)		
30.1	1350071	LID, trunk or deck	All	
.30-3				
30-3 30-4	$1350790 \\ 1350791$	HINGE less SPRING, right, lid		
	1905X9	SCREW, to lid 1/4" - 20 x 3/4"		
	G120376	NUT, to body 5/16" - 18	All	
	G120214	WASHER, plain 11/32"	All	- 1 -
	2056X17	BOLT, to gusset spring $5/16'' - 18 \ge 2-7/8''$	All	
	G120376	NUT, to gusset bolt 5/16" - 18	All	
	3075X2	WASHER, sleeve lock 5/16"	All	
30-5	$G120214 \\ 262993$	WASHER, lock 5/16"	All	
30-7	1350800	SPRING, hinge		
30-12	1350810	LATCH, lid inside		
	G120375	BOLT, fastening 1/4" - 20 x 1"		
	G120375	WASHER, lock 1/4"		
30-13	1350819	SPRING, latch pawl		
30-20	1350818 1905X9	STRIKER, lid latch		
30-21	1351014	CONTROL, lid latch (incl. conduit & wire)		
30-21-1 30-22	$1547624 \\537674$	NUT, fastening		
50-22	1903X3	CLIP, control conduit to latch		
		SCREW, to floor pan No. 10 - 12 x 5/8"	All	
		SCREW, to floor pan No. $14 - 10 \times 3/4''$		
		SCREW, to lock pillar extension No. 8-15 x 1/2"		
30-22-1	1558038	PAD, anti-rattle—rubber (illust. Plate 03-1)		
30-22-1				
	1351088	GROMMET, control wire	All	
30-22-2	1351170X1	HANDLE, control wire		
	3324X1	SCREW, set No. 8 - 32	All	
30-23	1351015	ESCUTCHEON, control handle	All	
30-68	3177X3	WEATHERSTRIP, lid opening—rubber		
			-	1
30-80	1350762	COVER, spare wheel	2	·
30-86	1350753	LATCH, spare wheel cover		
		SCREW, to floor pan 1/4" - 20 x 1/2"		·
	1050550			
30-90	$1350758\\ G455683$	CATCH, latch	All	- I
			]	
	1351156WG441251	NAME PLATE, deck lid "Studebaker"		
	1331877	GASKET, sealer		
20 100		SOCKET and CABLES, trunk light		1
30-100	1557774			
30-106	1350476	LENS, trunk light	All	
30-108	G142453	BULB, trunk light Mazda No. 90	All	
.30-110	1350475	SWITCH, trunk light—mercury	All	
00-110	1000410	where the second representation of the second s		1

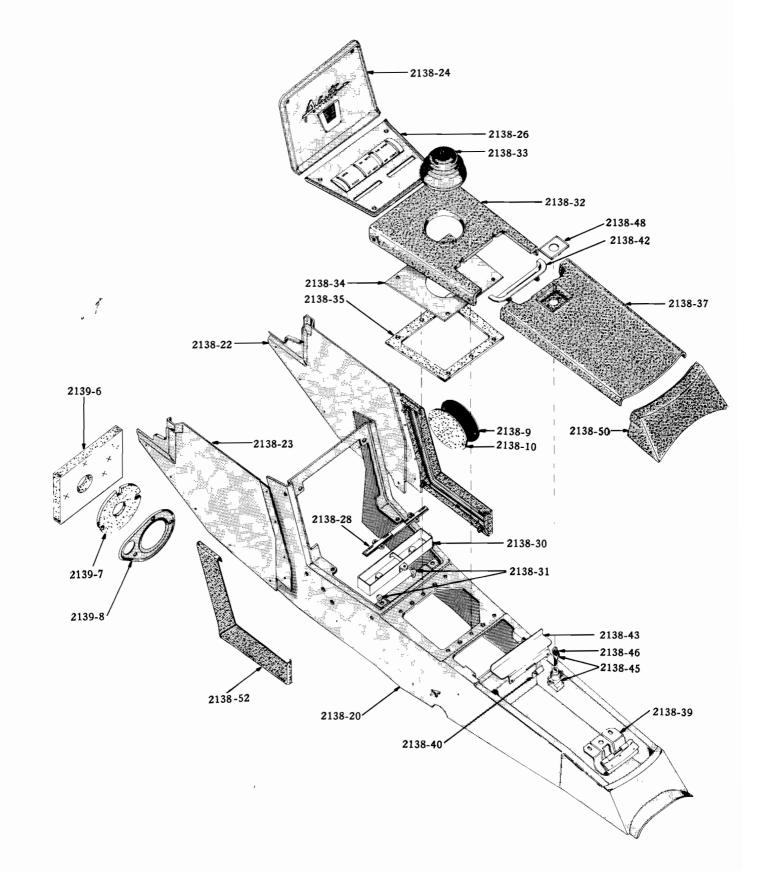

C-4067

### TYPICAL FRONT FLOOR BOARD AND CONSOLE (First Design)

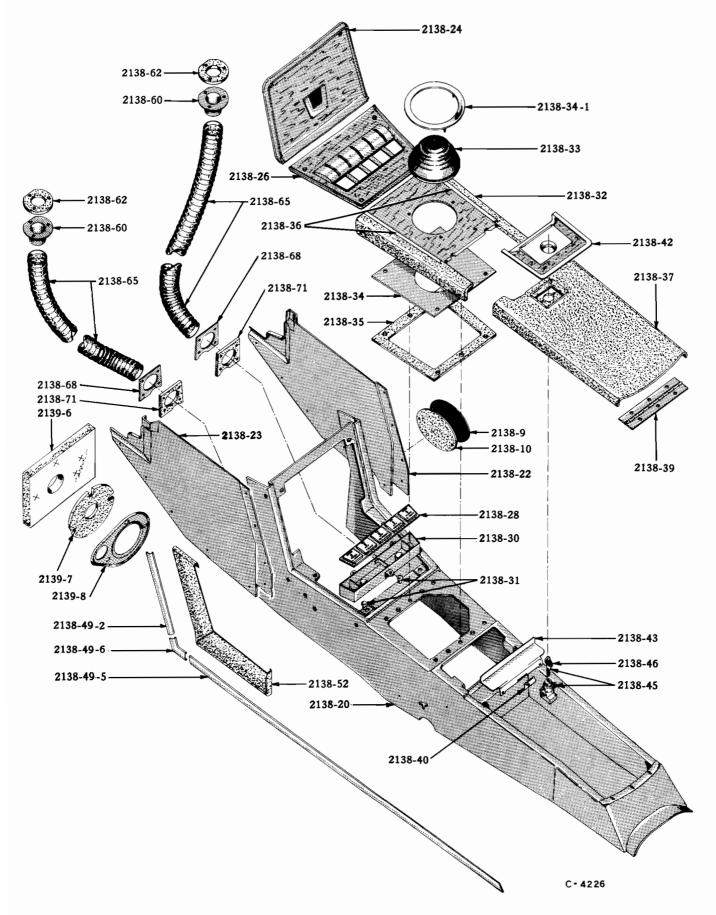

TYPICAL FRONT FLOOR BOARD AND CONSOLE (Second Design)

ILLUST.				
NUMBER		DESCRIPTION	MODELS	PE CA
2120 ED/		BOARD AND CONSOLE (Plates 21-18, 19)		
			A 13	
2138-9	1350128	COVER, automatic trans. access hole		
2138-10	1350932			
	G161895 1578X59	SCREW, to floor pan No. 10 - 12 x 1/2"		
2138-20	1350203	CONSOLE, floor pan (before serial 4849)	. All	. :
2138-20	1358772	CONSOLE, floor pan (after serial 4849)		
2138-22	1350208	PANEL, right, console front side (less A.C.)	. All	
2138-23	1350209	PANEL, left, console front side (less A.C.)	R1	
2138-22 2138-23	$1351238 \\ 1351239$	PANEL, left, console front side (w/A.C.)	R1	
2138-23	1351235 1358974	THILE, ICIC, CONSOLE FIGHT SIDE (W/HOO)	R1, R4	
2138-23	1358975	PANEL, right, console front side (w/A.C.)) PANEL, left, console front side (w/A.C.)) after serial 4892	R1, R4	
		SCREW, to console No. 8 - 15		. 1
2138-24	1351080X1	Cold PLATE, console A.C. hole cover (less A.C.)Faw		
2138-24	1358914X1	PLATE, console A.C. hole cover (less A.C.)		
		PLATE, console A.C. hole cover (w/A.C.)—see group 2102		
		SCREW, upper, to console No. 10 - 24 x 5/8"		
		SCREW, lower, to console No. 8 - 15 x 3/4"		
		SPEED NUT, No. 10	. All	
2138-26	1351085X1	PLATE, console control panelFaw	n All	
2138-26	1358973X1	PLATE, console control panel (w/4 lever slots)Walnu		
2138-26	1360025X1	PLATE, console control panel (w/5 lever slots)Walnu		
		SCREW, to console No. 10 - 24 x 5/8"		
2138-28	1351049	NAME PLATE, control illumination (before serial 4878)	All	
	1651X4	CLIP, push on		
2138-28	1358765	NAME PLATE, control illumination (after serial 4878)		1
2138-30	1351093	SHIELD, console control light (before serial 4878)	All	•••
2138-30	1358915	SHIELD, console control light (after serial 4878) SCREW, fastening No. 8 - 18 x 3/8"		
0100.01	G273445			
2138-31	1557883	BULB, console control light		••
0100.00	1347654X1	Col		
2138-32 2138-32	1347654X1 1347654X2	PLATE, console trans. mounting	k All	
2138-32	1347654X3	PLATE, console trans, mounting less AD, before		
2138-32	1347654X4	PLATE, console trans. mounting serial 4849		
2138-32	1347654X5	PLATE, console trans. mounting		[
138-32	1347779X1	•PLATE, console trans. mounting Bla	k All	
138.32		•PLATE, console trans. mounting less AD. after Turquoi		
138-32		•PLATE, console trans. mounting		
138-32		•PLATE, console trans. mounting		· · ]
2138-32 2138-32	1347779X5 1347655X1	•PLATE, console trans. mounting /		· ·
2138-32	1347655X2	PLATE, console trans, mounting Turquoi	1	1
2138-32	1347655X3	PLATE, console trans. mounting with AD, before		
2138-32	1347655X4	PLATE, console trans. mounting serial 4730		
2138-32	1347655 X 5	PLATE, console trans. mounting		
2138-32		•PLATE, console trans. mounting)		
2138.32		•PLATE, console trans. mounting ( with AD. after Turquoi		
	1347877X4	•PLATE, console trans. mounting ( serial 4730 E	k All	
2138-32		DIATE console tunna mounting	4.11	
2138-32 2138-32		•PLATE, console trans. mounting) Maroo SCREW, fastening No. 6 - 18 x 5/8"		· · I

•-Includes walnut grain panel and 1347876 moulding.

ILLUST. NUMBER		DESCRIPTION	MODELS	PER
	ONT FLOOR	BOARD AND CONSOLE—Cont'd. (Plates 21-18, 19)		
2138-33 2138-33	1556146 1560760	BOOT, trans. control (less AD.) (before serial 4849)BOOT, trans. control (less AD.) (after serial 4849)BOOT, trans. control (w/AD.) (see group 0851)	All	. 1
2138-34 2138-34	$1556327 \\ 1556325$	PLATE, trans. control cover (less AD.) (before serial 4849) PLATE, trans. control cover & mtg. (w/AD.) SCREW, fastening No. 12 - 11 x 3/4"	All	. 1
2138-34-1	1559789 3055X2	RETAINER, trans. mtg. plate boot (less AD.) (after serial 4849) NUT, push	All	. :
2138-35	1557275	GASKET, trans. cover plate	All	. :
2138-36	1347876	MOULDING, trans. mtg. plate trim (after serial 4730)	All	. :
2138-37 2138-37 2138-37 2138-37 2138-37 2138-37 2138-37 2138-37 2138-37 2138-37 2138-37	1347734X1 1347734X2 1347734X3 1347734X4 1347734X5 1347825X1 1347825X2 1347825X3 1347825X3 1347825X4 1347825X4	LID, console compartment	All	
2138-39	1350510 G131575 G120217	HINGE, console compartment lid (before serial 4849)         NUT, crown No. 10 - 24         WASHER, lock No. 10         RIVET, to console (split) 9/64" x 1/4"	All	. 1
2138-39	1347771W G162601 G155836 1347772	HINGE, console compartment lid (after serial 4849)         SCREW, to console No. 6 - 20 x 1/2"         SCREW, to lid No. 6 - 32 x 5/16"         SPEED NUT	All	
2138-40	1350514 G161860	KEEPER, console compartment lid         SCREW, to console No. 8 - 15 x 1/2"		
2138-42	1350216W 3045X3	HANDLE, console compartment lid (before serial 4849) SCREW, fastening No. 8-32 x 3/8" WASHER, lock No. 6	All	. 2
2138-42	1360028X1	HANDLE, console compartment lid (after serial 4849)	All	.  1
2138-43	1351297	PLATE, compartment trim SCREW, to console No. 6 - 18 x 1/2"		
	$1350825 \\ 1360830$	KIT, inst. and console compartment lock (before serial 4892) KIT, inst. and console compartment lock (after serial 4892)		
		The above consists of: 2-locks and 2-keys		
2138-45 2138-45	1350826 1360831	LOCK & HOUSING w/LATCH & KEYS, lid ( Not coded to	All	
	G164324		All            All            All	. :
2138-46 2138-46 2138-46 2138-46	1555539 1343378 1360848 1360849	KEY, compartment lock (coded to key No.)       before serial 4892         KEY, compartment lock (coded to key No.)       ster serial 4892         KEY, compartment lock (coded to key No.)       after serial 4892         KEY, compartment lock (blank)       after serial 4892	All	. 1
2138-48	1350217W	ESCUTCHEON, compartment lock (before serial 4849)	All	

ILLUST. NUMBER		DESCRIPTION	MODELS	P C
0129 ED/		BOARD AND CONSOLE—Cont'd. (Plates 21-18, 19)		
2138-FK	1358664		4.11	
190 40 9		MOULDING, right front, console side) MOULDING, left front, console side	All	·
138-49-2	1358665			· · ·
138-49-2	1347822	MOULDING, front, console side (after serial 4730)	All	
	1358698	MOULDING, right rear, console side	All	
138 - 49 - 5	1358699	MOULDING, left rear, console side) before serial 4730	All	
	1347820	MOULDING, right rear, consile side)	All	
138 - 49 - 5	1347821	i atter series $i$ $i$	All	
100-10-0	1350675	CLIP, fastening (before serial 4730)		
		CLIP, fastering (before senar 4750)	AII	·
	1360573	CLIP, fastening (after serial 4730)	All	·
	G441239	NUT, clip (after serial 4730)	All	
138.49.6	1358659	MOULDING, corner, console side (after serial 4730)	All	
		Color		
138-50	$1347584\mathbf{X1}$	PAD, console end crash	All	
138-50	1347584X2	PAD, console end crash		
138-50	1347584X3	PAD, console end crash before serial 4849Orange		
138-50	1347584X4	PAD, console end crash		- 1
138-50	1347584X5	PAD, console end crash	All	
	194751921	DAD wight severals front side twin	4.11	
100 50	1347518X1	PAD, right, console front side trimBlack		- 1
138-52	1347519X1	PAD, left, console front side trimBlack		- 1
	1347518X2	PAD, right, console front side trimTurquoise		
138-52	1347519X2	PAD, left, console front side trimTurquoise	All	
	1347518X3	PAD, right, console front side trim Orange	All	
138-52	1347519X3	PAD, left, console front side trimOrange		
	1347518X4	PAD, right, console front side trimElk		- 1
138-52	1347519X4	PAD, left, console front side trim		
130-02				
	1347518X5	PAD, right, console front side trim		- 1
138-52	1347519X5	PAD, left, console front side trimRed	All	·
138-60	$1358966 \\ 3204 X5$	CONNECTOR, trans. cooling hose (after serial 4892) SCREW, fastening No. 8 - 15 x 5/8"		
138-62	1358967	GASKET, trans. cooling connector (after serial 4872)	All	
2138-65	1358968 3 <b>204X1</b>	HOSE, trans. cooling (after serial 4892)		
2138-68	1358972 3204X5	PLATE, hose to floor pan retainer (after serial 4892) SCREW, fastening No. 8 - 15 x 5/8"	All	
2138-71	1358971	SEAL, trans. cooling hose plate (after serial 4892)		
13910	E BOARD (	DASH) (Plates 21-18, 19)		
139-6 139-6	$\frac{1350434}{1356565}$	GASKET, steer. post collar		- 1
2139-7 139-7	$\frac{1350435}{1356564}$	SEAL, steer. post collar	R1, R2	- 1
139-8	1350438	COLLAR, steer. post (less AD.)	R1, R2	
				- I
139-8	1350439	COLLAR, steer. post (w/AD.)		
139-8	1356562	COLLAR, steer. post (less AD.)	,	I
139-8	1356563	COLLAR, steer. post (w/AD.)		
	1350271	FASTENER, to dash	All	•
			1	

#### 2141

2141.9       1347498X2       CARPET, rear floor (before serial 4314)         2141.9       1347498X3       CARPET, rear floor (before serial 4399)         2141.9       1347498X4       CARPET, rear floor (before serial 4399)         2141.9       1347498X4       CARPET, rear floor (before serial 4399)         2141.9       1347498X5       CARPET, rear floor (before serial 4275)         2141.9       1347833X1       CARPET, rear floor (after serial 4356)         2141.9       1347833X2       CARPET, rear floor (after serial 4314)         2141.9       1347833X3       CARPET, rear floor (after serial 4399)         2141.9       1347833X4       CARPET, rear floor (after serial 4399)         2141.9       1347833X4       CARPET, rear floor (after serial 4399)		<u> </u>	
41-2       1347648X1       CARPET, right, front floor			
41.2       1347648X1       CARPET, right, front floor       before serial 4356         41.3       1347649X1       CARPET, left, front floor       before serial 4356         41.2       1347648X2       CARPET, left, front floor       before serial 4314         1347649X2       CARPET, left, front floor       before serial 4314         41.2       1347648X3       CARPET, left, front floor       before serial 4396         41.2       1347648X3       CARPET, left, front floor       before serial 4396         41.2       1347648X4       CARPET, right, front floor       before serial 4396         41.2       1347648X4       CARPET, right, front floor       before serial 4396         41.2       1347648X5       CARPET, left, front floor       before serial 4276         41.2       1347648X5       CARPET, left, front floor       before serial 4276         41.2       1347602X1       CARPET, right, front floor       after serial 4356         41.2       1347802X2       CARPET, left, front floor       after serial 4314         41.2       1347802X3       CARPET, left, front floor       after serial 4399         41.2       1347803X4       CARPET, right, front floor       after serial 4399         41.2       1347803X5       CARPET, rear floor (before serial 4356) <th>0-1</th> <th></th> <th></th>	0-1		
41.3       1347649X1       CARPET, left, front floor       before serial 4356         41.2       1347648X2       CARPET, right, front floor       before serial 4314         41.2       1347648X3       CARPET, left, front floor       before serial 4314         41.2       1347648X3       CARPET, right, front floor       before serial 4394         41.2       1347648X4       CARPET, right, front floor       before serial 4394         41.2       1347648X4       CARPET, right, front floor       before serial 4394         41.2       1347648X4       CARPET, right, front floor       before serial 4394         41.2       1347648X5       CARPET, right, front floor       before serial 4276         41.2       1347648X5       CARPET, right, front floor       before serial 4276         41.2       1347648X5       CARPET, right, front floor       after serial 4356         41.2       1347802X1       CARPET, right, front floor       after serial 4314         1347803X2       CARPET, right, front floor       after serial 4314         41.2       1347802X2       CARPET, right, front floor       after serial 4314         41.2       1347803X4       CARPET, right, front floor       after serial 4314         41.2       1347803X5       CARPET, right, front floor			
41.3       1347649X1       CARPET, left, front floor       before serial 4356         41.2       1347648X2       CARPET, right, front floor       before serial 4314         41.2       1347648X3       CARPET, left, front floor       before serial 4314         41.2       1347648X3       CARPET, right, front floor       before serial 4394         41.2       1347648X4       CARPET, left, front floor       before serial 4394         41.2       1347648X4       CARPET, right, front floor       before serial 4394         41.2       1347648X4       CARPET, right, front floor       before serial 4394         41.2       1347648X5       CARPET, right, front floor       before serial 4276         41.2       1347648X5       CARPET, right, front floor       before serial 4276         41.2       1347648X5       CARPET, right, front floor       after serial 4356         41.2       1347803X1       CARPET, right, front floor       after serial 4314         1347803X2       CARPET, left, front floor       after serial 4314         41.2       1347802X2       CARPET, right, front floor       after serial 4314         41.2       1347803X4       CARPET, left, front floor       after serial 4314         41.2       1347803X5       CARPET, right, front floor <t< td=""><td>Color Black</td><td>All</td><td></td></t<>	Color Black	All	
41.2       1347648X2       CARPET, right, front floor       before serial 4314         41.2       1347648X3       CARPET, left, front floor       before serial 4314         41.2       1347648X3       CARPET, right, front floor       before serial 4399         41.2       1347648X3       CARPET, right, front floor       before serial 4399         41.2       1347649X3       CARPET, right, front floor       before serial 4399         41.2       1347649X4       CARPET, right, front floor       before serial 4399         41.2       1347649X5       CARPET, right, front floor       before serial 4276         41.2       1347649X5       CARPET, right, front floor       before serial 4276         41.2       1347802X1       CARPET, right, front floor       before serial 4356         41.2       1347803X2       CARPET, right, front floor       after serial 4356         41.2       1347803X3       CARPET, right, front floor       after serial 4399         41.2       1347803X4       CARPET, right, front floor       after serial 4399         41.2       1347803X4       CARPET, right, front floor       after serial 4399         41.2       1347803X5       CARPET, rear floor (before serial 4356)       after serial 4399         41.2       1347803X5       CAR	Black		
1347649X2       CARPET, right, front floor       before serial 4399         141-2       1347649X3       CARPET, left, front floor       before serial 4399         141-2       1347649X3       CARPET, left, front floor       before serial 4399         141-2       1347649X4       CARPET, right, front floor       before serial 4709         1347649X5       CARPET, right, front floor       before serial 4709         141-2       1347649X5       CARPET, right, front floor       before serial 4276         141-2       1347649X5       CARPET, right, front floor       before serial 4276         141-2       1347649X5       CARPET, right, front floor       after serial 4356         141-2       1347802X1       CARPET, right, front floor       after serial 4314         11-2       1347802X2       CARPET, right, front floor       after serial 4314         11-2       1347802X3       CARPET, right, front floor       after serial 4314         11-2       1347802X4       CARPET, right, front floor       after serial 4314         11-2       1347802X5       CARPET, right, front floor       after serial 4314         11-2       1347802X5       CARPET, right, front floor       after serial 4275         11-2       1347803X5       CARPET, rear floor (before serial 4356)       <	Turg. & Black		
1347649X3       CARPET, left, front floor       before serial 4393         41.2       1347648X4       CARPET, right, front floor       before serial 4709         1347649X4       CARPET, left, front floor       before serial 4709         11.2       1347648X5       CARPET, right, front floor       before serial 4709         11.2       1347648X5       CARPET, right, front floor       before serial 4276         11.2       1347649X5       CARPET, left, front floor       before serial 4276         11.2       1347803X1       CARPET, right, front floor       after serial 4356         11.2       1347803X1       CARPET, left, front floor       after serial 4356         11.2       1347803X2       CARPET, right, front floor       after serial 4314         11.2       1347803X2       CARPET, right, front floor       after serial 4399         11.2       1347803X3       CARPET, right, front floor       after serial 4399         11.2       1347803X4       CARPET, right, front floor       after serial 4399         11.2       1347803X4       CARPET, right, front floor       after serial 4399         11.2       1347803X5       CARPET, right, front floor       after serial 4399         11.2       1347803X5       CARPET, right, front floor       after serial 4399 <td>Turq. &amp; Black</td> <td>All</td> <td></td>	Turq. & Black	All	
11:2       1347648X4       CARPET, right, front floor	Orange & Black		
1347649X4       CARPET, left, front floor       before serial 4708         41-2       1347648X5       CARPET, right, front floor       before serial 4275         1347649X5       CARPET, left, front floor       before serial 4275         1347649X5       CARPET, right, front floor       after serial 4356         1347803X1       CARPET, right, front floor       after serial 4356         1347803X2       CARPET, right, front floor       after serial 4314         12       1347803X2       CARPET, right, front floor       after serial 4314         14.2       1347803X2       CARPET, right, front floor       after serial 4314         14.2       1347802X3       CARPET, right, front floor       after serial 4314         14.2       1347802X4       CARPET, right, front floor       after serial 4399         14.2       1347802X4       CARPET, right, front floor       after serial 4399         14.2       1347802X4       CARPET, right, front floor       after serial 4709         14.2       1347803X4       CARPET, right, front floor       after serial 4399         14.2       1347803X5       CARPET, rear floor (before serial 4356)       after serial 4275         14.2       1347498X1       CARPET, rear floor (before serial 4356)       after serial 4275         14.9<	Orange & Black Fawn & Black		
1.2       1347648X5       CARPET, right, front floor	Fawn & Black		
1347649X5       CARPET, left, front floor	Red & Black		
1347803X1       CARPET, left, front floor}       after serial 4356         11-2       1347802X2       CARPET, right, front floor}       after serial 4314         11-2       1347803X2       CARPET, left, front floor}       after serial 4314         11-2       1347802X3       CARPET, right, front floor}       after serial 4314         11-2       1347802X3       CARPET, right, front floor}       after serial 4399         11-2       1347802X4       CARPET, right, front floor}       after serial 4399         11-2       1347802X4       CARPET, right, front floor}       after serial 4709         11-2       1347802X5       CARPET, right, front floor}       after serial 4270         11-2       1347802X5       CARPET, right, front floor}       after serial 4275         11-2       1347803X5       CARPET, rear floor (before serial 4275       after serial 4275         11-2       1347498X1       CARPET, rear floor (before serial 4356)          11-9       1347498X2       CARPET, rear floor (before serial 4314)          11-9       1347498X3       CARPET, rear floor (before serial 4399)          11-9       1347498X4       CARPET, rear floor (before serial 4399)          11-9       134749	Red & Black		
1347803X1       CARPET, left, front floor       after serial 4314         11-2       1347803X2       CARPET, right, front floor       after serial 4314         11-2       1347803X2       CARPET, right, front floor       after serial 4314         11-2       1347803X3       CARPET, right, front floor       after serial 4399         1347803X3       CARPET, left, front floor       after serial 4399         1347803X4       CARPET, right, front floor       after serial 4709         1347803X4       CARPET, left, front floor       after serial 4709         1347803X5       CARPET, right, front floor       after serial 4275         1347803X5       CARPET, right, front floor       after serial 4275         1347803X5       CARPET, rear floor (before serial 4356)       after serial 4275         1347498X1       CARPET, rear floor (before serial 4314)       after serial 4275         14:9       1347498X3       CARPET, rear floor (before serial 4314)       after serial 4275         14:9       1347498X3       CARPET, rear floor (before serial 4356)       after serial 4275         14:9       1347498X3       CARPET, rear floor (before serial 4399)       after serial 4399)         14:9       1347498X4       CARPET, rear floor (before serial 4314)       after serial 4399)       after serial 4399) <td>Black</td> <td>All</td> <td></td>	Black	All	
1347803X2       CARPET, left, front floor}       after serial 4314         1-2       1347802X3       CARPET, right, front floor}       after serial 4399         1-2       1347803X3       CARPET, left, front floor}       after serial 4399         1-2       1347802X4       CARPET, right, front floor}       after serial 4399         1-2       1347802X4       CARPET, right, front floor}       after serial 4709         1-2       1347802X5       CARPET, left, front floor}       after serial 4709         1-2       1347802X5       CARPET, right, front floor}       after serial 4275         1-2       1347803X5       CARPET, left, front floor}       after serial 4275         1-2       1347803X5       CARPET, rear floor (before serial 4356)       after serial 4275         1-9       1347498X1       CARPET, rear floor (before serial 4314)       1.9       1347498X3       CARPET, rear floor (before serial 4314)         1-9       1347498X4       CARPET, rear floor (before serial 4356)       1.9       1347498X5       CARPET, rear floor (before serial 4399)         1-9       1347498X5       CARPET, rear floor (after serial 4356)       1.9       1347498X5       CARPET, rear floor (after serial 4356)         1-9       1347833X2       CARPET,	Black		
1347803X2       CARPET, left, front floor)         12       1347802X3       CARPET, right, front floor)         1347803X3       CARPET, left, front floor)       after serial 4399         1-2       1347803X4       CARPET, left, front floor)       after serial 4709         1-2       1347803X4       CARPET, left, front floor)       after serial 4709         1-2       1347803X4       CARPET, left, front floor)       after serial 4709         1-2       1347803X5       CARPET, right, front floor)       after serial 4275         1-2       1347803X5       CARPET, right, front floor)       after serial 4275         1-2       1347803X5       CARPET, right, front floor)       after serial 4275         1-2       1347803X5       CARPET, rear floor (before serial 4314)       after serial 4275         1-9       1347498X1       CARPET, rear floor (before serial 4314)          1-9       1347498X4       CARPET, rear floor (before serial 4399)          1-9       1347498X5       CARPET, rear floor (before serial 4399)          1-9       1347498X5       CARPET, rear floor (after serial 4356)          1-9       1347833X1       CARPET, rear floor (after serial 4356)	Turq. & Black		
1347803X3       CARPET, left, front floor       after serial 4399         1-2       1347802X4       CARPET, right, front floor       after serial 4709         1347803X4       CARPET, left, front floor       after serial 4709         1-2       1347803X4       CARPET, right, front floor       after serial 4709         1-2       1347803X5       CARPET, right, front floor       after serial 4275         1-2       1347803X5       CARPET, right, front floor       after serial 4275         1-2       1347803X5       CARPET, left, front floor       after serial 4275         1-2       1347803X5       CARPET, rear floor Carpets       after serial 4275 <b>2141B—Rear Floor Carpets</b> 1-9         1347498X1       CARPET, rear floor (before serial 4314)	Turq. & Black		
1-2       1347802X4       CARPET, right, front floor       after serial 4709         1347803X4       CARPET, left, front floor       after serial 4709         1-2       1347802X5       CARPET, right, front floor       after serial 4275         1-2       1347803X5       CARPET, right, front floor       after serial 4275         1-2       1347803X5       CARPET, left, front floor       after serial 4275         1-2       1347803X5       CARPET, left, front floor       after serial 4275         1-3       1347498X1       CARPET, rear floor (before serial 4356)       after serial 4275         1-9       1347498X2       CARPET, rear floor (before serial 4314)       after serial 4275         1-9       1347498X3       CARPET, rear floor (before serial 4399)       after serial 4275         1-9       1347498X4       CARPET, rear floor (before serial 4314)       after serial 4275         1-9       1347833X1       CARPET, rear floor (before serial 4275)       after serial 4275         1-9       1347833X2       CARPET, rear floor (after serial 4356)       after serial 4314)         1-9       1347833X3       CARPET, rear floor (after serial 4314)       after serial 4399)         1-9       1347833X4       CARPET, rear floor (after serial 4399)       after serial 4399)         1	Orange & Black		
1347803X4       CARPET, left, front floor}       after serial 4709         1.2       1347802X5       CARPET, right, front floor}       after serial 4275         1347803X5       CARPET, left, front floor}       after serial 4275         1347803X5       CARPET, left, front floor}       after serial 4275         1347803X5       CARPET, left, front floor       after serial 4275         2141B—Rear Floor Carpets         1-9       1347498X1       CARPET, rear floor (before serial 4314)	· Fawn & Black		
1347803X5       CARPET, left, front floor	Fawn & Black	All	
2141B—Rear Floor Carpets         1.9       1347498X1         CARPET, rear floor (before serial 4356)         1.9       1347498X2         CARPET, rear floor (before serial 4314)         1.9       1347498X3         CARPET, rear floor (before serial 4314)         1.9       1347498X3         CARPET, rear floor (before serial 4399)         1.9       1347498X4         CARPET, rear floor (before serial 4399)         1.9       1347498X5         CARPET, rear floor (before serial 4709)         1.9       1347833X1         CARPET, rear floor (after serial 4356)         1.9       1347833X2         CARPET, rear floor (after serial 4314)         1.9       1347833X3         CARPET, rear floor (after serial 4314)         1.9       1347833X3         CARPET, rear floor (after serial 4314)         1.9       1347833X3         CARPET, rear floor (after serial 4399)         1.9       1347833X4         CARPET, rear floor (after serial 4309)	Red & Black		
1.9       1347498X1       CARPET, rear floor (before serial 4356)         1.9       1347498X2       CARPET, rear floor (before serial 4314)         1.9       1347498X3       CARPET, rear floor (before serial 4399)         1.9       1347498X4       CARPET, rear floor (before serial 4399)         1.9       1347498X5       CARPET, rear floor (before serial 4399)         1.9       1347498X5       CARPET, rear floor (before serial 4709)         1.9       1347833X1       CARPET, rear floor (after serial 4275)         1.9       1347833X2       CARPET, rear floor (after serial 4356)         1.9       1347833X2       CARPET, rear floor (after serial 4314)         1.9       1347833X3       CARPET, rear floor (after serial 4399)         1.9       1347833X3       CARPET, rear floor (after serial 4399)         1.9       1347833X4       CARPET, rear floor (after serial 4399)	Red & Black	All	
1.9       1347498X2       CARPET, rear floor (before serial 4314)         1.9       1347498X3       CARPET, rear floor (before serial 4399)         1.9       1347498X4       CARPET, rear floor (before serial 4399)         1.9       1347498X5       CARPET, rear floor (before serial 4709)         1.9       1347498X5       CARPET, rear floor (before serial 4275)         1.9       1347833X1       CARPET, rear floor (after serial 4356)         1.9       1347833X2       CARPET, rear floor (after serial 4314)         1.9       1347833X3       CARPET, rear floor (after serial 4399)         1.9       1347833X4       CARPET, rear floor (after serial 4399)         1.9       1347833X4       CARPET, rear floor (after serial 4399)			
1.9       1347498X2       CARPET, rear floor (before serial 4314)         1.9       1347498X3       CARPET, rear floor (before serial 4399)         1.9       1347498X4       CARPET, rear floor (before serial 4399)         1.9       1347498X5       CARPET, rear floor (before serial 4709)         1.9       1347498X5       CARPET, rear floor (before serial 4275)         1.9       1347833X1       CARPET, rear floor (after serial 4356)         1.9       1347833X2       CARPET, rear floor (after serial 4314)         1.9       1347833X3       CARPET, rear floor (after serial 4399)         1.9       1347833X3       CARPET, rear floor (after serial 4399)         1.9       1347833X4       CARPET, rear floor (after serial 4309)	Black	All	
1.9       1347498X3       CARPET, rear floor (before serial 4399)         1.9       1347498X4       CARPET, rear floor (before serial 4709)         1.9       1347498X5       CARPET, rear floor (before serial 4275)         1.9       1347833X1       CARPET, rear floor (after serial 4356)         1.9       1347833X2       CARPET, rear floor (after serial 4314)         1.9       1347833X3       CARPET, rear floor (after serial 4399)         1.9       1347833X3       CARPET, rear floor (after serial 4399)         1.9       1347833X4       CARPET, rear floor (after serial 4399)	Turq. & Black		
1-9       1347498X5       CARPET, rear floor (before serial 4275)         1-9       1347833X1       CARPET, rear floor (after serial 4356)         1-9       1347833X2       CARPET, rear floor (after serial 4314)         1-9       1347833X3       CARPET, rear floor (after serial 4399)         1-9       1347833X4       CARPET, rear floor (after serial 4399)         1-9       1347833X4       CARPET, rear floor (after serial 4709)	Orange & Black		
1.9       1347833X1       CARPET, rear floor (after serial 4356)         1.9       1347833X2       CARPET, rear floor (after serial 4314)         1.9       1347833X3       CARPET, rear floor (after serial 4399)         1.9       1347833X4       CARPET, rear floor (after serial 4399)         1.9       1347833X4       CARPET, rear floor (after serial 4709)	Fawn & Black	All	
1.9       1347833X2       CARPET, rear floor (after serial 4314)         1.9       1347833X3       CARPET, rear floor (after serial 4399)         1.9       1347833X4       CARPET, rear floor (after serial 4709)	Red & Black		
1-9         1347833X3         CARPET, rear floor (after serial 4399)           1-9         1347833X4         CARPET, rear floor (after serial 4709)	Black		
11-9 1347833X4 CARPET, rear floor (after serial 4709)	Turq. & Black		
	Fawn & Black		
		All	
1-12 1347522X1 CARPET, rear seat heel board	Black	All	
119 194759989 CARPET rear seat heal hoard)	Tura & Black	A 11	
1-12 1347522X3 CARPET, rear seat heel board	Orange & Black	All	
1-12 1347522X5 CARPET, rear seat heel board)		All	
SCREW, heel bd. & rr. floor carpet fastening N		All	1
SCREW, heel bd. & rr. floor carpet fastening N	$0.0 - 10 \times 1/2^{-10}$	All	
2141C—Luggage Compartment Carpets (illust.	-		
1347489X1 CARPET, luggage comp't. seat back (before serial			
11-23 1347628X1 CARPET, right, luggage comp't. floor 1347629X1 CARPET, left, luggage comp't. floor			
11-25 1347511X1 CARPET, spare tire board	Black	All	
1347647X1 CARPET, comp't. lock SCREW, carpet fastening No. 6 - 18 x 1/2"	Black	All	

ILLUST. NUMBER		DESCRIPTION	MODELS	PI C/
				t
2141FLC	OOR, LUGG	GE COMP'T., AND CONSOLE CARPETS—Cont'd. (Plate 21-23)		
		2141D—CONSOLE CARPETS		
141-40	1347660X1	Color CARPET, right, frt. side panel console	All	
	1347661X1		All	
141-40	1347660X2		All	
	1347661X2	CARPET, left, frt. side panel console beforeTurq. & Black		
141-40	1347660X3	CARPET, right, frt. side panel console serialOrange & Black CARPET, left, frt. side panel console		
141-40	1347661X3 1347660X4	CARPET, right, frt. side panel console ( 4892 Grange & Black CARPET, right, frt. side panel console ( less A.C Fawn & Black		
141-40	1347661X4		All	
140-40	1347660X5		All	
	1347661X5		All	
2141-40	1347662X1	CARPET, right, frt. side panel console		
	1347663X1	CARPET, left, frt. side panel consoleBlack		
141-40	1347662X2		R1	
141-40	1347663X2 1347662X3	CARPET, left, frt. side panel console beforeTurq. & Black CARPET, right, frt. side panel console serialOrange & Black		
141-40	1347663X3		R1	
140-40	1347662X4	CARPET, right, frt. side panel console with A.CFawn & Black		
110-10	1347663X4		R1	
141-40	1347662X5		R1	
	1347663X5		R1	
141-44	1347532X1	CARPET, right, side panel console	All	
141-44	1347532X1		All	
141-44	1347532X2		All	
	1347533X2		All	
141-44	1347532X3	CARPET, right, side panel console before serial Orange & Black	All	
	1347533X3		All	
141-44	1347532X4		All	
	1347533X4		All	
141-44	1347532X5		All	
	1347533X5	CARPET, left, side panel console/Red & Black	All	·
141-44	1347834X1		R1	
	1347835X1		R1	
141-44	1347834X2		R1	
	1347834X2		R1	- 1
141-44	1347834X3		R1	
1 4 1 4 4	1347835X3	CARPET, left, side panel console		
141-44	1347834X4 1347835X4		R1	
2141-44	1347834X5		R1	
	1347835X5		R1	
1 4 1 4 0	1347830X1	CAPPET wight some le cuil fut side venel le Plada	A 11	
141-48	1347830X1 1347831X1	CARPET, right, console and frt. side panel	(	
141-48	1347830X2	CARPET, right, console and frt. side panel		
111-10	1347831X2	CARPET, left, console and frt. side panel after Turq. & Black		
141-48	1347830X3	CARPET, right, console and frt. side panel serial Orange & Black		
	1347831X3	CARPET, left, console and frt. side panel / 4892 Orange & Black		
141-48	1347830X4	CARPET, right, console and frt. side panel less A.C. Fawn & Black		
	1347831X4	CARPET, left, console and frt. side panel Fawn & Black	All	
2141-48	1347830X5 1347831X5	CARPET, right, console and frt. side panelRed & Black CARPET, left, console and frt. side panelRed & Black		
	1347832X1	CARPET, rear, console)		
	1347832X1	CARPET, rear, console Black		
	1347832X3	CARPET, rear, console		
	1347832X4	CARPET, rear, console Fawn & Black		
	1347832X5	CARPET, rear, console		
				1


#### 2144


# BODY

ILLUST. NUMBER	PART NUMBER	CHANGE	DESCRIPTION	MODELS	PER CAR
 2144_SU	N SHIELD	OR VISOR (	Plate 21-23)		

				Color			
	1347700X1	SUN SHIELD, right)	hefere	Fawn	All		1
2144-2	1347701X1	SUN SHIELD, left)	before serial 4892	Fawn	All		1
	1347700X2	SUN SHIELD, right		Black	All		1
2144-2	1347701X2	SUN SHIELD, left		Black	All		1
	1347700X3	SUN SHIELD, right		Turquoise	All		1
2144-2	1347701X3	SUN SHIELD, left		Turquoise	All		1
	1347700X4	SUN SHIELD, right	after serial		All		1
2144 - 2	1347701X4	SUN SHIELD, left /	4892	$\dots$ Elk	All		1
	1347700 X5	SUN SHIELD, right			All		1
2144.2	1347701X5	SUN SHIELD, left			All		1
	1347700X6	SUN SHIELD, right .		Maroon	All	· · · · · · · · · · · · · · · · · · ·	1
2144 - 2	1347701X6	SUN SHIELD, left		Maroon	All		1
	G163481	SCREW, to header No.	10 - 16 x 7/8"		All		4

#### 2145-REAR VIEW MIRROR

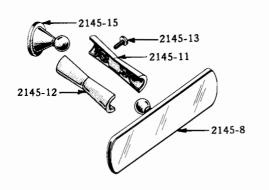


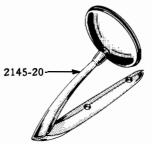

C - 400 2


#### 2145A-Inside Rear View Mirror

2145-8 2145-8	1351302W 1351318W	MIRROR and BALL STUD, rear view—1-1/2" x 4-1/4"       All         MIRROR and BALL STUD, rear view—2" x 5-1/4"       All	1 1
2145-11 2145-12 2145-13	1356356W 1356357W 1954X6W	STEM, rear view mirror—male half       All         STEM, rear view mirror—female half       All         SCREW, mirror to mtg. base stem No. 6 - 32 x 5/16"       All	1
2145-15	1351306	BASE, rear view mirror mounting	1
		2145B—Outside Rear View Mirror	
2145-20	AC-3310 G272873	MIRROR ASSY., outside rear view         All           SCREW, fastening No. 10 - 32 x 1-1/4"         All	1 2

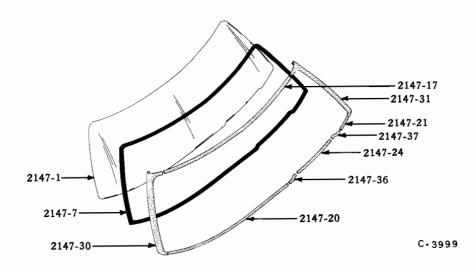

### WINDSHIELD AND MOULDINGS

	PART UMBER		DESCRIPTION	MODELS	PE
147–WIND	SHIELD	AND MOUL	DINGS (Plate 21-20)		
	$51310 \\ 51311$		vindshield (colored) All vindshield (colored w/sunshade band) All		
147-7 13	50769	CHANNE	L, glass—rubber All		
147-17 13	50633	MOULDI	NG, upper, reveal All		
147-21 13	$50634 \\ 50635 \\ 50638$	MOULDI	NG, right lower, reveal       All         NG, left lower, reveal       All         NG, center lower, reveal       All		•
147-31 13	50642 50643 161791	MOULDI	NG, right side, reveal         All           NG, left side, reveal         All           I, to body No. 6 - 18 x 3/8"         All		
	50636 50637		NG, lower right corner, reveal All All All All		

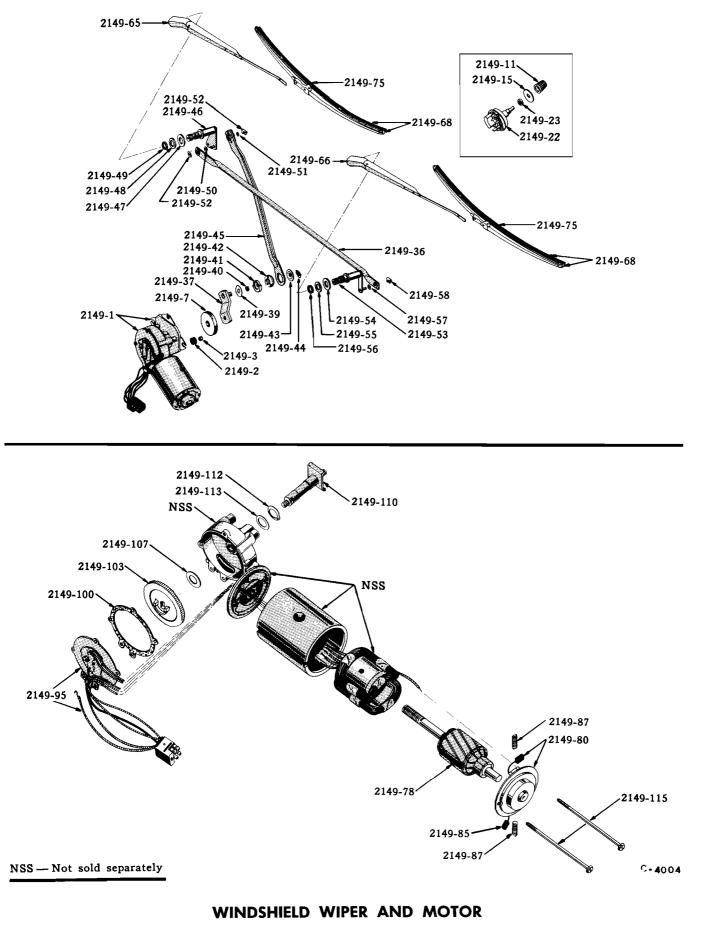


٦.

				214
ILLUST. NUMBER	PART NUMBER	DESCRIPTION	MODELS	PE
2140_WI		WIPER & WINDSHIELD WASHER (Plate 21-21)		
		2149A-Windshield Wiper		
21.40.1	1051040	-		
2149-1 2149-2	$1351040 \\ 311082$	MOTOR and BRACKET, w/s wiper GROMMET, bracket mounting—rubber		
2149-3	311082	EYELET, bracket mounting		
2149-7	310844	GASKET, bracket to dash—rubber		
	G420989	SCREW & LK. WASHER, motor to mtg. brkt. 1/4" - 20 x 3/8"	All	
	G155203	BOLT, mtg. brkt. to dash No. 10 - 32 x 3/4"		
		BOLT, mtg. brkt. to dash No. 10 - 32 x 1"		
	G271169	NUT & WASHER, hex. No. 10-32	All	• •
	G120385	WASHER, plain 1/4"		
2149-9	1351209	BRACKET, motor to dash support	All	•
	G453048	SCREW & WASHER, to dash No. 10 - 32 x 7/8"		
2149-11	1557357	KNOB, w/s wiper switch control (before serial 4879)	All	
2149-11	1561931	KNOB, w/s wiper switch control (after serial 4879)	All	• •
	G140907	SCREW, set No. 10 - 24 x 5/16"		
2149.15	1557358	ESCUTCHEON, w/s wiper switch control knob	All	
2149-22	1557455	SWITCH, w/s wiper	All	
2149-23	284969W	NUT, to board 7/16" - 28		
	41X87	WASHER, plain 7/16"	All	
2149-32	1540288	CIRCUIT BREAKER, w/s wiper (Illust. Plate 06-1)	All	
2149-36	1351016	DRIVE LINK, w/s wiper motor	All	
2149-37	1351025	CRANK ARM, w/s wiper motor	All	
2149-39	1351027	WASHER, crank arm spring		
2149-40	1351030	SPRING, crank arm eccentric		
$2149-41 \\ 2149-42$	1351028	TRIP SPRING, crank arm eccentric		
2149-42	$1351029\\1351031$	BUSHING, crank arm eccentric		
2149-44	1351032	CLIP, crank arm link retainer		
2149-45	1351020	SLAVE LINK, w/s wiper motor		
2149-46	1351002	PIVOT, right, w/s wiper drive	A 11	
2149-47	1351023	GASKET, pivot shaft		
2149-48	1351024W	WASHER, pivot shaft	All	
2149-49	287693W	NUT, pivot shaft 5/8" - 24		
	G174916	WASHER, lock 1/4"	All	• •
2149-50	1351009	WASHER, link to pivot—felt	All	• •
2149-51 2149-52	$41X592 \\ 1351022$	CLIP, link pivot		
2149-53 2149-54	1351007	PIVOT, left, w/s wiper slave		
2149-54 2149-55	1351023 1351024W			
2149-56	287693W	NUT, pivot shaft 5/8" - 24		
2149-57	1351009	WASHER, link to pivot		
2149-58	1351022	CLIP, link pivot		
2149-65, 66	6 1351033	ARM and SPRING, w/s wiper	All	
2140-68	1351034	BLADE, w/s wiper	All	
2149-75	1351035	REFILL, w/s wiper blade	All	
		2149B—Electric Motor Parts		
2149.78	1351326	ARMATURE, w/s wiper motor	All	
2149-80	1351327	HEAD, commutator end	All	
2149-00	100108.			

ILLUST. NUMBER	PART NUMBER	CHANGE	DESCRIPTION	MODELS	PER CAR
2149-WI	NDSHIELD	WIPER &	WINDSHIELD WASHER—Cont'd. (Plate 21-21)		
		2149B	—Electric Motor Parts—Cont'd.		

2149-87	311079	SPRING, w/s wiper motor brush All		2	
2149-95	1351328	SWITCH, w/s wiper motor parking All		1	
2149-100	1351329	GASKET, parking switch All		1	
2149-103	1351330	GEAR, w/s wiper motor driven All	··· ····· ····	1	
2149-107	1351323	THRUST WASHER, gear shaft inner All		1	
2149-110	1351320	SHAFT, w/s wiper motor output All		1	
2149-112	1351325	WASHER, w/s wiper motor output shaft spring All		1	
2149-113	1351324	THRUST WASHER, w/s wiper motor output shaft All		1	
2149-115	1351331	BOLT, w/s wiper motor case thru All		2	

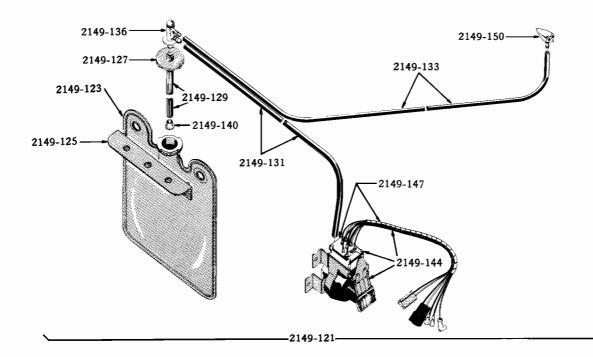

#### 2149C-Windshield Washer

2149-121	AC-3336	WASHER KIT, windshield (automatic)	All			1
2149-123	1540413	RESERVOIR, w/s washer	All			1
2149-125	1545916 G177999	BRACKET, w/s washer reservoir support SCREW, brkt. fastening 1/4" - 14 x 1/2"				
2149-127	1558140	CAP, reservoir	All	· · · · · · · · · · ·		1
2149-129 2149-131 2149-133	1552800 1552803 1558129 182050	HOSE, reservoir 1/4" I.D.HOSE, check valve to pump 1/4" I.D. x 64"HOSE, check valve to nozzle 9/32" O.D. x 48"CLIP, to dash	All All			1 1
2149-136	1552815	VALVE, w/s washer check	All			1
2149-140	535554	STRAINER, w/s washer	All			1


#### 2149

C • 40 59

· · · · · · · · · · · · · · · · · · ·
· · · · · · · · · · · · · · · · · · ·
· · · · · · · · · · · · · · · · · · ·
· · · · · · · · · · · · · · · · · · ·
· · · · · · · · · · · · · · · · · · ·
· · · · · · · · · · · · · · · · · · ·
· · · · · · · · · · · · · · · · · · ·
· · · · ·
 . <i></i> .

\*----Use as required.



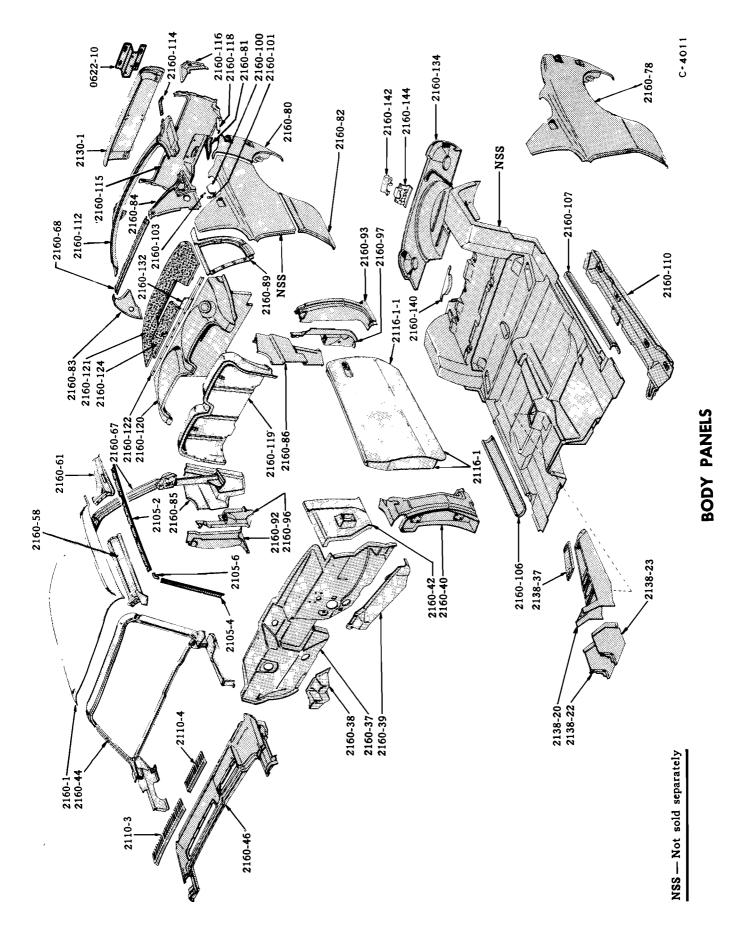

ILLUST. NUMBER	PART NUMBER	CHANGE DESCRIPTION	MODELS	PE
			]	<u> </u>
2160—BO	DY PANE	LS (Plate 21-22)		
		2160A—Roof Panels, Dash and Cowl Side Panels		
2160-1	1350250	ROOF PANEL	All	
2160-37	1350120	PANEL, dash	All	
160-38 160-39	$\frac{1350320}{1350321}$	BRACKET, right dash reinf. BRACKET, left dash reinf.		
160-40	$\frac{1350300}{1350301}$	PANEL, outer, right cowl side (hinge pillar) PANEL, outer, left cowl side (hinge pillar)	. All	
2160-42	$1350310 \\ 1350311 \\ 1358876$	PANEL, inner, right cowl side	All	· · ]
160-42	1358877	PANEL, inner, left cowl side) after serial 4892	All	
		2160B—Cowl Top and Windshield Opening Panels		
2160-44	1350986	PANEL, cowl top reinf. & w/s open.	. All	
160-46 160-44	$1350985 \\ 1358730$	PANEL, cowl air intake (before serial 4892) PANEL, cowl air intake (after serial 4892)	All	
110-3	• • • •	GRILLE, cowl top air intake (see group 2110)	. All	
		2160C—Roof Rails and Reinforcements		
2160-58	$1350990 \\ 1350991$	ROOF RAIL, right, front side         ROOF RAIL, left, front side		
2160-61	$1350176 \\ 1350177$	ROOF RAIL, right, rear side ROOF RAIL, left, rear side	All	
2160-67	1351292	REINFORCEMENT, roof panel center (roll bar)	. All	
2160-68	1350069	REINFORCEMENT, upper, rear window open.	All	
		2160D—Rear Quarter Panels		
2160-78	$1350080 \\ 1350081$	PANEL ASSY., right rear quarter PANEL ASSY., left rear quarter		
160-80	$1351222 \\ 1351223$		All	
2160-81	$1350084 \\ 1350085$	EXTENSION, rear upper, right rear quarter ( Repair	All	
2160-82	$1351220\\1351221$		All	
160-83 160-84	$1350154 \\ 1350155$		A 11	
2160-84 2160-83 2160-84	1350155 1358814 1358815	PANEL, upper inner, right rear quarter	All	
2160-85 2160-86	1350156 1350157	PANEL, lower inner, right rear quarter		- 1
2160-89	$1350610 \\ 1350611 \\ 1358810 \\ 1358811$	REINFORCEMENT, right r/q window open.       before serial 4879         REINFORCEMENT, left, r/q window open.       before serial 4879         REINFORCEMENT, right r/q window open.       after serial 4879         REINFORCEMENT, left r/q window open.       after serial 4879	All All All	
2160-85	1350162	PILLAR, right rear quarter lock		

ILLUST. NUMBER	PART C NUMBER	DESCRIPTION	MODELS	PE CA
2160-BO	DY PANELS-	-Cont'd. (Plate 21-22)		
		2160D—Rear Quarter Panels—Cont'd.		
2160-96 2160-97	$1350158 \\ 1350159$	EXTENSION, right rear quarter lock pillar EXTENSION, left rear quarter lock pillar		
2160-100	1350273 3188X5	DOOR, gas filler (incl. hinge) NUT & WASHER, fastening No. 10-24 (incl. sealer)		
160-101	1350604	SPRING, gas filler door hinge	All	
160-103	1350997	BUMPER, gas filler door	All	
	1351167 1351153W 3055X7	EMBLEM, rear quarter panel RETAINER, emblem NUT & WASHER, fastening (for 1/8" stud)	All	
		PANEL, wheelhouse (integral w/floor pan)	All	
		SPLASHGUARD, rear quarter panel (see group 1601)	All	
		2160E—Sill Panels		
2160-106 2160-107	$\frac{1350046}{1350047}$	PANEL, right sill		
2160-110	$\frac{1350124}{1350125}$	REINFORCEMENT, right sill underbody REINFORCEMENT, left sill underbody		
		2160F—Deck Opening Panels		
2160-112	1350988	PANEL ASSY., upper, deck open.	All	
2160-114	$1350088 \\ 1350089$	EXTENSION, right inner, deck open		
2160-115	1350989	PANEL ASSY., lower, deck open.	All	
160-116	$\frac{1350168}{1350169}$	REINFORCEMENT, right, lower deck open. side		
2160-118	$\frac{1351060}{1351061}$	BRACE, right, lower deck open. to floor pan BRACE, left, lower deck open. to floor pan		
		2160G—Rear Seat Back Shelf		
160-119	1350185	PANEL ASSY., rear seat back	All	
160-120	1350181	SHELF, rear seat back	All	
160-122	1347597 2204 <b>X</b> 1	BRACKET, seat back shelf support SCREW, fastening No. 8-15 x 1/2"		
2160-121 2160-121	3204X1 1347589X1 1347905X2	Color COVER, seat back shelf (before serial 4879)Fawn COVER, seat back shelf	All	
2160-121 2160-121 2160-121	1347905X3 1347905X4 1347905X6	COVER, seat back shelf	All	
2160-124	1347591X1 1347725 2049X14	LID, seat back shelf cover (incl. 1347725) (before serial 4879) Fawn CLIP, spring retainer SCREW, fastening No. 8 - 15 x 3/8"	All	
2160-124 2160-124	1347894X1 1347894X2	LID, seat back shelf cover	All	
$2160-124 \\ 2160-124 \\ 2160-124 \\ 2160-124$	$\begin{array}{c} 1347894\mathrm{X3} \\ 1347894\mathrm{X4} \\ 1347894\mathrm{X5} \\ 1347894\mathrm{X5} \end{array}$	LID, seat back shelf cover LID, seat back shelf cover	All	
2160.124	1347894X6	LID, seat back shelf cover/	All	•

ILLUST. NUMBER	PART NUMBER		DESCRIPTION		MODELS	PER
2160—BC	DY PANE	LS—Cont'd.	(Plate 21-22)			
		2160G-	Rear Seat Back Shelf—Cont'd.			1
	$1347897 \\ \mathrm{G}451704$		tonneau lid (after serial 4879) W, to shelf No. 10 - 32 x 5/16"			
2160-132	1350068		gas tank gage access hole			
	1351154W 3055X1		M, rear seat back panel stamped 1/8"			
		2160H_	Rear Floor Pan			
2160-134	1351224	PAN, re	ar floor (Repair section)	All		. 1
2160-140	1350078	RETAIN	ER, spare wheel cover	All		. 1
2160-142 2160-144	$1351121 \\ 1351120$		ET, upper, deck lid latch mounting ET, lower, deck lid latch mounting			
		2160J-	Fiber Glass Repair and Maintenance Material			
	1351178	STRIP,	bonding 2-1/2" x 48" (for service)	All		. *
	SP-50336 SP-50337		polyester (1 qt. size) polyester (1 gal. size)			
	SP-50338 SP-50339		, polyester resin (1 qt. size)			
	SP-50340	CATALY	(ST, (setting agent) (1 oz.)	All		. *
	SP-50341	CLOTH,	fiber glass repair 6" x 3'	All		

\*—Use as required

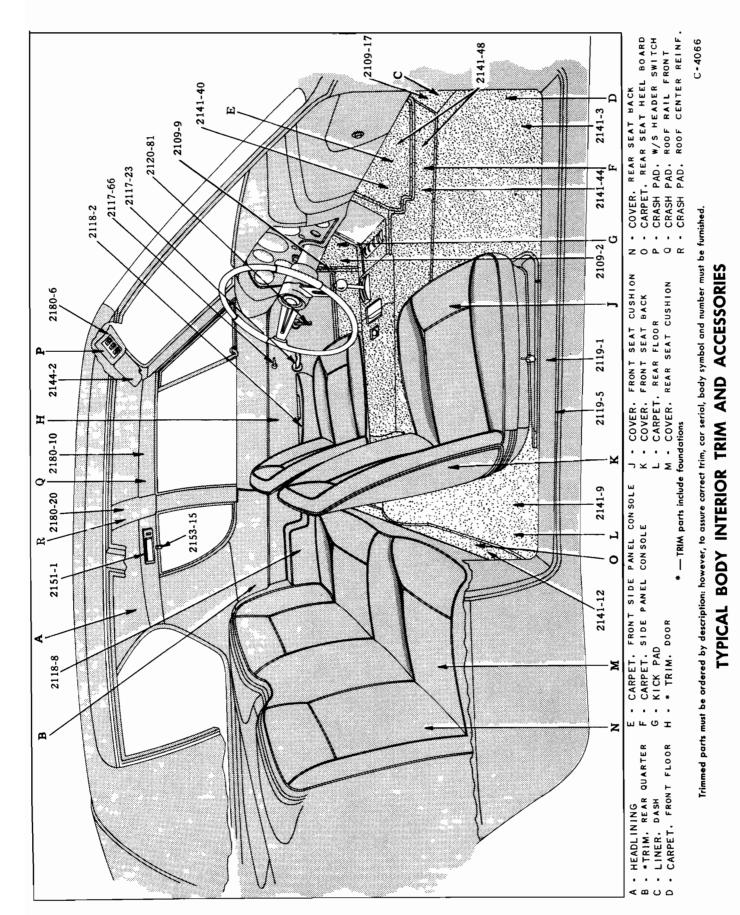


Plate 21-23

Copyright 1963 Studebaker Corporation

# -IMPORTANT-

\_

To assure prompt shipment of parts, always give Car Serial and Engine Number

- **L H C** Left hand drive only
- **R** H C Right hand drive only

Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.
AC-2029 AC-2559 AC-2987 AC-3242 AC-3284	0312 0118 0304 2127 0622	186695 187322 187425 188291 188295	0105 1105 0901 0703a 0702a	198968 198970 198971 198973 199150	0702 a 0702 a 0702 a 0747 a 0203	510774 510934 511382 511382 511382 511382	$\begin{array}{c} 0606 \\ 1006 \\ 0116 \\ 0627 \\ 1716 \end{array}$	526851 527066 527067 527084 527085	$\begin{array}{c} 0105 \\ 0105 \\ 0105 \\ 0105 \\ 0105 \\ 0104 \end{array}$	530204 530222 530266 530311 530312	$1207 \\ 0103 \\ 0109 \\ 0105 \\ 0115$
AC-3285 AC-3286 AC-3287 AC-3288 AC-3289	2127 2127 2127 2127 2127 2127	188300 188322 188323 188348 188349	0704a 1105 1105 0702a 0705a	199218 199220 199379x1 199385 262993	$\begin{array}{c} 0116 \\ 0206 \\ 1005 \\ 1204 \\ 2130 \end{array}$	511652 511653 511654 511678 511679	$1005 \\ 1005 \\ 1005 \\ 1004 \\ 1004$	527086 527088 527089 527114 527115	0105 0103 0107 0107 0107	530353 530431x31 530451 530496 530526	$     \begin{array}{r}       1116 \\       1518 \\       1002 \\       1005 \\       0105 \\       0105 \\       \end{array} $
ac-3306 ac-3307 ac-3310 ac-3311 ac-3332	$1601 \\ 1601 \\ 2145 \\ 0118 \\ 1409$	$\begin{array}{c} 188351 \\ 188367 \\ 188476 \\ 188521 \\ 188645 \end{array}$	0705a 0705a 0601 0702a 0103	265709 274907 278950 284526 284969w	2121 1622 2120b 1622 2149a	$512660 \\ 512709 \\ 512927 \\ 512928 \\ 513143$	1110 1001 0703a 0703a 0203	$\begin{array}{c} 527123\\ 527136\\ 527158\\ 527171\\ 527180\\ \end{array}$	$\begin{array}{c} 0115\\ 0103\\ 0116\\ 1005\\ 0103 \end{array}$	530527 530569 530573 530702 530703	$\begin{array}{c} 0105 \\ 1005 \\ 1002 \\ 1004 \\ 1004 \end{array}$
AC-3335 AC-3336 AC-3339 AC-3348 AC-3378	0307 2149c 0403 1105 2112a	189316 190032 190033 190035 190036	$\begin{array}{c} 0105 \\ 1005 \\ 1005 \\ 1005 \\ 1005 \\ 1005 \end{array}$	286105 286138 287583 287685 287693w	1622 0602 0851 2103 2149A	513201 513536x1 513666 513667 514013	1812 0312 0601 0601 2101A	527184 527197 527198 527199 527224	$\begin{array}{c} 0103 \\ 0103 \\ 0103 \\ 0103 \\ 0116 \end{array}$	530705 530706 530858 531013 531013	$1004 \\ 1002 \\ 0103 \\ 0841 \\ 1107$
ac-3400 ac-3469 ac-3507 ac-3521 sp-50104	2127 2102A 2112 1409 0108	190038 190039 190040 190041 190047	$1005 \\ 1005 \\ 1005 \\ 1005 \\ 1005 \\ 1004$	291736 293902x8 293902x11 294488 295796	$1601 \\ 1622 \\ 1622 \\ 2103 \\ 2121$	514013 515202 516196 518431 518771	$2110 \\ 0105 \\ 0601 \\ 1204 \\ 0302$	$\begin{array}{c} 527225\\ 527240\\ 527240\\ 527246\\ 527246\\ 527280\end{array}$	$\begin{array}{c} 0117 \\ 0102 \\ 0505 \\ 0505 \\ 0203 \end{array}$	$531068 \\ 531075 \\ 531085 \\ 531085 \\ 531085 \\ 531086$	0103 1801 0209 0230 0209
sp-50105 sp-50106 sp-50107 sp-50237 sp-50336	0108 0108 0108 2149c 2160j	190048 190276 190460 190983 190984	1004 1306a 0606 1402 1402	299288 304374 306018 306018 309470	1107 2121 2117b 2120f 2120f 2120e	518853 518875 519483 519690 519699	$\begin{array}{c} 0302 \\ 0302 \\ 1203 \\ 0302 \\ 0302 \end{array}$	527303 527304 527329 527332 527332 527337	$\begin{array}{c} 0601 \\ 0102 \\ 0601 \\ 0601 \\ 0601 \end{array}$	531086 531156 531190 531191 531192	$\begin{array}{c} 0230 \\ 1005 \\ 1204 \\ 1204 \\ 1204 \\ 1204 \end{array}$
sp-50337 sp-50338 sp-50339 sp-50340 sp-50341	2160j 2160j 2160j 2160j 2160j	190985 192057 192057 192057 192057 192057	1402 0206 0760а 0760в 0851	$310844 \\ 310844 \\ 311082 \\ 311083 \\ 419932$	2120e 2149a 2149a 2149a 1205	519858 519864 520482 521129 521498	1110 1107 1107 0202 0747A	527342 527343 527353x1 527353x2 527353x3	$\begin{array}{c} 0601 \\ 0601 \\ 0601 \\ 0601 \\ 0601 \\ 0601 \end{array}$	$531319 \\ 531319 \\ 531577 \\ 531577 \\ 531713 \\ 532035$	0209 0230 0202 0703a 0205
sp-51181 sp-51182 sp-51185 sp-51188 sp-51189	$\begin{array}{c} 0610 \\ 0610 \\ 0610 \\ 0610 \\ 0610 \\ 0610 \end{array}$	192057 192125 192136 192306 193684	0854 0117 0117 0701a 1202	$\begin{array}{r} 419932\\ 436452\\ 458053\\ 458363\\ 458363\\ 458431 \end{array}$	1801 1308b 1308b 0601 0747b	521689 521690 521691 521738 521761	0108 0108 0108 1116 0704A	$\begin{array}{c} 527421 \\ 527432 \\ 527517 \\ 527696 \\ 527718 \end{array}$	0209 1006 0747 A 0103 0102	532035 532181 532187 532188 532190	$1108 \\ 1204 \\ 1204 \\ 1204 \\ 1204 \\ 1204$
sp-51190 44961 156768 165167 167156	$\begin{array}{c} 0610 \\ 0603 \\ 0103 \\ 1002 \\ 0104 \end{array}$	193685 193686 193687 193688 194542	$1202 \\ 1202 \\ 1202 \\ 1202 \\ 0106$	$\begin{array}{r} 458432 \\ 458433 \\ 458434 \\ 458435 \\ 458436 \end{array}$	0747в 0747в 0747в 0747в 0747в 0747в	$\begin{array}{c} 521825\\ 522518\\ 524227\\ 524230\\ 524849 \end{array}$	$1006 \\ 1525 \\ 1204 \\ 1204 \\ 0203$	527718 527801 527834 527835 527836	$\begin{array}{c} 0103 \\ 0105 \\ 0102 \\ 0102 \\ 0505 \end{array}$	532404 532427 532446 532491 532549	0101 0101 0102 0601 1305a
167772 168093 168535 172441 172651	0105 1307a 0103 1306a 1107	194697 194702 194841 194844 194845	1107 1107 1002 1002 1002	$\begin{array}{r} 458438 \\ 458445 \\ 458449 \\ 458456 \\ 458457 \end{array}$	0701в 0702в 0702в 0703в 0703в	$\begin{array}{c} 524849 \\ 524859 \\ 525002 \\ 525003 \\ 525004 \end{array}$	$\begin{array}{c} 0209 \\ 1204 \\ 1209 \\ 1209 \\ 1209 \\ 1209 \end{array}$	$\begin{array}{c} 527857\\ 527921\\ 527974\\ 529050\\ 529169\end{array}$	$\begin{array}{c} 0104 \\ 1204 \\ 1803 \\ 1202 \\ 1520 \end{array}$	532550 532669 532855 532857 532857 532871	1305a 1110 2120g 0116 2101a
172652 172653 176203 180250 181814	$\begin{array}{c} 0632 \\ 0617 \\ 0606 \\ 2149c \\ 2120c \end{array}$	194846 195227 195385 195407 195407	1002 0202 0104 2101A 2102B	458461 458462 458471 458472 458918	0703в 0703в 0705в 0705в 0302	$\begin{array}{c} 525005\\ 525006\\ 525007\\ 525013\\ 525034 \end{array}$	1209 1209 1209 1209 1209 1204	$\begin{array}{c} 529268\\ 529281\\ 529332\\ 529333\\ 529333\\ 529348\end{array}$	$1204 \\ 1204 \\ 1507 \\ 0203 \\ 0107$	533010 533068 533122 533154 533161	$\begin{array}{c} 0601 \\ 0301 \\ 0109 \\ 1105 \\ 1002 \end{array}$
182050 182099 182317 182317 182698	$\begin{array}{c} 0501 \\ 0116 \\ 0632 \\ 1116 \\ 0202 \end{array}$	195506 195567 195569 195716 196308	$     \begin{array}{r}       1116\\       1107\\       1107\\       0312\\       1402     \end{array} $	473256 473257 473258 473259 510141	$1407 \\ 1407 \\ 1407 \\ 1407 \\ 1204$	525035 525368 526134 526135 526348	1204 0747A 1510 1510 0116	$\begin{array}{c} 529367\\ 529391\\ 529392\\ 529401\\ 529401\\ 529401\\ \end{array}$	0606 1205 1525 0301 1116	533164 533290 533296 533314 533314	$1204 \\ 1110 \\ 0101 \\ 0602 \\ 0627$
182700 184161 184291 184291 184291 184291	0202 1005 0206 0760a 0760b	196859 196965 197216 197347 197402	$1202 \\ 1006 \\ 1002 \\ 0302 \\ 0107$	510168 510168 510171 510487 510516	$\begin{array}{c} 0207 \\ 0220 \\ 0203 \\ 1207 \\ 1002 \end{array}$	526459 526486 526600x1 526600x2 526600x4	$\begin{array}{c} 0403 \\ 0403 \\ 2101 \\ 0115 \\ 0621 \end{array}$	$\begin{array}{c} 529411x8\\ 529459\\ 530009\\ 530096\\ 530129\end{array}$	$\begin{array}{c} 0630 \\ 0104 \\ 0109 \\ 0116 \\ 1110 \end{array}$	533704 533705 533707 533901 533933	$\begin{array}{c} 0620 \\ 0620 \\ 0620 \\ 1402 \\ 0206 \end{array}$
$\begin{array}{c} 184526 \\ 185547 \\ 186090 \\ 186693 \\ 186694 \end{array}$	0312 1304A 0115 0105 0105	197402 197402 197402 197436 198137	0206 0760а 0760в • 1002 0302	510518 510569 510569 510721 510722	$1002 \\ 1525 \\ 1801 \\ 1004 \\ 1004$	526600x9 526633 526765 526794 526830	2101в 1105 1204 0603 1510	530186 530202 530202 530202 530202 530202	1107 1207 1308в 1312а 1312в	534175 534195 534241 534241 534241 534384	$\begin{array}{c} 0206 \\ 0620 \\ 1803 \\ 1805 \\ 1110 \end{array}$

Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.
534540 534542 534833 534872 535108	0301 0104 0206 0206 1110	$\begin{array}{c} 674889\\ 674890\\ 674899\\ 674899\\ 674899\\ 675058\end{array}$	0747A 0747A 1209 1522 1112	1339149 1339477 1343114 1343378 1343378	1601 0610 2120в 2113в 2138	1347522x4 1347522x5 1347528x61 1347532x1 1347532x2	2141B 2141B 2109A 2141D 2141D	1347660x1 1347660x2 1347660x3 1347660x4 1347660x5	2141D 2141D 2141D 2141D 2141D 2141D	1347779x1 1347779x2 1347779x3 1347779x4 1347779x5	2138 2138 2138 2138 2138 2138
535324 535325 535554 535560 535617	1116 1116 2149c 0206 0109	675466 675721 678157 679278 680171	1107 1112 1402 1308в 0102	1343581 1347400 1347402 1347403 1347403 1347409x1	1701 2127 2127 2127 2127 2127	1347532x3 1347532x4 1347532x5 1347533x1 1347533x2	2141d 2141d 2141d 2141d 2141d 2141d	1347661x1 1347661x2 1347661x3 1347661x4 1347661x5	2141D 2141D 2141D 2141D 2141D 2141D	1347780 1347784x1 1347784x2 1347784x3 1347784x3	2118a 2118a 2118a 2118a 2118a
$\begin{array}{c} 535697 \\ 536003 \\ 536004 \\ 536026 \\ 536090 \end{array}$	$\begin{array}{c} 0102 \\ 0109 \\ 0109 \\ 0103 \\ 0104 \end{array}$	680209 681642 681705 683875 683876	1302A 0702b 0700b 0103 0103	1347409x2 1347409x3 1347409x4 1347409x5 1347409x5	2127 2127 2127 2127 2127 2127	1347533x3 1347533x4 1347533x5 1347540 1347545	2141р 2141р 2141р 2109в 2110	1347662x1 1347662x2 1347662x3 1347662x4 1347662x5	2141D 2141D 2141D 2141D 2141D 2141D	1347784x5 1347784x6 1347785x1 1347785x2 1347785x3	2118a 2118a 2118a 2118a 2118a 2118a
$\begin{array}{c} 536171 \\ 536183 \\ 536195 \\ 536224 \\ 536264 \end{array}$	$\begin{array}{c} 0109 \\ 0109 \\ 0109 \\ 0103 \\ 0103 \\ 0103 \end{array}$	683919 684768 684769 684771 684784	$\begin{array}{c} 0202 \\ 1101 \\ 1101 \\ 1101 \\ 1101 \\ 1101 \end{array}$	1347426 1347427 1347428 1347429 1347432x1	2127 2127 2127 2127 2127 2118A	1347556 1347558 1347564x1 1347564x2 1347564x3	2118в 2109а 2180 2180 2180 2180	$\begin{array}{c} 1347663 x 1 \\ 1347663 x 2 \\ 1347663 x 3 \\ 1347663 x 4 \\ 1347663 x 5 \end{array}$	2141d 2141d 2141d 2141d 2141d 2141d	$\begin{array}{c} 1347785 x4 \\ 1347785 x5 \\ 1347785 x6 \\ 1347794 \\ 1347802 x1 \end{array}$	2118а 2118а 2118а 2109в 2141а
$536298 \\ 536304 \\ 536596 \\ 536599 \\ 536636$	0203 0109 0312 0603 0103	684785 684799 684802 684803 684881	1101 1101 1101 1101 0747в	1347432x2 1347432x3 1347432x4 1347432x5 1347433x1	2118A 2118A 2118A 2118A 2118A 2118A	1347564x4 1347564x5 1347564x6 1347565x1 1347574	2180 2180 2180 2180 2180 2120p	1347666x1 1347666x2 1347666x3 1347666x4 1347666x5	2109a 2109a 2109a 2109a 2109a	1347802x2 1347802x3 1347802x4 1347802x5 1347802x5 1347802x6	2141A 2141A 2141A 2141A 2141A
536670 537150 537161 537162 537185	0117 0302 0302 0302 0302	685045 685046 905560 905731 905833	$1101 \\ 1101 \\ 0308 \\ 0627 \\ 0601$	1347433x2 1347433x3 1347433x4 1347433x5 1347450	2118a 2118a 2118a 2118a 2118a 2127	1347575 1347584x1 1347584x2 1347584x3 1347584x3 1347584x4	$2120 \mathrm{D} \\ 2138 \\ 21$	1347666x6 1347666x7 1347666x8 1347666x9 1347667x1	2109a 2109a 2109a 2109a 2109a	1347803x1 1347803x2 1347803x3 1347803x4 1347803x4 1347803x5	2141A 2141A 2141A 2141A 2141A
$\begin{array}{c} 537187 \\ 537193 \\ 537354 \\ 537355 \\ 537461 \end{array}$	$\begin{array}{c} 0302 \\ 0302 \\ 0301 \\ 0312 \\ 1204 \end{array}$	911882x4 915054 1312029 1312643x3 1312646	1308в 1105 2120g 2120г 2117в	1347452 1347453 1347460 1347489x1 1347494x1	2127 2127 2127 2141c 2180	1347584x5 1347589x1 1347591x1 1347597 1347608	2138 2160g 2160g 2160g 2160g 2144	1347667x2 1347667x3 1347667x4 1347667x5 1347667x6	2109a 2109a 2109a 2109a 2109a	1347803x6 1347820 1347821 1347822 1347822 1347825x1	2141A 2138 2138 2138 2138 2138
$\begin{array}{c} 537559 \\ 537634 \\ 537637 \\ 537674 \\ 537674 \\ 537674 \end{array}$	$\begin{array}{c} 0230 \\ 1005 \\ 1005 \\ 1622 \\ 2110 \end{array}$	$\begin{array}{c} 1312646\\ 1312647\\ 1312875\\ 1314144\\ 1319242 \end{array}$	2120ғ 2120ғ 2113в 2120д 2117в	1347494x2 1347494x3 1347494x4 1347494x5 1347494x5 1347494x6	$2180 \\ 2180 \\ 2180 \\ 2180 \\ 2180 \\ 2180 \\ 2180 \\$	1347625 1347628x1 1347629x1 1347640 1347641	2118в 2141с 2141с 2118в 2118в	1347667x7 1347667x8 1347667x9 1347700x1 1347700x2	2109a 2109a 2109a 2144 2144	1347825x2 1347825x3 1347825x4 1347825x5 1347825x5 1347830x1	2138 2138 2138 2138 2138 2141p
537674 537678 537876 537897 630651	2130 1005 1005 0105 1306A	1319242 1320240w 1321895 1321895 1323683	2120f 2153 2113c 2151 2101a	1347497x1 1347497x2 1347497x3 1347497x4 1347497x4 1347497x5	2109в 2109в 2109в 2109в 2109в 2109в	1347648x1 1347648x2 1347648x3 1347648x4 1347648x5	2141a 2141a 2141a 2141a 2141a 2141a	1347700x3 1347700x4 1347700x5 1347700x6 1347701x1	$2144 \\ 2144 \\ 2144 \\ 2144 \\ 2144 \\ 2144$	1347830x2 1347830x3 1347830x4 1347830x5 1347831x1	2141p 2141p 2141p 2141p 2141p 2141p
$\begin{array}{c} 631580\\ 631580\\ 631580\\ 636965\\ 636965\\ 637410 \end{array}$	$\begin{array}{c} 0302 \\ 0632 \\ 0853 \\ 1203 \\ 0302 \end{array}$	1324454 1327437 1328478w 1328479w 1328480	$\begin{array}{c} 2120 c \\ 2120 e \\ 2121 \\ 2121 \\ 2121 \\ 2121 \end{array}$	1347498x1 1347498x2 1347498x3 1347498x4 1347498x5	2141в 2141в 2141в 2141в 2141в 2141в	1347649x1 1347649x2 1347649x3 1347649x4 1347649x4 1347649x5	2141a 2141a 2141a 2141a 2141a 2141a	1347710x1 1347710x2 1347710x3 1347710x4 1347710x5	2118a 2118a 2118a 2118a 2118a 2118a	1347831x2 1347831x3 1347831x4 1347831x5 1347832x1	2141r 2141r 2141r 2141r 2141r 2141r
$\begin{array}{c} 639040\\ 639053\\ 639055\\ 644157\\ 644929 \end{array}$	1209 0609 0609 0302 0302	1328481 1328497 1328498 1330056 1330103	2121 2120c 2120c 2117p 0617	1347499 1347511x1 1347514x1 1347514x2 1347514x3	2180 2141с 2109в 2109в 2109в	1347652x1 1347652x2 1347652x3 1347652x4 1347652x5	$2102 \\ 2102 \\ 2102 \\ 2102 \\ 2102 \\ 2102 \\ 2102 \\$	1347710x6 1347711x1 1347711x2 1347711x3 1347711x3	2118a 2118a 2118a 2118a 2118a 2118a	1347832x2 1347832x3 1347832x4 1347832x5 1347833	2141r 2141r 2141r 2141r 2141r 2141r
$\begin{array}{c} 652731 \\ 662296 \\ 666858 \\ 673031 \\ 674868 \end{array}$	1116 0201 0615 0302 0702A	1330106 1330107 1330108 1330109 1331825	0617 0617 0617 0617 2101A	1347514x4 1347514x5 1347518x1 1347518x2 1347518x3	2109в 2109в 2138 2138 2138 2138	1347653x1 1347653x2 1347653x3 1347653x4 1347653x5	$2102 \\ 2102 \\ 2102 \\ 2102 \\ 2102 \\ 2102 \\ 2102 \\$	1347711x5 1347711x6 1347714w 1347715 1347719	2118a 2118a 2115a 2115a 2115a	1347834x1 1347834x2 1347834x3 1347834x3 1347834x4 1347834x5	2141r 2141r 2141r 2141r 2141r 2141r
674869 674872 674873 674874 674880	0747 a 0703 a 0703 a 0703 a 0703 a	1331825 1332072 1332073 1332077 1332701	2101в 1622 1622 2117с 0617	1347518x4 1347518x5 1347519x1 1347519x2 1347519x3	2138 2138 2138 2138 2138 2138	1347654x1 1347654x2 1347654x3 1347654x4 1347654x5	$2138 \\ 2138 \\ 2138 \\ 2138 \\ 2138 \\ 2138 \\ 2138 \\$	$\begin{array}{c} 1347722 {\bf x1} \\ 1347725 \\ 1347729 \\ 1347734 {\bf x1} \\ 1347734 {\bf x2} \end{array}$	2109a 2160g 2118a 2138 2138	1347835x1 1347835x2 1347835x3 1347835x3 1347835x4 1347835x5	21411 21411 21411 21411 21411 21411
674883 674884 674885 674887 674888	0747a 0702a 0747a 0747a 0747a	1334393 1336199 1336801 1337178 1339035	2117в 2103 1620 0610 1622	1347519x4 1347519x5 1347522x1 1347522x2 1347522x3	2138 2138 2141в 2141в 2141в	1347655x1 1347655x2 1347655x3 1347655x4 1347655x5	2138 2138 2138 2138 2138 2138	1347734x3 1347734x4 1347734x5 1347771w 1347772	2138 2138 2138 2138 2138 2138	1347840 1347841 1347846 1347860x1 1347860x2	2120r 2120r 2109A 2109A 2109A

534540

;

Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.
1347860x4 1347860x5 1347860x6 1347861x1 1347861x2	2109a 2109a 2109a 2109a 2109a	$\begin{array}{c} 1350157\\ 1350158\\ 1350159\\ 1350162\\ 1350163\end{array}$	2160d 2160d 2160d 2160d 2160d	1350466w 1350470 1350471 1350472 1350473	$2124 \\ 2125 \\ $	$\begin{array}{c} 1350634\\ 1350635\\ 1350636\\ 1350637\\ 1350638\end{array}$	2147 2147 2147 2147 2147 2147	1350854x1 1350856 1350857 1350860 1350861	2113A 2116c 2116c 2117c 2117c	$\begin{array}{c} 1351066\\ 1351067\\ 1351068\\ 1351069\\ 1351076\end{array}$	2124 2124 2124 2124 2124 2110
1347861x4 1347861x5 1347861x6 1347876 1347876 1347877x1	2109a 2109a 2109a 2138 2138	1350168 1350169 1350176 1350177 1350181	2160F 2160F 2160c 2160c 2160c	$\begin{array}{c} 1350482 \\ 1350486 \\ 1350487 \\ 1350475 \\ 1350476 \end{array}$	2120c 2120c 2120c 2120c 2130 2130	$\begin{array}{c} 1350642 \\ 1350643 \\ 1350658 \\ 1350659 \\ 1350667 \end{array}$	2147 2147 2117a 2117a 2124	1350870 1350871 1350880 1350881 1350887	1620 1620 2124 2124 2113в	1351077 1351080x1 1351085x1 1351088 1351088 1351088	$2110 \\ 2138 \\ 2138 \\ 1622 \\ 2130$
1347877x2 1347877x4 1347877x6 1347894x1 1347894x2	2138 2138 2138 2160g 2160g	1350185 1350188w 1350189w 1350203 1350208	2160g 2117a 2117a 2138 2138	1350482 1350483 1350498w 1350502 1350504	$2121 \\ 2121 \\ 1601 \\ 0617 \\ 0617$	$\begin{array}{c} 1350675\\ 1350675\\ 1350675\\ 1350692\\ 1350693\end{array}$	2113A 2118A 2138 2124 2124	1350893 1350916x1 1350925 1350930 1350931	2113с 2113с 1701 2120р 2120в	1351089w 1351089w 1351093 1351094 1351100	$2101 \\ 2110 \\ 2138 \\ 2138 \\ 2138 \\ 2110$
1347894x3 1347894x4 1347894x5 1347894x6 1347897	2160g 2160g 2160g 2160g 2160g 2160g	1350209 1350210 1350216w 1350217w 1350217w 1350219	2138 2115A 2138 2138 2138 2127	$\begin{array}{c} 1350507 \\ 1350510 \\ 1350514 \\ 1350520 \\ x1 \\ 1350520 \\ x2 \end{array}$	0617 2138 2138 2113a 2113a	$\begin{array}{c} 1350694 \\ 1350695 \\ 1350696 \\ 1350697 \\ 1350700 \end{array}$	$2124 \\ 2124 \\ 2124 \\ 2124 \\ 2124 \\ 2124 \\ 2124$	$\begin{array}{c} 1350932 \\ 1350933 \\ 1350946 \\ 1350948 \\ 1350950 \end{array}$	2138 2120в 2101в 2101в 2124	1351101 1351119 1351120 1351121 1351121 1351122x1	$2110 \\ 2180 \\ 21601 \\ 21601 \\ 2180 \\ 2180$
1347905x2 1347905x3 1347905x4 1347905x6 1347913	2160g 2160g 2160g 2160g 2127	1350221w 1350224 1350230 1350250 1350251	2117в 2113в 0622 2160а 0610	1350520x3 1350520x4 1350520x5 1350520x6 1350523x1	2113а 2113а 2113а 2113а 2113а 2113в	$\begin{array}{c} 1350701 \\ 1350702 \\ 1350703 \\ 1350710 \\ 1350711 \end{array}$	$2124 \\ 2124 \\ 2124 \\ 2124 \\ 2124 \\ 2124 \\ 2124 \\$	$\begin{array}{c} 1350951\\ 1350962\\ 1350963\\ 1350964\\ 1350975 \end{array}$	2124 2120d 2120d 2120d 2120d 2124	$\begin{array}{c} 1351132 \\ 1351133 \\ 1351135 \\ 1351136 \\ 1351136 \\ 1351137 \end{array}$	$1622 \\ 1622 \\ 1622 \\ 2119 \\ 2119 \\$
1347925 1350013 1350022 1350023 1350024	$2127 \\ 1620 \\ 1601 \\ 1601 \\ 1601 \\ 1601$	1350254 1350256 1350257 1350258 1350258 1350259	$\begin{array}{c} 0610 \\ 0632 \\ 0632 \\ 0632 \\ 0632 \\ 0632 \end{array}$	1350523x2 1350523x3 1350523x4 1350523x5 1350523x5	2113в 2113в 2113в 2113в 2113в 2113в	$\begin{array}{c} 1350712\\ 1350713\\ 1350720\\ 1350721\\ 1350722\end{array}$	2124 2124 2120a 2120a 2120a	$\begin{array}{c} 1350976 \\ 1350977 \\ 1350985 \\ 1350986 \\ 1350988 \end{array}$	2116a 2116a 2160b 2160b 2160f	$\begin{array}{c} 1351142 \\ 1351142 \\ 1351143 \\ 1351143 \\ 1351143 \\ 1351150 \end{array}$	2113 2151 2113 2151 2151 2113
1350025 1350030 1350031 1350032 1350033	1601 2116a 2116a 2116a 2116a	1350260 1350261 1350271 1350273 1350292w	0632 0610 2139 2160p 0619	1350532w 1350533w 1350538 1350539 1350542	0617 0617 2124 1622 2117c	1350723 1350724 1350725 1350726 1350727	2120a 2120a 2120a 2120a 2120a 2120a	1350989 1350990 1350991 1350992 1350993	2160F 2160c 2160c 1601 1601	1351153w 1351154w 1351155w 1351156w 1351156w 1351158	2160 2160 0502 2130 2119
1350039 1350042 1350043 1350045 1350046	0502 1601 1601 1803 2160E	1350293w 1350294 1350295 1350296 1350300	0619 0619 0619 0619 2160a	1350543 1350558 1350559 1350560 1350561	2117c 2121 2121 2121 2121 2121	$\begin{array}{c} 1350728 \\ 1350729 \\ 1350734 \\ 1350735 \\ 1350749 \end{array}$	2120a 2120a 2120b 2120b 2120b 2125	1350994 1350995 1350996 1350997 1351002	2113в 2113в 2113в 2160d 2149а	1351159 1351167 1351169 1551170x1 1351172	$\begin{array}{c} 2119 \\ 2160 \\ 2115 \\ 2130 \\ 2117 \end{array}$
$\begin{array}{c} 1350047 \\ 1350051 \\ 1350052 \\ 1350054 \\ 1350055 \end{array}$	$\begin{array}{c} 2160 \\ 0502 \\ 0502 \\ 1601 \\ 1601 \end{array}$	1350301 1350310 1350311 1350320 1350321	2160a 2160a 2160a 2160a 2160a	$\begin{array}{c} 1350562 \\ 1350563 \\ 1350564 \\ 1350565 \\ 1350572 \end{array}$	$2121 \\ 2121 \\ 2121 \\ 2121 \\ 2121 \\ 2120 \\ c$	$\begin{array}{c} 1350750 \\ 1350751 \\ 1350752 \\ 1350753 \\ 1350753 \\ 1350758 \end{array}$	$\begin{array}{c} 0617 \\ 0617 \\ 0617 \\ 2130 \\ 2130 \end{array}$	$\begin{array}{c} 1351007 \\ 1351009 \\ 1351010 \\ 1351011 \\ 1351011 \\ 1351014 \end{array}$	2149A 2149A 2117c 2117c 2130	$\begin{array}{c} 1351173 \\ 1351178 \\ 1351183 \\ 1351186 \\ 1351189 \end{array}$	$2117 \\ 2160 \\ 2113 \\ 2101 \\ 2101$
1350068 1350069 1350071 1350078 1350080	2160g 2160c 2130 2160н 2160р	$\begin{array}{c} 1350350\\ 1350351\\ 1350397\\ 1350398\\ 1350399\end{array}$	2117A 2117A 0617 0617 0617	1350573 1350576 1350577 1350580 1350581	2120c 2121 2121 2121 2121 2121	$\begin{array}{c} 1350762 \\ 1350764 \\ 1350765 \\ 1350768 \\ 1350769 \end{array}$	2130 2116в 2116в 0619 2147	$\begin{array}{c} 1351015\\ 1351016\\ 1351020\\ 1351022\\ 1351022\\ 1351023 \end{array}$	2130 2149a 2149a 2149a 2149a 2149a	$\begin{array}{c} 1351189 \\ 1351194 \\ 1351195 \\ 1351199 \\ 1351200 \end{array}$	2110 2110 2101 2101 2101
1350081 1350084 1350085 1350088 1350089	2160d 2160d 2160d 2160f 2160f	1350411 1350414w 1350415w 1350416 1350417	2117а 2117с 2117с 2116в 2116в	1350584 1350585 1350586 1350587 1350587	2121 2121 2121 2121 2121 2121	1350775 1350776 1350777 1350790 1350791	1620 2116в 2116в 2130 2130	1351024w 1351025 1351027 1351028 1351028 1351029	2149a 2149a 2149a 2149a 2149a 2149a	1351201 1351202 1351204 1351205 1351205 1351206	$\begin{array}{c} 0502 \\ 0502 \\ 2101 \\ 2101 \\ 2101 \end{array}$
1350094 1350099 1350105 1350106 1350107	$\begin{array}{c} 0627 \\ 2110 \\ 2125 \\ 0617 \\ 0617 \end{array}$	$\begin{array}{c} 1350418 \\ 1350419 \\ 1350423 \\ 1350427 \\ 1350434 \end{array}$	2116b 2116b 2116b 2116b 2116b 2139	$\begin{array}{c} 1350589 \\ 1350591 \\ 1350593 \\ 1350594 \\ 1350604 \end{array}$	2121 0632 1622 1622 2160b	$\begin{array}{c} 1350800\\ 1350810\\ 1350818\\ 1350819\\ 1350825 \end{array}$	2130 2130 2130 2130 2130 2113в	$\begin{array}{c} 1351030\\ 1351031\\ 1351032\\ 1351033\\ 1351033\\ 1351034 \end{array}$	2149a 2149a 2149a 2149a 2149a 2149a	1351207 1351208 1351209 1351214w 1351215w	2101 2101 2149 2101 2101
1350108 1350113x2 1350120 1350124 1350125	0617 0617 2160A 2160E 2160E	1350435 1350438 1350439 1350440 1350460w	2139 2139 2139 2117в 2124	$\begin{array}{c} 1350610\\ 1350611\\ 1350615\\ 1350616\\ 1350616\\ 1350617\end{array}$	2160d 2160d 2125 2125 2125 2125	$\begin{array}{c} 1350825\\ 1350826\\ 1350826\\ 1350832\\ 1350833\\ 1350833\end{array}$	2138 2113в 2138 2120е 2120е	$\begin{array}{c} 1351035\\ 1351036\\ 1351037\\ 1351040\\ 1351043\end{array}$	2149a 2120d 2120d 2149a 2151	1351216 1351217 1351218 1351219 1351220	$1601 \\ 1601 \\ 1601 \\ 1601 \\ 2160$
1350128 1350145 1350154 1350155 1350155	2138 1620 2160d 2160d 2160d	1350461w 1350462w 1350463w 1350464w 1350464w 1350465w	2124 2124 2124 2124 2124 •2124	$\begin{array}{c} 1350618 \\ 1350628 \\ 1350630 \\ 1350631 \\ 1350633 \end{array}$	2125 2120c 2113a 2113a 2147	$\begin{array}{c} 1350834 \\ 1350837 \\ 1350838 \\ 1350844 \\ 1350845 \end{array}$	2120e 2120e 2120e 2120e 2120e 2120e	1351044 1351045 1351046 1351047 1351047	2117a 2117a 2117a 2117a 2117a 2138	1351221 1351222 1351223 1351224 1351224 1351226	$2160 \\ 2160 \\ 2160 \\ 2160 \\ 2160 \\ 1620$

1351238

### NUMERICAL INDEX

<ul> <li>Part No.</li> </ul>	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.
1351238 1351239 1351242 1351244 1351244 1351245	2138 2138 2102A 2102A 2102A	$\begin{array}{c} 1357723\\ 1358200\\ 1358664\\ 1358665\\ 1358659\end{array}$	$\begin{array}{c} 2120 \text{E} \\ 0617 \\ 2138 \\ 2138 \\ 2138 \\ 2138 \end{array}$	1358844 1358845 1358849w 1358854 1358856	2119 2119 0617 2113в 2113в	1360830 1360831 1360831 1360848 1360848	2138 2113B 2138 2113B 2113B 2138	$\begin{array}{c} 1541015\\ 1541018\\ 1541022\\ 1541024\\ 1541025\end{array}$	0832 0832 0832 0832 0832	$\begin{array}{c} 1541184\\ 1541185\\ 1541185\\ 1541185\\ 1541192\\ 1541195\end{array}$	$\begin{array}{c} 0820 \\ 0814 \\ 0820 \\ 0817 \\ 0820 \end{array}$
$\begin{array}{c} 1351252 \\ 1351253 \\ 1351254 \\ 1351255 \\ 1351258 \end{array}$	2120e 2120e 2120e 2120e 2120e 2120g	1358698 1358699 1358701 1358702 1358707	$2138 \\ 2138 \\ 2125 \\ 2125 \\ 1620$	$\begin{array}{c} 1358862 \\ 1358863 \\ 1358872 \\ 1358874 \\ 1358875 \end{array}$	$2110 \\ 210 \\ 2100 \\ 210 \\ 210 \\ 210 \\ 210 \\ 210 \\ 210 \\ $	$\begin{array}{c} 1360849 \\ 1360849 \\ 1360858 \\ 1360859 \\ 1360859 \\ 1360896 \end{array}$	2113в 2138 2113в 2113в 2113в 2116с	$\begin{array}{c} 1541026 \\ 1541028 \\ 1541029 \\ 1541030 \\ 1541031 \end{array}$	0837 0837 0837 0837 0837	$\begin{array}{c} 1541197 \\ 1541198 \\ 1541199 \\ 1541200 \\ 1541202 \end{array}$	0820 0820 0820 0820 0820 0820
$\begin{array}{c} 1351259\\ 1351263\\ 1351268\\ 1351269\\ 1351272\end{array}$	2120g 2120g 2120f 2120f 2120e 2120g	$\begin{array}{r} 1358708 \\ 1358711 \\ 1358712 \\ 1358713 \\ 1358714 \end{array}$	1620 2117в 2117р 2117р 1620	1358876 1358877 1358901 1358903 1358903	2160a 2160a 2101a 2110 2101a	1360897 1539025 1539026 1539027 1539067	2116c 1408 1407 1408 0102	$\begin{array}{c} 1541034\\ 1541035\\ 1541036\\ 1541037\\ 1541037\\ 1541038 \end{array}$	0837 0837 0837 0837 0837	$\begin{array}{c} 1541203 \\ 1541208 \\ 1541209 \\ 1541226 \\ 1541227 \end{array}$	$\begin{array}{c} 0820 \\ 0811 \\ 0811 \\ 0817 \\ 0817 \end{array}$
1351273 1351274 1351275 1351276 1351277	2120g 2120g 2120g 2120g 2120g 2120g	$\begin{array}{c} 1358715\\ 1358716\\ 1358717\\ 1358720\\ 1358722\\ 1358722 \end{array}$	$\begin{array}{c} 0617 \\ 0617 \\ 0503 \\ 0617 \\ 0617 \\ 0617 \end{array}$	1358905 1358908 1358913 1358914x1 1358915	2110 2101A 2101B 2138 2138	$\begin{array}{c} 1539081 \\ 1539373 \\ 1539381 \\ 1539410 \\ 1539412 \end{array}$	$\begin{array}{c} 0105\\ 0209\\ 0116\\ 0116\\ 0116\\ 0116 \end{array}$	$\begin{array}{c} 1541039 \\ 1541040 \\ 1541041 \\ 1541042 \\ 1541043 \end{array}$	0837 0837 0837 0837 0837	$\begin{array}{c} 1541228\\ 1541229\\ 1541237\\ 1541238\\ 1541238\\ 1541239\end{array}$	0817 0817 0817 0817 0817
1351292 1351295 1351296 1351297 1351302w	2160c 2101b 2117a 2138 2145a	1358723 1358726w 1358728 1358729 1358730	0617 1601 0503 0503 2160в	1358919x1 1358920 1358930 1358931 1358931 1358932	2115A 1620 2124 2124 2124 2124	$\begin{array}{c} 1539472 \\ 1539479 \\ 1539484 \\ 1539489 \\ 1539610 \end{array}$	$1205 \\ 0116 \\ 1518 \\ 0851 \\ 0312$	$\begin{array}{c} 1541044 \\ 1541045 \\ 1541046 \\ 1541052 \\ 1541055 \end{array}$	0837 0837 0837 0827 0827	$\begin{array}{c} 1541248 \\ 1541250 \\ 1541251 \\ 1541252 \\ 1541253 \end{array}$	$0814 \\ 0811 \\ 0834 \\ 0834 \\ 0834 \\ 0834$
1351304w 1351306 1351310 1351311 1351311	2109а 2109а 2147 2147 2147 2117в	$\begin{array}{c} 1358734 \\ 1358735 \\ 1358739 \\ 1358746 \\ 1358765 \end{array}$	$1601 \\ 1601 \\ 2110 \\ 1620 \\ 2138$	$\begin{array}{c} 1358933 \\ 1358934 \\ 1358935 \\ 1358936 \\ 1358936 \\ 1358937 \end{array}$	$2124 \\ 1620 \\ 1620 \\ 2124 \\ 2124 \\ 2124$	$\begin{array}{c} 1539612\\ 1539716\\ 1539745\\ 1539746\\ 1539746\\ 1539856 \end{array}$	$\begin{array}{c} 0312 \\ 0607 \\ 0106 \\ 0106 \\ 0403 \end{array}$	$\begin{array}{c} 1541056 \\ 1541058 \\ 1541059 \\ 1541061 \\ 1541063 \end{array}$	0827 0827 0827 0827 0827	$\begin{array}{c} 1541254\\ 1541255\\ 1541256\\ 1541256\\ 1541256\\ 1541257\end{array}$	0827 0824 0824 1309в 0824
1351315 1351316 1351317 1351318w 1351320	2117в 2117в 2117в 2145л 2149в	1358767 1358768x1 1358768x2 1358768x3 1358768x3 1358768x4	$2180 \\ 2180 \\ 2180 \\ 2180 \\ 2180 \\ 2180 \\ 2180 \\$	1358941 1358942w 1358943w 1358943w 1358944 1358945	$2124 \\ 2124 \\ 2124 \\ 2124 \\ 2124 \\ 2124 \\ 2124$	$\begin{array}{c} 1539857\\ 1539920\\ 1539975\\ 1540026\\ 1540066\end{array}$	0403 1002 0841 2115в 0630	$\begin{array}{c} 1541064 \\ 1541065 \\ 1541066 \\ 1541067 \\ 1541068 \end{array}$	0827 0827 0827 0827 0827	$\begin{array}{c} 1541258\\ 1541322\\ 1541400\\ 1541478\\ 1541479\end{array}$	0824 1107 1309в 1107 1803
1351321 1351322 1351323 1351324 1351324 1351325	2149в 2149в 2149в 2149в 2149в 2149в	1358768x5 1358786x6 1358772 1358778 1358778 1358779	$2180 \\ 2180 \\ 2138 \\ 1601 \\ 1601$	1358946w 1358947w 1358950 1358951 1358952	$2124 \\ 2124 \\ 0502 \\ 0502 \\ 0502 \\ 0502$	$\begin{array}{c} 1540075\\ 1540081\\ 1540092\\ 1540126\\ 1540269\end{array}$	0630 0630 2101A 1721 0602	$\begin{array}{c} 1541069 \\ 1541070 \\ 1541071 \\ 1541072 \\ 1541074 \end{array}$	0827 0827 0827 0827 0827	$\begin{array}{c} 1541479 \\ 1541533 \\ 1541533 \\ 1541639 \\ 1541674 \end{array}$	1805 0206 0854 0837 1701
1351326 1351327 1351328 1351329 1351330	2149в 2149в 2149в 2149в 2149в 2149в	1358783 1358784 1358786 1358786 1358787 1358788	$\begin{array}{c} 0502 \\ 0617 \\ 0617 \\ 0617 \\ 1601 \end{array}$	$\begin{array}{c} 1358953 \\ 1358960 \\ 1358961 \\ 1358964 \\ 1358965 \end{array}$	$\begin{array}{c} 0502 \\ 2124 \\ 2124 \\ 2124 \\ 2124 \\ 2124 \end{array}$	$\begin{array}{c} 1540296 \\ 1540297 \\ 1540321 \\ 1540383 \\ 1540389 \end{array}$	0627 0627 1721 0705a 0703a	$\begin{array}{c} 1541075\\ 1541076\\ 1541080\\ 1541081\\ 1541084\end{array}$	0827 0827 0827 0827 0811	$\begin{array}{c} 1541674 \\ 1541682 \\ 1541683 \\ 1541697 \\ 1541698 \end{array}$	2115в 1204 1204 0302 0302
1351331 1351333 1351334 1351335 1351335 1351377	2149b 2125 2116c 2116c 2120g	1358789 1358790 1358791 1358793 1358793 1358798w	1601 1601 1601 1601 0617	1358966 1358967 1358968 1358971 1358972	2138 2138 2138 2138 2138 2138	$\begin{array}{c} 1540390 \\ 1540393 \\ 1540394 \\ 1540395 \\ 1540395 \\ 1540395 \end{array}$	0704a 0702a 0702a 0702a 0702a	$\begin{array}{c} 1541085\\ 1541086\\ 1541087\\ 1541088\\ 1541088\\ 1541089\end{array}$	0811 0811 0811 0811 0702в	$\begin{array}{c} 1541700 \\ 1541706 \\ 1541930 \\ 1541931 \\ 1542004 \end{array}$	1204 1306a 1107 1107 1312a
$\begin{array}{c} 1351378 \\ 1351384 \\ 1351467 \\ 1351468 \\ 1351476 \end{array}$	$\begin{array}{c} 2120 {\rm G} \\ 2105 \\ 0610 \\ 0610 \\ 2105 \end{array}$	1358799w 1358802 1358807 1358810 1358811	0617 1601 0502 2160b 2160b	1358973x1 1358974 1358975 1358976 1358976 1358977	$2138 \\ 2138 \\ 2138 \\ 1601 \\ 1601 \\ 1601 \\$	$\begin{array}{c} 1540413\\ 1540779\\ 1540810\\ 1540836\\ 1540906 \end{array}$	2149с 0606 0701в 0627 0832	$\begin{array}{c} 1541089 \\ 1541099 \\ 1541127 \\ 1541139 \\ 1541143 \end{array}$	0705b 0830 0824 0827 0827	$\begin{array}{c} 1542212\\ 1542216\\ 1542308\\ 1542309\\ 1542309\\ 1542361\end{array}$	1209 1209 0320 0320 0320
$\begin{array}{c} 1351477\\ 1351478\\ 1351479\\ 1351546\\ 1351547\end{array}$	2105 2105 2105 2116c 2116c	1358814 1358815 1358820 1358821 1358823	2160d 2160d 0617 0617 2101a	1358984x1 1358994x1 1360025x1 1360026x1 1360028x1	2113d 2113a 2138 2113d 213b 2138	$\begin{array}{c} 1540909\\ 1540911\\ 1540912\\ 1540913\\ 1540922 \end{array}$	$\begin{array}{c} 0837 \\ 0811 \\ 0828 \\ 0828 \\ 0823 \end{array}$	$\begin{array}{c} 1541156 \\ 1541157 \\ 1541163 \\ 1541164 \\ 1541166 \end{array}$	$\begin{array}{c} 0828 \\ 0828 \\ 0828 \\ 0828 \\ 0828 \\ 0814 \end{array}$	$\begin{array}{c} 1542362 \\ 1542363 \\ 1542364 \\ 1542365 \\ 1542674 \end{array}$	0320 0320 0320 0320 0320 1304A
1355038 1355376 1356177 1356356w 1356357w	2121 2113b 1622 2145a 2145a	1358823 1358823 1358832 1358836 1358836 1358838	2101в 2110 0610 0610 1601	1360573 1360586 1360587 1360697 1360810	$2138 \\ 2120 \\ G \\ 2120 \\ G \\ 0617 \\ 2125$	$\begin{array}{c} 1540930\\ 1540935\\ 1540963\\ 1540964\\ 1540965\end{array}$	$\begin{array}{c} 0823 \\ 0811 \\ 0832 \\ 0832 \\ 0832 \end{array}$	$\begin{array}{c} 1541169 \\ 1541172 \\ 1541173 \\ 1541174 \\ 1541174 \\ 1541176 \end{array}$	$\begin{array}{c} 0814 \\ 0820 \\ 0820 \\ 0820 \\ 0820 \\ 0820 \end{array}$	$\begin{array}{c} 1542720 \\ 1542722 \\ 1542765 \\ 1542846 \\ 1542873 \end{array}$	0202 0202 0320 1306A 0321
$\begin{array}{c} 1356562 \\ 1356563 \\ 1356564 \\ 1356565 \\ 13567722 \end{array}$	2139 2139 2139 2139 2139 2120e	$\begin{array}{r} 1358839 \\ 1358840 \\ 1358841 \\ 1358842 \\ 1358842 \\ 1358843 \end{array}$	$1601 \\ 2119 \\ 2119 \\ 2119 \\ 2119 \\ 2119 \\ 2119 \\ 2119 \\$	1360811 1360812 1360813 1360828 1360830	2125 2125 2125 2117a 2113b	$\begin{array}{c} 1540992 \\ 1540993 \\ 1540994 \\ 1540997 \\ 1541005 \end{array}$	$\begin{array}{c} 0832 \\ 0832 \\ 0832 \\ 0834 \\ 0834 \end{array}$	$\begin{array}{c} 1541177\\ 1541178\\ 1541179\\ 1541182\\ 1541182\\ 1541183\end{array}$	0820 0820 0820 0820 0820	$\begin{array}{c} 1542897 \\ 1542904 \\ 1542905 \\ 1542906 \\ 1542923 \end{array}$	$\begin{array}{c} 0602\\ 0321\\ 0321\\ 0321\\ 0321\\ 0321 \end{array}$

Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.
1542924 1542925 1542926 1542927 1542927 1542928	0321 0321 0321 0321 0321 0321	$\begin{array}{c} 1544480\\ 1544481\\ 1544481\\ 1544481\\ 1544591\\ 1544714\end{array}$	1801 1518 1520 0103 0308	$\begin{array}{r} 1546218\\ 1546335\\ 1546371\\ 1546393\\ 154662\end{array}$	1312в 1110 0602 0602 1204	1549482 1549483 1549503 1549563 1549567p	1110 1110 0621 1105 1309в	1552336 1552345 1552360 1552381 1552381	0204 1209 0204 0204 0751в	1553073 1553074 1553075 1553076 1553077	0702в 0702в 0702в 0702в 0702в 0702в
$\begin{array}{c} 1542929\\ 1542930\\ 1542931\\ 1542932\\ 1542932\\ 1542933\end{array}$	0321 0321 0321 0321 0321	$\begin{array}{c} 1544725\\ 1544768\\ 1544772\\ 1544805\\ 1544810 \end{array}$	0403 1716 1716 1004 1002	1546943 1546977 1547124P 1547206 1547207	0627 0105 1521 0101 0101	1549568p 1549653 1549705 1550303 1550337	1309b 1102 0602 0103 1507	$\begin{array}{c} 1552381 \\ 1552396 \\ 1552400 \\ 1552401 \\ 1552401 \\ 1552401 \end{array}$	1108 1107 2102c 0320 2102c	$\begin{array}{c} 1553078 \\ 1553079 \\ 1553080 \\ 1553081 \\ 1553082 \end{array}$	0701в 0702в 0702в 0704в 0704в
$\begin{array}{c} 1542937 \\ 1542938 \\ 1542940 \\ 1542942 \\ 1542942 \\ 1542943 \end{array}$	0321 0321 0320 0321 0321	$\begin{array}{c} 1544811 \\ 1544868 \\ 1544875 \\ 1544970 \\ 1544971 \end{array}$	1716 0308 1716 0101 0101	$\begin{array}{c} 1547237\\ 1547256\\ 1547257\\ 1547288\\ 1547356\end{array}$	1209 1309в 1309в 1209 0615	$\begin{array}{c} 1550360 \\ 1550373 \\ 1550377 \\ 1550379 \\ 1550386 \end{array}$	$\begin{array}{c} 0103 \\ 0606 \\ 0115 \\ 0115 \\ 0102 \end{array}$	$\begin{array}{c} 1552402 \\ 1552516 \\ 1552521 \\ 1552540 \\ 1552562 \end{array}$	2102c 0206 0206 0206 0202	$\begin{array}{c} 1553083 \\ 1553084 \\ 1553084 \\ 1553085 \\ 1553085 \\ 1553087 \end{array}$	0703в 0703в 0704в 0704в 0701в
$\begin{array}{c} 1542944 \\ 1542945 \\ 1542946 \\ 1542947 \\ 1542947 \\ 1542948 \end{array}$	0321 0321 0321 0321 0321 0321	$\begin{array}{c} 1544987 \\ 1545010 \\ 1545042 \\ 1545072 \\ 1545141 \end{array}$	0602 0627 1501 0102 0701A	$\begin{array}{c} 1547363 \\ 1547364 \\ 1547536 \\ 1547588 \\ 1547624 \end{array}$	1309в 1309в 1521 0401 2130	$\begin{array}{c} 1550438\\ 1550470\\ 1550502\\ 1550503\\ 1550521\end{array}$	$\begin{array}{c} 0102 \\ 1107 \\ 0606 \\ 0606 \\ 0103 \end{array}$	$\begin{array}{c} 1552569 \\ 1552570 \\ 1552571 \\ 1552576 \\ 1552576 \\ 1552577 \end{array}$	0320 0320 0320 0823 0823	1553088 1553089 1553091 1553092 1553093	0705в 0702в 0701в 0704в 0704в
$\begin{array}{c} 1542949\\ 1542951\\ 1542952\\ 1542955\\ 1542955\\ 1542956\end{array}$	0321 0321 0321 0321 0321 0321	$\begin{array}{c} 1545143 \\ 1545144 \\ 1545145 \\ 1545147 \\ 1545147 \\ 1545150 \end{array}$	0701 A 0701 A 0701 A 0747 A 0702 A	$\begin{array}{c} 1547627\\ 1547806\\ 1547807\\ 1547808\\ 1547808\\ 1547836\end{array}$	0841 1004 1004 1004 0312	$\begin{array}{c} 1550523\\ 1550556\\ 1550583\\ 1550724\\ 1550745\end{array}$	$\begin{array}{c} 0203 \\ 0602 \\ 1202 \\ 0105 \\ 0105 \end{array}$	$\begin{array}{c} 1552589 \\ 1552615 \\ 1552616 \\ 1552647 \\ 1552651 \end{array}$	0206 0900 0900 1308b 2102a	$\begin{array}{c} 1553094 \\ 1553095 \\ 1553098 \\ 1553099 \\ 1553099 \\ 1553100 \end{array}$	0704в 0701в 0747в 0747в 0747в
$\begin{array}{c} 1542957 \\ 1542958 \\ 1542959 \\ 1542960 \\ 1542963 \end{array}$	0321 0321 0321 0321 0321 0321	$\begin{array}{c} 1545153\\ 1545160\\ 1545160\\ 1545160\\ 1545166\\ 1545169\end{array}$	0702A 0702A 0811 0701A 0701A	$\begin{array}{r} 1547899 \\ 1548197 \\ 1548198 \\ 1548199 \\ 1548200 \end{array}$	1107 1309в 1309в 1309в 1309в 1309в	$\begin{array}{c} 1550753 \\ 1550789 \\ 1550790 \\ 1550791 \\ 1550792 \end{array}$	$\begin{array}{c} 2102c\\ 0606\\ 0606\\ 0606\\ 0606\\ 0606\end{array}$	$\begin{array}{c} 1552766 \\ 1552789 \\ 1552795 \\ 1552795 \\ 1552803 \end{array}$	0901 0900 0760а 0760в 2149с	1553101 1553104 1553137 1553138 1553152	0747в 1107 0817 0817 0202
$\begin{array}{c} 1542965\\ 1542966\\ 1542967\\ 1542968\\ 1542968\\ 1542969\end{array}$	0321 0321 0321 0321 0321 0321	$\begin{array}{c} 1545173 \\ 1545195 \\ 1545220 \\ 1545227 \\ 1545231 \end{array}$	0701A 0811 0102 1205 1205	$\begin{array}{c} 1548201 \\ 1548204 \\ 1548206 \\ 1548207 \\ 1548208 \end{array}$	1309в 1309в 1309в 1309в 1309в 1309в	$\begin{array}{c} 1550793 \\ 1550794 \\ 1550796 \\ 1550797 \\ 1550816 \end{array}$	0606 0606 0606 0606 0501	$\begin{array}{c} 1552815\\ 1552824\\ 1552910\\ 1552910\\ 1552912\end{array}$	2149c 0751b 0751a 0751b 0751b	$\begin{array}{c} 1553172 \\ 1553186 \\ 1553199 \\ 1553200 \\ 1553206 \end{array}$	$1716 \\ 0601 \\ 0632 \\ 0632 \\ 1522$
$\begin{array}{c} 1542970 \\ 1543003 \\ 1543064 \\ 1543070 \\ 1543083 \end{array}$	0321 1107 0817 0828 0828	$\begin{array}{c} 1545274 \\ 1545311 \\ 1545312 \\ 1545313 \\ 1545313 \\ 1545314 \end{array}$	0811 1308в 1308в 1308в 1308в	$\begin{array}{c} 1548209 \\ 1548211 \\ 1548213 \\ 1548214 \\ 1548214 \\ 1548215 \end{array}$	1309в 1309в 1309в 1309в 1309в 1309в	$\begin{array}{c} 1550843 \\ 1550865 \\ 1550918 \\ 1550956 \\ 1551190 \end{array}$	2102c 0303 0811 0504 0501	1552915 1552918 1552920 1552921 1552922	0751b 0751b 0751b 0751b 0751b 0751b	$\begin{array}{c} 1553207 \\ 1553239 \\ 1553241 \\ 1553242 \\ 1553242 \\ 1553242 \end{array}$	$1522 \\ 1112 \\ 1109 \\ 1109 \\ 1112 \\ 1112$
1543085 1543088 1543089 1543192 1543193	0817 0820 0820 0302 0302	$\begin{array}{c} 1545315\\ 1545316\\ 1545317\\ 1545319\\ 1545321 \end{array}$	1308в 1308в 1308в 1308в 1308в 1308в	$\begin{array}{c} 1548216 \\ 1548217 \\ 1548218 \\ 1548219 \\ 1548284 \end{array}$	1309в 1309в 1309в 1309в 1309в 0627	$\begin{array}{c} 1551279 \\ 1551344 \\ 1551345 \\ 1551362 \\ 1551365 \end{array}$	1203 1308в 1308в 1308в 1308в 1308в	$\begin{array}{c} 1552923\\ 1552923\\ 1552924\\ 1552925\\ 1552925\\ 1552926\end{array}$	0751a 0751b 0751b 0751b 0751a	1553296 1553297 1553298 1553299 1553328	1309в 1309в 1309в 1309в 1309в 0830
$\begin{array}{c} 1543206 \\ 1543223 \\ 1543223 \\ 1543339 \\ 1543399 \\ 1543399 \end{array}$	$\begin{array}{c} 0321 \\ 1203 \\ 1407 \\ 0820 \\ 0851 \end{array}$	$\begin{array}{c} 1545322 \\ 1545324 \\ 1545325 \\ 1545326 \\ 1545327 \end{array}$	1308в 1308в 1308в 1308в 1308в 1308в	$\begin{array}{c} 1548302 \\ 1548305 \\ 1548357 \\ 1548358 \\ 1548358 \\ 1548406 \end{array}$	1116 2101а 2102а 2102в 0101	$\begin{array}{c} 1551366 \\ 1551379 \\ 1551380 \\ 1551414 \\ 1551415 \end{array}$	1308в 2102с 2102с 1203 1203	$\begin{array}{c} 1552926 \\ 1552927 \\ 1552928 \\ 1552929 \\ 1552929 \\ 1552929 \end{array}$	0751b 0751b 0751b 0751a 0751a	1553340 1553354 1553355 1553370x1 1553382	1204 1309в 1204 2113в 0817
$\begin{array}{c} 1543441 \\ 1543523 \\ 1543681 \\ 1543682 \\ 1543775 \end{array}$	$\begin{array}{c} 0501 \\ 0102 \\ 2102c \\ 2102c \\ 0832 \end{array}$	$\begin{array}{c} 1545329 \\ 1545332 \\ 1545341 \\ 1545489 \\ 1545490 \end{array}$	1308b 1308b 1205 0811 0811	1548436 1548455x2 1548455x7 1548474 1548497x3	0601 2101в 2101в 1716 2101а	$\begin{array}{c} 1551416 \\ 1551417 \\ 1551471 \\ 1552039 \\ 1552040 \end{array}$	1204 1204 2102c 1109 1109	1552930 1552930 1552932 1552932 1552932 1552994	0751A 0751b 0751A 0751b 0811	$\begin{array}{c} 1553388 \\ 1553403 \\ 1553453 \\ 1553453 \\ 1553497 \\ 1553498 \end{array}$	0703а 1308в 0811 1308в 1308в
$\begin{array}{c} 1543902 \\ 1543914 \\ 1543914 \\ 1543914 \\ 1543914 \\ 1543994 \end{array}$	1308в 0205 0206 1108 1308в	$\begin{array}{c} 1545831 \\ 1545832 \\ 1545833 \\ 1545834 \\ 1545835 \end{array}$	$\begin{array}{c} 0825 \\ 0825 \\ 0825 \\ 0825 \\ 0825 \\ 0824 \end{array}$	1548497x18 1548504 1548509 1548513 1548771	2101A 0901 0506 1309в 1518	$\begin{array}{c} 1552042 \\ 1552103 \\ 1552264 \\ 1552275 \\ 1552275 \\ 1552275 \end{array}$	$\begin{array}{c} 0204 \\ 1801 \\ 0115 \\ 0204 \\ 1108 \end{array}$	$\begin{array}{c} 1552998 \\ 1552999 \\ 1553000 \\ 1553002 \\ 1553015 \end{array}$	$\begin{array}{c} 0811 \\ 0817 \\ 0814 \\ 0830 \\ 0811 \end{array}$	1553539 1553609 1553703 1553737 1553737	0602 0101 1207 0701A 0811
$\begin{array}{c} 1543994 \\ 1544035 \\ 1544036 \\ 1544157 \\ 1544218 \end{array}$	1309в 1204 1204 0103 1204	$\begin{array}{c} 1545842 \\ 1545854 \\ 1545888 \\ 1545916 \\ 1546041 \end{array}$	0814 0832 1004 2149c 0105	$\begin{array}{c} 1548803 \\ 1548810 \\ 1548931 \\ 1549216 \\ 1549222 \end{array}$	1309в 0203 0505 2102с 0302	$\begin{array}{c} 1552287 \\ 1552294 \\ 1552299 \\ 1552303 \\ 1552305 \end{array}$	$\begin{array}{c} 0206 \\ 1105 \\ 0206 \\ 1105 \\ 1108 \end{array}$	$\begin{array}{c} 1553052 \\ 1553063 \\ 1553064 \\ 1553065 \\ 1553066 \end{array}$	0632 0701в 0747в 0747в 0747в	1553786 1553787 1553886 1553891 1553902	$1801 \\ 1801 \\ 0402 \\ 2102c \\ 1525$
$\begin{array}{c} 1544241 \\ 1544246 \\ 1544357 \\ 1544479 \\ 1544479 \\ \end{array}$	$\begin{array}{c} 0627 \\ 0206 \\ 0302 \\ 1205 \\ 1801 \end{array}$	$\begin{array}{c} 1546105\\ 1546133\\ 1546135\\ 1546162\\ 1546166\\ 1546166\end{array}$	1205 1308в 1308в 1308в 1308в 1004	$\begin{array}{c} 1549243 \\ 1549244 \\ 1549479 \\ 1549480 \\ 1549481 \end{array}$	0230 0230 1110 1110 1110	1552311 1552311 1552334 1552334 1552334 1552335	$\begin{array}{c} 0204 \\ 1620 \\ 0204 \\ 1108 \\ 1108 \end{array}$	1553067 1553067 1553068 1553069 1553071	0747а 0747в 0747в 0702в 0702в	$\begin{array}{c} 1553902 \\ 1553903 \\ 1553903 \\ 1553904 \\ 1554004 \end{array}$	$1801 \\ 1525 \\ 1801 \\ 0402 \\ 1525$

1554004

.

Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.
$1554004 \\ 1554013 \\ 1554057 \\ 1554058 \\ 1554070$	1801 0103 0701в 0701в 0204	$\begin{array}{c} 1555539\\ 1555539\\ 1555550\\ 1555547\\ 1555550\end{array}$	2113b 2138 2117a 0602 0602	$\begin{array}{c} 1556065\\ 1556068\\ 1556070\\ 1556071\\ 1556074 \end{array}$	1304A 1308B 0501 0501 0307	$\begin{array}{c} 1556483\\ 1556486\\ 1556796\\ 1556820\\ 1556827\end{array}$	0506 0320 2101a 2102a 2102a	1557213 1557215 1557221 1557225 1557225 1557226	0301 0603 0603 0603 0603	$\begin{array}{c} 1557416\\ 1557417\\ 1557419\\ 1557419\\ 1557420\\ \end{array}$	1000 1000 0615 2101A 0302
$\begin{array}{c} 1554074 \\ 1554074 \\ 1554074 \\ 1554074 \\ 1554074 \\ 1554075 \end{array}$	0702a 0702b 0705b 1716 0702a	$\begin{array}{c} 1555583 \\ 1555584 \\ 1555589 \\ 1555590 \\ 1555599 \end{array}$	1112 1112 1112 1112 1112 1305A	$\begin{array}{c} 1556085\\ 1556088\\ 1556092\\ 1556093\\ 1556097\end{array}$	1108 0204 0206 0206 1305A	$\begin{array}{c} 1556828 \\ 1556830 \\ 1556851 \\ 1556852 \\ 1556854 \end{array}$	2102A 2102A 0320 0320 0320	$\begin{array}{c} 1557229 \\ 1557234 \\ 1557235 \\ 1557236 \\ 1557237 \end{array}$	0751A 1803 1803 1803 1803 1803	$\begin{array}{c} 1557421 \\ 1557422 \\ 1557423 \\ 1557426 \\ 1557431 \end{array}$	$\begin{array}{c} 0301 \\ 0308 \\ 0308 \\ 0627 \\ 1116 \end{array}$
$\begin{array}{c} 1554075 \\ 1554075 \\ 1554076 \\ 1554076 \\ 1554076 \\ 1554076 \end{array}$	0702b 0704b 0702a 0702b 0705b	$\begin{array}{c} 1555602 \\ 1555713 \\ 1555718 \\ 1555731 \\ 1555731 \\ 1555739 \end{array}$	1112 0109 0401 0751A 0505	$\begin{array}{c} 1556102 \\ 1556111 \\ 1556118 \\ 1556120 \\ 1556122 \end{array}$	0109 0610 1116 0307 0751в	$\begin{array}{c} 1556855\\ 1556858\\ 1556859\\ 1556859\\ 1556859\\ 1556902 \end{array}$	0320 0320 0115 2101A 0609	$\begin{array}{c} 1557238 \\ 1557239 \\ 1557240 \\ 1557249 \\ 1557250 \end{array}$	$\begin{array}{c} 0302 \\ 0302 \\ 0303 \\ 1518 \\ 0220 \end{array}$	$\begin{array}{c} 1557432 \\ 1557433 \\ 1557434 \\ 1557447 \\ 1557448 \end{array}$	2102в 2102с 2102а 0853 0632
$\begin{array}{c} 1554077\\ 1554077\\ 1554137\\ 1554138\\ 1554227\end{array}$	0702в 0705в 0702а 0702а 0820	$\begin{array}{c} 1555741 \\ 1555743 \\ 1555764 \\ 1555765 \\ 1555767 \end{array}$	0632 0632 2102a 2102a 2102a	$\begin{array}{c} 1556124\\ 1556126\\ 1556128\\ 1556129\\ 1556130\\ \end{array}$	0760в 0760в 0760в 0751в 0751а	$\begin{array}{c} 1556912 \\ 1556913 \\ 1556914 \\ 1556919 \\ 1556920 \end{array}$	2101a 2101a 2101a 2101a 2101a 2101a	$\begin{array}{c} 1557252 \\ 1557262 \\ 1557263 \\ 1557265 \\ 1557271 \end{array}$	$1518 \\ 1716 \\ 1716 \\ 0303 \\ 0115$	$\begin{array}{c} 1557448 \\ 1557450 \\ 1557451 \\ 1557453 \\ 1557454 \end{array}$	0853 0841 0312 2115в 2115в
$\begin{array}{c} 1554230 \\ 1554236 \\ 1554244 \\ 1554247 \\ 1554377 \end{array}$	0820 1207 0104 0105 1209	$\begin{array}{c} 1555768 \\ 1555771 \\ 1555774 \\ 1555775 \\ 1555813 \end{array}$	2102д 0118 1522 1522 2115в	$\begin{array}{c} 1556134\\ 1556136\\ 1556137\\ 1556146\\ 1556159\end{array}$	0760A 0760A 0621 2138 0312	$\begin{array}{c} 1556923\\ 1556924\\ 1556925\\ 1556926\\ 1556928\\ \end{array}$	2101A 2101A 2101A 2101A 2101A 0602	$\begin{array}{c} 1557273\\ 1557274\\ 1557275\\ 1557275\\ 1557275\\ 1557278\end{array}$	0105 0700A 0851 2138 0841	$\begin{array}{c} 1557455\\ 1557464\\ 1557472\\ 1557480\\ 1557481 \end{array}$	2149A 0627 0109 2102c 2102c
1554379 1554380 1554436 1554454 1554477	1209 1209 0307 1116 1116	$\begin{array}{c} 1555823\\ 1555873\\ 1555874\\ 1555875\\ 1555875\\ 1555875\end{array}$	0751A 0501 0501 0621 1701	$\begin{array}{c} 1556160 \\ 1556166 \\ 1556167 \\ 1556190 \\ 1556191 \end{array}$	$\begin{array}{c} 0312 \\ 1505 \\ 1505 \\ 1803 \\ 1803 \end{array}$	$\begin{array}{c} 1556928\\ 1556929\\ 1556936\\ 1556941\\ 1556944 \end{array}$	2117A 0105 0601 0603 0603	$\begin{array}{c} 1557279\\ 1557280\\ 1557280\\ 1557296\\ 1557296\\ 1557298\end{array}$	0841 1301A 1304A 1501 1718	$\begin{array}{c} 1557488 \\ 1557489 \\ 1557463 \\ 1557476 \\ 1557477 \end{array}$	1522 2102a 1310a 1525 1525
$\begin{array}{c} 1554542 \\ 1554546 \\ 1554550 \\ 1554620 \\ 1554667 \end{array}$	1518 1518 1518 1518 0102	$\begin{array}{c} 1555875\\ 1555881\\ 1555883\\ 1555884\\ 1555884\\ 1555889\end{array}$	1718 1500 1507 1501 1501	$\begin{array}{c} 1556192 \\ 1556193 \\ 1556198 \\ 1556198 \\ 1556198 \\ 1556199 \end{array}$	1803 1803 1803 1805 1805	$\begin{array}{c} 1556947 \\ 1556951 \\ 1556952 \\ 1556953 \\ 1556963 \end{array}$	0603 0602 0609 0320 2115в	1557304 1557319 1557332 1557336 1557345	0103 0854 0700A 0627 0312	$\begin{array}{c} 1557491 \\ 1557492 \\ 1557500 \\ 1557502 \\ 1557503 \end{array}$	$\begin{array}{c} 0202 \\ 0201 \\ 1402 \\ 1100 \\ 1100 \end{array}$
1554674 1554964 1554966 1554976 1555004	0307 0751 A 0751 A 1107 0625	$\begin{array}{c} 1555896 \\ 1555897 \\ 1555898 \\ 1555900 \\ 1555904 \end{array}$	0105 0609 0609 2102c 2102c	$\begin{array}{c} 1556199 \\ 1556200 \\ 1556201 \\ 1556202 \\ 1556203 \end{array}$	1805 1805 1807 1807 1807	$\begin{array}{c} 1557002 \\ 1557015 \\ 1557107 \\ 1557108 \\ 1557109 \end{array}$	0302 0301 1716 1716 1716	$\begin{array}{c} 1557347 \\ 1557350 \\ 1557351 \\ 1557353 \\ 1557353 \\ 1557357 \end{array}$	0601 0320 0303 1310a 2149a	$\begin{array}{c} 1557504 \\ 1557505 \\ 1557506 \\ 1557507 \\ 1557509 \end{array}$	$1100 \\ 1100 \\ 1402 \\ 1402 \\ 1402 \\ 1402$
1555005 1555010 1555103 1555186 1555257	0625 0601 0118 1402 0701в	$\begin{array}{c} 1555909 \\ 1555923 \\ 1555924 \\ 1555925 \\ 1555929 \end{array}$	0609 1803 1803 1807 0507	1556204 1556205 1556313 1556317 1556318	1805 1805 1305a 0403 0403	$\begin{array}{c} 1557110\\ 1557111\\ 1557112\\ 1557113\\ 1557113\\ 1557114\end{array}$	1713 1707 1714 1709 1707	1557358 1557359 1557360 1557361 1557364	2149a 0632 0601 0302 2101a	$\begin{array}{c} 1557510\\ 1557511\\ 1557512\\ 1557513\\ 1557513\\ 1557514\end{array}$	1100 1100 1100 1100 1100
1555280 1555319 1555320 1555395 1555396	0621 0320 0320 0107 0107	$\begin{array}{c} 1555934 \\ 1555947 \\ 1555953 \\ 1555954 \\ 1555955 \end{array}$	0507 0307 0621 2102в 2102в	$\begin{array}{c} 1556319 \\ 1556325 \\ 1556325 \\ 1556327 \\ 1556328 \end{array}$	0403 0851 2138 2138 0851	$\begin{array}{c} 1557115\\ 1557116\\ 1557117\\ 1557118\\ 1557118\\ 1557139\end{array}$	1709 1720 1720 1721 1301a	1557365 1557373 1557374 1557377 1557378	0625 0800 0700в 1108 1518	$\begin{array}{c} 1557522\\ 1557523\\ 1557530\\ 1557531\\ 1557533\end{array}$	1202 1202 1101 1101 0303
1555397 1555398 1555399 1555404 1555405	0107 0107 0107 0105 0105	$\begin{array}{c} 1555956 \\ 1555957 \\ 1555962 \\ 1555971 \\ 1555971 \\ 1556004 \end{array}$	2102в 0307 2102с 1304а 1305а	$\begin{array}{c} 1556333\\ 1556334\\ 1556337\\ 1556338\\ 1556338\\ 1556341 \end{array}$	$\begin{array}{c} 0851\\ 0851\\ 0851\\ 0851\\ 0851\\ 0851 \end{array}$	$\begin{array}{c} 1557142 \\ 1557143 \\ 1557145 \\ 1557145 \\ 1557147 \\ 1557161 \end{array}$	1301a 1301a 0104 1308b 1307a	$\begin{array}{c} 1557384 \\ 1557385 \\ 1557388 \\ 1557389 \\ 1557389 \\ 1557390 \end{array}$	$1001 \\ 1001 \\ 1001 \\ 0632 \\ 0853$	$\begin{array}{c} 1557533\\ 1557538\\ 1557541\\ 1557542\\ 1557543\end{array}$	0320 0632 1104 1107 1107
$\begin{array}{c} 1555407 \\ 1555408 \\ 1555409 \\ 1555429 \\ 1555445 \end{array}$	0105 0105 0105 0702A 2102c	$\begin{array}{c} 1556013 \\ 1556014 \\ 1556021 \\ 1556028 \\ 1556029 \end{array}$	1304a 1304a 0506 1108 1310a	$\begin{array}{c} 1556342 \\ 1556343 \\ 1556344 \\ 1556345 \\ 1556347 \end{array}$	0851 0851 0851 0702в 0851	$\begin{array}{c} 1557162 \\ 1557163 \\ 1557166 \\ 1557166 \\ 1557166 \\ 1557169 \end{array}$	0700в 0800 0303 0320 0201	$\begin{array}{c} 1557393 \\ 1557398 \\ 1557399 \\ 1557400 \\ 1557401 \end{array}$	0701в 0811 0811 1402 1402	$\begin{array}{c} 1557544 \\ 1557545 \\ 1557546 \\ 1557547 \\ 1557550 \end{array}$	1107 1107 1107 1107 0602
1555475 1555490 1555491 1555493 1555495	0705в 0606 0606 0601 0601	$\begin{array}{c} 1556030\\ 1556033\\ 1556034\\ 1556042\\ 1556044 \end{array}$	0307 1305a 1310a 1310a 1310a	$\begin{array}{c} 1556348 \\ 1556349 \\ 1556350 \\ 1556351 \\ 1556359 \end{array}$	$\begin{array}{c} 0851 \\ 0851 \\ 0851 \\ 0851 \\ 0851 \\ 0401 \end{array}$	$\begin{array}{c} 1557170\\ 1557180\\ 1557181\\ 1557198\\ 1557198\\ 1557199\end{array}$	0202 0302 0403 0116 0751в	$\begin{array}{c} 1557406 \\ 1557407 \\ 1557408 \\ 1557409 \\ 1557410 \end{array}$	1000 1000 1000 1000 1000	$\begin{array}{c} 1557560 \\ 1557568 \\ 1557569 \\ 1557571 \\ 1557576 \end{array}$	$\begin{array}{c} 1721 \\ 0603 \\ 0603 \\ 0102 \\ 1525 \end{array}$
$\begin{array}{r} 1555499 \\ 1555502 \\ 1555503 \\ 1555538 \\ 1555538 \end{array}$	0601 0601 0601 0602 2117A	$\begin{array}{c} 1556045\\ 1556047\\ 1556050\\ 1556051\\ 1556064 \end{array}$	1310a 1304a 1310a 1310a 1304a	$\begin{array}{c} 1556360\\ 1556361\\ 1556371\\ 1556383\\ 1556482 \end{array}$	$\begin{array}{c} 0401 \\ 0401 \\ 0402 \\ 0851 \\ 0105 \end{array}$	$\begin{array}{c} 1557201 \\ 1557208 \\ 1557209 \\ 1557210 \\ 1557211 \\ 1557211 \end{array}$	$\begin{array}{c} 0601 \\ 1805 \\ 1805 \\ 1805 \\ 1805 \\ 1805 \end{array}$	$\begin{array}{c} 1557411 \\ 1557412 \\ 1557413 \\ 1557414 \\ 1557415 \end{array}$	1000 1000 1000 1000 1000	$\begin{array}{c} 1557580 \\ 1557585 \\ 1557587 \\ 1557596 \\ 1557597 \end{array}$	0102 0506 0506 0832 0827

Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.
$\begin{array}{c} 1557598 \\ 1557599 \\ 1557600 \\ 1557601 \\ 1557603 \end{array}$	0827 0834 0832 0832 0832	1557774 1557776 1557780 1557781 1557783	$2130 \\ 0603 \\ 0603 \\ 0202 \\ 0201$	$\begin{array}{c} 1558076 \\ 1558078 \\ 1558086 \\ 1558091 \\ 1558100 \end{array}$	2102A 2102A 2102A 0307 2112B	1558394 1558395 1558396 1558397 1558398	0302 0302 0302 0302 0302 0302	$\begin{array}{c} 1558465\\ 1558466\\ 1558467\\ 1558468\\ 1558468\\ 1558469\end{array}$	0302 0302 0302 0302 0302 0302	1559778 1559779 1559780 1559781 1559789	1309в 1309в 1301а 1301а 2138
$\begin{array}{c} 1557604 \\ 1557605 \\ 1557606 \\ 1557607 \\ 1557608 \end{array}$	0834 0834 0832 0827 0800	$\begin{array}{c} 1557786 \\ 1557787 \\ 1557834 \\ 1557835 \\ 1557836 \end{array}$	$\begin{array}{c} 0202 \\ 0201 \\ 0100 \\ 0102 \\ 0627 \end{array}$	$\begin{array}{c} 1558122 \\ 1558123 \\ 1558128 \\ 1558129 \\ 1558136 \end{array}$	0109 0109 0109 2149c 2149c	$\begin{array}{c} 1558399 \\ 1558400 \\ 1558401 \\ 1558402 \\ 1558403 \end{array}$	0302 0302 0302 0302 0302 0302	$\begin{array}{c} 1558486 \\ 1558488 \\ 1558489 \\ 1558534 \\ 1558535 \end{array}$	1002 0103 0103 1522 1522	1559919 1559921 1559927 1559928 1559929	1000 1000 1000 1000 1000
1557610 1557612 1557615 1557616 1557617	0701a 0103 1302a 1302a 1302a	$\begin{array}{c} 1557843 \\ 1557845 \\ 1557852 \\ 1557854 \\ 1557855 \end{array}$	$\begin{array}{c} 0109\\ 0115\\ 0115\\ 0108\\ 0108\\ 0108\\ \end{array}$	$\begin{array}{r} 1558137 \\ 1558140 \\ 1558152 \\ 1558160 \\ 1558165 \end{array}$	2149с 2149с 2101л 2102в 0321	1558404 1558405 1558406 1558407 1558408	0302 0302 0302 0302 0302 0302	$\begin{array}{c} 1558550 \\ 1558574 \\ 1558594 \\ 1558635 \\ 1558637 \end{array}$	1801 0303 0302 0302 0302	1559986 1560001 1560002 1560005 1560009	1803 0401 0401 0832 2112A
1557618 1557619 1557620 1557621 1557622	1302a 1302a 1302a 1302a 1302a 1302a	$\begin{array}{c} 1557856 \\ 1557857 \\ 1557858 \\ 1557859 \\ 1557859 \\ 1557882 \end{array}$	0108 0108 0108 0108 1701	$\begin{array}{c} 1558166 \\ 1558167 \\ 1558168 \\ 1558169 \\ 1558170 \end{array}$	0321 0321 0321 0302 0302	$\begin{array}{r} 1558409 \\ 1558410 \\ 1558411 \\ 1558412 \\ 1558413 \end{array}$	0302 0302 0302 0302 0302 0302	1558638 1558640 1558641 1557650 1558666	0302 0401 0401 0853 0308	$\begin{array}{c} 1560010\\ 1560011\\ 1560015\\ 1560028\\ 1560065\end{array}$	0820 0702в 0703в 0203 0402
1557623 1557624 1557625 1557626 1557634	1302a 1302a 1304a 1304a 0402	$\begin{array}{c} 1557882 \\ 1557883 \\ 1557883 \\ 1557883 \\ 1557883 \\ 1557894 \end{array}$	1721 0627 0851 2138 1310л	1558179 1558180 1558181 1558182 1558183	1100 1100 1103 1103 1104	1558414 1558415 1558416 1558417 1558418	0302 0302 0302 0302 0302 0302	$\begin{array}{c} 1558669 \\ 1558670 \\ 1558671 \\ 1558689 \\ 1558690 \end{array}$	0304 0308 0308 1309в 1309в	$\begin{array}{c} 1560136\\ 1560252\\ 1560257\\ 1560395\\ 1560402 \end{array}$	0603 0321 0506 0505 0506
1557634 1557634 1557643 1557658 1557660	0403 1305a 1304a 0603 0601	$\begin{array}{c} 1557897 \\ 1557898 \\ 1557903 \\ 1557904 \\ 1557907 \end{array}$	$\begin{array}{c} 0601 \\ 0105 \\ 1112 \\ 1112 \\ 1109 \end{array}$	1558184 1558185 1558186 1558187 1558188	1104 1104 1104 1103 1104	1558419 1558420 1558421 1558422 1558423	0302 0302 0302 0302 0302 0302	1558691 1558692 1558693 1558707 1558771	1309в 1309в 1309в 0116 0102	$\begin{array}{c} 1560408 \\ 1560409 \\ 1560452 \\ 1560454 \\ 1560454 \\ 1560464 \end{array}$	1510 1510 0115 0102 0103
1557663 1557664 1557665 1557668 1557669	$\begin{array}{c} 0104 \\ 1102 \\ 1102 \\ 1103 \\ 1103 \end{array}$	1557908 1557909 1557909 1557910 1557939	1112 1109 1112 1104 1001	$\begin{array}{c} 1558189 \\ 1558190 \\ 1558191 \\ 1558192 \\ 1558195 \end{array}$	1104 1103 1103 1103 0115	1558424 1558426 1558427 1558428 1558429	0302 0302 0302 0302 0302 0302	1558787 1558812 1558817 1558819 1558823	0308 0116 0116 0104 2112A	1560468 1560469 1560474 1560486 1560489	0108 0108 0116 0102 0115
1557670 1557671 1557672 1557674 1557675	1103 1103 1101 2101 A 0103	$\begin{array}{c} 1557959\\ 1557964\\ 1558002\\ 1558003\\ 1558004 \end{array}$	1720 0615 0609 0609 0609	$\begin{array}{c} 1558196 \\ 1558203 \\ 1558210 \\ 1558219 \\ 1558232 \end{array}$	0115 0621 0851 0700в 1103	1558430 1558431 1558432 1558433 1558433	0302 0302 0302 0302 0302 0302	1558884 1558885 1558892 1558900 1558906	$\begin{array}{c} 0302 \\ 0302 \\ 0115 \\ 1402 \\ 1402 \end{array}$	$\begin{array}{c} 1560508\\ 1560531\\ 1560542\\ 1560543\\ 1560543\\ 1560547\end{array}$	0304 0109 0320 0320 0506
1557677 1557678 1557680 1557681 1557682	1310a 0115 2101b 2101a 2101a	$\begin{array}{c} 1558005\\ 1558006\\ 1558007\\ 1558008\\ 1558008\\ 1558009\end{array}$	0609 0609 0609 0609 0609	$\begin{array}{c} 1558233\\ 1558237\\ 1558281\\ 1558282\\ 1558282\\ 1558284\end{array}$	1103 1110 0601 0601 0601	1558435 1558436 1558437 1558438 1558439	0302 0302 0302 0302 0302 0302	1558936 1558938 1558947 1558970 1558972	1801 2112A 0320 0312 0312	$\begin{array}{c} 1560548 \\ 1560549 \\ 1560550 \\ 1560552 \\ 1560553 \end{array}$	1720 1720 0601 0603 0603
1557683 1557691 1557692 1557697 1557697	$2110 \\ 0115 \\ 0115 \\ 0854 \\ 0312$	$\begin{array}{r} 1558010 \\ 1558012 \\ 1558013 \\ 1558014 \\ 1558015 \end{array}$	0609 0609 0609 0609 0609	$\begin{array}{c} 1558285\\ 1558286\\ 1558287\\ 1558288\\ 1558288\\ 1558289\end{array}$	0601 0601 0601 0601 0603	$\begin{array}{c} 1558440 \\ 1558441 \\ 1558442 \\ 1558443 \\ 1558444 \end{array}$	0302 0302 0302 0302 0302	1558985x1 1559002 1559198 1559213 1559214	2112A 0811 2112B 0109 0302	$\begin{array}{c} 1560554 \\ 1560555 \\ 1560556 \\ 1560560 \\ 1560561 \end{array}$	0603 0603 0603 1402 0602
1557701 1557702 1557705 1557707 1557708	1812 1812 0115 0102 1107	$\begin{array}{c} 1558016 \\ 1558017 \\ 1558018 \\ 1558019 \\ 1558033 \end{array}$	0609 0609 0609 0609 0102	$\begin{array}{c} 1558290 \\ 1558291 \\ 1558292 \\ 1558294 \\ 1558330 \end{array}$	0601 0601 0601 0601 0103	$\begin{array}{r} 1558445\\ 1558446\\ 1558447\\ 1558448\\ 1558449\end{array}$	0302 0302 0302 0302 0302 0302	$\begin{array}{c} 1559215\\ 1559216\\ 1559311\\ 1559326\\ 1559330\\ \end{array}$	0302 0109 0609 0302 0116	$\begin{array}{c} 1560562 \\ 1560563 \\ 1560564 \\ 1560567 \\ 1560568 \end{array}$	0602 0602 0603 0700в 0700в
1557709 1557716 1557717 1557723 1557724p	$1107 \\ 0627 \\ 1402 \\ 0603 \\ 1402$	$\begin{array}{c} 1558034 \\ 1558035 \\ 1558036 \\ 1558038 \\ 1558062 \end{array}$	$\begin{array}{c} 0102 \\ 0100 \\ 0100 \\ 2130 \\ 0603 \end{array}$	$\begin{array}{c} 1558331 \\ 1558373 \\ 1558381 \\ 1558382 \\ 1558383 \end{array}$	0115 1205 0302 0302 0302	$\begin{array}{c} 1558450 \\ 1558451 \\ 1558452 \\ 1558453 \\ 1558453 \\ 1558454 \end{array}$	0302 0302 0302 0302 0302 0302	1559479 1559515 1559648 1559672 1559672	0303 1305а 2102а 0751а 0751в	$\begin{array}{c} 1560569 \\ 1560576 \\ 1560578 \\ 1560596 \\ 1560612 \end{array}$	0700в 0603 1518 0602 0115
1557730 1557751 1557752 1557754 1557762	$\begin{array}{c} 0603\\ 0320\\ 0115\\ 0402\\ 0115 \end{array}$	$\begin{array}{c} 1558063 \\ 1558064 \\ 1558065 \\ 1558066 \\ 1558068 \end{array}$	$     \begin{array}{r}       1103 \\       1103 \\       1103 \\       1100 \\       1100 \\       1100 \\       \end{array} $	$\begin{array}{c} 1558384\\ 1558385\\ 1558386\\ 1558387\\ 1558387\\ 1558388\end{array}$	0302 0302 0302 0302 0302 0302	$\begin{array}{c} 1558455\\ 1558456\\ 1558457\\ 1558457\\ 1558458\\ 1558459\end{array}$	0302 0302 0302 0302 0302 0302	$\begin{array}{c} 1559673\\ 1559673\\ 1559674\\ 1559674\\ 1559674\\ 1559675\end{array}$	0751a 0751b 0751a 0751b 0751b 0701b	$\begin{array}{c} 1560614\\ 1560643\\ 1560648\\ 1560653\\ 1560653\\ 1560654\end{array}$	0506 0202 1004 1004 1004
$\begin{array}{c} 1557766 \\ 1557767 \\ 1557768 \\ 1557769 \\ 1557770 \end{array}$	$\begin{array}{c} 0603 \\ 0603 \\ 0603 \\ 0603 \\ 0603 \\ 0603 \end{array}$	$\begin{array}{c} 1558069 \\ 1558070 \\ 1558073 \\ 1558074 \\ 1558075 \end{array}$	1100 1103 2102a 2102a 2102a	$\begin{array}{c} 1558389\\ 1558390\\ 1558391\\ 1558392\\ 1558393\\ \end{array}$	0302 0302 0302 0302 0302 0302	$\begin{array}{c} 1558460 \\ 1558461 \\ 1558462 \\ 1558463 \\ 1558464 \end{array}$	0302 0302 0302 0302 0302 0302	$\begin{array}{c} 1559676 \\ 1559677 \\ 1559699 \\ 1559721 \\ 1559749 \end{array}$	0751A 0751B 0303 1112 0320	$\begin{array}{c} 1560655\\ 1560656\\ 1560657\\ 1560667\\ 1560745\end{array}$	1004 1004 1004 1306a 0312

1

- 22

1560752
---------

			~		~		~ '		~ 1		~
Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.	Part No.	Group No.
1560752 1560758 1560760 1560808 1560816	0702в 1721 2138 0105 0104	$\begin{array}{c} 1561769\\ 1561771\\ 1561778\\ 1561778\\ 1561782\\ 1561783\end{array}$	1207 1312a 1312b 1001 1001	$\begin{array}{c} 1562924 \\ 1562951 \\ 1562994 \\ 1562997 \\ 1563002 \end{array}$	0601 0401 1308в 0312 0751в	$\begin{array}{c} 1689266\\ 1689485\\ 1689694\\ 1691714\\ 1692002 \end{array}$	1308в 1812 1306а 2101а 1004				
$\begin{array}{c} 1560820 \\ 1560822 \\ 1560839 \\ 1560841 \\ 1560842 \end{array}$	2102c 0103 0202 0504 0504	$\begin{array}{c} 1561784\\ 1561788\\ 1561788\\ 1561788\\ 1561820\\ 1561824 \end{array}$	0602 0602 2117a 0103 2102a	1563009 1563014 1563015 1563032 1563033	0602 0108 0108 0827 0302	$\begin{array}{c} 1692003\\ 1692004\\ 1692005\\ 1692006\\ 1692006\\ 1694301 \end{array}$	1004 1004 1004 1004 2102c				
$\begin{array}{c} 1560843 \\ 1560856 \\ 1560857 \\ 1560858 \\ 1560862 \end{array}$	0504 2102c 2102c 2102c 1002	1561877 1561905 1561930 1561930 1561931	0900 0900 0615 2101a 2149a	1563034 1563041 1563042 1563051 1563052	0601 0302 0302 0302 0302 0302	$\begin{array}{r} 1694306\\ 1694756\\ 1695538\\ 1696894\\ 6484165 \end{array}$	2102c 0817 0202 1105 0302				
1560863 1560865 1560870 1560946 1560957	1001 1002 0811 0606 0606	1561966 1562019 1562203 1562226 1562228	0202 0901 2112A 0202 1308b	$\begin{array}{c} 1563055\\ 1563056\\ 1563057\\ 1563068\\ 1563105\end{array}$	0303 0303 0303 0109 0302	6484245 6484246	0601 0601				
1560949 1560955 1560962 1560969 1560973	0202 0107 0312 0206 0603	1562288 1562289 1562290 1562291 1562292	1304a 1304a 1304a 1304a 1304a	1563106 1563107 1563108 1563109 1563110	0302 0302 0202 0201 0506						
1560983 1560984 1561047 1561060 1561061	1002 1002 1002 1102 1102	$\begin{array}{c} 1562293\\ 1562294\\ 1562295\\ 1562296\\ 1562296\\ 1562297\end{array}$	1304a 1304a 1304a 1304a 1304a	$\begin{array}{c} 1563111\\ 1563113\\ 1563115\\ 1563131\\ 1563131\\ 1563132\end{array}$	0506 0302 0302 0603 0312						
$\begin{array}{c} 1561087\\ 1561095\\ 1561111\\ 1561165\\ 1561165\\ 1561169\end{array}$	0308 1402 0308 0103 0103	1562298 1562299 1562300 1562301 1562302	1304a 1304a 1304a 1304a 1304a 1304a	1563135 1563136 1563137 1563138 1563147	0308 0312 0308 0302 0302						
1561296 1561296 1561296 1561297 1561297	2102a 2102b 2102c 2102a 2102a 2102b	1562303 1562305 1562306 1562307 1562308	1304a 1304a 1304a 1304a 1304a 1304a	1563148 1563152 1563153 1563156 1563164	0302 0302 0321 0302 0302 0302						
1561297 1561304 1561373 1561405 1561415	2102с 2102в 2102в 2102а 2102а 2102с	1562309 1562310 1562311 1562312 1562313	1304a 1304a 1304a 1304a 1304a	1563167 1563184 1563193 1563219 1563228	0601 1107 0602 0307 0109						
1561416 1561465 1561562 1561632 1561634	2102c 0115 2112A 0621 1522	1562315 1562316 1562317 1562318 1562319	1304A 0621 0621 0621 0621 0621	1563243 1563282 1563283 1563284 1563285	0702в 0602 0602 0602 0602 0602						
1561640 1561641 1561646 1561654 1561655	0609 0302 0621 1310A 1310A	1562320 1562321 1562383 1562450 1562453	0621 0621 0102 2112A 2102A	1563286 1563287 1563288 1563289 1563290	0602 0602 0100 0100 0100 0100						
1561658 1561659 1561660 1561699 1561700	1310A 1310A 0621 0302 2102c	$\begin{array}{c} 1562545\\ 1562669\\ 1562670\\ 1562824\\ 1562825\end{array}$	0851 1308b 1308b 0115 0303	1563291 1563296 1563297 1563298 1563298	0100 0303 0303 0303 0303 0303						
1561702x1 1561729 1561735 1561736 1561736 1561740	2112a 2112a 0621 1304a 0602	$\begin{array}{c} 1562826\\ 1562841\\ 1562853\\ 1562863\\ 1562864\\ \end{array}$	0303 0115 2112A 1409 1409	1563320 1563325 1563326 1563327 1563328	0102 0108 0108 0108 0108 0108						
51561740 1561741 1561741 1561759 1561767	2117A 0602 2117A 1112 1207	$\begin{array}{c} 1562876\\ 1562905\\ 1562914\\ 1562914\\ 1562923 \end{array}$	0102 0506 1207 1312в 0601	1685390 1685777 1686878 1686879 1688932	0627 0104 0606 0606 0627						

